

PARTS MANUAL

YARDMASTER

**HR45-25, HR45-31, HR45-40LS,
HR45-40S, HR45-36L, HR45H
(A227)**

CUSTOMER EDITION

HYSTER

SECTIONS

1	FRAME
2	L/LS FRAME
3	SINGLE FIXED CABIN
4	SINGLE SLIDING CABIN
5	DEMARAIS CABIN
6	DENIZET CABIN
7	ENGINE(S)
8	ELECTRICAL SYSTEM
9	TRANSMISSION
10	DRIVE AXLE
11	STEERING SYSTEM
12	BRAKE SYSTEM
13	HYDRAULIC SYSTEM
14	BOOM
15	L/LS BOOM
16	WINCH
17	CONTAINER HANDLER B665
18	CONTAINER HANDLER A672
19	STABILIZER

This Parts Manual is divided into 22 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.

20	LOAD MOMENT LIMITER	
21	OPTIONS	
22	NUMERICAL INDEX	

This Parts Manual is divided into 22 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

TABLE OF CONTENTS

DESCRIPTION	PAGE
A	
ACCELERATOR CONTROL VALVE	
FIXED CABIN	
HR45-25, HR45-31, HR45-40S.....	7-18
SLIDING CAB	
HR45-36L, HR45-40LS	7-19
ACCUMULATOR	
HR45-25, HR45-31, HR45-40S	12-12
HR45-36L, HR45-40LS.....	12-14
AIR CONDITIONER	
WIDE CAB	
S/N A227J-1514⇒	6-16
AIR CONDITIONING	
SINGLE FIXED AND MOVING CAB	
D/B 09/2001⇒.....	3-14
AIR FILTER.....	7-2
ALARM ASSEMBLY	8-21
AMPLIFIER	
SLIDING CAB	4-28
ANTI ROCKING CONTROL VALVE	
5H 8 FT. 6 IN.	
HR45-36L, HR45-40LS	15-30
HR45-25, HR45-31, HR45-40S	14-40
ANTI TIPPING SWITCH.....	11-4
B	
BASE ELECTRO VALVE	13-49
BATTERY.....	8-19
BOOM	
5H 8 FT. 6 IN. JIB SECTION P1-P2	
HR45-36L, HR45-40LS	15-6
8 FT. 6 IN. JIB SECTION P1-P2-P3	
HR45-25, HR45-31, HR45-40S.....	14-6
9 FT. 6 IN. JIB SECTION P1-P2-P3.....	14-4
BOOM CIRCUIT	
H45-36L, HR45-40LS	13-18
HR45-25, HR45-31, HR45-40S	13-16
BOOM EXTEND AND RETRACT VALVE.....	13-64
BOOM HEAD	
5H 8 FT. 6 IN.	
HR45-36L, HR45-40LS	15-8
HR45-25, HR45-31, HR45-40S	14-8
BOOM HOIST VALVE	
SHEET 1 OF 2.....	13-60
SHEET 2 OF 2.....	13-62
BOOM PIVOT BEARING	
5H 8 FT. 6 IN.	
HR45-36L, HR45-40LS	15-9
HR45-25, HR45-31, HR45-40S	14-9
BRAKE	
S/N A227J-1547⇒	18-18
BRAKE CIRCUIT	

TABLE OF CONTENTS (Continued)

DESCRIPTION	PAGE
B (continued)	
HR45-25, HR45-31, HR45-40S	12-2
HR45-36L, HR45-40LS	12-3
BRAKE CONTROL CIRCUIT	
SLIDING CAB	4-12
HR45-36L, HR45-40LS	12-24
BRAKE OIL RESERVOIR.....	12-16
BUMPERS	
B665.....	17-8
C	
CAB CONNECTING CIRCUIT	
SLIDING CAB	4-22
CAB DOOR	
LEFT HAND	1-8
RIGHT HAND.....	1-10
SLIDING GLASS	
LEFT HAND	5-8
RIGHT HAND	5-6
CAB RAILS	
SLIDING CAB	4-2
HR45-36L, HR45-40LS	2-6
CAB SUPPORT	6-12
DEMARAIS CABIN	5-5
FIXED	3-2
CABIN GLASS.....	3-6
WIDE CAB	5-11
CABIN GLASS AND WIPERS	
WIDE CAB	
S/N A227J-1514⇒	6-14
CABLE AND DECALS	
HR45H	16-20
CABLE GUIDE	
HR45H	16-8
CABLE SUPPORT	
5H 8 FT. 6 IN.	
HR45-36L, HR45-40LS	15-10
BOOM 8 FT. 6 IN.	
HR45-25, HR45-31, HR45-40S.....	14-11
BOOM 9 FT. 6 IN.	
HR45-25, HR45-31, HR45-40S.....	14-10
CABLE WINDER	20-3
CHARGE PUMP AND REGULATOR	9-20
CHARGE PUMP FLANGE	
HR45-25, HR45-31, HR45-40S	9-27
CHASSIS BOX	
LEFT HAND	
HR45-25, HR45-31, HR45-40S.....	1-4
HR45-36L, HR45-40LS	2-4
CLUTCH	

TABLE OF CONTENTS (Continued)

DESCRIPTION	PAGE
C (continued)	
FORWARD.....	9-10
FOURTH SPEED.....	9-18
LOW SPEED.....	9-16
REVERSE AND 2ND SHAFT	9-14
THIRD SPEED.....	9-12
COLD CLIMATE KIT.....	21-36
CONSOLE.....	5-27 3-10
CONTROL BOX.....	18-47
CONTROL BOX MOUNTING	18-48
CONTROL CIRCUIT	
HR45H.....	16-2
CONTROL SWITCH	
HR45H.....	16-21
CONTROL SWITCHES.....	8-24
CONTROL VALVE ASSEMBLY	13-58
HR45H.....	16-18
CONTROL VALVE ATTACHING PARTS	
H45-36L, H45-40LS.....	13-40
HR45-25, HR45-31, HR45-40S	13-38
CONTROL VALVE RELIEF SECTION	13-68
CONTROLLER	
APC 100.....	8-18
CONVERTOR HOUSING ASSEMBLY	9-2
COOLING CIRCUIT DRIVE AXLE	
H45-36L, HR45-40LS.....	10-20
HR45-25, HR45-31, HR45-40S	10-18
COUNTERWEIGHT	1-3
CYLINDER POWER PILE SLOPE	18-62
D	
DAMPENING	
5H 8 FT. 6 IN.	
HR45-36L, HR45-40LS	15-20
HR45-25, HR45-31, HR45-40S	14-24
DAMPING CYLINDER	
5H 8 FT. 6 IN.	
HR45-36L, HR45-40LS	15-21
HR45-25, HR45-31, HR45-40S	14-25
DERRICKING	
5H 8 FT. 6 IN.	
HR45-36L, HR45-40LS	15-18
HR45-25, HR45-31, HR45-40S	14-22
DERRICKING CYLINDER	
5H 8 FT. 6 IN.	
HR45-36L, HR45-40LS	15-22
HR45-25, HR45-31, HR45-40S	14-26
DERRICKING CYLINDER CONNECTIONS	
H45-36L, HR45-40LS	15-16
DIFFERENTIAL AND PARK BRAKE	

TABLE OF CONTENTS (Continued)

DESCRIPTION	PAGE
D (continued)	
S/N A227J-1501↔S/N A227J-1516	10-2
S/N A227J-1517⇒	10-6
DIRECTIONAL VALVE	
WITHOUT POWER PILE SLOPE	18-66
DISPLAY AND PRINTER	20-4
DOORS AND STORAGE COVERS	
WIDE CAB	
S/N A227J-1514⇒	6-10
DRIVE AXLE AND END DRIVE	
S/N A227J-1501↔S/N A227J-1516	10-10
S/N A227J-1517⇒	10-12
DRIVE AXLE CONNECTIONS	10-14
DRIVE AXLE U-JOINT	10-15
H45-36L, HR45-40LS	10-16
DRIVE TIRE AND WHEEL	
18 X 25 BRIDESTONE	
HR45-36L, HR45-40LS	21-13
18 X 25 GOODYEAR	
HR45-25, HR45-31, HR45-40S	21-5
18 X 25 MICHELIN	
HR45-25, HR45-31, HR45-40S	21-7
18 X 25 PLAIN	
HR45-25, HR45-31, HR45-40S	21-11
18 X 33 BRIDESTONE	
HR45-36L, HR45-40LS	21-6
18 X 33 GOODYEAR	
HR45-36L, HR45-40LS	
S/N A227J-1538⇒	21-9
18 X 33 MICHELIN	
HR45-36L, HR45-40LS	21-8
21 X 25 BRIDESTONE	21-4
21 X 25 GOOD YEAR	21-3
E	
ELECTRIC CONTROL VALVE	
ELECTRONIC INCHING	9-22
ELECTRICAL	
5H 8 FT. 6 IN.	
HR45-36L, HR45-40LS	15-28
HR45-25, HR45-31, HR45-40S	14-39
WIDE CAB	
S/N A227J-1514⇒	6-28
ELECTRICAL SYSTEM	
POWER PILE SLOPE	17-28
WITHOUT POWER PILE SLOPE	17-26
END BEAMS	18-30
ENGINE COMPONENTS	7-8
ENGINE CONNECTIONS	7-7
ENGINE COOLING SYSTEM	7-12

TABLE OF CONTENTS (Continued)

DESCRIPTION	PAGE
E (continued)	
ENGINE MOUNTING	7-4
EXHAUST	7-3
EXTENSION CABLE SUPPORT	18-40
EXTENSION CYLINDER ASSEMBLY	17-22
F	
FAN MOTOR	7-16
FILTER BRAKE RETURN	12-21
FILTER PUMP CIRCUIT HR45-36L, HR45-40LS	9-28
FILTER TRANSMISSION OIL HR45-25, HR45-31, HR45-40S	9-26
FIREWALL PLATE	5-26 3-22
FITTINGS	
BOOM AND ATTACHMENT	
B665	17-9
FLANGE	
INTERMEDIATE	
S/N A227J-1547⇒	18-16
FLANGE COUPLING	
S/N A227J-1547⇒	18-24
FLOOR PLATES AND COVERS	5-2
FIXED	3-4
SLIDING CAB	
WIDE	
S/N A227J--1514⇒	6-6
WIDE FIXED CAB	
S/N A227J-1514⇒	6-2
FRAME	
HR45-25, HR45-31, HR45-40S	1-2
HR45-36L, HR45-40LS	2-2
FUEL HEATER	
S/N A227J-1547⇒	21-38
FUSE BOX	7-10
FUSE PLATE	8-22
G	
GEAR HOUSING	
S/N A227J-1547⇒	18-14
GEAR SHAFT HOUSING	
S/N A227J-1547⇒	18-22
GENERAL RETURN CIRCUIT	
HR45-25, HR45-31, HR45-40S	13-23
SLIDING CAB	4-14
HR45-36L, HR45-40LS	13-24

TABLE OF CONTENTS (Continued)

DESCRIPTION	PAGE
H	
HOOD	
HR45-25, HR45-31, HR45-40S	1-6
HYDRAULIC CIRCUIT	
CEC	20-2
MAIN	18-50
ROTATOR.....	18-52
SIDE-SHIFT	18-58
TWISTLOCKS.....	18-56
HYDRAULIC CIRCUIT STABILIZER	
HR45-40LS	19-10
HR45-40S	19-11
HYDRAULIC CONTROL CIRCUIT	
HR45-40LS	19-2
HR45-40S	19-4
HYDRAULIC CONTROL VALVE	
HYDRAULIC INCHING	9-24
HYDRAULIC COOLING SYSTEM	
BRAKE OIL	13-53
HYDRAULIC OIL	13-52
SHEET 1 OF 2	
⇒S/N A227-1511	13-4
SHEET 2 OF 2	
S/N A227-1512⇒	13-6
HYDRAULIC FILTER.....	13-56
HYDRAULIC LIFTING JACK	21-34
HYDRAULIC MOTOR SUPPORT	
HR45-36L, HR45-40LS.....	2-12
HYDRAULIC PENDULAR CYLINDER	
WITH POWER PILE SLOPE	17-39
HYDRAULIC RADIATOR.....	13-8
HYDRAULIC STOP KIT	
B665	
OPTIONAL	17-4
HYDRAULIC SUPPLY CIRCUIT	
HR45-40LS	19-12
HR45-40S	19-13
HYDRAULIC SYSTEM	
PILE SLOPE	18-57
TELESCOPING	18-54
WITH POWER PILE SLOPE	17-32
WITHOUT POWER PILE SLOPE.....	17-30
HYDRAULIC TUBING	
5H 8 FT. 6 IN.	
HR45-36L, HR45-40LS	15-4
BOOM 8 FT. 6 IN.	
HR45-25, HR45-31, HR45-40S.....	14-36
BOOM 9 FT. 6 IN.	
HR45-25, HR45-31, HR45-40S.....	14-32
HYDRAULIC TUBING TELESCOPING	
BOOM 9 FT. 6 IN.	
HR45-25, HR45-31, HR45-40S.....	14-16

TABLE OF CONTENTS (Continued)

DESCRIPTION	PAGE
H (continued)	
HYDRAULIC VALVE	
5H 8 FT. 6 IN.	
HR45-36L, HR45-40LS	15-32
HR45-25, HR45-31, HR45-40S	14-42
I	
INSTRUMENT PANEL	8-14
WIDE CAB	
S/N A227J-1514⇒	6-24
J	
JUNCTION BLOCK	
BOOM AND ATTACHMENT	13-48
JOYSTICK	13-46
L	
LABELS	1-14
LEAK OIL CIRCUIT	
HR45-25, HR45-31, HR45-40S	13-26
HR45-36L, HR45-40LS	13-28
SLIDING CAB	4-16
LIGHTS	
5H 8 FT. 6 IN.	
HR45-36L, HR45-40LS	15-35
HR45-25, HR45-31, HR45-40S	14-48-10
HR45-36L, HR45-40LS	8-12
LIMIT SWITCH	
27 DEGREES	
HR45-31, HR45-40S	1-16
HR45-25, HR45-31, HR45-40S	1-12
HR45-36L, HR45-40LS	2-14
SLIDING CAB	4-26
LIMIT SWITCH MOUNTING	
HR45-40LS	19-14
HR45-40S	19-16
LOAD SENSING CIRCUIT	
HR45-25, HR45-31, HR45-40S	13-32
HR45-36L, HR45-40LS	13-33
SLIDING CAB	4-20
LOAD SENSING SWITCH	13-45
LOWER LIMIT SWITCH	
HR45H	16-16
M	
MAIN PUMP	13-71
MAIN PUMP ATTACHING PARTS	13-42
MAIN PUMP CIRCUIT	13-9
MAIN PUMP CONTROL VALVE	13-70
MAIN VALVE	

TABLE OF CONTENTS (Continued)

DESCRIPTION	PAGE
M (continued)	
SPREADER TYPE.....	17-16
MAINFRAME	
B665.....	17-2
O	
OIL COOLER SOLENOID VALVE.....	13-54
OIL RETURN MANIFOLD	13-14
P	
PARK BRAKE	
⇒S/N A227J-1526	12-8
S/N A227J-1527⇒.....	12-10
PARK BRAKE CIRCUIT	
SLIDING CAB	
HR45-36L, HR45-40LS	12-22
OPTION.....	4-11
PARK BRAKE CONTROL VALVE	
HR45-36L, HR45-40LS.....	12-20
SLIDING CAB	4-34
PARK BRAKE SOLENOID VALVE	12-17-30
PEDAL ARRANGEMENT	3-16
FIXED CAB	
HR45-25, HR45-31, HR45-40S.....	5-22
SLIDING CAB	
HR45-36L, HR45-40LS	5-24
WIDE	
S/N A227J-1514⇒.....	6-22
WIDE FIXED CAB	
S/N A227J-1514⇒	6-20
PILOT CIRCUIT	
HR45-25, HR45-31, HR45-40S	13-21
HR45-36L, HR45-40LS.....	13-22
SLIDING CAB	4-18
PILOT LINES	
SLIDING CAB	
HR45-36L, HR45-40LS	13-34
PRESSURE SWITCH	
H45-36L, HR45-40LS	13-20
PULLEY BLOCK	
HR45H	16-6
PUMP DRIVE AND SHAFT	9-6
PUMP DRIVE SHAFT	13-44
R	
RADIATOR	
S/N A227J-1501↔S/N A227J-1511	7-14
S/N A227J-1512⇒.....	7-15
REDUCER	
S/N A227J-1547⇒.....	18-20

TABLE OF CONTENTS (Continued)

DESCRIPTION	PAGE
R (continued)	
RELAY	
IC 5	8-26
RELAY AND PRINTED CIRCUIT	
IC 4, IC 2	8-27
RESERVOIRS	5-30 3-24
ROOF COWLING	8-16
ROTATION VALVE ASSEMBLY	
DUAL SPEED	17-14
ROTATOR ASSEMBLY	
⇒S/N A227J-1546	18-4
S/N A227J-1547⇒	18-6
WITH POWER PILE SLOPE	17-20
WITHOUT POWER PILE SLOPE	17-18
ROTATOR BRAKE RELEASE VALVE	18-61
ROTATOR FRAME	18-3
ROTATOR MOTOR AND TRANSMISSION ASSEMBLY	
B665	17-10
ROTATOR MOTOR TRANSMISSION	
⇒S/N A227J-1546	18-8
S/N A227J-1547⇒	18-12
ROTATOR VALVE	18-60
ROTATOR VALVE ASSEMBLY	
WITH POWER PILE SLOPE	17-40
S	
SEAT	6:13 3-18
DEMARAIS CABIN	5-10
SERVICE BRAKE	
OIL COOLED BRAKE	
⇒S/N A227J-1526	12-4
S/N A227J-1527⇒	12-6
SERVICE BRAKE CONTROL VALVE	
HR45-36L, HR45-40LS	12-19
SLIDING CAB	4-32
SIDE-SHIFT CABLE SUPPORT	
⇒S/N A227J-1546	18-41
S/N A227J-1547⇒	18-42
SIDE-SHIFT CYLINDER	18-59-12
SIDE-SHIFT CYLINDER VALVE	18-68
SLIDING BLOCKS	
5H 8 FT. 6 IN.	
HR45-36L, HR45-40LS	
⇒S/N A227J-1546	15-24
S/N A227J-1547⇒	15-26
HR45-25, HR45-31, HR45-40S	
⇒S/N A227J-1546	14-28
S/N A227J-1547⇒	14-30
SLIDING CAB CIRCUIT	
HR45-36L, HR45-40LS	13-36

TABLE OF CONTENTS (Continued)

DESCRIPTION	PAGE
S (continued)	
SLIDING FRAME.....	4-4
HR45-36L, HR45-40LS.....	2-10
SOLENOID VALVE	
SLIDING CAB.....	13-51-29
SOLENOID VALVE BANK	
HR45-40LS.....	19-6
HR45-40S.....	19-8
SOLENOID VALVE GROUP	
HR45H.....	16-17
SOUND REDUCTION.....	21-32
SPEED CONTROL.....	7-11
SPREADER CONTROL VALVE.....	18-64
SPREADER FRAME	
WITH POWER PILE SLOPE.....	18-28
WITHOUT POWER PILE SLOPE.....	18-29
SPREADER LIGHTS.....	18-46
SPREADER VALVE.....	13-66
STABILIZER CYLINDER.....	19-18
STABILIZER MOUNTING.....	19-17
STEER AXLE	
HR45-25.....	11-10
HR45-31, HR45-36L, HR45-40LS, HR45-40S.....	11-12
STEER AXLE ASSEMBLY	
HR45-25.....	11-6
HR45-31, HR45-36L, HR45-40LS, HR45-40S.....	11-8
STEER TIRE AND WHEEL	
18 X 25 BRIDGESTONE	
HR45-25, HR45-31, HR45-40S	
S/N A227J-1538⇒.....	21-30
18 X 25 BRIDGESTONE	
HR45-25, HR45-31, HR45-40S	
⇒S/N A227J-1537.....	21-29
18 X 25 GOOD YEAR	
HR45-25, HR45-31, HR45-40S	
⇒S/N A227J-1537.....	21-18
S/N A227J-1538⇒.....	21-19
18 X 25 LISSE	
S/N A227J-1538⇒.....	21-28
18 X 25 MICHELIN	
HR45-24, HR45-31, HR45-40S	
S/N A227J-1538⇒.....	21-23
HR45-25, HR45-31, HR45-40S	
⇒S/N A227J-1537.....	21-22
18 X 25 PLAIN	
HR45-25, HR45-31, HR45-40S.....	21-27
18 X 33 BRIDGESTONE	
HR45-36L, HR45-40LS	
S/N A227J-1538⇒.....	21-21
18 X 33 BRIDGESTONE	
HR45-36L, HR45-40LS	

TABLE OF CONTENTS (Continued)

DESCRIPTION	PAGE
S (continued)	
⇒S/N A227J-1537.....	21-20
18 X 33 GOODYEAR HR45-36L, HR45-40LS S/N A227J-1538⇒.....	21-26
18 X 33 MICHELIN HR45-36L, HR45-40LS ⇒S/N A227J-1537.....	21-24
S/N A227J-1538⇒.....	21-25
21 X 25 BRIDGESTONE ⇒S/N A227J-1537.....	21-16
S/N A227J-1538⇒.....	21-17
21 X 25 GOOD YEAR ⇒S/N A227J-1537.....	21-14
S/N A227J-1538⇒.....	21-15
STEERING CIRCUIT H45-36L, HR45-40LS.....	13-12
HR45-25, HR45-31, HR45-40S.....	13-10
SLIDING CAB.....	4-24
STEERING COLUMN.....	11-2
STORAGE COVERS.....	5-4
D/B 09/2001⇒.....	3-20
⇒D/B 09/2001.....	3-19
SUPPORT SLIDING FRAME.....	4-6
HR45-36L, HR45-40LS.....	2-8
SUPPORT SLIDING MOTOR.....	4-8
T	
TELESCOPING 5H 8 FT. 6 IN. HR45-36L, HR45-40LS ⇒S/N A227J-1546.....	15-11
S/N A227J-1547⇒.....	15-12
BOOM 9 FT. 6 IN. HR45-25, HR45-31, HR45-40S ⇒S/N A227J-1546.....	14-12
S/N A227J-1547⇒.....	14-13
TELESCOPING CIRCUIT HR45-25, HR45-31, HR45-40S.....	13-30
HR45-36L, HR45-40LS.....	13-31
THROTTLE CONTROL VALVES.....	7-17
TOOL KIT.....	21-40
TORQUE CONVERTOR AND DRIVE PLATE.....	9-8
TRANSMISSION CASE AND REAR COVER.....	9-4
TRANSMISSION TELESCOPING MOTOR.....	18-32
TUBING TELESCOPIC CYLINDER 5H 8 FT. 6 IN. HR45-36L, HR45-40LS.....	15-14
BOOM 8 FT. 6 IN. HR45-24, HR45-31, HR45-40S	

TABLE OF CONTENTS (Continued)

DESCRIPTION	PAGE
T (continued)	
S/N A227J-1547⇒	14-19
HR45-25, HR45-31, HR45-40S	14-21
⇒S/N A227J-1546	14-18
TWIST LOCK ARRANGEMENT	17-34
TWIST LOCK ASSEMBLY	18-37-36
TWIST LOCK CYLINDER	17-38
TWIST LOCK INDICATOR LIGHTS	
5H 8 FT. 6 IN.	
HR45-36L, HR45-40LS	15-34
HR45-25, HR45-31, HR45-40S	14-43
V	
VENTILATION	
SINGLE FIXED AND MOVING CAB	
⇒D/B 09/2001	3-12
SLIDING CAB	
HR45-36L, HR45-40LS	5-20
WIDE FIXED CAB	
HR45-25, HR45-31, HR45-40S	
⇒S/N A227J-1512	5-16
S/N A227J-1513⇒	5-18
W	
WEAR PADS	
B665	17-6
⇒S/N A227J-1546	18-34
S/N A227J-1547⇒	18-36
WINCH	
HR45H	16-12
WINCH ATTACHING PARTS	
HR45H	
⇒S/N A227J-1546	16-9
S/N A227J-1547⇒	16-10
WINCH CIRCUIT	
HR45H	16-4
WINCH REDUCTION GEAR	
HR45H	16-14
WINDSHIELD WIPERS	
FIXED CAB	
HR45-25, HR45-31, HR45-40S	5-12
SLIDING CAB	
HR45-36L, HR45-40LS	5-14
WIRE HARNESS	
CAB	
HR45-25, HR45-31, HR45-40S	8-4
ENGINE	8-6
MAIN	18-44
MAIN FRAME	
HR45-25, HR45-31, HR45-40S	8-2

TABLE OF CONTENTS (Continued)

DESCRIPTION	PAGE
W (continued)	
HR45-36L, HR45-40LS	8-3
SENSORS	18-45
SLIDING CAB	4-10
TRANSMISSION.....	8-8