

PARTS MANUAL

CHALLENGER

**H150H, H165H, H180H, H200HS,
H200H, H225H, H250H & H275H
(H7.00HS, H7.50H, H8.00H,
H9.00HS H9.00H, H10.00H,
H11.50H & H12.50H)**


**P150B & P200B
(P7.00B & P9.00B)**

(C007)

CUSTOMER EDITION

HYSTER

ILLUSTRATED CONTENTS

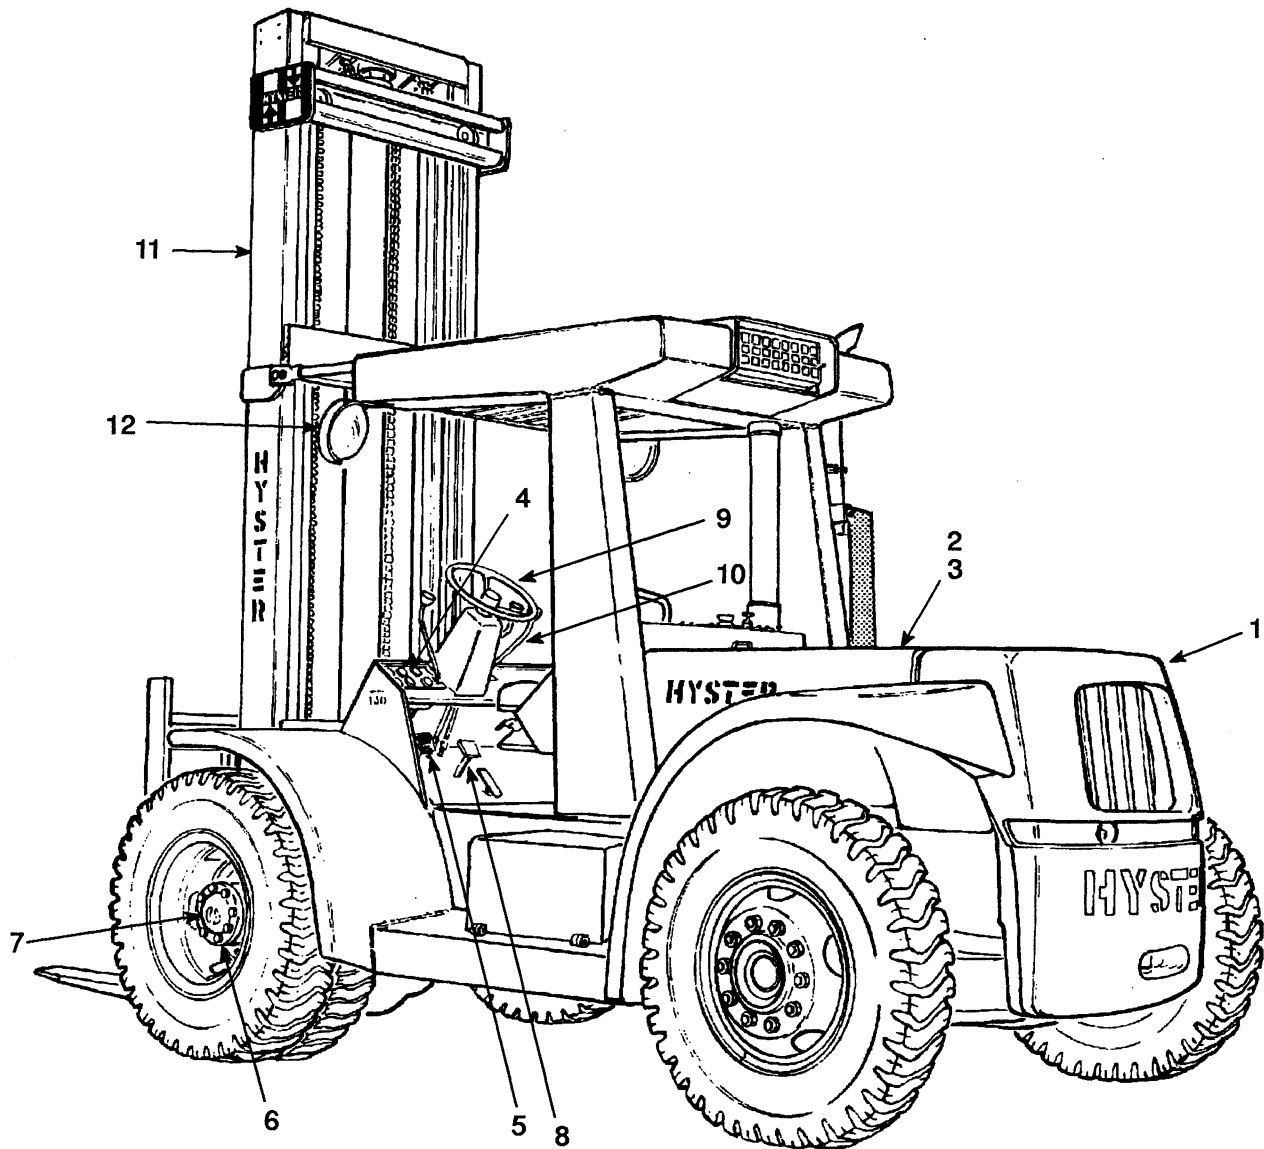

REF	SECTION	PAGE
1	FRAME	Page 3
2	ENGINE	Page 23
3	FUEL SYSTEM	Page 93
4	ELECTRICAL SYSTEM	Page 139
5	CLUTCH	Page 163
6	TRANSMISSION	Page 171
7	DRIVE AXLE	Page 209
8	BRAKE SYSTEM	Page 225
9	STEERING SYSTEM	Page 245
10	HYDRAULIC SYSTEM	Page 253
11	MAST	Page 287
12	OPTIONAL EQUIPMENT	Page 317
..	NUMERIC INDEX	Page 361

TABLE OF CONTENTS

DESCRIPTION	PAGE
A	
AIR COMPRESSOR (Figure 122) USED ON S/N C7D-1501 ⇒ C7D-1891, AND C7N-1501 ⇒ C7N-1524, FIRST USED ON C7A-2257, C7H-1542, C7P-3501 AND C7S-1589	Page 238
AIR COMPRESSOR (Figure 123) FIRST USED ON S/N C7D-1892 AND C7N-1525	Page 240
AIR COMPRESSOR USED ON S/N C7D-1501 ⇒ C7D-1891, AND C7N-1501 ⇒ C7N-1524, FIRST USED ON C7A-2257, C7H-1542, C7P-3501 AND C7S-1589	Page 239
AIR FILTER (Figure 73) GASOLINE AND LPG	Page 132
AIR FILTER (Figure 74) DETROIT DIESEL	Page 134
AIR FILTER (Figure 75) PERKINS DIESEL	Page 136
ALTERNATOR BRACKET (Figure 81)	Page 154
ALTERNATOR (Figure 82) LAST USED ON S/N C7D-2752	Page 156
ALTERNATOR (Figure 83) FIRST USED ON S/N C7D-2753	Page 158
ALTERNATOR (Figure 84) LAST USED ON S/N C7D-2753	Page 160
AUXILIARY DRIVE (Figure 32) 6-354 DIESEL LAST USED ON S/N C7P-2573 AND C7S-1517	Page 63
AUXILIARY DRIVE (Figure 41) 6-354.4 DIESEL FIRST USED ON S/N C7D-1501, C7H-1501, C7P-2574 AND C7S-1518	Page 78
B	
BRAKE CHAMBER (Figure 117) HEAVY DUTY AIR BRAKE	Page 228
BRAKE (Figure 118) AIR ACTIVATED FIRST USED ON S/N C7A-2257, C7D-1501, C7H-1542, C7P-3501 AND C7S-1589	Page 230

TABLE OF CONTENTS

DESCRIPTION	PAGE
B (Continued)	
BRAKE (Figure 119) HYDRAULICALLY ACTIVATED	Page 232
BRAKE LINKAGE (Figure 116) AIR BRAKE FIRST USED ON S/N C7A-2257, C7D-1501, C7H-1542, C7P-3501 AND C7S-1589	Page 226
BRAKE LINKAGE (Figure 120) HYDRAULIC BRAKE	Page 234
BRAKE PEDAL (Figure 121)	Page 236
C	
CAB (Figure 169) TWO DOOR	Page 334
CAB GLASS (Figure 178) TWO DOOR CAB	Page 352
CAMSHAFT, CRANKSHAFT AND PISTONS (Figure 12) V8-350 GASOLINE AND LPG LAST USED ON 5W 1985 SERIES ENGINE	Page 28
CAMSHAFT, CRANKSHAFT AND PISTONS (Figure 19) V8-350 GASOLINE AND LPG FIRST USED ON 6W 1986 SERIES ENGINE	Page 42
CAMSHAFT, CRANKSHAFT AND PISTONS V8-350 GASOLINE AND LPG FIRST USED ON 6W 1986 SERIES ENGINE	Page 43
CARBURETOR (Figure 52) V8-350 GASOLINE	Page 100
CARRIAGE (Figure 161) H150H-H200HS (H7.00H-H9.00HS)	Page 314
CARRIAGE (Figure 162) H200H-H275H AND P150-200B (H9.00H-H12.50H AND P7.00-9.00B)	Page 315
CHARGE PUMP (Figure 101) POWERSHIFT	Page 194
CLUTCH LINKAGE (Figure 86) OIL CLUTCH	Page 166

TABLE OF CONTENTS

DESCRIPTION	PAGE
C (Continued)	
CONTROL KNOBS (Figure 181)	Page 359
CONTROL VALVE ATTACHING PARTS (Figure 137)	Page 268
CONTROL VALVE ATTACHING PARTS (Figure 140) ONE FUNCTION	Page 274
CONTROL VALVE ATTACHING PARTS (Figure 142) TWO FUNCTION	Page 278
CONTROL VALVE ATTACHING PARTS (Figure 144) THREE FUNCTION	Page 282
CONTROL VALVE (Figure 100) POWERSHIFT FIRST USED ON S/N C7D-1501, C7H-1501, C7P-2574 AND C5S-1518	Page 192
CONTROL VALVE (Figure 141) ONE FUNCTION	Page 276
CONTROL VALVE (Figure 143) TWO FUNCTION	Page 280
CONTROL VALVE (Figure 145) THREE FUNCTION	Page 284
COOLING (Figure 44)	Page 82
COUNTERWEIGHT (Figure 5)	Page 10
COWL AND FLOORPLATES (Figure 2)	Page 4
CRANKSHAFT, PISTONS AND FLYWHEEL (Figure 26) 6-354 DIESEL LAST USED ON S/N C7P-2573 AND C7S-1517	Page 54
CRANKSHAFT, PISTONS AND FLYWHEEL (Figure 35) 6-354.4 DIESEL FIRST USED ON S/N C7D-1501, C7H-1501, C7P-2574 AND C7S-1518	Page 68
CYLINDER BLOCK (Figure 11) V8-350 GASOLINE LAST USED ON 8W 1978 SERIES ENGINE	Page 26
CYLINDER BLOCK (Figure 16) V8-350 GASOLINE AND LPG USED ON 9W 1979 ⇒ 5W 1985 SERIES ENGINE	Page 36

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

TABLE OF CONTENTS

DESCRIPTION	PAGE
C (Continued)	
CYLINDER BLOCK (Figure 18) V8-350 GASOLINE AND LPG FIRST USED ON 6W 1986 SERIES ENGINE	Page 40
CYLINDER BLOCK (Figure 25) 6-354 DIESEL LAST USED ON S/N C7P-2573 AND C7S-1517	Page 52
CYLINDER BLOCK (Figure 34) 6-354.4 DIESEL FIRST USED ON S/N C7D-1501, C7H-1501, C7P-2574 AND C7S-1518	Page 66
CYLINDER (Figure 167) PULPWOOD BOOM PIVOT	Page 331
CYLINDER (Figure 168) PULPWOOD BOOM TRIP	Page 332
CYLINDER HEAD (Figure 13) V8-350 GASOLINE AND LPG LAST USED ON 5W 1985 SERIES ENGINE	Page 30
CYLINDER HEAD (Figure 20) V8-350 GASOLINE AND LPG FIRST USED ON 6W 1986 SERIES ENGINE	Page 44
CYLINDER HEAD (Figure 27) 6-354 DIESEL LAST USED ON S/N C7P-2573 AND C7S-1517	Page 56
CYLINDER HEAD (Figure 36) 6-354.4 DIESEL FIRST USED ON S/N C7D-1501, C7H-1501, C7P-2574 AND C7S-1518	Page 70
D	
DIFFERENTIAL AND CARRIER (Figure 113) WITH PLANETARY AXLE	Page 216
DIFFERENTIAL (Figure 112) WITHOUT PLANETARY AXLE H150-250H (H7.00-11.50H)	Page 214
DISTRIBUTOR (Figure 78) V8-350 GASOLINE AND LPG	Page 148

TABLE OF CONTENTS

DESCRIPTION	PAGE
D (Continued)	
DRIVE AXLE AND HUB (Figure 110) WITHOUT PLANETARY FINAL DRIVE H150-250H (H7.00-11.50H)	Page 210
DRIVE AXLE MOUNT (Figure 111) PLANETARY FINAL DRIVE	Page 212
DRIVE SHAFT (Figure 102) POWERSHIFT	Page 195
DRIVE SHAFT (Figure 93) OIL CLUTCH	Page 180
DROP BOX (Figure 107)	Page 204
E	
ELECTRICAL SYSTEM (Figure 76) V8-350 GASOLINE AND LPG	Page 140
ELECTRICAL SYSTEM (Figure 77) PERKINS AND DETROIT DIESEL	Page 144
ENGINE GUARDS (Figure 24) GASOLINE AND LPG	Page 50
ENGINE MOUNTS (Figure 43)	Page 80
EXHAUST (Figure 48) GASOLINE AND LPG	Page 90
EXHAUST (Figure 49) DETROIT DIESEL	Page 91
EXHAUST (Figure 50) PERKINS DIESEL	Page 92
F	
FIRE EXTINGUISHER (Figure 177)	Page 351
FLOW CONTROL VALVE (Figure 146)	Page 286
FORKS (Figure 179) IDENTIFY BY PART NUMBER	Page 354

TABLE OF CONTENTS

DESCRIPTION	PAGE
F (Continued)	
FORWARD/REVERSE CLUTCH (Figure 95) POWERSHIFT	Page 184
FORWARD/REVERSE CONTROLS (Figure 106) OIL CLUTCH	Page 202
FORWARD/REVERSE GEAR BOX (Figure 91) OIL CLUTCH	Page 176
FUEL (Figure 55) PERKINS DIESEL	Page 106
FUEL (Figure 59) DETROIT DIESEL	Page 114
FUEL FILTER (Figure 61)	Page 118
FUEL INJECTION (Figure 57) 6-354 DIESEL LAST USED ON S/N C7P-2573 AND C7S-1517	Page 110
FUEL INJECTION (Figure 58) 6-354.4 DIESEL FIRST USED ON S/N C7A-1501, C7D-1501, C7P-2574 AND C7S-1518	Page 112
FUEL SYSTEM (Figure 51) V8-350 GASOLINE	Page 96
FUEL SYSTEM (Figure 53) LPG LAST USED ON S/N C7A-2885 AND C7D-2067	Page 102
FUEL SYSTEM (Figure 54) LPG FIRST USED ON S/N C7A-2886 AND C7D-2068	Page 104
H	
HEADER HOSES (Figure 160)	Page 312
HEAT EXCHANGER (Figure 108) POWERSHIFT	Page 206
HEATER AND DEFROSTER (Figure 174)	Page 346
HIGH SPEED CLUTCH (Figure 96) POWERSHIFT	Page 186

TABLE OF CONTENTS

DESCRIPTION	PAGE
H (Continued)	
HOOD AND LINKAGE (Figure 3)	Page 6
HYDRAULIC OIL FILTER (Figure 87) OIL CLUTCH	Page 168
HYDRAULIC PUMP (Figure 131)	Page 258
HYDRAULIC SYSTEM (Figure 129)	Page 254
HYDRAULIC TANK (Figure 130)	Page 257
I	
INCHING CONTROL (Figure 104) POWERSHIFT	Page 198
L	
LABELS AND PAINT (Figure 4)	Page 8
LIFT CYLINDER (Figure 157) H150H-H180H AND H200HS (H7.00H-H8.00H AND H9.00HS)	Page 308
LIFT CYLINDER (Figure 158) H200H-H275H (H9.00H-H12.50H)	Page 309
LIFT CYLINDER (Figure 159) P150-200B (P7.00-9.00B)	Page 310
LIFT CYLINDER GUARD (Figure 176)	Page 350
LIFT (Figure 152) H150H-H180H (H7.00H-H8.00H)	Page 298
LIFT (Figure 153) H200HS (H9.00HS)	Page 300
LIFT (Figure 154) H200H-H250H (H9.00H-H11.50H)	Page 302
LIFT (Figure 155) H275H (H12.50H)	Page 304
LIFT (Figure 156) P150-200B (P7.00-9.00B)	Page 306

TABLE OF CONTENTS

DESCRIPTION	PAGE
L (Continued)	
LIFT PUMP AND WATER SEPARATOR FILTER (Figure 60) 6-354 DIESEL LAST USED ON S/N C7P-2573 AND C7S-1517	Page 116
LIGHTS (Figure 175)	Page 348
LOW PRESSURE FUEL (Figure 56) 6-354.4 DIESEL FIRST USED ON S/N C7A-1501, C7D-1501, C7P-2574 AND C7S-1518	Page 108
LPG CARBURETOR (Figure 66)	Page 124
LPG CONVERTER (Figure 65)	Page 122
LPG LOCK-OFF FILTER (Figure 64)	Page 121
LPG TANK (Figure 63)	Page 120
M	
MAIN CONTROL VALVE (Figure 138) LAST USED ON S/N C7H-1522, C7P-2812 AND C7S-1543	Page 270
MAIN CONTROL VALVE (Figure 139) FIRST USED ON S/N C7A-1501, C7D-1501, C7H-1523, C7P-2813 AND C7S-1544	Page 272
MANIFOLDS (Figure 14) V8-350 GASOLINE LAST USED ON 8W 1978 SERIES ENGINE	Page 32
MANIFOLDS (Figure 17) V8-350 GASOLINE AND LPG USED ON 9W 1979 ⇒ 5W 1985 SERIES ENGINE	Page 38
MANIFOLDS (Figure 21) V8-350 GASOLINE AND LPG FIRST USED ON 6W 1986 SERIES ENGINE	Page 46
MANIFOLDS (Figure 29) 6-354 DIESEL LAST USED ON S/N C7P-2573 AND C7S-1517	Page 58
MANIFOLDS (Figure 39) 6-354.4 DIESEL FIRST USED ON S/N C7D-1501, C7H-1501, C7P-2574 AND C7S-1518	Page 76

TABLE OF CONTENTS

DESCRIPTION	PAGE
M (Continued)	
MEDIUM SPEED PLANET (Figure 97) POWERSHIFT	Page 187
MONOTROL PEDAL (Figure 109) POWERSHIFT	Page 208
O	
OIL CLUTCH (Figure 85)	Page 164
OIL FILTER (Figure 33) 6-354 DIESEL LAST USED ON S/N C7P-2573 AND C7S-1517	Page 64
OIL FILTER (Figure 42) 6-354.4 DIESEL FIRST USED ON S/N C7D-1501, C7H-1501, C7P-2574 AND C7S-1518	Page 79
OIL PAN AND PUMP (Figure 30) 6-354 DIESEL LAST USED ON S/N C7P-2573 AND C7S-1517	Page 60
OIL PAN AND PUMP (Figure 38) 6-354.4 DIESEL FIRST USED ON S/N C7D-1501, C7H-1501, C7P-2574 AND C7S-1518	Page 74
OIL PAN (Figure 15) V8-350 GASOLINE AND LPG LAST USED ON 5W 1985 SERIES ENGINES	Page 34
OIL PAN (Figure 22) V8-350 GASOLINE AND LPG FIRST USED ON 6W 1986 SERIES ENGINES	Page 48
OIL PUMP (Figure 23) V8-350 GASOLINE AND LPG	Page 49
OPERATOR PROTECTION GUARD (Figure 166)	Page 330
OUTER AND INNER MASTS (Figure 147) H150H-H180H (H7.00H-H8.00H)	Page 288
OUTER AND INNER MASTS (Figure 148) H200HS (H9.00HS)	Page 290
OUTER AND INNER MASTS (Figure 149) H200H-H250H (H9.00H-H11.50H)	Page 292

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
O (Continued)	
OUTER AND INNER MASTS (Figure 150) H275H (H12.50H)	Page 294
OUTER AND INNER MASTS (Figure 151) P150-200B (P7.00-9.00B)	Page 296
OUTPUT PLANET (Figure 98) POWERSHIFT	Page 188
P	
PARK BRAKE (Figure 124)	Page 242
PLANETARY DRIVE AXLE (Figure 114) HYDRAULIC BRAKE H150-275H AND P150-200B (H7.00-12.50H AND P7.00-9.00B)	Page 220
PLANETARY DRIVE AXLE (Figure 115) AIR BRAKE FIRST USED ON S/N C7A-2257, C7D-1501, C7H-1542, C7P-3501 AND C7S-1589	Page 222
PUBLICATIONS (Figure 1)	Page 1
PULPWOOD LOADER (Figure 164) PIVOTING BOOM	Page 326
PULPWOOD LOADER (Figure 165) RIGID BOOM	Page 328
PUMP DRIVE SHAFT (Figure 134)	Page 264
R	
RANGE SELECTOR (Figure 105) POWERSHIFT	Page 200
REGULATOR AND PUMP (Figure 88) OIL CLUTCH	Page 169
S	
SEAT (Figure 6) NON-ADJUSTABLE SUSPENSION AND NON-SUSPENSION LAST USED ON S/N C7D-2674	Page 12
SEAT (Figure 7) ADJUSTABLE SUSPENSION LAST USED ON S/N C7D-2674	Page 14

TABLE OF CONTENTS

DESCRIPTION	PAGE
S (Continued)	
SEAT (Figure 8) NON-ADJUSTABLE SUSPENSION AND NON-SUSPENSION FIRST USED ON S/N C7D-2675	Page 16
SEAT (Figure 9) ADJUSTABLE SUSPENSION FIRST USED ON S/N C7D-2675	Page 18
SHIFT LINKAGE (Figure 92) OIL CLUTCH	Page 178
SIDESHIFT CARRIAGE (Figure 172)	Page 342
SIDESHIFT CYLINDER (Figure 173)	Page 344
SOUND LINERS (Figure 170)	Page 338
STARTER (Figure 79) V8-350 GASOLINE, LPG AND DETROIT DIESEL	Page 150
STARTER (Figure 80) PERKINS DIESEL	Page 152
STEER AXLE (Figure 126)	Page 248
STEER CYLINDER (Figure 128)	Page 252
STEERING PUMP AND COLUMN (Figure 127)	Page 250
STEERING SYSTEM (Figure 125)	Page 246
STROBE LIGHT (Figure 180)	Page 358
T	
THROTTLE LINKAGE (Figure 67) PERKINS DIESEL LAST USED ON S/N C7P-2573 AND C7S-1517	Page 126
THROTTLE LINKAGE (Figure 68) PERKINS DIESEL FIRST USED ON S/N C7D-1501, C7H-1501, C7P2574 AND C7S-1518	Page 127
THROTTLE LINKAGE (Figure 69) DETROIT DIESEL	Page 128

TABLE OF CONTENTS

DESCRIPTION	PAGE
T (Continued)	
THROTTLE LINKAGE (Figure 70) GASOLINE AND LPG	Page 129
THROTTLE LINKAGE (Figure 71) OIL CLUTCH	Page 130
THROTTLE LINKAGE (Figure 72) POWERSHIFT	Page 131
TILT CYLINDER (Figure 132) LAST USED ON S/N C7H-1508 AND C7P-2752	Page 260
TILT CYLINDER (Figure 133) FIRST USED ON S/N C7A-1501, C7D-1501, C7H-1509, C7P-2753 AND C7S-1501	Page 262
TILT VALVE (Figure 135) LAST USED ON S/N C7H-1617, C7P-2864 AND C7S-1532	Page 265
TILT VALVE (Figure 136) FIRST USED ON S/N C7A-1501, C7D-1510, C7H-1618, C7P-2865 AND C7S-1533	Page 266
TIMING GEAR (Figure 31) 6-354 DIESEL LAST USED ON S/N C7P-2573 AND C7S-1517	Page 62
TIMING GEAR (Figure 40) 6-354.4 DIESEL FIRST USED ON S/N C7D-1501, C7H-1501, C7P-2574 AND C7S-1518	Page 77
TIRE AND WHEEL (Figure 163) P150-200B (P7.00-9.00B)	Page 318
TORQUE CONVERTER (Figure 99) POWERSHIFT	Page 190
TRANSMISSION (Figure 90) OIL CLUTCH	Page 174
TRANSMISSION (Figure 94) POWERSHIFT	Page 182
TRANSMISSION HYDRAULICS (Figure 103) POWERSHIFT	Page 196
TRANSMISSION MOUNTS (Figure 89)	Page 172

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
V	
VALVE GEAR AND COVER (Figure 37) 6-354.4 DIESEL FIRST USED ON S/N C7D-1501, C7H-1501, C7P-2574 AND C7S-1518	Page 72
VALVE GEAR AND COVER(Figure 28) 6-354 DIESEL LAST USED ON S/N C7P-2573 AND C7S-1517	Page 57
W	
WATER PUMP AND FAN (Figure 45) DETROIT DIESEL, GASOLINE AND LPG	Page 84
WATER PUMP AND FAN (Figure 46) PERKINS 6-354 DIESEL LAST USED ON S/N C7P-2573 AND C7S-1517	Page 86
WATER PUMP AND FAN (Figure 47) PERKINS 6-354.4 DIESEL FIRST USED ON S/N C7D-1501, C7H-1501, C7P-2574 AND C7S-1518	Page 88
WATER SEPARATOR FILTER (Figure 62) PERKINS DIESEL 6-354.4 FIRST USED ON S/N C7D-1501, C7P-2574 AND C7S-1518	Page 119
WIPER MOTOR (Figure 171)	Page 340

HOW TO USE ILLUSTRATED PARTS MANUAL

This parts manual describes and illustrates assemblies, subassemblies, and detail parts needed for service replacement.

The different constructions are indicated by keys, symbols and footnotes.

HYSTER
SERIAL CODE C187

TABLE OF CONTENTS

DESCRIPTION	PAGE
CARRIAGE (Figure 107) VISTA 2-STG LFL	Page 192
CARRIAGE (Figure 136) VISTA 3-STG FFL	
CARRIAGE (Figure 166) VISTA 2-STG FFL	
CARRIAGE (Figure 197) VISTA 4-STG FFL	
CARRIAGE (Figure 203) SIDE-SHIFT	
CARRIAGE (Figure 204) SIDE-SHIFT	
CLUTCH-FORWARD AND	

HYSTER
SERIAL CODE C187

INDEX—NUMERICAL

PART NO	REF FIGURE NO	PART NO	REF FIGURE NO	PART NO	REF FIGURE NO	PART NO	REF FIGURE NO	PART NO	REF FIGURE NO
126	51 28	90	13	97	19	33	20	129	14
				99	18	35	10	131	11
		101	19			36	16	15212	2

HYSTER
SERIAL CODE C108

ILLUSTRATED CONTENTS

REF	DIVISION
1	Frame
2	Drive Axle
3	Steering
4	Brake/Accelerator
5	Electrical
6	Hydraulic
7	Mast-Vista Two-Stage Limited Free Lift
8	Mast-Global Two-Stage Limited Free Lift
9	Mast-Vista Three-Stage Full Free Lift
10	Mast-Global Three-Stage Full Free Lift
11	Mast-Vista Two-Stage Full Free Lift
12	Mast-Global Two-Stage Full Free Lift
13	Mast-Vista Four-Stage Full Free Lift
14	Optional Equipment

HYSTER
SERIAL CODE C108

CARRIAGE (Figure 123)

LAST USED ON S/N PENDING PER ECN 98765

KEY
A: E40-50XL
B: E60XL

REF	PART NO.	NAME OF PART	QTY
1	1371660	Carriage	1
1	1359245	Frame	1
1	1359246	Frame	1
2	1345218	Load Roller ("A" Standard)	6
2	1345219	Load Roller ("B" 0.03 in.)	6
2	1345220	Load Roller ("C" 0.06 in.)	6
3	12891	Snap Ring	6

REF	PART NO.	NAME OF PART
4	1345263	Shim
5	366116	Spacer
6	1369345	Chain Anchor
6	1369344	Chain Anchor
7	317735	Pin
8	131358	Snap Ring
9	323161	Pin
10	15200	Cotter Pin

HOW TO FIND THE DESIRED PART NUMBER

WHEN THE PART NUMBER AND THE NEXT HIGHER ASSEMBLY IS NOT KNOWN:

1. Determine the function and application of the part required. Turn to the illustrated index page immediately behind the front cover. Choose the general area of reference most likely to include the part.
2. Find the page number for the reference number you choose and turn to that page. Use the division index to determine the assembly which would normally contain the part required. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS NOT KNOWN AND THE NEXT HIGHER ASSEMBLY IS KNOWN:

3. Determine the assembly the required part is used on. Turn to the Master Index immediately following the Illustrated Index.
4. Locate the assembly the required part is used on and turn to the page indicated for that assembly. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS KNOWN:

5. Use the numerical index at the back of the manual to find the part number. Turn to the figure listed and locate the part as indicated by the reference number.

GENERAL:

The assembly breakdowns include part numbers, description, quantities required, keys and footnotes to help in selecting the correct parts.

 
6. Keys are used to show effective serial numbers for two or more similar assemblies, RH and LH assembly parts, etc. Select the appropriate key, "A", "B", "C" or "D" and the corresponding quantity column to find the required parts.
7. Indented descriptions under "Name of Part" are used to indicate assemblies and sub-parts of assemblies. In the example, *LOAD ROLLER* (Item 2) is a subpart of the major assembly *CARRIAGE*.
8. Quantities shown are for one assembly. The quantities of the subpart *LOAD ROLLER* are indicated as six and six. This means six per *CARRIAGE* assembly.
9. Engineering change notice (ECN) numbers for pending serial numbers are shown to allow for the inclusion of the most current parts information. Contact your local dealer for Hyster lift trucks for serial number information listed by ECN number.
10. Additional fork lengths are available. Contact your dealer for Hyster lift trucks.

ORDERING PARTS:

When ordering replacement parts, give the unit serial number, part number, name of part and quantity required.


For any further information on parts, service, or ordering, consult your local dealer for Hyster lift trucks.

IDENTIFICATION OF TRUCK SERIAL NUMBERS



- (1) & (2) The first letter and three numbers indicates the truck model code.
- (3) The second letter indicates the plant of manufacture.
- (4) The four or five digit number series indicates the serial number of the truck.
- (5) The final letter indicates the year of manufacture starting with "A" in 1957 and 1980. The letters "I", "O", and "Q" will not be used.

For pending serial numbers contact your local dealer for Hyster lift trucks.

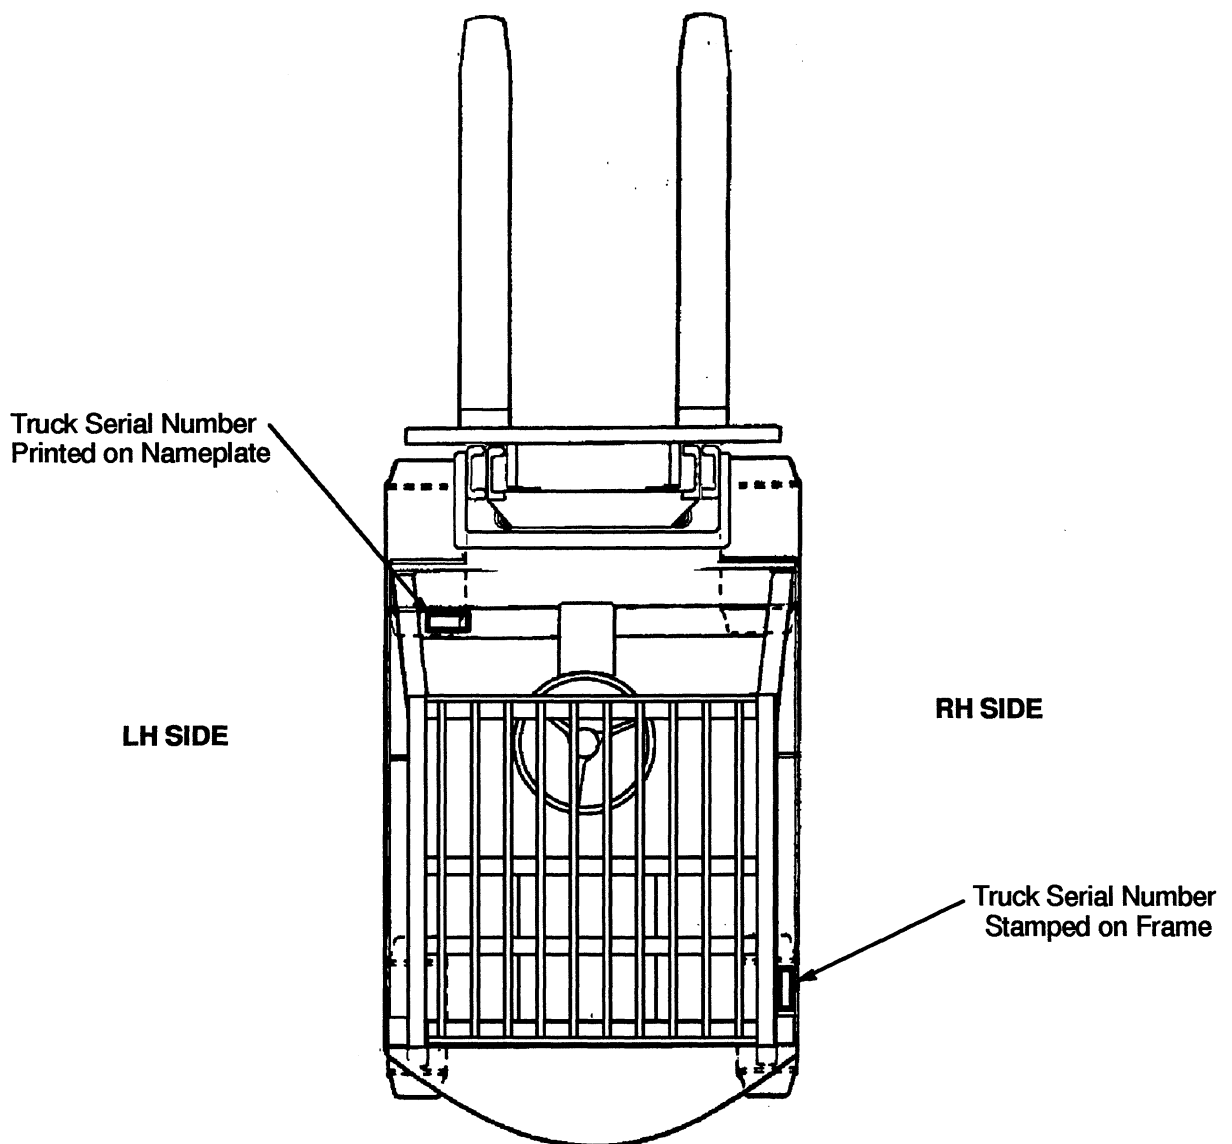

Parts referred to in this book as right or left hand parts are in accordance with the illustration above.

IDENTIFICATION OF MASTS NUMBERS

LIFT EQUIPMENT IDENTIFICATION

1. Mast group numbers and total lift heights are stamped on the right hand outer mast approximately four feet from the bottom of the fork. The group numbers include the inner and outer masts, lift cylinder, lift chain and bleeder hoses or pipes.
2. The carriage and tilt cylinder numbers are located as shown. Lift cylinder numbers are stamped on the cylinder shell near the bleeder screw or on the chain anchor. Fork part number, capacity rating, plant code letter and date of manufacture are stamped approximately six inches below the top RH side of forks. Always refer to these group and part numbers when ordering service parts.

