SERVICE REPAIR


MANUAL

Hyster C174 (R30XMS) Forklift



DIAGRAMS

EPS III R30XM, R30XMA, R30XMF (F118)

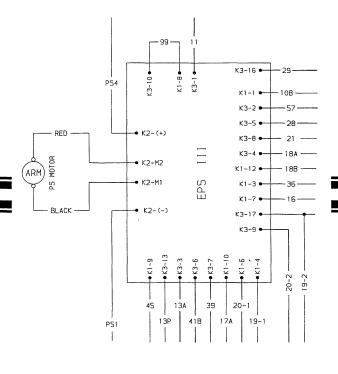

HYSTER

PART NO. 1462203 8000 SRM 746

SAFETY PRECAUTIONS MAINTENANCE AND REPAIR

- When lifting parts or assemblies, make sure that all slings, chains, and cables are
 correctly fastened and that the load being lifted is balanced. Make sure that the
 crane, cables, and chains have the capacity to support the weight of the load.
- Do not lift heavy parts by hand. Use a lifting mechanism.
- Wear safety glasses.
- DISCONNECT THE BATTERY CONNECTOR before doing any maintenance or repair on electric lift trucks. Disconnect the battery ground cable on internal combustion lift trucks.
- Always use correct blocks to prevent the unit from rolling or falling. See "How
 To Put The Lift Truck On Blocks" in the OPERATING MANUAL or the
 PERIODIC MAINTENANCE section.
- Keep the unit and working area clean and in order.
- Use the correct tools for the job.
- Keep the tools clean and in good condition.
- Always use HYSTERAPPROVED parts when making repairs. Replacement parts must meet or exceed the specifications of the original equipment manufacturer.
- Make sure that all nuts, bolts, snap rings, and other fastening devices are removed before using force to remove parts.
- Always fasten a DO NOT OPERATE sign to the controls of the unit when making repairs or if the unit needs repairs.
- Make sure you follow the **DANGER**, **WARNING**, and **CAUTION** notes in the instructions.
- Batteries generate flammable gas when they are being charged. Keep fire and sparks away from the area. Make sure the area has ventilation.

CONTENTS

WIRING SCHEMATIC — EPS III	1
WIRING SCHEMATIC - OPTIONAL EQUIPMENT — EPS III	3
WIRING DIAGRAM — EPS III	5
WIRING DIAGRAM - OPTIONAL EQUIPMENT — EPS III	9
WIRING SCHEMATIC - WIRE GUIDANCE — EPS III	11
WIRING SCHEMATIC - WIRE GUIDANCE - OPTIONAL EQUIPMENT — EPS III	13
WIRING DIAGRAM - WIRE GUIDANCE — EPS III	15
WIRING DIAGRAM - WIRE GUIDANCE - OPTIONAL EQUIPMENT — EPS III	19
HYDRAULIC SCHEMATIC	20

This section is for the following models: R30XM, R30XMA, R30XMF (F118) Thanks very much for your reading,

Want to get more information,


Please click here, Then get the complete
manual





NOTE:

If there is no response to click on the link above, please download the PDF document first, and then click on it.

Have any questions please write to me: admin@servicemanualperfect.com

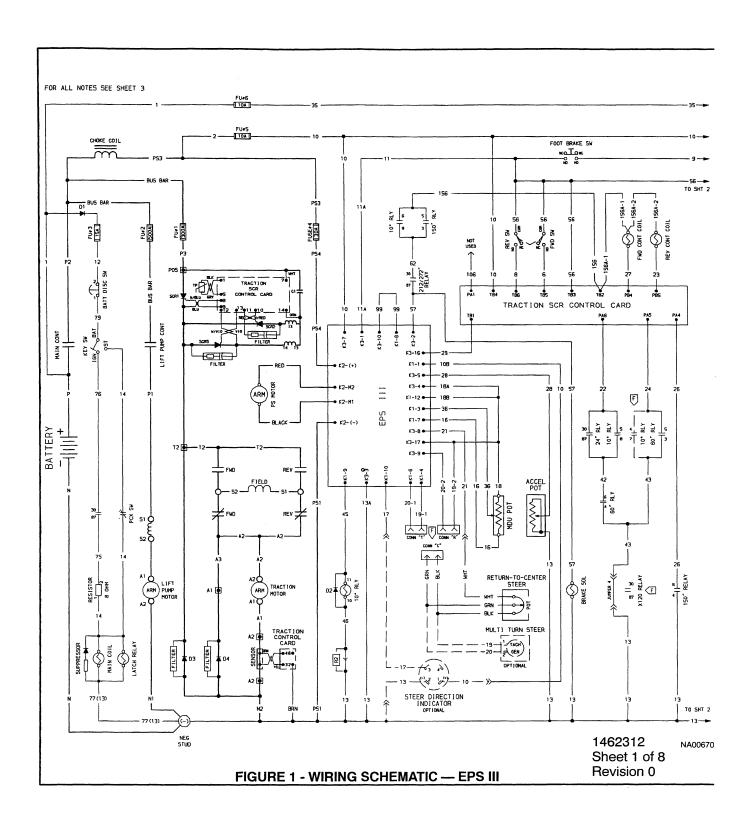

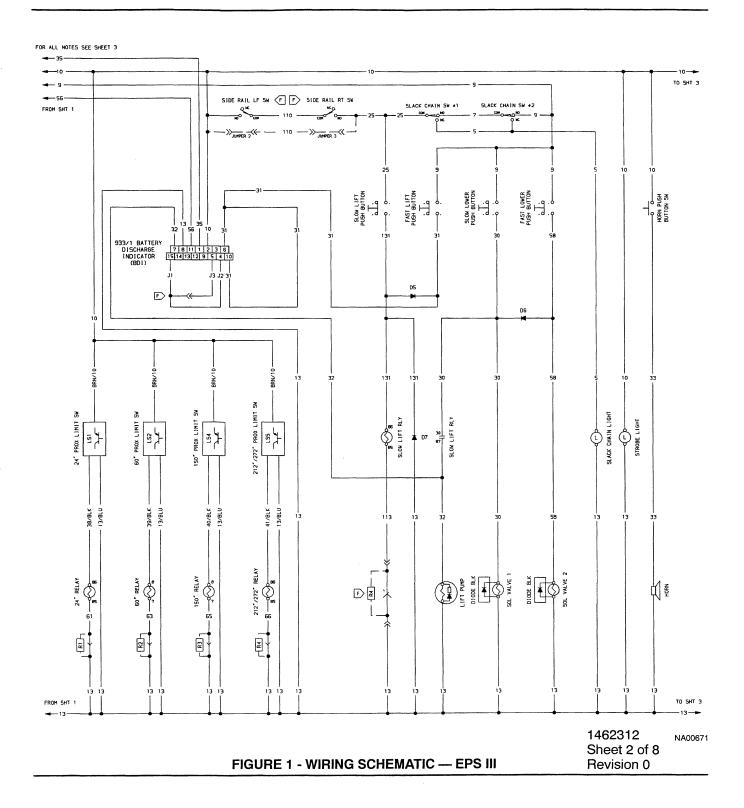


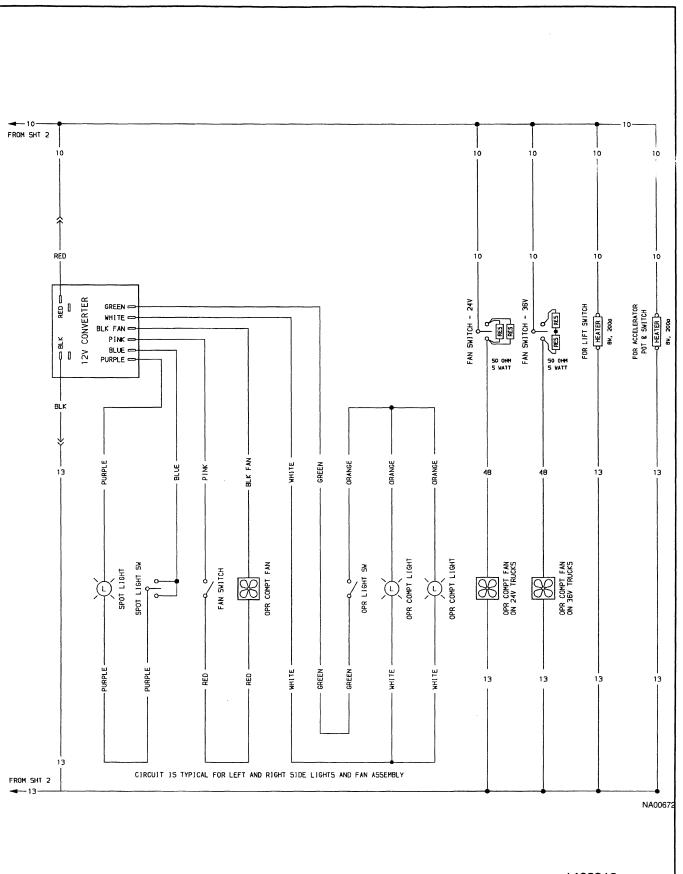



1462312 Sheet 3 of 8 FIGURE 1 - WIRING SCHEMATIC-OPTIONAL EQUIPMENT— EPS III Revision 0


NOTES


,		

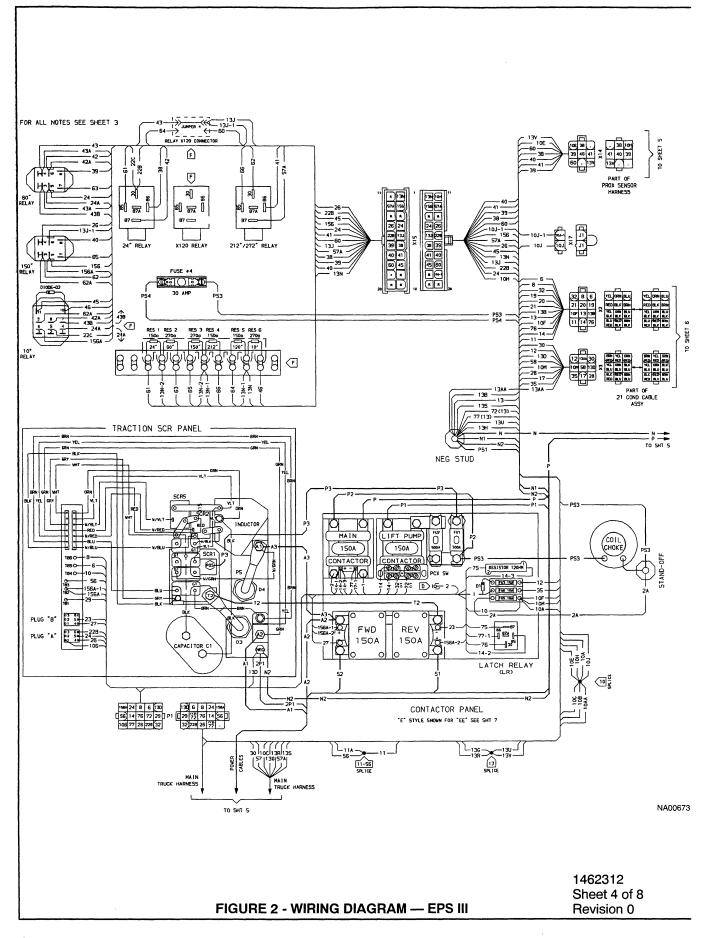

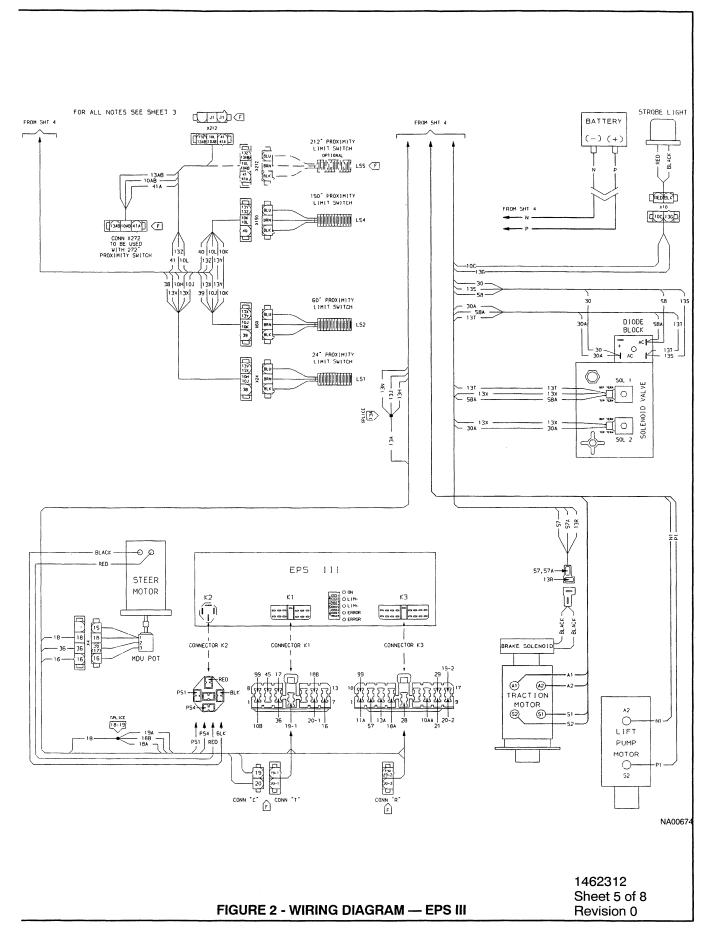


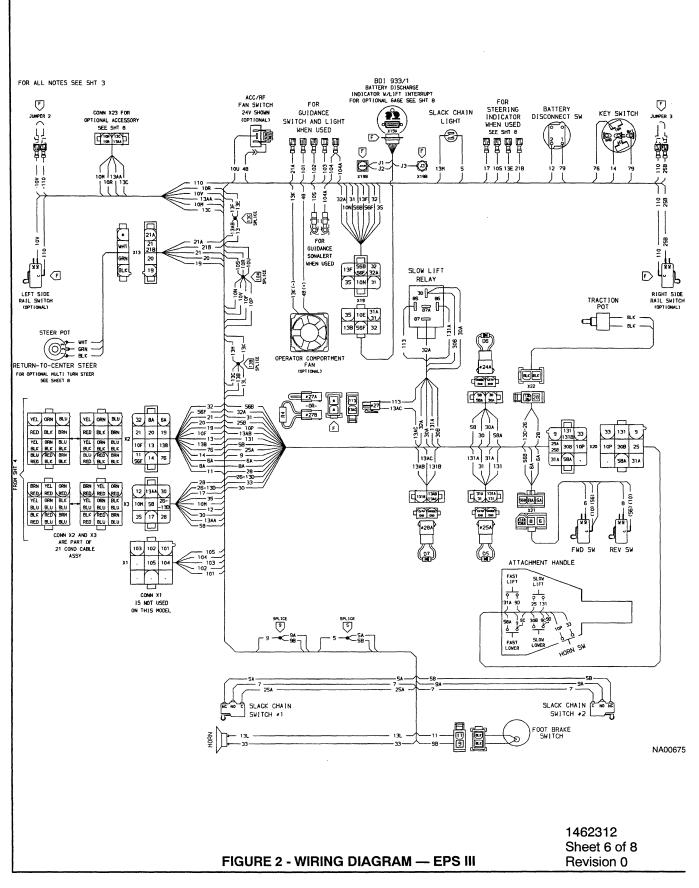

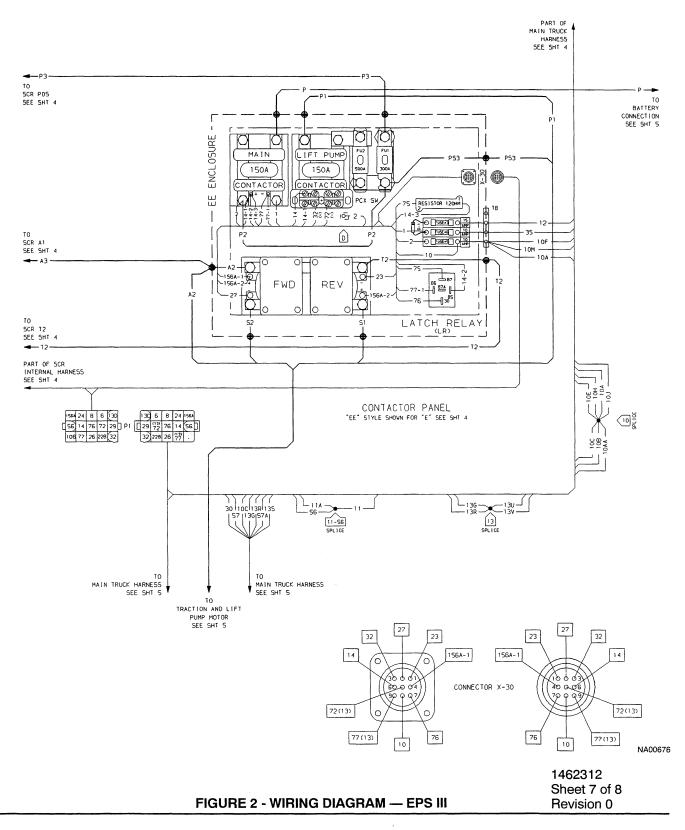

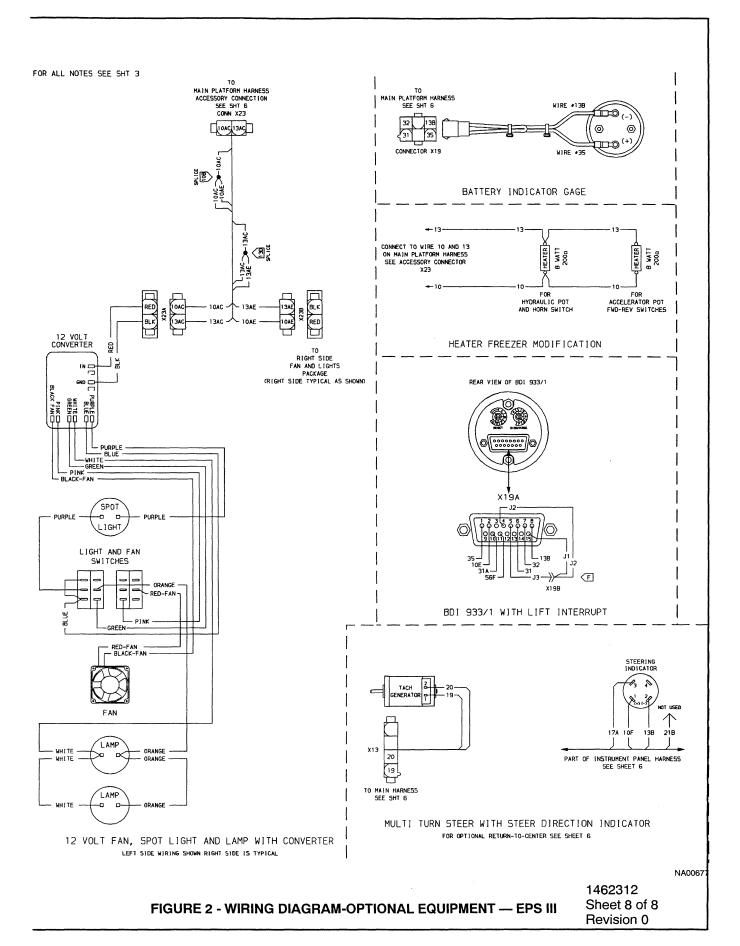

NOTES

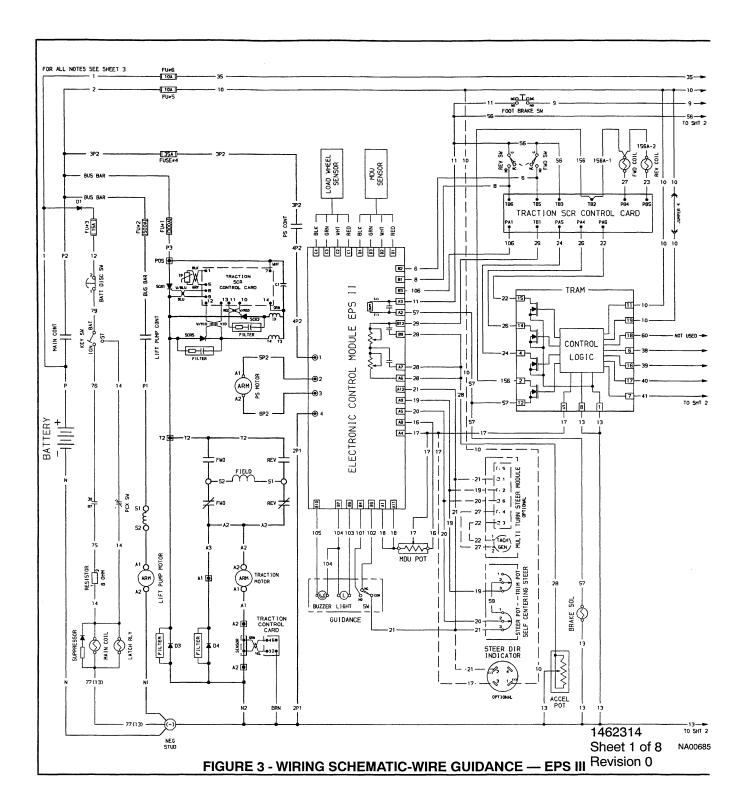


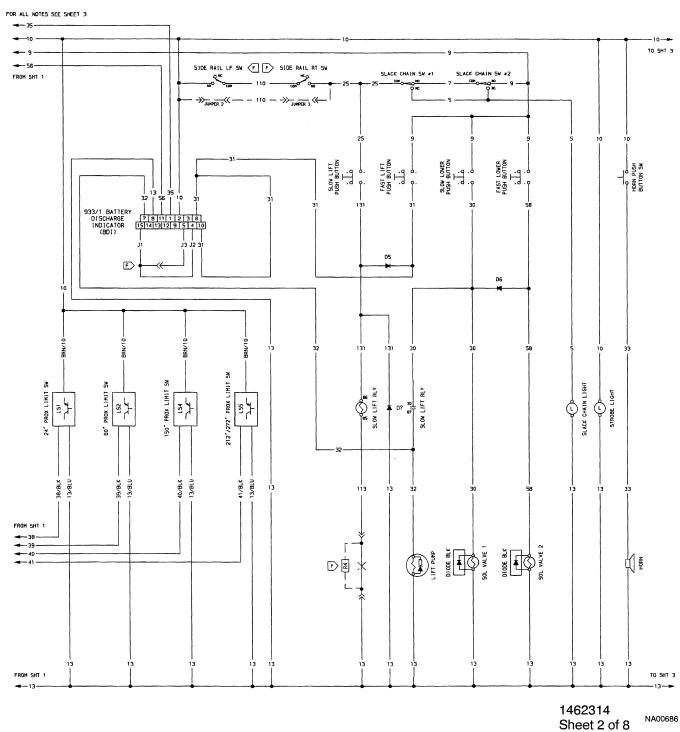


FIGURE 3 - WIRING SCHEMATIC-WIRE GUIDANCE — EPS III Revision 0



1462314
Sheet 3 of 8
FIGURE 3 - WIRING SCHEMATIC-WIRE GUIDANCE-OPTIONAL EQUIPMENT— EPS III Revision 0

NOTES

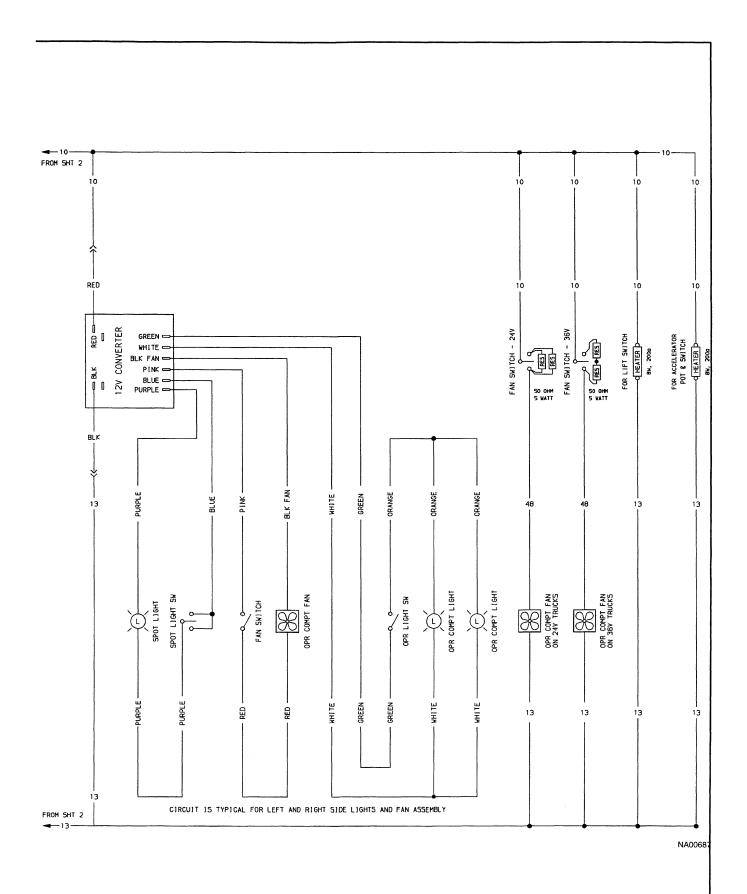