

PARTS MANUAL

**H400HD-EC, H450HD-EC,
H450HDS-EC, H500HD-EC
(C214)**

CUSTOMER EDITION

HYSTER

SECTIONS

1	FRAME
2	ENGINE ASSEMBLY
3	FUEL SYSTEM
4	ELECTRICAL SYSTEM
5	TRANSMISSION
6	DRIVE AXLE
7	STEERING SYSTEM
8	BRAKE SYSTEM
9	HYDRAULIC SYSTEM
10	MAST WITH EMPTY CONTAINER HANDLER
11	OPTIONS
12	FIELD CONVERSION KITS
13	NUMERICAL INDEX

This Parts Manual is divided into 13 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

TABLE OF CONTENTS

DESCRIPTION	PAGE
A	
AIR CONDITIONER AND CONTROL PANEL ASSEMBLIES	1-68
AIR CONDITIONER ASSEMBLY	
→ 12/2012	1-70
12/2012 →	1-72
CLIMATE CONTROL CAB	1-132
AIR CONDITIONER FILTER AND COVER ASSEMBLY	1-84
AIR CONDITIONER SYSTEM	
CLIMATE CONTROL CAB	1-130
AIR CONDITIONING SYSTEM	1-62
AIR DUCT ASSEMBLY	
AIR CONDITIONING	1-66
HEATER	1-78
LOUVER, CLIMATE CONTROL CAB	1-128
AIR HEATER STARTING AID	
TIER III ENGINE	2-25
AIR HORN	1-50
AIR INTAKE CONNECTION	
TIER III ENGINE	2-26
TIER IV INTERIM ENGINE	2-84
AIR INTAKE HOSE	
TIER III ENGINE	2-27
AIR INTAKE MANIFOLD	
TIER III ENGINE	2-28
TIER IV INTERIM ENGINE	2-86
AIR INTAKE SYSTEM	
TIER III ENGINE	3-8
TIER IV INTERIM ENGINE	3-10
AIR TRANSFER CONNECTION	
TIER III ENGINE	2-29
TIER IV INTERIM ENGINE	2-87
ALTERNATOR AND MOUNTING	
TIER III ENGINE	4-11
TIER IV INTERIM ENGINE	4-228
ALTERNATOR SUPPORT AND WATER INLET	
TIER III ENGINE	4-12
ARMREST ASSEMBLY	
HYDRAULIC LEVERS	1-118
JOYSTICK	1-116
AUTOMATIC GREASING PUMP	
→ S/N C214E01767L	9-60
S/N C214E01768L →	9-64
AUTOMATIC GREASING SYSTEM	
PAGE 1 OF 3	9-66
PAGE 2 OF 3	9-68
PAGE 3 OF 3	9-70
AUTOMATIC GREASING SYSTEM HOSE SUPPORT	
S/N C214E01695K →	9-78

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
B	
BELT TENSIONER	
TIER III ENGINE	2-30
TIER IV INTERIM ENGINE	2-88
BLOCK ASSEMBLY AND HOSES, TWIN 12-PORT	
WITH METERING UNITS NUMBER 3, 4, AND 8 - STEER AXLE LUBRICATION	9-74
BLOCK ASSEMBLY AND HOSES, TWIN 4-PORT	
WITH METERING UNIT NUMBER 8 - CHAIN SHEAVES LUBRICATION	9-76
WITH METERING UNITS NUMBER 3 AND 10 - MAST MOUNTING LUBRICATION	9-72
BRAKE HOSES AND ATTACHING PARTS	
PAGE 1 OF 2	8-2
PAGE 2 OF 2	8-6
BRAKE PEDAL AND LINKAGE	8-10
BRAKE PEDAL ASSEMBLY	8-16
BRAKE VALVE AND ATTACHING PARTS	8-12
ALTERNATE CONFIGURATION	8-14
BREATHER PLUMBING	
TIER IV INTERIM ENGINE	2-89
C	
CAB	
ATTACHING PARTS	1-18
PAGE 1 OF 2	1-4
PAGE 2 OF 2	1-6
TILT AND LATCH ASSEMBLY	1-34
TILT CYLINDER	1-42
TILT ELECTRIC PUMP	1-38
TILT HAND PUMP	1-40
CAB DOOR	
LEFT HAND	1-44
RIGHT HAND	1-46
CAB FLOORMATS	1-32
CAB HEATER PLUMBING	
TIER III ENGINE	2-31
CAB HOSES AND ATTACHING PARTS	9-12
CAB MAIN DOOR WINDOW	
RIGHT AND LEFT HAND	1-48
CAB RECIRCULATING FAN	
CLOSED CAB ONLY	11-8
CAB SUNSHADE - REAR	
CAB WITH AIRCO - OPTIONAL FOR CAB WITHOUT AIRCO	1-30
CAB SUNSHADE - TOP	
CAB WITH AIRCO - OPTIONAL FOR CAB WITHOUT AIRCO	1-28
CAB TILT PUMP ASSEMBLY	1-37
CAB WINDOWS INSTALLATION	1-26
CAMSHAFT	
TIER III ENGINE	2-32
CAPSULE ASSEMBLY	
RAISE AND LOWER - JOYSTICK AND LEVERS	9-56

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
TILT - JOYSTICK AND LEVERS	9-58
CASE AND REAR COVER	
→ S/N C214E01686K (TE-17) → S/N C214E01766L (TE-13)	5-44
S/N C214E01687K → (TE-17) S/N C214E01767L → (TE-13)	5-46
CHARGING PUMP	5-22
CLIMATE CONTROL SYSTEM	1-122
COMBINATION VALVE	9-26
COMPRESSOR ASSEMBLY	1-60
CONDENSER ASSEMBLY	1-64
24V	1-142
CONDITIONAL SPEED LIMITER	
LIFT AND TILT	11-15
CONNECTING RODS AND PISTONS	
TIER III ENGINE	2-34
CONTROL PANEL ASSEMBLY	
AIR CONDITIONER (→ 12/2012)	1-74
AIR CONDITIONER (12/2012 →)	1-75
HEATER	1-81
CONTROL VALVE	9-28
AUXILIARY SPOOL SECTION	9-38
LIFT SPOOL SECTION - 1A AND 1B	9-34
LIFT SPOOL SECTION - 4A AND 4B	9-36
MID-INLET SECTION	9-30
OUTLET SECTION	9-31
TILT SPOOL SECTION	9-32
CONTROL VALVE ASSEMBLY	
→ S/N C214E01686K (TE-17) → S/N C214E01766L (TE-13)	5-31
S/N C214E01687K ↔ S/N C214E01765L	5-32
S/N C214E01766L →	5-33
CONTROL VALVE ATTACHING PARTS	
→ S/N C214E01686K (TE-17) → S/N C214E01766L (TE-13)	5-26
S/N C214E01687K ↔ S/N C214E01765L	5-28
S/N C214E01766L →	5-30
CONVERTER HOUSING	
→ S/N C214E01686K (TE-17) → S/N C214E01766L (TE-13)	5-4
S/N C214E01687K → (TE-17) S/N C214E01767L → (TE-13)	5-6
COOLANT HEATER STARTING AID	
TIER III ENGINE	2-36
COOLING SYSTEM	
TIER III ENGINE	2-14
TIER III ENGINE - ALTERNATE CONFIGURATION	2-16
TIER IV INTERIM ENGINE	2-18
TIER IV INTERIM ENGINE - ALTERNATE CONFIGURATION	2-22
COUNTERWEIGHT	1-15
CRANKCASE BREATHER	
TIER III ENGINE	2-37
TIER IV INTERIM ENGINE	2-90
CRANKSHAFT AND BEARINGS	
TIER III ENGINE	2-38

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
CYLINDER BLOCK	
TIER III ENGINE	2-40
CYLINDER HEAD	
TIER III ENGINE	2-42
D	
DASH ASSEMBLY	1-20
DC-DC CONVERTER AND ATTACHING PARTS	4-20
DIESEL PARTICULATE FILTER	
AFTERTREATMENT MODULE DEVICE - TIER IV INTERIM ENGINE (S/N C214E01822L →)	2-12
DIFFERENTIAL CARRIER	6-6
DIPSTICK AND TUBE	
TIER IV INTERIM ENGINE	2-92
DRIVE AXLE ASSEMBLY	6-2
DRIVE PLATES	5-9
DRIVE TIRE AND WHEEL	
MICHELIN	6-16
TRELLEBORG - SOLID TIRE	6-18
TRELLEBORG	6-19
TRELLEBORG TR900	6-21
E	
ECM MODULE WIRING	
TIER IV INTERIM ENGINE	4-232
ELECTRICAL SYSTEM	
TIER III ENGINE	4-4
TIER IV INTERIM ENGINE	4-8
EMPTY CONTAINER HANDLER	
BEARING BLOCKS AND SHIMS - CARRIAGE	11-14
EMPTY SEAT ENGINE SHUTDOWN	11-6
ENGINE BLOCK HEATER	11-10
ENGINE CONTROL MODULE	
TIER III ENGINE	4-14
TIER IV INTERIM ENGINE	4-230
ENGINE COOLANT VENT	
TIER III ENGINE	2-44
TIER IV INTERIM ENGINE	2-93
ENGINE MOUNTS	
TIER III AND TIER IV INTERIM ENGINE	2-5
ENGINE OIL COOLER	
TIER III ENGINE	2-46
TIER IV INTERIM ENGINE	2-94
ETR MODULE WIRING	
TIER III ENGINE	4-16
EXHAUST MANIFOLD	
RECIRCULATION AIR - TIER IV INTERIM ENGINE	2-97
RECIRCULATION WATER - TIER IV INTERIM ENGINE	2-98
TIER III ENGINE	2-48

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
EXHAUST MANIFOLD AND MOUNTING	
TIER IV INTERIM ENGINE	2-96
EXHAUST OUTLET ELBOW	
TIER IV INTERIM ENGINE	2-130
EXHAUST RECIRCULATION	
TIER IV INTERIM ENGINE	2-134
EXHAUST SYSTEM	
TIER III ENGINE	2-6
TIER IV INTERIM ENGINE	2-8
F	
FAN DRIVE	
TIER IV INTERIM ENGINE	2-100
FAN DRIVE AND MOUNTING	
TIER III ENGINE	2-49
FAN SPACER	
TIER III ENGINE	2-50
FLUID INDICATOR AND ATTACHING PARTS	
TIER III ENGINE	5-48
TIER IV INTERIM ENGINE	5-49
FLYWHEEL	
TIER IV INTERIM ENGINE	2-101
FLYWHEEL AND MOUNTING	
TIER III ENGINE	2-51
FLYWHEEL HOUSING	
TIER III ENGINE	2-52
TIER IV INTERIM ENGINE	2-102
FLYWHEEL MOUNTING	
TIER IV INTERIM ENGINE	2-104
FORWARD AND THIRD SHAFT	5-16
FRONT FENDER LIGHTS	4-234
FRONT GEAR COVER	
TIER III ENGINE	2-54
TIER IV INTERIM ENGINE	2-105
FUEL DRAIN PLUMBING	
TIER IV INTERIM ENGINE	3-29
FUEL FILTER	
TIER III ENGINE	3-11
TIER IV INTERIM ENGINE (→ S/N C214E01821L)	3-34
TIER IV INTERIM ENGINE (S/N C214E01822L →)	3-36
FUEL FILTER MOUNTING	
TIER IV INTERIM ENGINE	3-26
FUEL FILTER PLUMBING	
TIER III ENGINE	3-12
TIER IV INTERIM ENGINE	3-27
FUEL FILTER WITH WATER SEPARATOR	
TIER IV INTERIM ENGINE	3-37
FUEL INJECTION PUMP	
TIER III ENGINE	3-14

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
FUEL INJECTOR PLUMBING	
TIER III ENGINE	3-16
FUEL INJECTORS	
TIER III ENGINE	3-18
FUEL INLET FITTING	
TIER III ENGINE	3-19
TIER IV INTERIM ENGINE	3-38
FUEL PLUMBING	
TIER III ENGINE	3-20
FUEL PUMP	
TIER IV INTERIM ENGINE	3-32
FUEL SUPPLY PLUMBING	
TIER IV INTERIM ENGINE	3-28
FUEL SYSTEM ACCESSORIES	
TIER III ENGINE	3-22
FUEL TANK	
TIER III ENGINE	3-24
TIER IV INTERIM ENGINE	3-30
FULL FLOW VALVE ASSEMBLY	
S/N C214E01766L →	5-42
G	
GEARS	5-14
H	
HANDRAILS AND FENDERS	1-8
HEADER HOSES	10-14
HEAT SHIELD	
TIER IV INTERIM ENGINE	2-106
HEATED TOP WINDOW	
CLIMATE CONTROL CAB	1-124
HEATER AND AIR CONDITIONER HOSES	
TIER III ENGINE	1-54
TIER IV INTERIM ENGINE	1-56
TIER IV INTERIM ENGINE - ALTERNATE CONFIGURATION	1-58
HEATER AND AIR DUCT	1-76
HEATER AND CONTROL PANEL ASSEMBLIES	1-80
HEATER ASSEMBLY	1-82
HOODS AND COVERS	1-12
HYDRAULIC GEAR PUMP ASSEMBLY	9-6
ALTERNATE PART	9-8
HYDRAULIC HOSE ASSEMBLY	
JOYSTICK	9-54
LEVERS	9-42
HYDRAULIC LEVERS	9-40
HYDRAULIC OIL COOLER	9-14
HYDRAULIC SUPPLY AND RETURN	9-4
HYDRAULIC TANK AND ATTACHING PARTS	9-16
HYDRAULIC VALVES AND ATTACHING PARTS	9-22

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
I	
INDICATOR DISPLAY AND CONTROLS	4-32
INNER MAST	10-6
INPUT SHAFT AND FIRST CLUTCH	5-12
INSULATION MATS AND AIR DUCT	
CLIMATE CONTROL CAB	1-126
J	
JOINT MECHANISM ASSEMBLY	
JOYSTICK	9-46
LEVERS	9-45
JOYSTICK ASSEMBLY	
→ 7/2012	9-50
7/2012 →	9-52
JOYSTICK CONTROL	9-48
L	
LABELS	
EXTERIOR	1-138
HYDRAULIC CONTROLS	1-134
INTERIOR	1-136
LIFT ACCUMULATOR SYSTEM	9-18
LIFT CYLINDER HYDRAULICS	10-22
LIFTING BRACKETS	
TIER IV INTERIM ENGINE	2-107
LIFTING BRACKETS AND MOUNTING	
TIER III ENGINE	2-55
LIFTING EYES	
TIER IV INTERIM ENGINE	2-108
LIGHT BAR AND MOUNT	
TWISTLOCK MODULE	4-22
LIGHTS	
DIRECTIONAL AND MARKER	4-26
REAR AND BACKUP ALARM	4-24
WORK - HALOGEN	4-27
WORK - HID	4-28
LOCKOUT LEVER	4-17
LOUVER - HEAVY DUTY AIRCO	12-2
LUBRICATING OIL PUMP	
TIER III ENGINE	2-56
TIER IV INTERIM ENGINE	2-109
M	
MAIN LIFT	10-8
MAIN LIFT CYLINDERS	10-12
MAIN VALVE HOSES	9-20
MAP READING LIGHT	11-4
MAST INSTALLATION	10-2
MAST SUPPLY AND RETURN	9-10
MIRRORS	11-13

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
MODULATOR VALVE ASSEMBLY	
→ S/N C214E01686K (TE-17) → S/N C214E01766L (TE-13)	5-38
S/N C214E01687K ↔ S/N C214E01765L	5-40
MONOTROL PEDAL ASSEMBLY	3-4
MONOTROL PEDAL LINKAGE	3-2
MUDFLAPS	1-52
MUFFLER	
AFTERTREATMENT DEVICE (→ S/N C214E01821L)	2-10
O	
OIL FILLER	
TIER III ENGINE	2-57
OIL FILTER	
TIER IV INTERIM ENGINE	2-110
OIL LEVEL GAUGE	
TIER III ENGINE	2-58
OIL PAN	
TIER III ENGINE	2-60
TIER IV INTERIM ENGINE (→ S/N C214E01821L)	2-112
TIER IV INTERIM ENGINE (S/N C214E01822L →)	2-114
OIL PUMP AND MOUNTING	
TIER III ENGINE	2-62
OPTIONAL MOUNTING EQUIPMENT (HANDLE)	11-2
ALTERNATE ASSEMBLY	11-3
OUTER MAST	10-4
OUTPUT SHAFT	
→ S/N C214E01686K (TE-17) → S/N C214E01766L (TE-13)	5-24
S/N C214E01687K → (TE-17) S/N C214E01767L → (TE-13)	5-25
OVERHEAD GUARD	
WIRE MESH	1-16
P	
PARK BRAKE ASSEMBLY	6-10
PARK BRAKE KITS	12-2
PILOT SUPPLY VALVE ASSEMBLY	
JOYSTICK	9-44
LEVERS	9-43
PIVOT ARM ASSEMBLY	1-120
PROXIMITY SWITCH ASSEMBLY	4-31
PUMP DRIVE	5-20
R	
RADIATOR AND COOLER ASSEMBLY	
TIER III ENGINE	2-64
TIER IV INTERIM ENGINE	2-116
RADIO CONSOLE AND ATTACHING PARTS	1-140
REAR GEAR HOUSING	
TIER III ENGINE	2-66
TIER IV INTERIM ENGINE	2-118

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
REAR GEAR TRAIN ACCESSORY MOUNTING COVER	
TIER III ENGINE	2-67
TIER IV INTERIM ENGINE	2-119
REAR VIEW MIRRORS	1-53
REGULATOR VALVE ASSEMBLY	
→ S/N C214E01765L	5-34
S/N C214E01766L →	5-36
RELAYS AND FUSES	
OPERATOR COMPARTMENT - TIER III ENGINE (→ S/N C214E01765L)	4-60
OPERATOR COMPARTMENT - TIER III ENGINE (S/N C214E01766L →)	4-74
OPERATOR COMPARTMENT - TIER IV INTERIM ENGINE (→ S/N C214E01765L)	4-88
OPERATOR COMPARTMENT - TIER IV INTERIM ENGINE (S/N C214E01766L →)	4-102
REMOTE OIL FILTER	
TIER III ENGINE	2-68
REVERSE AND SECOND CLUTCH	5-18
ROCKER LEVERS	
TIER III ENGINE	2-70
S	
SEAT ASSEMBLY	
AIR SUSPENSION	1-98
CLIMATE CONTROL CAB	1-114
DELUXE SUSPENSION	1-108
MECHANICAL AND AIR SUSPENSION	1-105
MECHANICAL SUSPENSION	1-102
SUSPENSION - WITH FABRIC COVER (→ 3/2010)	1-86
SUSPENSION - WITH FABRIC COVER (3/2010 →)	1-90
SUSPENSION - WITH VINYL COVER	1-94
SECOND 12V SOCKET OPTION	
CLIMATE CONTROL CAB	4-21
SOLENOID VALVE	
TIER IV INTERIM ENGINE	9-62
START AID	11-5
STARTER MOTOR AND MOUNTING	
TIER III ENGINE	2-72
TIER IV INTERIM ENGINE	2-120
STEER AXLE ASSEMBLY	7-4
STEER COLUMN	7-18
STEER COLUMN AND ATTACHING PARTS	7-22
STEER COLUMN ASSEMBLY	7-14
STEER CYLINDER	7-8
STEER PUMP ASSEMBLY	7-16
STEER TIRE AND WHEEL	
MICHELIN	7-10
TRELLEBORG - SOLID TIRE	7-11
TRELLEBORG	7-12
TRELLEBORG TR900	7-13
STEERING CONTROL UNIT ASSEMBLY	7-20
STEERING HOSES AND ATTACHING PARTS	7-2

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
STROBE LIGHT	4-29
STUD GROUNDING	
TIER IV INTERIM ENGINE	2-121
SUSPENSION KIT ASSEMBLY	1-110
SWITCHES	4-30
T	
TELEMETRY KITS	12-2
THERMOSTAT	
TIER III ENGINE	2-73
TIER IV INTERIM ENGINE	2-122
THREE-POINT SEAT BELT	11-12
THROTTLE AND INCHING SENSORS	3-40
THROTTLE PEDAL LINKAGE	3-6
TILT CYLINDER HYDRAULICS	10-18
TILT CYLINDERS	10-20
TORQUE CONVERTER	5-8
TORQUE CONVERTER COOLER PLUGS	
TIER III ENGINE	2-74
TRAINING SEAT	11-7
TRANSMISSION CONTROLLER AND SHIFT LEVER	4-18
TRANSMISSION HOSES AND ATTACHING PARTS	5-10
TRANSMISSION MOUNTING	5-2
TURBOCHARGER	
TIER III ENGINE	2-75
TIER IV INTERIM ENGINE	2-131
TURBOCHARGER PLUMBING	
TIER III ENGINE	2-76
TIER IV INTERIM ENGINE	2-132
U	
UNIVERSAL SHAFT	5-50
V	
VALVE COVER	
TIER III ENGINE	2-78
TIER IV INTERIM ENGINE	2-124
VALVE TAPPETS	
TIER III ENGINE	2-79
V-BELT	
TIER IV INTERIM ENGINE	2-123
VIBRATION DAMPER	
TIER III ENGINE	2-80
TIER IV INTERIM ENGINE	2-129
W	
WATER INTAKE CONNECTION	
TIER IV INTERIM ENGINE	2-126
WATER OUTLET CONNECTION	
TIER III ENGINE	2-83

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
TIER IV INTERIM ENGINE	2-127
WATER PUMP	
TIER III ENGINE	2-81
TIER IV INTERIM ENGINE	2-128
WATER PUMP DRIVE	
TIER III ENGINE	2-82
WET BRAKE ASSEMBLY	6-12
WHEEL HUB ASSEMBLY	
HYSTER TIRE SAVER DRIVE AXLE	6-14
WINDOW WIPER SYSTEM	
REAR AND ROOF WIPER KITS - AND FRONT WIPER OPTIONS	1-24
WASHER BOTTLE KIT	1-22
WIRE HARNESS	
ARM REST	4-34
CAB	4-38
CAB - ALTERNATE PART	4-41
CAB LIGHTS	4-48
CAB SIDE CONSOLE, PAGE 1 OF 2 - TIER III ENGINE (→ S/N C214E01765L)	4-50
CAB SIDE CONSOLE, PAGE 1 OF 3 - TIER III ENGINE (S/N C214E01766L →)	4-64
CAB SIDE CONSOLE, PAGE 1 OF 3 - TIER IV INTERIM ENGINE (→ S/N C214E01765L)	4-78
CAB SIDE CONSOLE, PAGE 1 OF 3 - TIER IV INTERIM ENGINE (S/N C214E01766L →)	4-92
CAB SIDE CONSOLE, PAGE 2 OF 2 - TIER III ENGINE (→ S/N C214E01765L)	4-56
CAB SIDE CONSOLE, PAGE 2 OF 3 - TIER III ENGINE (S/N C214E01766L →)	4-68
CAB SIDE CONSOLE, PAGE 2 OF 3 - TIER IV INTERIM ENGINE (→ S/N C214E01765L)	4-82
CAB SIDE CONSOLE, PAGE 2 OF 3 - TIER IV INTERIM ENGINE (S/N C214E01766L →)	4-96
CAB SIDE CONSOLE, PAGE 3 OF 3 - TIER III ENGINE (S/N C214E01766L →)	4-72
CAB SIDE CONSOLE, PAGE 3 OF 3 - TIER IV INTERIM ENGINE (→ S/N C214E01765L)	4-86
CAB SIDE CONSOLE, PAGE 3 OF 3 - TIER IV INTERIM ENGINE (S/N C214E01766L →)	4-100
CAB TILT (→ 9/2014)	4-106
CAB TILT (9/2014 →)	4-107
CAB UNDERFLOOR - TIER III ENGINE	4-108
CAB UNDERFLOOR - TIER IV INTERIM ENGINE	4-110
CHASSIS (PAGE 1 OF 2) - TIER III ENGINE (H400HD-H450HDEC) (11/2014 →)	4-140
CHASSIS (PAGE 1 OF 2) - TIER III ENGINE (H500HDEC) (11/2014 →)	4-150
CHASSIS (PAGE 1 OF 2) - TIER IV INTERIM ENGINE (H400HD-H450HDEC) (11/2014 →)	4-190
CHASSIS (PAGE 1 OF 2) - TIER IV INTERIM ENGINE (H500HDEC) (11/2014 →)	4-200
CHASSIS (PAGE 2 OF 2) - TIER III ENGINE (H400HD-H450HDEC) (11/2014 →)	4-146
CHASSIS (PAGE 2 OF 2) - TIER III ENGINE (H500HDEC) (11/2014 →)	4-156
CHASSIS (PAGE 2 OF 2) - TIER IV INTERIM ENGINE (H400HD-H450HDEC) (11/2014 →)	4-196
CHASSIS (PAGE 2 OF 2) - TIER IV INTERIM ENGINE (H500HDEC) (11/2014 →)	4-206
CLOSED CAB - ALTERNATE CONFIGURATION	4-44
CONTAINER POSITIONER SPEED REDUCTION	4-236
DPF	4-210
FRONT LIGHTS	4-211
HYDRAULIC RELAYS	4-240
LIFT INTERRUPT BYPASS	4-212
OIL COOLER	4-238
PRESSURE SWITCH BASE - AUTOMATIC GREASING SYSTEM	4-213
PROXIMITY SWITCH - LIFT AND TILT	4-237

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
PUMP BASE - AUTOMATIC GREASING SYSTEM	4-214
REAR WIPER EXTENSION	4-215
REAR WIPER EXTENSION - ALTERNATE PART	4-216
SIDE AND INDICATOR LIGHTS - ALTERNATE PART	4-218
SIDE INDICATOR	4-217
SPEED LIMITER	4-241
STEERING COLUMN - TIER III ENGINE	4-219
STEERING COLUMN - TIER IV INTERIM ENGINE	4-220
TWIN FRONT FENDER WORK LIGHTS	4-221
WIF EXTENSION	4-222
WINDOW WASH PUMPS	4-223
WINDOW WASH PUMPS - ALTERNATE PART	4-224
WIRE HARNESS (CHASSIS)	
PAGE 1 OF 2 - TIER III ENGINE (→ S/N C214E01765L)	4-112
PAGE 1 OF 2 - TIER III ENGINE (H400HD-H450HDEC) (S/N C214E01766L ↔ 11/2014)	4-120
PAGE 1 OF 2 - TIER III ENGINE (H500HDEC) (S/N C214E01766L ↔ 11/2014)	4-130
PAGE 1 OF 2 - TIER IV INTERIM ENGINE (→ S/N C214E01765L)	4-160
PAGE 1 OF 2 - TIER IV INTERIM ENGINE (H400HD-H450HDEC) (S/N C214E01766L ↔ 11/2014)	4-170
PAGE 1 OF 2 - TIER IV INTERIM ENGINE (H500HDEC) (S/N C214E01766L ↔ 11/2014)	4-180
PAGE 2 OF 2 - TIER III ENGINE (→ S/N C214E01765L)	4-116
PAGE 2 OF 2 - TIER III ENGINE (H400HD-H450HDEC) (S/N C214E01766L ↔ 11/2014)	4-126
PAGE 2 OF 2 - TIER III ENGINE (H500HDEC) (S/N C214E01766L ↔ 11/2014)	4-136
PAGE 2 OF 2 - TIER IV INTERIM ENGINE (→ S/N C214E01765L)	4-166
PAGE 2 OF 2 - TIER IV INTERIM ENGINE (H400HD-H450HDEC) (S/N C214E01766L ↔ 11/2014)	4-176
PAGE 2 OF 2 - TIER IV INTERIM ENGINE (H500HDEC) (S/N C214E01766L ↔ 11/2014)	4-186
WIRE HARNESS AND SWITCH ASSEMBLY	
MONOTROL PEDAL	4-226

ABBREVIATIONS QUICK REFERENCE SHEET

Listed below are abbreviations used in parts manuals to denote the following expressions:

TERM	DEFINITION	TERM	DEFINITION
Amp	Amperes	FRE	Freezer Environment
AR	As Required	in.	inches
BDI	Battery Discharge Indicators	LPG	Liquefied Petroleum Gas
BWI	Brush Wear Indicator	MAP	Manifold Absolute Pressure
CE	Communicator End	mm	millimeters
CRE	Corrosive Environment	MSTS	Microprocessor Spark Timing System
D/B	Date Break	NPT	National Pipe Threads
dbA	Decibel "A" Scale	O/S	Oversize
DE	Drive End	PTO	Power Take Off
ECH	Empty Container Handler	RPM	Revolutions per Minute
ECH-3	Empty Container Handler - 3 High Stacking	S/N	Serial Number
ECH-4	Empty Container Handler - 4 High Stacking	TMM	Truck Management Module
ECH-5	Empty Container Handler - 5 High Stacking	UL Type D	Diesel-Powered Safety Rating
ECH-6	Empty Container Handler - 6 High Stacking	UL Type DS	Diesel-Powered Safety Rating
ECH-7	Empty Container Handler - 7 High Stacking	UL Type E	Battery-Powered Safety Rating
ECM	Electronic Control Module	UL Type EE	Battery-Powered Safety Rating
ECN	Engineering Change Notice	UL Type ES	Battery-Powered Safety Rating
EEPROM	Electrically Erasable Programmable Read Only Memory	UL Type G	Gasoline-Powered Safety Rating
EPA	US Environmental Protection Agency	UL Type GS	Gasoline-Powered Safety Rating
EPROM	Electrically Programmable Read Only Memory	UL Type LP	Gas-Powered Safety Rating
		UL Type LPS	LP Gas-Powered Safety Rating
		U/S	Undersize
		UL	Underwriters Laboratory
		V	Volts

HOW TO USE THE ILLUSTRATED PARTS MANUAL

This parts manual describes and illustrates assemblies, subassemblies, and detail parts needed for service replacement.

The different constructions are indicated by keys and footnotes. The callouts correspond to descriptions found on the next page.

HYSTER UNIT CODE D001 NORTH AMERICA 06/2001

TABLE OF CONTENTS

DESCRIPTION	PAGE
AIR INTAKE AND FILTER DIESEL (⇒ D/B 11/98)	3-22
AIR INTAKE AND FILTER DIESEL (D/B 11/96 ⇒)	
AIR INTAKE AND FILTER GASOLINE AND LPG	
ALTERNATOR GASOLINE, LPG, AND DIESEL	
ALTERNATOR TYPES GS, LPS, AND DS	
AUXILIARY FUNCTION TUBE TWO AND THREE STAGE FULL F	

SECTION 13 NUMERICAL INDEX

PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.
142	3-4	19	10-13	25		11-27	29	12-31	12		
12445	3-32	19	10-17	6		11-31	25	16719	3-36	5	
	3-34	1	10-27	11		11-32	37	16751	3-16	27	
			11	11		9-7	9	16849	3-34	21	
			12	6	16485	8-4	29		3-38	20	
			13	13		8-4	45	16863	3-28	17	
			14	13		8-8	34	16865	3-6	18	
			17	6		9-7	9		4-27	41	
			18	17		9-11	9	16882	9-7	30	
			19	10		9-11	17		9-11	27	
			23	46		10-9	21		10-10	36	
			27	46		10-9	28		10-13	32	
			28	14		10-13	16		11-7	24	
			29	14		11-7	19		11-9	17	
			30	14							

SECTIONS

- 1
- 2
- 3
- 4
- 5 BRAKE/ACC
- 6
- 7 MAST-TWO STAG
- 8 MAST-THREE ST
- 9 MAST-TWO ST
- 10
- 11

TRANSMISSION HOUSING ⇒ S/N D001H-2628

KEY:
A: Diesel
B: Gasoline and LPG

ITEM	PART NO.	DESCRIPTION	QTY	
			A	B
1	202547	Transmission	1	1
2	2023329	Transmission	1	1
3	2021670	Case	2	2
4	2023418	Bearing Cap	4	4
5	293946	Washer	1	1
6	2021390	Bolt	2	2
7	1371656	Cover	2	2
8	2021915	Colter Pin	4	4
9	2021675	O-Ring	1	1
10	2021329	Plug	4	4
11	2021915	Housing	22	22
12	2021336	Pin	39	39
13	287860	Bolt	1	1
14	292682	Lockwasher	1	1
15	2021345	Hydraulic Pump ⇒ Figure 5-3	1	1
16	214364	Gasket	1	1
17	296418	Bolt	8	8
18	2021388	Washer	1	1
19	2021389	Temperature Switch	1	1
20	2021383	Breather	9	9
21	292515	Dipstick	9	9
22	136692	Bolt	2	2
23	292527	Nut	3	3
24	292531	Bolt	3	2
25	292583	Capcrew	4	4
26	293637	Lockwasher	4	4
	296420	Bolt	4	4
	296420	Washer	1	1
	996403	Transmission Kit (Includes Item 7)	1	1
	996405	Transmission Kit (Includes Item 14)	1	1

This Parts Manual is divided into 11 major sections which are listed above. Quick be made by placing the right thumb on the tab of the desired section, bending the pages to the corresponding tab.

© Copy Right Date HYSTER COMPANY See Service Manual for service procedures. 5-15

HP990004

HOW TO FIND THE DESIRED PART NUMBER

WHEN THE PART NUMBER AND THE NEXT HIGHER ASSEMBLY IS NOT KNOWN:

1. Determine the function and application of the part required. Turn to the Sections Page. Choose the general area of reference most likely to include the part.
2. Turn to the section you chose. Use the Section Table of Contents to determine the assembly which would normally contain the part required. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS NOT KNOWN AND THE NEXT HIGHER ASSEMBLY IS KNOWN:

3. Determine the assembly the required part is used on. Turn to the Table of Contents (Page i).
4. Locate the assembly the required part is used on and turn to the page indicated for that assembly. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS KNOWN:

5. Use the Numerical Index (Page 13-1) to find the part number. Turn to the page listed and locate the part as indicated by the item number.

GENERAL:

The assembly breakdowns include part numbers, descriptions, quantities required, keys and footnotes to help in selecting correct parts.

6. Parts Supersession Information. Part numbers that have this history will be displayed in the parts list in the order that they were superseded (from oldest to newest). The superseded part numbers will be shown with a line through them.

Five periods in the PART NO. column (.) indicate that the part is either *Not Serviced Separately* or there is a reference to another figure. A figure reference is denoted by a pointing hand followed by a figure number in the DESCRIPTION column (☞ Figure 10)

7. Keys are used to show two or more similar assemblies, RH and LH assembly parts, etc. Select the appropriate key, "A", "B", "C", "D", or "E" and the corresponding quantity column to find the required parts. Two periods in the QTY column (..) indicate that the part is not used for that assembly.
8. Indented descriptions under the DESCRIPTION column are used to indicate assemblies and

subparts of assemblies. In the example on the previous page, *BEARING CAP* (Item 2) is a subpart of the major assembly *CASE*.

9. Quantities shown are for one assembly. The quantities of the subpart *BEARING CAP* are indicated as two and two. This means two per *CASE* assembly.
10. Serial number breaks identify the most current parts information and are shown as follows:
 - **S/N D001H2628**
Indicates last serial number affected.
 - S/N D001H2629** →
Indicates the first serial number affected.
 - S/N D001H1553** ↔ **S/N D001H3291**
Indicates a range of serial numbers affected.

ECN numbers for pending serial numbers are shown to allow for the inclusion of the most current parts information and are identified as follows:

→ **S/N Pending Per ECN 63243**

Indicates a pending serial number for last unit affected.

S/N Pending Per ECN 63243 →

Indicates a pending serial number for first unit affected.

Date breaks are used to indicate when a change occurred but a subsequent serial number break was not recorded. This is an arbitrary date usually based on the ECN release and are identified as follows:

→ **D/B 3/00**

Indicates that a change occurred sometime within that month for the item affected.

D/B 3/00 →

Indicates that a change occurred sometime within that month for the item affected.

D/B 3/00 ↔ **D/B 4/00**

Indicates a range of production dates of the item affected.

Contact your local dealer for Hyster lift trucks for serial number information for items with a ECN or a date break.

ORDERING PARTS:

When ordering replacement parts, give the unit serial number, part number, name of part and quantity required.

For any further information on parts, service, or ordering, consult your local dealer for Hyster lift trucks.