

PARTS MANUAL

**H80-H120FT
(R005)**

CUSTOMER EDITION

HYSTER

SECTIONS

1	FRAME
2	ENGINE ASSEMBLY - DIESEL
3	ENGINE ASSEMBLY - GM
4	FUEL SYSTEM
5	ELECTRICAL SYSTEM
6	TRANSMISSION
7	DRIVE AXLE
8	STEERING SYSTEM
9	BRAKE SYSTEM
10	HYDRAULIC SYSTEM
11	MAST-TWO STAGE LIMITED FREE-LIFT
12	MAST-TWO STAGE FULL FREE-LIFT
13	MAST-THREE STAGE FULL FREE-LIFT
14	OPTIONS
15	FIELD CONVERSION KITS
16	NUMERICAL INDEX

This Parts Manual is divided into 16 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

TABLE OF CONTENTS

DESCRIPTION	PAGE
A	
ACCUMULATOR	14-60
ADD ON TELEMETRY KITS	15-9
ADD-ON OPTION KITS	15-7
AIR FILTER	4-4
AIR INTAKE	
KUBOTA DIESEL	4-6
AIR INTAKE AND FILTER SYSTEM	
GM 4.3L, GASOLINE AND LPG - PSI	4-2
ALTERNATOR	
SEALED - KUBOTA 3.8L DIESEL	5-43
SEALED - GM 4.3L GASOLINE AND LPG	5-45
ALTERNATOR AND MOUNTING	
GM 4.3L GASOLINE AND LPG - PSI OPTION	5-44
ALTERNATOR AND PULLEY	
KUBOTA DIESEL	2-84
ARMREST ASSEMBLY	
MINI-LEVER MODULES - (SEMI-SUSPENSION SEAT WITH LH HIP RESTRAINT)	1-34
MINI-LEVER MODULES	1-36
AUXILIARY HOSES	10-52
B	
BACK-UP ALARM	14-58
BAFFLE AND ATTACHING PARTS	
KUBOTA DIESEL - LONG WHEEL BASE	2-92
BATTERY CABLE	
FUSED - KUBOTA 3.6L DIESEL	5-14
BATTERY CABLES	
GM 4.3L GASOLINE AND LPG - PSI OPTION	5-16
KUBOTA DIESEL	5-12
BATTERY DISCONNECT	
GM 4.3L GASOLINE AND LPG - PSI OPTION	5-20
KUBOTA 3.8L DIESEL	5-18
BRAKE ASSEMBLY	
DRY BRAKE	9-24
BRAKE COOLING SYSTEM	
SINGLE AND DUAL PEDAL - WET BRAKE	9-26
BRAKE LINKAGE	
DUAL PEDAL - DRY BRAKE	9-20
DUAL PEDAL (WET BRAKE) - EARLY PRODUCTION	9-8
DUAL PEDAL (WET BRAKE) - LATE PRODUCTION	9-12
SINGLE PEDAL - DRY BRAKE	9-16
SINGLE PEDAL (WET BRAKE) - EARLY PRODUCTION	9-2
SINGLE PEDAL (WET BRAKE) - LATE PRODUCTION	9-6
BRAKE MASTER CYLINDER ASSEMBLY	9-32
BREATHER AND SEPARATOR PIPES	
KUBOTA DIESEL - (3.8L)	2-72

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
C	
CAB ASSEMBLY WITH STEEL DOORS	
FAN ASSEMBLY	1-94
HEADLINER ASSEMBLY	1-96
WINDOWS AND WIPERS - ADHESIVE SEALED FRONT WINDOW	1-64
WITH AIR CONDITIONING - SHEET 1 OF 3	1-72
WITH AIR CONDITIONING - SHEET 2 OF 3	1-74
WITH AIR CONDITIONING - SHEET 3 OF 3	1-76
WITH AIR CONDITIONING - WINDOWS AND WIPERS-ADHESIVE SEALED FRONT WINDOW	1-78
WITH AIR CONDITIONING - LEFT HAND DOOR	1-80
WITH AIR CONDITIONING - RIGHT HAND DOOR LATCH COMPONENTS	1-82
WITH AIR CONDITIONING - RIGHT HAND DOOR HEATER COMPONENTS	1-84
WITH AIR CONDITIONING - CONDENSER AND ATTACHING PARTS (SHEET 1 OF 2)	1-86
WITH AIR CONDITIONING - DRYER AND ATTACHING PARTS (SHEET 2 OF 2)	1-88
WITH AIR CONDITIONING - HEATER COMPONENTS	1-92
WITHOUT AIR CONDITIONING - SHEET 1 OF 3	1-58
WITHOUT AIR CONDITIONING - SHEET 2 OF 3	1-60
WITHOUT AIR CONDITIONING - SHEET 3 OF 3	1-62
WITHOUT AIR CONDITIONING - LEFT HAND DOOR	1-66
WITHOUT AIR CONDITIONING - RIGHT HAND DOOR LATCH COMPONENTS	1-68
WITHOUT AIR CONDITIONING - RIGHT HAND DOOR HEATER COMPONENTS	1-70
CAMSHAFT AND IDLE GEAR SHAFT	
KUBOTA DIESEL - (3.6L, 3.8L)	2-80
CAMSHAFT AND OIL PAN	
GM 4.3L GASOLINE AND LPG - PSI	3-34
CARRIAGE LOCKOUT ROD	
CARRIER ASSEMBLY	
DRY BRAKE	7-10
COMPRESSOR ASSEMBLY	
KUBOTA DIESEL - (3.8L)	2-22
CONDENSER ASSEMBLY	1-90
CONTROL MODULE	
DIESEL INTERFACE - KUBOTA V3800	5-30
CONTROL VALVE ASSEMBLY	
ELECTRONIC CONTROL - THREE FUNCTION	10-28
ELECTRONIC CONTROL - FOUR FUNCTION	10-30
MANUAL CONTROL VALVE - THREE AND FOUR FUNCTION	10-18
CONTROL VALVE LOCKOUT GROUP	
MANUAL CONTROL VALVE	10-20
COOLANT HOSES	
GM 4.3L LPG WITH CAB - PSI	4-21
COOLING	
GASOLINE AND LPG - WITH EXTERNAL OIL COOLER	3-4
GASOLINE AND LPG - WITH INTERNAL OIL COOLER	3-6
KUBOTA DIESEL - WITH EXTERNAL OIL COOLER	2-14
KUBOTA DIESEL - WITHOUT EXTERNAL OIL COOLER	2-16
COUNTERWEIGHT	1-14
COVER BEARING CASE	
KUBOTA DIESEL - 3.6L, 3.8L	2-82

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
COWL ELECTRICAL	
ELECTRO-HYDRAULICS	5-24
MANUAL HYDRAULICS	5-22
COWL MOUNT	1-12
CRANKSHAFT PULLEY	
GM 4.3L GASOLINE AND LPG - PSI	3-26
CYLINDER BLOCK	
GM 4.3L GASOLINE AND LPG - PSI	3-32
KUBOTA DIESEL - (3.6L, 3.8L)	2-28
CYLINDER HEAD	
GM 4.3L GASOLINE AND LPG - PSI	3-30
KUBOTA DIESEL - (3.6L)	2-35
KUBOTA DIESEL - (3.8L)	2-36
CYLINDER HEAD COVER	
KUBOTA DIESEL - (3.6L)	2-33
KUBOTA DIESEL - (3.8L)	2-34
D	
DIFFERENTIAL	
DRY BRAKE	7-8
WET BRAKE	7-16
DIFFERENTIAL ASSEMBLY	
WET BRAKE (NMHG)	7-28
DIPSTICK	
KUBOTA DIESEL - (3.6L, 3.8L)	2-32
DIRECTIONAL CONTROL	15-6
DISTRIBUTER AND COIL	
GM 4.3L GASOLINE AND LPG - PSI	3-42
DISTRIBUTOR ASSEMBLY	
GM 4.3L LPG AND GASOLINE	5-36
DRIVE AXLE AND ATTACHING PARTS	
DRY BRAKE	7-2
WET BRAKE	7-12
DRIVE AXLE ASSEMBLY	
DRY BRAKE	7-4
WET BRAKE (NMHG) - RIGHT AND LEFT HAND HUBS	7-22
WET BRAKE (NMHG) - BRAKES AND DIFFERENTIAL	7-24
WET BRAKE (NMHG) - INPUT PINION CARRIER	7-26
DRIVE AXLE HOUSING AND HUB	
WET BRAKE	7-14
DRIVE WHEELS AND TIRES	
DUAL TREAD	7-34
SINGLE TREAD	7-32
DUAL MIRRORS	
WITH CAB	14-55
E	
EGR VALVE AND COOLER	
KUBOTA DIESEL - (3.8L)	2-68

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
EGR VALVE FLANGE	
KUBOTA DIESEL - (3.8L)	2-64
ELECTRICAL MOUNTING PLATE AND LIFTING EYE	
GM 4.3L GASOLINE - PSI OPTION	3-22
GM 4.3L LPG - PSI	3-20
ELECTRICAL SYSTEM	
RIGHT HAND CHASSIS	5-4
ELECTRO HYDRAULIC POPPET VALVE	
THREE AND FOUR FUNCTION	10-34
ENGINE CONTROL MODULE AND SENSORS	
GM 4.3L LPG - PSI OPTION	5-38
GM 4.3L GASOLINE - PSI OPTION	5-40
ENGINE ELECTRICAL SYSTEM	
GM 4.3L GASOLINE AND LPG - "E" CONSTRUCTION	5-10
KUBOTA 3.6L DIESEL	5-6
KUBOTA 3.8L DIESEL	5-8
ENGINE HARNESS	
MOUNTING - KUBOTA 3.6L DIESEL	5-98
ENGINE MOUNTING	
GM 4.3L, GASOLINE AND LPG	3-2
ENGINE WITH ENGINE MOUNT AND TORQUE CONVERTER	
KUBOTA DIESEL	2-24
EXHAUST MANIFOLD	
KUBOTA DIESEL - (3.6L)	2-66
KUBOTA DIESEL - (3.8L)	2-67
EXHAUST MANIFOLDS	
GM 4.3L LPG AND GASOLINE - PSI OPTION	3-27
EXHAUST SYSTEM	
COUNTERWEIGHT EXHAUST LWB	2-4
COUNTERWIGHT EXHAUST SWB	2-8
EXHAUST WRAPS FOR PAPER INDUSTRY	2-12
GM 4.3L, GASOLINE AND LPG	3-12
OVERHEAD EXHAUST LWB	2-6
OVERHEAD EXHAUST SWB	2-10
F	
FAN ASSEMBLY	
GM 4.3L GASOLINE AND LPG - PSI	3-16
FAN MOUNT ASSEMBLY	
GM 4.3L LPG AND GASOLINE - PSI	3-14
FAN PULLY	
KUBOTA DIESEL - (3.6L, 3.8L)	2-27
FAN SHROUD WITH RADIATOR SCREEN	
DIESEL	2-20
GASOLINE AND LPG	3-10
FAN SHROUD WITHOUT RADIATOR SCREEN	
DIESEL	2-18
GASOLINE AND LPG	3-8
FENDER EXTENSIONS	1-8

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
FIRE EXTINGUISHER	14-56
FLOOR PLATES AND COVERS	
SHEET 1 OF 2	1-54
SHEET 2 OF 2	1-56
FLYWHEEL AND HOUSING	
GM 4.3L GASOLINE AND LPG - PSI	3-18
KUBOTA DIESEL - (3.6L, 3.8L)	2-26
FORKS	
OPTIONAL LATCH	1-51
POLISHED FORK WITH FULL BOTTOM TAPER - CLASS III AND CLASS IV	1-50
STANDARD TAPER CLASS III AND CLASS IV	1-48
FORWARD CLUTCH	
SINGLE SPEED TRANSMISSION	6-18
FORWARD CLUTCH, HIGH	
DUAL SPEED TRANSMISSION	6-32
FORWARD CLUTCH, LOW	
DUAL SPEED TRANSMISSION	6-30
FREE LIFT CYLINDER	
THREE STAGE FULL FREE LIFT	13-28
FUEL CAP	
GASOLINE AND DIESEL	4-20
FUEL FILTER	
KUBOTA DIESEL - (3.6L)	2-60
FUEL INJECTION PUMP	
KUBOTA DIESEL - (3.8L)	2-57
FUEL PUMP	
KUBOTA DIESEL - (3.6L)	2-59
FUEL RAIL	
KUBOTA DIESEL - (3.8L)	2-46
FUEL SENDER AND ATTACHING PARTS	
GM 4.3L GASOLINE - PSI OPTION	4-12
FUEL SENDING UNIT	
KUBOTA 3.6L DIESEL	4-14
FUEL SYSTEM	
GM 4.3L LPG - PSI OPTION	4-16
GM 4.3L GASOLINE - PSI OPTION	4-10
KUBOTA DIESEL - (3.8L)	4-18
FULL SUSPENSION SEAT	
MANUAL AND ELECTRO-HYDRAULIC — SWIVEL AND NON SWIVEL - SHEET 1 OF 3	1-26
MANUAL AND ELECTRO-HYDRAULIC — SWIVEL AND NON SWIVEL - SHEET 2 OF 3	1-30
FUSE BOX	
GM 4.3L LPG - PSI OPTION	5-32
G	
GEAR CASE	
KUBOTA DIESEL - (3.6L, 3.8L)	2-77
GEAR PUMP	10-8
GOVERNOR	
KUBOTA DIESEL - (3.6L)	2-54

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
GOVERNOR ACTUATOR AND PLUG	
KUBOTA DIESEL - (3.6L)	2-56
H	
HAND LEVERS	
FOUR FUNCTION - WITH DETENTED LEVERS	10-14
FOUR FUNCTION - WITHOUT DETENTED LEVERS	10-16
THREE FUNCTION - WITH DETENTED LEVERS	10-10
THREE FUNCTION - WITHOUT DETENTED LEVERS	10-12
HEADER HOSE AUXILIARY TUBE EXTENSIONS	
THREE STAGE FULL FREE- LIFT - INTEGRAL SIDE-SHIFT CARRIAGE	14-4
THREE STAGE FULL FREE- LIFT - ATTACHMENT CARRIAGE	14-10
TWO STAGE FULL FREE- LIFT - INTEGRAL SIDE-SHIFT CARRIAGE	14-3
TWO STAGE FULL FREE- LIFT - ATTACHMENT CARRIAGE	14-8
TWO STAGE LIMITED FREE-LIFT - INTEGRAL SIDE-SHIFT CARRIAGE	14-2
TWO STAGE LIMITED FREE-LIFT - ATTACHMENT CARRIAGE	14-6
HEADER HOSE AUXILIARY TUBE EXTENSIONS WITH QUICK DISCONNECTS	
THREE STAGE FULL FREE-LIFT - STANDARD CARRIAGE	14-20
THREE STAGE FULL FREE-LIFT - INTEGRAL SIDE-SHIFT CARRIAGE	14-28
THREE STAGE FULL FREE-LIFT - ATTACHMENT CARRIAGE	14-34
TWO STAGE FULL FREE- LIFT - STANDARD CARRIAGE	14-16
TWO STAGE FULL FREE-LIFT - INTEGRAL SIDE-SHIFT CARRIAGE	14-26
TWO STAGE FULL FREE-LIFT - ATTACHMENT CARRIAGE	14-32
TWO STAGE LIMITED FREE-LIFT - STANDARD CARRIAGE	14-12
TWO STAGE LIMITED FREE-LIFT - INTEGRAL SIDE-SHIFT CARRIAGE	14-24
TWO STAGE LIMITED FREE-LIFT - ATTACHMENT CARRIAGE	14-30
HEATER HOSE	
DIESEL	1-19
GAS	1-17
LPG	1-18
HOOD ASSEMBLY	1-4
HOSE GROUPS	
HYDRAULIC FILTER	10-6
HYDRAULIC SUPPLY AND RETURN	10-2
I	
IMPACT SENSOR	5-52
INJECTION PIPE	
KUBOTA DIESEL - (3.8L)	2-47
INJECTION PUMP	
KUBOTA DIESEL - (3.6L)	2-52
INJECTION PUMP HOUSING	
KUBOTA DIESEL - (3.6L)	2-51
INJECTOR HARNESS	
KUBOTA DIESEL - (3.8L)	2-50
INLET AND EXHAUST VALVES	
KUBOTA DIESEL - (3.8L)	2-40
INLET MANIFOLD	
KUBOTA DIESEL - (3.6L)	2-61

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
KUBOTA DIESEL - (3.8L)	2-62
INNER MAST	
THREE STAGE FULL FREE-LIFT	13-10
INNER MAST AND FREE-LIFT	
THREE STAGE FULL FREE-LIFT (→ 4/2013)	13-12
THREE STAGE FULL FREE-LIFT (4/2013 →)	13-16
INSTRUMENT CLUSTER	5-54
INTAKE AIR FUEL MODULE	
GM 4.3L GASOLINE	3-40
INTEGRAL SIDE-SHIFT CARRIAGE ASSEMBLY	
CHAIN ANCHOR GROUPS	14-48
THREE STAGE FULL FREE LIFT	14-44
TWO STAGE FULL FREE LIFT	14-40
TWO STAGE LIMITED FREE-LIFT	14-36
INTERMEDIATE MAST	
THREE STAGE FULL FREE LIFT	13-6
L	
LABELS	
EXTERIOR	1-38
HYDRAULIC CONTROL LABELS - MINI LEVER MODULES	1-44
HYDRAULIC CONTROL LABELS - CONTROL LEVER	1-46
INTERIOR	1-42
LIFTING EYES	
GASOLINE AND DIESEL	14-62
LIGHTS	
WORK, REAR DRIVE, AND BRAKE/TAIL - WITH OVERHEAD GUARD	5-26
WORK, REAR DRIVE, AND BRAKE/TAIL - WITH CAB	5-28
LOAD BACK REST EXTENSION	1-52
LOAD WEIGH ELECTRICAL	5-50
LPG CONVERTER	
GM 4.3L LPG - PSI OPTION	4-25
LPG LOCK OFF	
GM 4.3L - PSI OPTION	4-26
LPG REGULATOR AND MIXER	
GM 4.3L - PSI OPTION	4-24
LPG TANK BRACKET	
GM 4.3L - SWING OUT, DROP DOWN (1/2013 →)	4-34
GM 4.3L - SWING OUT (→ 1/2013)	4-38
GM 4.3L - SWING OUT (1/2013 →)	4-42
SWING OUT, DROP DOWN (→ 1/2013)	4-30
M	
MAIN LIFT	
THREE STAGE FULL FREE-LIFT	13-20
MAIN LIFT CYLINDER	
THREE STAGE FULL FREE LIFT	13-24
MANUAL HYDRAULIC CONTROLS AND CONTROL VALVES	15-7

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
MAST	
THREE STAGE FULL FREE LIFT - HEADER HOSE	13-32
THREE STAGE FULL FREE LIFT - HEADER HOSE AUXILIARY TUBE EXTENSIONS (STANDARD CARRIAGE)	13-36
THREE STAGE FULL FREE LIFT - CARRIAGE	13-38
TWO STAGE FULL FREE LIFT - OUTER MAST AND MAIN LIFT	12-2
TWO STAGE FULL FREE LIFT - INNER MAST AND FREE LIFT (→ 4/2013)	12-6
TWO STAGE FULL FREE LIFT - INNER MAST AND FREE LIFT (4/2013 →)	12-10
TWO STAGE FULL FREE LIFT - FREE LIFT CYLINDER	12-22
TWO STAGE FULL FREE LIFT - HEADER HOSE	12-26
TWO STAGE FULL FREE LIFT - HEADER HOSE AUXILIARY TUBE EXTENSIONS (STANDARD CARRIAGE)	12-30
TWO STAGE FULL FREE LIFT - CARRIAGE	12-32
TWO STAGE LIMITED FREE LIFT - OUTER MAST AND MAIN LIFT	11-2
TWO STAGE LIMITED FREE LIFT - INNER MAST	11-6
TWO STAGE LIMITED FREE LIFT - MAIN LIFT CYLINDER (H80-90FT)	11-10
TWO STAGE LIMITED FREE LIFT - MAIN LIFT CYLINDER (H100-120FT)	11-12
TWO STAGE LIMITED FREE LIFT - HEADER HOSE	11-14
TWO STAGE LIMITED FREE LIFT - HEADER HOSE AUXILIARY TUBE EXTENSIONS (STANDARD CARRIAGE)	11-16
TWO STAGE LIMITED FREE LIFT - CARRIAGE	11-18
MAST TILT SENSOR	5-48
MINI-LEVER CONTROLS	
WITH ARMREST - THREE FUNCTION	5-56
WITH ARMREST - FOUR FUNCTION	5-58
MINI-LEVER HYDRAULIC CONTROLS AND CONTROL VALVES	15-6
MIRROR	14-54
MONOTROL PEDAL ASSEMBLY	
→ S/N R005V02608K	4-44
MUD GUARDS	1-16
N	
NON SUSPENSION SEAT	
WITHOUT ELECTRONIC CONTROLS	1-20
WITHOUT ELECTRONIC CONTROLS - OPTIONAL	1-22
NOZZLE HOLDER AND GLOW PLUG	
KUBOTA DIESEL - (3.6L)	2-49
O	
OIL COOLER	
KUBOTA DIESEL - (3.6L, 3.8L)	2-31
OIL PAN	
KUBOTA DIESEL - 3.6L, 3.8L	2-76
OIL PUMP	
GM 4.3L GASOLINE AND LPG	3-44
OIL SEPARATOR	
KUBOTA DIESEL - (3.8L)	2-30
OUTER MAST	
THREE STAGE FULL FREE-LIFT	13-2

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
OUTLET SECTION	
ELECTRONIC CONTROL VALVE - THREE AND FOUR FUNCTION	10-42
OVERHEAD GUARD	1-10
P	
PARK BRAKE ASSEMBLY	
MANUAL WITH ONE CABLE - NMHG DRIVE AXLE	9-30
MANUAL WITH TWO CABLES - DANA	9-28
PISTON AND CRANKSHAFT	
KUBOTA DIESEL - (3.6L)	2-42
KUBOTA DIESEL - (3.8L)	2-44
POWER DISTRIBUTION MODULE	5-34
PRE-CLEANER AND MOUNT	
DIESEL	4-8
DIESEL ENGINE - WITH AIR CONDITIONING	4-9
PULLEY AND TENSIONER	
GM 4.3L GASOLINE AND LPG - PSI	3-24
R	
REAR DRIVE HANDLE	14-50
RED SEAT BELT	15-6
RELAY	
KUBOTA DIESEL	5-31
REMOTE KEY SWITCH	5-55
REVERSE CLUTCH	
DUAL SPEED TRANSMISSION	6-34
SINGLE SPEED TRANSMISSION	6-20
ROCKER ARM ASSEMBLY	
WITH INLET AND EXHAUST VALVES - KUBOTA DIESEL (3.6L)	2-38
ROCKER ARM SHAFT	
KUBOTA DIESEL - (3.8L)	2-41
S	
SEAT ATTACHING PARTS	
NOT INCLUDED WITH SEAT - SHEET 3 OF 3	1-32
SEATS	
SEMI SUSPENSION SEAT - MANUAL AND ELECTRO-HYDRAULIC	1-24
SENSORS	
KUBOTA DIESEL - (3.8L)	2-86
SPARK PLUGS AND WIRES	
GM 4.3L GASOLINE AND LPG - PSI OPTION	5-42
START OPTIONS	15-2
STARTER	
GM 4.3L LPG AND GASOLINE - PSI	5-46
KUBOTA DIESEL - (3.6L, 3.8L)	2-91
STEER AXLE	8-12
STEER CONTROL UNIT	8-10
STEER CYLINDER	8-16
STEER WHEELS AND TIRES	8-18
STEERING COLUMN AND ATTACHING PARTS	8-4

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
STEERING COLUMN ASSEMBLY	
DIESEL	8-8
GASOLINE AND LPG	8-6
STEERING HOSES	8-2
STROBE LIGHT	
LED	14-52
SWIVEL SEATS	15-2
T	
THERMOSTAT AND WATER OUTLET HOUSING	
GM 4.3L LPG - PSI OPTION	3-28
GM 4.3L GASOLINE - PSI OPTION	3-29
THROTTLE BODY	
GM 4.3L LPG - PSI OPTION	4-23
GM 4.3L GASOLINE	4-22
THROTTLE CABLE ASSEMBLY	
KUBOTA 3.6L DIESEL	4-28
THROTTLE PEDAL ASSEMBLY AND ATTACHING PARTS	
MONOTROL (S/N R005V02609K →)	4-48
STANDARD PEDAL	4-46
TILT HOSES	10-44
TILT CYLINDER AND MAST INSTALLATION	10-46
TILT CYLINDERS	10-50
TORQUE CONVERTER	
GM 4.3L LPG	6-8
TRANSMISSION	
DUAL SPEED - TWO PIECE HOUSING	6-22
DUAL SPEED - SECTION 1 OF 2	6-24
DUAL SPEED - SECTION 2 OF 2	6-26
SINGLE SPEED - TWO PIECE HOUSING	6-10
SINGLE SPEED - SECTION 1 OF 2	6-11
SINGLE SPEED - SECTION 2 OF 2	6-14
TRANSMISSION CONTROL VALVE ASSEMBLY	6-29
TRANSMISSION COOLING LINES	
DIESEL WITH STANDARD RADIATOR	6-2
GASOLINE AND LPG WITH STANDARD RADIATOR	6-4
WITH EXTERNAL OIL COOLER - GASOLINE, LPG AND DIESEL	6-6
TRANSMISSION MOUNT	6-9
TURBO INLET PIPE	
KUBOTA DIESEL - (3.8L)	2-73
TURBOCHARGER	
KUBOTA DIESEL - (3.6L)	2-69
KUBOTA DIESEL - (3.8L)	2-70
TURBOCHARGER OIL PLUMBING	
KUBOTA DIESEL - (3.6L)	2-74
KUBOTA DIESEL - (3.8L)	2-75
TWO STAGE FULL FREE LIFT	
MAIN LIFT CYLINDER - H80-90FT	12-14
MAIN LIFT CYLINDER - H100-120FT	12-18

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
V	
VALVE ASSEMBLY	
OUTLET SECTION - MANUAL CONTROL, THREE AND FOUR FUNCTION	10-26
VALVE ASSEMBLY, AUXILIARY ONE AND TWO	
MANUAL CONTROL VALVE - THREE AND FOUR FUNCTION	10-24
VALVE ASSEMBLY, AUXILIARY ONE SECTION	
ELECTRONIC CONTROL VALVE - THREE AND FOUR FUNCTION	10-38
VALVE ASSEMBLY, AUXILIARY TWO SECTION	
ELECTRONIC CONTROL VALVE - FOUR FUNCTION	10-40
VALVE ASSEMBLY, LIFT AND LOWER	
ELECTRONIC CONTROL VALVE - THREE AND FOUR FUNCTION	10-32
VALVE ASSEMBLY, LIFT AND TILT	
MANUAL CONTROL VALVE - THREE AND FOUR FUNCTION	10-22
VALVE ASSEMBLY, TILT SECTION	
ELECTRONIC CONTROL VALVE - THREE AND FOUR FUNCTION	10-36
VALVE COVER AND INLET MANIFOLD	
GM 4.3L GASOLINE AND LPG - PSI	3-38
VENT LINE GROUP	10-48
W	
WATER BYPASS	
GM 4.3L GASOLINE	3-46
WATER PUMP	
KUBOTA DIESEL - (3.6L, 3.8L)	2-90
WATER PUMP FLANGE AND THERMOSTAT	
KUBOTA DIESEL - (3.6L)	2-88
KUBOTA DIESEL - (3.8L)	2-89
WET BRAKE ASSEMBLY	7-20
NMHG	7-30
WIDE TREAD AND DUAL TREAD TIRES	15-2
WIRE HARNESS	
ADAPTER - LOW FUEL PRESSURE	5-60
AIR CONDITIONER	5-62
ALTERNATOR TO BATTERY DISCONNECT SWITCH - KUBOTA 3.8L DIESEL	5-66
ALTERNATOR TO STARTER - KUBOTA 3.8L DIESEL	5-68
ELECTRONIC CONTROL VALVE - THREE FUNCTION	5-86
ELECTRONIC CONTROL VALVE - FOUR FUNCTION	5-88
ENGINE - KUBOTA 3.8L DIESEL	5-94
ENGINE - KUBOTA DIESEL (3.6L)	5-100
LEFT HAND CHASSIS - GM 4.3L LPG (WITHOUT PREMIUM LOW FUEL SENSOR)	5-102
LIGHTS - WITH OVERHEAD GUARD	5-122
RIGHT HAND CHASSIS - GM 3.4L GAS/LPG AND KUBOTA 3.8L DIESEL	5-104
RIGHT HAND CHASSIS - KUBOTA DIESEL (3.6L)	5-110
SEALED ALTERNATOR - GM 4.3L GASOLINE AND LPG	5-124
TRANSMISSION - SINGLE SPEED	5-126
TRANSMISSION - DUAL SPEED	5-128
WIRE HARNESS (ALTERNATE)	
RIGHT HAND CHASSIS - KUBOTA DIESEL (3.6L)	5-116

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
WIRE HARNESS (ENGINE)	
GM 4.3L LPG - PSI OPTION	5-90
WIRE HARNESS BRACKET	
KUBOTA DIESEL - (3.8L)	2-87
WIRE HARNESS-COWL	
ELECTRO-HYDRAULICS WITH FORWARD/REVERSE - WITH HYDRAULIC PUMP SOLENOID	5-74
ELECTRO-HYDRAULICS WITH MONOTROL PEDAL - WITH HYDRAULIC PUMP SOLENOID	5-70
MANUAL HYDRAULICS WITH FORWARD/REVERSE - WITH HYDRAULIC PUMP SOLENOID	5-82
MANUAL HYDRAULICS WITH MONOTROL PEDAL - WITH HYDRAULIC PUMP SOLENOID	5-78

ABBREVIATIONS QUICK REFERENCE SHEET

Listed below are abbreviations used in parts manuals to denote the following expressions:

TERM	DEFINITION	TERM	DEFINITION
Amp	Amperes	FRE	Freezer Environment
AR	As Required	in.	inches
BDI	Battery Discharge Indicators	LPG	Liquefied Petroleum Gas
BWI	Brush Wear Indicator	MAP	Manifold Absolute Pressure
CE	Communicator End	mm	millimeters
CRE	Corrosive Environment	MSTS	Microprocessor Spark Timing System
D/B	Date Break	NPT	National Pipe Threads
dbA	Decibel "A" Scale	O/S	Oversize
DE	Drive End	PTO	Power Take Off
ECH	Empty Container Handler	RPM	Revolutions per Minute
ECH-3	Empty Container Handler - 3 High Stacking	S/N	Serial Number
ECH-4	Empty Container Handler - 4 High Stacking	TMM	Truck Management Module
ECH-5	Empty Container Handler - 5 High Stacking	UL Type D	Diesel-Powered Safety Rating
ECH-6	Empty Container Handler - 6 High Stacking	UL Type DS	Diesel-Powered Safety Rating
ECH-7	Empty Container Handler - 7 High Stacking	UL Type E	Battery-Powered Safety Rating
ECM	Electronic Control Module	UL Type EE	Battery-Powered Safety Rating
ECN	Engineering Change Notice	UL Type ES	Battery-Powered Safety Rating
EEPROM	Electrically Erasable Programmable Read Only Memory	UL Type G	Gasoline-Powered Safety Rating
EPA	US Environmental Protection Agency	UL Type GS	Gasoline-Powered Safety Rating
EPROM	Electrically Programmable Read Only Memory	UL Type LP	Gas-Powered Safety Rating
		UL Type LPS	LP Gas-Powered Safety Rating
		U/S	Undersize
		UL	Underwriters Laboratory
		V	Volts

HOW TO USE THE ILLUSTRATED PARTS MANUAL

This parts manual describes and illustrates assemblies, subassemblies, and detail parts needed for service replacement.

The different constructions are indicated by keys and footnotes. The callouts correspond to descriptions found on the next page.

HYSTER UNIT CODE D001 NORTH AMERICA 06/2001

TABLE OF CONTENTS

DESCRIPTION	PAGE
AIR INTAKE AND FILTER DIESEL (⇒ D/B 11/98)	3-22
AIR INTAKE AND FILTER DIESEL (D/B 11/96 ⇒)	
AIR INTAKE AND FILTER GASOLINE AND LPG	
ALTERNATOR GASOLINE, LPG, AND DIESEL	
ALTERNATOR TYPES GS, LPS, AND DS	
AUXILIARY FUNCTION TUBE TWO AND THREE STAGE FULL F	

SECTION 13 NUMERICAL INDEX

PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.
142	3-4	19	10-13	25		11-27	29	12-31	12		
12445	3-32	19	10-17	6		11-31	25	16719	3-36	5	
	3-34	1	10-27	11		11-32	37	16751	3-16	27	
			11	11		8-4	29	16849	3-34	21	
			11	6	16485	8-4	45		3-38	20	
			12	13		8-4	45	16863	3-28	17	
			14	6		8-8	34	16865	3-6	18	
			12	6		9-7	9		4-27	41	
			3	17		9-7	19	16882	9-7	30	
			9	10		9-11	9		9-11	27	
			23	46		9-11	17		10-10	36	
			27	46		10-9	21		10-13	32	
			26	14		10-9	28		11-7	24	
			28	14		10-13	16		11-9	17	
			50	14		11-7	19				

SECTIONS

- 1
- 2
- 3
- 4
- 5 BRAKE/ACC
- 6
- 7 MAST-TWO STAG
- 8 MAST-THREE ST
- 9 MAST-TWO ST
- 10
- 11

TRANSMISSION HOUSING ⇒ S/N D001H-2628

KEY:
A: Diesel
B: Gasoline and LPG

ITEM	PART NO.	DESCRIPTION	QTY	
			A	B
1	202547	Transmission	1	1
2	2023329	Transmission	1	1
3	2021670	Case	2	2
4	2023418	Bearing Cap	4	4
5	296429	Washer	4	4
6	293947	Bolt	1	1
7	2021390	Cover	2	2
8	1371656	Colter Pin	4	4
9	2021915	O-Ring	1	1
10	2021329	Plug	4	4
11	2021675	Housing	22	22
12	2021336	Pin	39	39
13	287860	Bolt	1	1
14	292682	Lockwasher	1	1
15	2021345	Hydraulic Pump ⇒ Figure 5-3	1	1
16	214364	Gasket	1	1
17	296418	Bolt	8	8
18	2021388	Washer	1	1
19	2021389	Temperature Switch	1	1
20	2021383	Breather	9	9
21	292515	Dipstick	9	9
22	136692	Bolt	2	2
23	292527	Nut	3	3
24	292531	Bolt	3	2
25	292583	Capscrew	4	4
26	293637	Lockwasher	4	4
	296420	Bolt	4	4
	296420	Washer	1	1
	996403	Transmission Kit (Includes Item 7)	1	1
	996405	Transmission Kit (Includes Item 14)	1	1

This Parts Manual is divided into 11 major sections which are listed above. Quick reference can be made by placing the right thumb on the tab of the desired section, bending the pages to the corresponding tab.

© Copy Right Date HYSTER COMPANY See Service Manual for service procedures. 5-15

HOW TO FIND THE DESIRED PART NUMBER

WHEN THE PART NUMBER AND THE NEXT HIGHER ASSEMBLY IS NOT KNOWN:

1. Determine the function and application of the part required. Turn to the Sections Page. Choose the general area of reference most likely to include the part.
2. Turn to the section you chose. Use the Section Table of Contents to determine the assembly which would normally contain the part required. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS NOT KNOWN AND THE NEXT HIGHER ASSEMBLY IS KNOWN:

3. Determine the assembly the required part is used on. Turn to the Table of Contents (Page i).
4. Locate the assembly the required part is used on and turn to the page indicated for that assembly. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS KNOWN:

5. Use the Numerical Index (Page 16-1) to find the part number. Turn to the page listed and locate the part as indicated by the item number.

GENERAL:

The assembly breakdowns include part numbers, descriptions, quantities required, keys and footnotes to help in selecting correct parts.

6. Parts Supersession Information. Part numbers that have this history will be displayed in the parts list in the order that they were superseded (from oldest to newest). The superseded part numbers will be shown with a line through them.

Five periods in the PART NO. column (.) indicate that the part is either *Not Serviced Separately* or there is a reference to another figure. A figure reference is denoted by a pointing hand followed by a figure number in the DESCRIPTION column (☞ Figure 10)

7. Keys are used to show two or more similar assemblies, RH and LH assembly parts, etc. Select the appropriate key, "A", "B", "C", "D", or "E" and the corresponding quantity column to find the required parts. Two periods in the QTY column (..) indicate that the part is not used for that assembly.
8. Indented descriptions under the DESCRIPTION column are used to indicate assemblies and

subparts of assemblies. In the example on the previous page, *BEARING CAP* (Item 2) is a subpart of the major assembly *CASE*.

9. Quantities shown are for one assembly. The quantities of the subpart *BEARING CAP* are indicated as two and two. This means two per *CASE* assembly.
10. Serial number breaks identify the most current parts information and are shown as follows:
 - **S/N D001H2628**
Indicates last serial number affected.
 - S/N D001H2629** →
Indicates the first serial number affected.
 - S/N D001H1553** ↔ **S/N D001H3291**
Indicates a range of serial numbers affected.

ECN numbers for pending serial numbers are shown to allow for the inclusion of the most current parts information and are identified as follows:

→ **S/N Pending Per ECN 63243**

Indicates a pending serial number for last unit affected.

S/N Pending Per ECN 63243 →

Indicates a pending serial number for first unit affected.

Date breaks are used to indicate when a change occurred but a subsequent serial number break was not recorded. This is an arbitrary date usually based on the ECN release and are identified as follows:

→ **D/B 3/00**

Indicates that a change occurred sometime within that month for the item affected.

D/B 3/00 →

Indicates that a change occurred sometime within that month for the item affected.

D/B 3/00 ↔ **D/B 4/00**

Indicates a range of production dates of the item affected.

Contact your local dealer for Hyster lift trucks for serial number information for items with a ECN or a date break.

ORDERING PARTS:

When ordering replacement parts, give the unit serial number, part number, name of part and quantity required.

For any further information on parts, service, or ordering, consult your local dealer for Hyster lift trucks.