

PARTS MANUAL

**H80-H120FT
(S005)**

CUSTOMER EDITION

HYSTER

SECTIONS

1	FRAME
2	ENGINE ASSEMBLY - DIESEL
3	ENGINE ASSEMBLY - GM
4	FUEL SYSTEM
5	ELECTRICAL SYSTEM
6	TRANSMISSION
7	DRIVE AXLE
8	STEERING SYSTEM
9	BRAKE SYSTEM
10	HYDRAULIC SYSTEM
11	MAST-TWO STAGE LIMITED FREE-LIFT
12	MAST-TWO STAGE FULL FREE-LIFT
13	MAST-THREE STAGE FULL FREE-LIFT
14	OPTIONS
15	FIELD CONVERSION KITS
16	NUMERICAL INDEX

This Parts Manual is divided into 16 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

TABLE OF CONTENTS

DESCRIPTION	PAGE
A	
ACCUMULATOR	
→ 4/2015	14-54
4/2015 →	14-56
ADD-ON OPTION KITS	15-7
AIR FILTER	4-26
AIR INTAKE	
KUBOTA DIESEL - 3.6L	4-2
KUBOTA DIESEL - 3.8L	4-4
AIR INTAKE AND FILTER SYSTEM	
GM 4.3L - GASOLINE AND LPG	4-24
ALTERNATOR	
SEALED - KUBOTA 3.8L DIESEL	5-16
SEALED - GM 4.3L GASOLINE AND LPG	5-52
ALTERNATOR AND MOUNTING	
GM 4.3L GASOLINE AND LPG	5-51
ALTERNATOR AND PULLEY	
KUBOTA DIESEL	2-97
ANTI-STALL	
WITH MANUAL HYDRAULIC VALVE - GAS, LPG AND 3.6L DIESEL (4/2014 →)	10-22
ARMREST ASSEMBLY	
MINI-LEVER MODULES - SEMI-SUSPENSION SEAT WITH HIP RESTRAINTS	1-34
MINI-LEVER MODULES - FULL SUSPENSION SEAT	1-36
AUXILIARY HOSES	10-66
B	
BACK-UP ALARM	14-52
BATTERY CABLE	
FUSED - KUBOTA 3.6L DIESEL	5-34
BATTERY CABLES	
GM 4.3L GASOLINE AND LPG	5-36
KUBOTA DIESEL	5-30
BATTERY DISCONNECT	
GM 4.3L GS AND LPS	5-38
KUBOTA 3.8L DS	5-32
BRAKE COOLING SYSTEM	
SINGLE AND DUAL PEDAL - DANA WET BRAKE	9-14
BRAKE LINKAGE	
DUAL PEDAL - WET BRAKE	9-8
DUAL PEDAL WET BRAKE - ALTERNATE OPTION	9-10
SINGLE PEDAL - WET BRAKE	9-2
SINGLE PEDAL WET BRAKE - ALTERNATE OPTION	9-4
BRAKE MASTER CYLINDER ASSEMBLY	9-18
BREATHER AND SEPARATOR PIPES	
KUBOTA DIESEL - 3.8L	2-86
C	
CAB ASSEMBLY WITH STEEL DOORS	
FAN ASSEMBLY	1-96

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
HEADLINER ASSEMBLY	1-98
WITH AIR CONDITIONING - SHEET 1 OF 3	1-74
WITH AIR CONDITIONING - SHEET 2 OF 3	1-76
WITH AIR CONDITIONING - SHEET 3 OF 3	1-78
WITH AIR CONDITIONING - WINDOWS AND WIPERS-ADHESIVE SEALED FRONT WINDOW	1-80
WITH AIR CONDITIONING - LEFT HAND DOOR	1-82
WITH AIR CONDITIONING - RIGHT HAND DOOR LATCH COMPONENTS	1-84
WITH AIR CONDITIONING - RIGHT HAND DOOR HEATER COMPONENTS	1-86
WITH AIR CONDITIONING - CONDENSER AND ATTACHING PARTS (SHEET 1 OF 2)	1-88
WITH AIR CONDITIONING - DRYER AND ATTACHING PARTS (SHEET 2 OF 2)	1-90
WITH AIR CONDITIONING - HEATER COMPONENTS	1-94
WITHOUT AIR CONDITIONING - SHEET 1 OF 3	1-60
WITHOUT AIR CONDITIONING - SHEET 2 OF 3	1-62
WITHOUT AIR CONDITIONING - SHEET 3 OF 3	1-64
WITHOUT AIR CONDITIONING - WINDOWS AND WIPERS-MECHANICALLY SEALED FRONT WINDOW	1-66
WITHOUT AIR CONDITIONING - LEFT HAND DOOR	1-68
WITHOUT AIR CONDITIONING - RIGHT HAND DOOR LATCH COMPONENTS	1-70
WITHOUT AIR CONDITIONING - RIGHT HAND DOOR HEATER COMPONENTS	1-72
CAMSHAFT AND IDLE GEAR SHAFT	
KUBOTA DIESEL - 3.6L	2-94
KUBOTA DIESEL - 3.8L	2-95
CAMSHAFT AND OIL PAN	
GM 4.3L GASOLINE AND LPG	3-38
CARRIAGE	
THREE STAGE FULL FREE LIFT	13-34
TWO STAGE FULL FREE LIFT	12-28
TWO STAGE LIMITED FREE LIFT	11-18
CARRIAGE LOCKOUT ROD	
CHARGE PUMP ASSEMBLY	6-38
COMPRESSOR ASSEMBLY AND ATTACHING PARTS	
WITH CAB AND AIR CONDITIONING	2-36
CONDENSER ASSEMBLY	1-92
CONTROL MODULE	
DIESEL INTERFACE - KUBOTA V3800	5-14
CONTROL VALVE ASSEMBLY	
ELECTRONIC CONTROL - THREE FUNCTION	10-40
ELECTRONIC CONTROL - FOUR FUNCTION	10-42
ELECTRONIC CONTROL - THREE AND FOUR FUNCTION-WITH VARIABLE DISPLACEMENT PUMP	10-44
MANUAL CONTROL VALVE - THREE AND FOUR FUNCTION (→ 4/2014)	10-24
CONTROL VALVE LOCKOUT GROUP	
MANUAL CONTROL VALVE	10-20
COOLING	
GASOLINE AND LPG - SHORT WHEEL BASE WITH EXTERNAL OIL COOLER	3-2
GASOLINE AND LPG - SHORT WHEEL BASE WITHOUT EXTERNAL OIL COOLER	3-4
GASOLINE AND LPG - LONG WHEEL BASE WITH EXTERNAL COOLER	3-6
KUBOTA DIESEL - WITH EXTERNAL OIL COOLER	2-8
KUBOTA DIESEL - WITHOUT EXTERNAL OIL COOLER WITH SHORT WHEELBASE	2-10

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
COUNTERWEIGHT	1-14
COVER BEARING CASE	
KUBOTA DIESEL - 3.6L, 3.8L	2-96
COWL ELECTRICAL	
ELECTRO-HYDRAULIC	5-8
MANUAL HYDRAULIC	5-6
COWL MOUNT	1-12
CRANKSHAFT PULLEY	
GM 4.3L GASOLINE AND LPG	3-30
CYLINDER BLOCK	
GM 4.3L GASOLINE AND LPG	3-36
KUBOTA DIESEL - 3.6L	2-40
KUBOTA DIESEL - 3.8L	2-42
CYLINDER HEAD	
GM 4.3L GASOLINE AND LPG	3-34
KUBOTA DIESEL - 3.6L	2-52
KUBOTA DIESEL - 3.8L	2-53
CYLINDER HEAD COVER	
KUBOTA DIESEL - 3.6L	2-48
KUBOTA DIESEL - 3.8L	2-50
D	
DIESEL PARTICULATE FILTER	
ATTACHING PARTS - KUBOTA 3.8L DIESEL	2-106
MUFFLER ASSEMBLY - KUBOTA 3.8L DIESEL	2-108
DIFFERENTIAL ASSEMBLY	
WET BRAKE (NMHG)	7-18
DIPSTICK	
KUBOTA DIESEL - 3.6L, 3.8L	2-47
DIRECTIONAL CONTROL	15-6
DISTRIBUTOR AND COIL	
GM 4.3L GASOLINE AND LPG	3-46
DISTRIBUTOR ASSEMBLY	
GM 4.3L LPG AND GASOLINE	5-44
DPF DISPLAY	
3.8L KUBOTA DIESEL	5-10
DRIVE AXLE AND ATTACHING PARTS	
WET BRAKE - DANA	7-2
DRIVE AXLE ASSEMBLY	
WET BRAKE (DANA) - HOUSING AND HUB	7-4
WET BRAKE (DANA) - DIFFERENTIAL	7-6
WET BRAKE (DANA) - BRAKE ASSEMBLY	7-10
WET BRAKE (NMHG) - RIGHT AND LEFT HAND HUBS	7-12
WET BRAKE (NMHG) - BRAKES AND DIFFERENTIAL	7-14
WET BRAKE (NMHG) - INPUT PINION CARRIER	7-16
DRIVE WHEELS AND TIRES	
DUAL TREAD	7-25
SINGLE TREAD	7-22

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
DUAL MIRRORS WITH CAB	14-49
E	
EGR COOLER KUBOTA DIESEL - 3.8L	2-81
EGR VALVE KUBOTA DIESEL - 3.8L	2-80
ELECTRICAL MOUNTING PLATE AND LIFTING EYE GM 4.3L GASOLINE	3-26
GM 4.3L LPG	3-24
ELECTRICAL SYSTEM RIGHT HAND CHASSIS	5-4
ELECTRONIC CONTROL VALVE LIFT SECTION - WITH VARIABLE DISPLACEMENT PUMP	10-50
OUTLET SECTION - WITH VARIABLE DISPLACEMENT PUMP	10-62
TILT SECTION - WITH VARIABLE DISPLACEMENT PUMP	10-54
TRANSITION SECTION - WITH VARIABLE DISPLACEMENT PUMP	10-48
ENGINE CONTROL MODULE AND SENSORS GM 4.3L LPG	5-46
GM 4.3L GASOLINE	5-48
ENGINE ELECTRICAL SYSTEM GM 4.3L - WITH SEALED ALTERNATOR	5-28
GM 4.3L GASOLINE	5-26
GM 4.3L LPG	5-24
KUBOTA 3.6L DIESEL	5-17
ENGINE ELECTRICAL SYSTEM AND ATTACHING PARTS KUBOTA 3.6L DIESEL	5-18
KUBOTA 3.8L DIESEL - WITH STANDARD ALTERNATOR HARNESS	5-20
KUBOTA 3.8L DIESEL - WITH SEALED ALTERNATOR HARNESS	5-22
ENGINE MOUNTING GM 4.3L, GASOLINE AND LPG	3-12
ENGINE WITH ENGINE MOUNT AND TORQUE CONVERTER 3.6L KUBOTA DIESEL	2-4
3.8L KUBOTA DIESEL	2-6
E-THROTTLE LINKAGE KUBOTA 3.6L DIESEL	4-14
EXHAUST MANIFOLD KUBOTA DIESEL - 3.6L	2-82
KUBOTA DIESEL - 3.8L	2-83
EXHAUST MANIFOLDS GM 4.3L LPG AND GASOLINE	3-31
EXHAUST SYSTEM COUNTERWEIGHT EXHAUST LWB - 3.6L	2-18
COUNTERWEIGHT EXHAUST LWB - 3.8L WITH DPF	2-28
COUNTERWEIGHT EXHAUST SWB - 3.6L	2-22
COUNTERWEIGHT EXHAUST SWB - 3.8L WITH DPF	2-26
EXHAUST WRAPS FOR PAPER INDUSTRY - KUBOTA 3.6L AND 3.8L DIESEL	2-34
GM 4.3L, GASOLINE AND LPG	3-14

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
OVERHEAD EXHAUST LWB - 3.6L	2-20
OVERHEAD EXHAUST LWB - 3.8L WITH DPF	2-32
OVERHEAD EXHAUST SWB - 3.6L	2-24
OVERHEAD EXHAUST SWB - 3.8L WITH DPF	2-30
EXHAUST WRAPS	
GM 4.3L GASOLINE AND LPG	3-16
F	
FAN ASSEMBLY	
GM 4.3L GASOLINE AND LPG	3-20
FAN MOUNT ASSEMBLY	
GM 4.3L LPG AND GASOLINE	3-18
FAN PULLY	
KUBOTA DIESEL - 3.6L, 3.8L	2-39
FAN SHROUD WITH RADIATOR SCREEN	
GASOLINE AND LPG - SHORT WHEEL BASE	3-10
LONG WHEEL BASE - DIESEL	2-16
SHORT WHEEL BASE - DIESEL	2-14
FAN SHROUD WITHOUT RADIATOR SCREEN	
GASOLINE AND LPG - SHORT WHEEL BASE	3-9
SHORT WHEEL BASE - DIESEL	2-12
FENDER EXTENSIONS	1-8
FIRE EXTINGUISHER	14-50
FLOOR PLATES AND COVERS	
SHEET 1 OF 2	1-56
SHEET 2 OF 2	1-58
FLYWHEEL AND HOUSING	
GM 4.3L GASOLINE AND LPG	3-22
KUBOTA DIESEL - 3.6L, 3.8L	2-38
FORKS	
OPTIONAL LATCH	1-49
POLISHED FORK WITH FULL BOTTOM TAPER - CLASS III AND CLASS IV	1-48
STANDARD TAPER CLASS III AND CLASS IV	1-46
FORKS WITH LATCH	
POLISHED FULL BOTTOM TAPER - OPTIONAL EQUIPMENT	1-52
STANDARD TAPER - OPTIONAL EQUIPMENT	1-50
FORWARD CLUTCH	
SINGLE SPEED TRANSMISSION	6-18
FORWARD CLUTCH, HIGH	
DUAL SPEED TRANSMISSION	6-32
FORWARD CLUTCH, LOW	
DUAL SPEED TRANSMISSION	6-30
FREE LIFT CYLINDER	
THREE STAGE FULL FREE LIFT	13-24
TWO STAGE FULL FREE LIFT	12-18
FUEL CAP	
GASOLINE AND DIESEL	4-22
FUEL FILTER	
KUBOTA DIESEL - 3.6L	2-75

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
FUEL INJECTION PUMP	
KUBOTA DIESEL - 3.8L	2-73
FUEL PUMP	
KUBOTA DIESEL - 3.6L	2-74
FUEL RAIL	
KUBOTA DIESEL - 3.8L	2-62
FUEL SENDER AND ATTACHING PARTS	
GM 4.3L - GASOLINE	4-30
FUEL SENDING UNIT	
KUBOTA DIESEL - 3.6L	4-20
FUEL SYSTEM	
GM 4.3L - GASOLINE	4-27
GM 4.3L - LPG (→ 4/2014)	4-32
GM 4.3L - LPG (4/2014 →)	4-34
KUBOTA DIESEL - 3.8L	4-16
FULL-SUSPENSION SEAT	
ATTACHING PARTS-NOT INCLUDED WITH SEAT - SHEET 4 OF 4	1-32
MANUAL AND ELECTRO-HYDRAULIC — SWIVEL AND NON SWIVEL - SHEET 1 OF 4	1-26
RECLINER AND DAMPER KITS - SHEET 2 OF 4	1-28
SERVICE KITS FOR NON SWIVEL AND SWIVEL - SHEET 3 OF 4	1-30
G	
GEAR CASE	
KUBOTA DIESEL - 3.6L	2-91
KUBOTA DIESEL - 3.8L	2-93
GEAR PUMP	10-6
GOVERNOR	
KUBOTA DIESEL - 3.6L	2-70
GOVERNOR ACTUATOR AND PLUG	
KUBOTA DIESEL - 3.6L	2-72
H	
HAND LEVERS	
FOUR FUNCTION - WITH DETENTED LEVERS	10-16
FOUR FUNCTION - WITHOUT DETENTED LEVERS	10-18
THREE FUNCTION - WITH DETENTED LEVERS	10-12
THREE FUNCTION - WITHOUT DETENTED LEVERS	10-14
HEADER HOSE	
THREE STAGE FULL FREE LIFT	13-28
TWO STAGE FULL FREE LIFT	12-22
TWO STAGE LIMITED FREE LIFT	11-14
HEADER HOSE AUXILIARY TUBE EXTENSIONS	
THREE STAGE FULL FREE LIFT - STANDARD CARRIAGE	13-32
THREE STAGE FULL FREE- LIFT - INTEGRAL SIDE-SHIFT CARRIAGE WITHOUT QUICK DISCONNECTS	14-4
THREE STAGE FULL FREE- LIFT - ATTACHMENT CARRIAGE WITHOUT QUICK DISCONNECTS	14-10
TWO STAGE FULL FREE LIFT - STANDARD CARRIAGE	12-26
TWO STAGE FULL FREE- LIFT - INTEGRAL SIDE-SHIFT CARRIAGE WITHOUT QUICK DISCONNECTS	14-3

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
TWO STAGE FULL FREE- LIFT - ATTACHMENT CARRIAGE WITHOUT QUICK DISCONNECTS	14-8
TWO STAGE LIMITED FREE LIFT - STANDARD CARRIAGE	11-16
TWO STAGE LIMITED FREE-LIFT - INTEGRAL SIDE-SHIFT CARRIAGE WITHOUT QUICK DISCONNECTS	14-2
TWO STAGE LIMITED FREE-LIFT - ATTACHMENT CARRIAGE WITHOUT QUICK DISCONNECTS	14-6
HEADER HOSE AUXILIARY TUBE EXTENSIONS WITH QUICK DISCONNECTS	
THREE STAGE FULL FREE-LIFT - STANDARD CARRIAGE	14-20
THREE STAGE FULL FREE-LIFT - INTEGRAL SIDE-SHIFT CARRIAGE	14-28
TWO STAGE FULL FREE- LIFT - STANDARD CARRIAGE	14-16
TWO STAGE FULL FREE-LIFT - INTEGRAL SIDE-SHIFT CARRIAGE	14-26
TWO STAGE LIMITED FREE-LIFT - STANDARD CARRIAGE	14-12
TWO STAGE LIMITED FREE-LIFT - INTEGRAL SIDE-SHIFT CARRIAGE	14-24
HEATER HOSE	
DIESEL	1-20
GAS	1-17
LPG	1-18
HOOD ASSEMBLY	1-4
HOSE GROUPS	
HYDRAULIC CONTROL VALVE (MANUAL)	
AUXILIARY ONE AND TWO SECTION - THREE AND FOUR FUNCTION (4/2014 →)	10-36
LIFT AND TILT - THREE AND FOUR FUNCTION (4/2014 →)	10-34
OUTLET SECTION - THREE AND FOUR FUNCTION (4/2014 →)	10-38
THREE AND FOUR FUNCTION (4/2014 →)	10-32
HYDRAULIC FILTER	10-4
HYDRAULIC SUPPLY AND RETURN	10-2
WITH VARIABLE DISPLACEMENT PUMP	10-8
I	
IMPACT SENSOR	5-60
INJECTION PIPE	
KUBOTA DIESEL - 3.8L	2-63
INJECTION PUMP	
KUBOTA DIESEL - 3.6L	2-69
INJECTION PUMP HOUSING	
KUBOTA DIESEL - 3.6L	2-68
INJECTOR BODY	
KUBOTA 3.6L DIESEL	2-66
INJECTOR HARNESS	
KUBOTA DIESEL - 3.8L	2-67
INLET AND EXHAUST VALVES	
KUBOTA DIESEL - 3.8L	2-56
INLET MANIFOLD	
KUBOTA DIESEL - 3.6L	2-76
KUBOTA DIESEL - 3.8L	2-78
INNER MAST	
THREE STAGE FULL FREE-LIFT	13-10
INNER MAST AND FREE-LIFT	
THREE STAGE FULL FREE-LIFT	13-12

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
INSTRUMENT CLUSTER	5-56
INTAKE AIR FUEL MODULE	
GM 4.3L GASOLINE	3-44
INTEGRAL SIDE-SHIFT CARRIAGE ASSEMBLY	
CHAIN ANCHOR GROUPS	14-42
THREE STAGE FULL FREE LIFT	14-38
TWO STAGE FULL FREE LIFT	14-34
TWO STAGE LIMITED FREE-LIFT	14-30
INTERMEDIATE MAST	
THREE STAGE FULL FREE LIFT	13-6
L	
LABELS	
CONTROL LEVER LENS - MANUAL HYDRAULICS	1-42
EXTERIOR	1-38
INTERIOR	1-40
LIFTING EYES	
GASOLINE AND DIESEL	14-57
LIGHTS	
WORK, REAR DRIVE, AND BRAKE/TAIL - WITH OVERHEAD GUARD	5-40
WORK, REAR DRIVE, AND BRAKE/TAIL - WITH CAB	5-42
LOAD BACK REST EXTENSION	1-54
LOAD WEIGH ELECTRICAL	5-58
LPG CONVERTER	
GM 4.3L	4-39
LPG LOCK OFF	
GM 4.3L	4-40
LPG REGULATOR AND MIXER	
GM 4.3L	4-38
LPG TANK BRACKET	
GM 4.3L - SWING OUT	4-42
GM 4.3L - SWING OUT, DROP DOWN	4-44
M	
MAIN LIFT	
THREE STAGE FULL FREE-LIFT	13-16
MAIN LIFT CYLINDER	
THREE STAGE FULL FREE LIFT	13-20
TWO STAGE FULL FREE LIFT - H80-90FT	12-10
TWO STAGE FULL FREE LIFT - H100-120FT	12-14
TWO STAGE LIMITED FREE LIFT - H80-90FT	11-10
TWO STAGE LIMITED FREE LIFT - H100-120FT	11-12
MANUAL HYDRAULIC CONTROLS AND CONTROL VALVES	15-7
MAST	
TWO STAGE FULL FREE LIFT - OUTER MAST AND MAIN LIFT	12-2
TWO STAGE FULL FREE LIFT - INNER MAST AND FREE LIFT	12-6
TWO STAGE LIMITED FREE LIFT - OUTER MAST AND MAIN LIFT	11-2
TWO STAGE LIMITED FREE LIFT - INNER MAST	11-6
MAST TILT SENSOR	5-57

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
MINI LEVER MODULE LABELS	
ELECTRO-HYDRAULIC CONTROL FUNCTIONS	1-44
MINI-LEVER CONTROLS	
WITH ARMREST - THREE FUNCTION	5-64
WITH ARMREST - FOUR FUNCTION	5-66
MINI-LEVER HYDRAULIC CONTROLS AND CONTROL VALVES	15-6
MIRROR	
WITHOUT CAB	14-48
MUD GUARDS	1-16
N	
NON-SUSPENSION SEAT	
WITHOUT ELECTRONIC CONTROLS	1-22
NOZZLE HOLDER AND GLOW PLUG	
KUBOTA DIESEL - 3.6L	2-65
O	
OIL COOLER	
KUBOTA DIESEL - 3.6L	2-45
KUBOTA DIESEL - 3.8L	2-46
OIL PAN	
KUBOTA DIESEL - 3.6L, 3.8L	2-90
OIL PUMP	
GM 4.3L GASOLINE AND LPG	3-48
OIL SEPARATOR	
KUBOTA DIESEL - 3.8L	2-44
OUTER MAST	
THREE STAGE FULL FREE-LIFT	13-2
OVERHEAD GUARD	1-10
P	
PARK BRAKE ASSEMBLY	
MANUAL WITH ONE CABLE - NMHG	9-22
MANUAL WITH TWO CABLES - DANA	9-20
PISTON AND CRANKSHAFT	
KUBOTA DIESEL - 3.6L	2-58
KUBOTA DIESEL - 3.8L	2-60
POWER DISTRIBUTION MODULE	5-12
PRE-CLEANER AND MOUNT	
DIESEL	4-6
DIESEL ENGINE - WITH AIR CONDITIONING	4-7
PULLEY AND TENSIONER	
GM 4.3L GASOLINE AND LPG	3-28
R	
REAR DRIVE HANDLE	14-44
RED SEAT BELT	15-6
RELAY	
KUBOTA DIESEL	5-15
REMOTE KEY SWITCH	5-62

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
REVERSE CLUTCH	
DUAL SPEED TRANSMISSION	6-34
SINGLE SPEED TRANSMISSION	6-20
ROCKER ARM ASSEMBLY	
WITH INLET AND EXHAUST VALVES - KUBOTA DIESEL (3.6L)	2-54
ROCKER ARM SHAFT	
KUBOTA DIESEL - 3.8L	2-57
S	
SEAT BELT SWITCH ADAPTER	
4/2014 →	5-63
SEMI-SUSPENSION SEAT	
MANUAL AND ELECTRO-HYDRAULIC	1-24
SENSORS	
KUBOTA DIESEL - 3.8L	2-99
SOUND ABATEMENT	
WITH CAB	1-100
SPARK PLUGS AND WIRES	
GM 4.3L GASOLINE AND LPG	5-50
START OPTIONS	15-2
STARTER	
GM 4.3L LPG AND GASOLINE	5-54
KUBOTA DIESEL - 3.6L, 3.8L	2-104
STEER AXLE	8-14
STEER CONTROL UNIT	8-10
STEER CYLINDER	8-18
STEER WHEELS AND TIRES	8-20
STEERING COLUMN AND ATTACHING PARTS	8-4
STEERING COLUMN ASSEMBLY	
DIESEL	8-8
GASOLINE AND LPG	8-6
STEERING CONTROL UNIT	
VARIABLE DISPLACEMENT	8-12
STEERING HOSES	8-2
STROBE LIGHT	
LED	14-46
SWIVEL SEATS	15-2
T	
THERMOSTAT AND WATER OUTLET HOUSING	
GM 4.3L LPG	3-32
GM 4.3L GASOLINE	3-33
THROTTLE BODY	
GM 4.3L - GASOLINE	4-36
GM 4.3L - LPG	4-37
THROTTLE CABLE ASSEMBLY	
KUBOTA DIESEL - 3.6L	4-12
THROTTLE PEDAL ASSEMBLY AND ATTACHING PARTS	
MONOTROL PEDAL	4-10

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
STANDARD PEDAL	4-8
TILT HOSES	10-72
TILT CYLINDER AND MAST INSTALLATION	10-74
TILT CYLINDERS	10-76
TORQUE CONVERTER	
GM 4.3L LPG	6-8
TRANSMISSION	
DUAL SPEED - SHEET 1 OF 3	6-22
DUAL SPEED - SHEET 2 OF 3	6-24
DUAL SPEED - SHEET 3 OF 3	6-26
SINGLE SPEED - SHEET 1 OF 3	6-10
SINGLE SPEED - SHEET 2 OF 3	6-11
SINGLE SPEED - SHEET 3 OF 3	6-14
TRANSMISSION CONTROL VALVE ASSEMBLY	6-36
TRANSMISSION COOLING LINES	
WITH EXTERNAL OIL COOLER - GASOLINE, LPG AND DIESEL	6-6
WITHOUT EXTERNAL OIL COOLER - DIESEL	6-2
WITHOUT EXTERNAL OIL COOLER - GASOLINE AND LPG	6-4
TRANSMISSION MOUNT	6-9
TURBO INLET PIPE	
KUBOTA DIESEL - 3.8L	2-87
TURBOCHARGER	
KUBOTA DIESEL - 3.6L	2-84
KUBOTA DIESEL - 3.8L	2-85
TURBOCHARGER OIL PLUMBING	
KUBOTA DIESEL - 3.6L	2-88
KUBOTA DIESEL - 3.8L	2-89
V	
VALVE ASSEMBLY	
AUXILIARY ONE AND TWO - MANUAL CONTROL, THREE AND FOUR FUNCTION (→ 4/2014)	10-28
AUXILIARY ONE SECTION - ELECTRONIC CONTROL VALVE-THREE AND FOUR FUNCTION	10-56
AUXILIARY TWO SECTION - ELECTRONIC CONTROL VALVE-FOUR FUNCTION	10-58
ELECTRO HYDRAULIC POPPET VALVE - THREE AND FOUR FUNCTION	10-64
LIFT AND LOWER - ELECTRONIC CONTROL VALVE-THREE AND FOUR FUNCTION	10-46
LIFT AND TILT - MANUAL CONTROL, THREE AND FOUR FUNCTION (→ 4/2014)	10-26
OUTLET SECTION - MANUAL CONTROL, THREE AND FOUR FUNCTION (→ 4/2014)	10-30
OUTLET SECTION - ELECTRONIC CONTROL VALVE-THREE AND FOUR FUNCTION	10-60
TILT SECTION - ELECTRONIC CONTROL VALVE-THREE AND FOUR FUNCTION	10-52
VALVE COVER AND INLET MANIFOLD	
GM 4.3L GASOLINE AND LPG	3-42
VARIABLE DISPLACEMENT PUMP	
ASSEMBLY	10-11
VARIABLE DISPLACEMENT PUMP AND ADAPTOR	10-10
VENT LINE GROUP	
WITH STANDARD CONTROL VALVE	10-68
WITH VARIABLE DISPLACEMENT CONTROL VALVE	10-70

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
W	
WATER BYPASS	
GM 4.3L GASOLINE	3-50
WATER PUMP	
KUBOTA DIESEL - 3.6L	2-102
KUBOTA DIESEL - 3.8L	2-103
WATER PUMP FLANGE AND THERMOSTAT	
KUBOTA DIESEL - 3.6L	2-100
KUBOTA DIESEL - 3.8L	2-101
WET BRAKE ASSEMBLY	
NMHG	7-20
WET BRAKE BOOSTER SUPPLY AND RETURN	
NMHG	9-16
WIDE TREAD AND DUAL TREAD TIRES	15-2
WIRE HARNESS	
ADAPTER - LOW FUEL PRESSURE	5-68
AIR CONDITIONER	5-70
ALTERNATOR TO BATTERY DISCONNECT SWITCH - KUBOTA 3.8L DIESEL	5-156
ALTERNATOR TO STARTER - KUBOTA 3.8L DIESEL	5-152
COWL - MANUAL HYDRAULICS WITH MONOTROL PEDAL	5-134
COWL - MANUAL HYDRAULICS WITH FORWARD/REVERSE	5-138
COWL - ELECTRO-HYDRAULICS WITH MONOTROL PEDAL	5-142
COWL - ELECTRO-HYDRAULICS WITH FORWARD/REVERSE	5-146
DPF DISPLAY	5-164
ELECTRONIC CONTROL VALVE - THREE FUNCTION	5-74
ELECTRONIC CONTROL VALVE - FOUR FUNCTION	5-76
ENGINE - KUBOTA 3.8L DIESEL	5-86
ENGINE - KUBOTA DIESEL (3.6L) (→ 5/2013)	5-92
ENGINE - KUBOTA DIESEL 3.6L (5/2013 →)	5-94
LIGHTS - WITH OVERHEAD GUARD	5-150
RH CHASSIS - GM 4.3L GAS/LPG AND KUBOTA 3.8L DIESEL (→ 4/2014)	5-98
RH CHASSIS - GM 4.3L GAS/LPG AND KUBOTA 3.8L DIESEL (4/2014 →)	5-104
RH CHASSIS - KUBOTA DIESEL (3.6L) (→ 5/2013)	5-116
RH CHASSIS - KUBOTA DIESEL (3.6L) (5/2013 →)	5-122
RH CHASSIS WITH SEAT BELT SEQUENCE MODULE - GM 4.3L GAS/LPG AND KUBOTA 3.8L DIESEL	5-110
RH CHASSIS WITH SEAT BELT SEQUENCE MODULE - KUBOTA DIESEL (3.6L)	5-128
SEALED ALTERNATOR - GM 4.3L GASOLINE AND LPG	5-154
TRANSMISSION - SINGLE SPEED	5-158
TRANSMISSION - DUAL SPEED	5-160
TYPE S ALTERNATOR	5-162
WIRE HARNESS (ENGINE)	
GM 4.3L LPG	5-82
WIRE HARNESS FOUR FUNCTION	
ELECTRONIC CONTROL VALVE - WITH VARIABLE DISPLACEMENT PUMP	5-80
WIRE HARNESS THREE FUNCTION	
ELECTRONIC CONTROL VALVE - WITH VARIABLE DISPLACEMENT PUMP	5-78

ABBREVIATIONS QUICK REFERENCE SHEET

Listed below are abbreviations used in parts manuals to denote the following expressions:

TERM	DEFINITION	TERM	DEFINITION
Amp	Amperes	FRE	Freezer Environment
AR	As Required	in.	inches
BDI	Battery Discharge Indicators	LPG	Liquefied Petroleum Gas
BWI	Brush Wear Indicator	MAP	Manifold Absolute Pressure
CE	Communicator End	mm	millimeters
CRE	Corrosive Environment	MSTS	Microprocessor Spark Timing System
D/B	Date Break	NPT	National Pipe Threads
dbA	Decibel "A" Scale	O/S	Oversize
DE	Drive End	PTO	Power Take Off
ECH	Empty Container Handler	RPM	Revolutions per Minute
ECH-3	Empty Container Handler - 3 High Stacking	S/N	Serial Number
ECH-4	Empty Container Handler - 4 High Stacking	TMM	Truck Management Module
ECH-5	Empty Container Handler - 5 High Stacking	UL Type D	Diesel-Powered Safety Rating
ECH-6	Empty Container Handler - 6 High Stacking	UL Type DS	Diesel-Powered Safety Rating
ECH-7	Empty Container Handler - 7 High Stacking	UL Type E	Battery-Powered Safety Rating
ECM	Electronic Control Module	UL Type EE	Battery-Powered Safety Rating
ECN	Engineering Change Notice	UL Type ES	Battery-Powered Safety Rating
EEPROM	Electrically Erasable Programmable Read Only Memory	UL Type G	Gasoline-Powered Safety Rating
EPA	US Environmental Protection Agency	UL Type GS	Gasoline-Powered Safety Rating
EPROM	Electrically Programmable Read Only Memory	UL Type LP	Gas-Powered Safety Rating
		UL Type LPS	LP Gas-Powered Safety Rating
		U/S	Undersize
		UL	Underwriters Laboratory
		V	Volts

HOW TO USE THE ILLUSTRATED PARTS MANUAL

This parts manual describes and illustrates assemblies, subassemblies, and detail parts needed for service replacement.

The different constructions are indicated by keys and footnotes. The callouts correspond to descriptions found on the next page.

HYSTER UNIT CODE D001 NORTH AMERICA 06/2001

TABLE OF CONTENTS

DESCRIPTION	PAGE
AIR INTAKE AND FILTER DIESEL (⇒ D/B 11/98)	3-22
AIR INTAKE AND FILTER DIESEL (D/B 11/96 ⇒)	
AIR INTAKE AND FILTER GASOLINE AND LPG	
ALTERNATOR GASOLINE, LPG, AND DIESEL	
ALTERNATOR TYPES GS, LPS, AND DS	
AUXILIARY FUNCTION TUBE TWO AND THREE STAGE FULL F	

SECTION 13 NUMERICAL INDEX

PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.
142	3-4	19	10-13	25		11-27	29	12-31	12		
12445	3-32	19	10-17	6		11-31	25	16719	3-36	5	
	3-34	1	10-27	11		11-32	37	16751	3-16	27	
			11-11	6	16485	8-4	29	16849	3-34	21	
			12-21	11		8-4	45		3-38	20	
			14	13		8-8	34	16863	3-28	17	
			12	6		9-7	9	16865	3-6	18	
			3	17		9-7	19	16882	4-27	41	
			9	10		9-11	9		9-7	30	
			23	46		9-11	17		9-11	27	
			27	46		10-9	21		10-10	36	
			26	14		10-9	28		10-13	32	
			28	14		10-13	16		11-7	24	
			50	14		11-7	19		11-9	17	

SECTIONS

- 1
- 2
- 3
- 4
- 5 BRAKE/ACC
- 6
- 7 MAST-TWO STAG
- 8 MAST-THREE ST
- 9 MAST-TWO ST
- 10
- 11

TRANSMISSION HOUSING ⇒ S/N D001H-2628

KEY:
A: Diesel
B: Gasoline and LPG

ITEM	PART NO.	DESCRIPTION	QTY	
			A	B
1	202547	Transmission	1	1
2	2023329	Transmission	1	1
3	2021670	Case	2	2
4	2023418	Bearing Cap	4	4
5	296429	Washer	4	4
6	293947	Bolt	1	1
7	2021390	Cover	2	2
8	1371656	Colter Pin	4	4
9	2021915	O-Ring	1	1
10	2021329	Plug	4	4
11	2021675	Housing	22	22
12	2021336	Pin	39	39
13	287860	Lockwasher	1	1
14	292682	Hydraulic Pump ⇒ Figure 5-3	1	1
15	2021345	Gasket	1	1
16	214364	Bolt	8	8
17	296418	Washer	1	1
18	2021388	Temperature Switch	1	1
19	2021389	Breather	9	9
20	2021383	Dipstick	9	9
21	292515	Bolt	2	2
22	136692	Nut	3	3
23	292527	Bolt	3	2
24	292531	Capscrew	4	4
25	292583	Lockwasher	4	4
26	293637	Bolt	4	4
	296420	Washer	1	1
	996403	Transmission Kit (Includes Item 7)	1	1
	996405	Transmission Kit (Includes Item 14)	1	1

This Parts Manual is divided into 11 major sections which are listed above. Quick be made by placing the right thumb on the tab of the desired section, bending the pages to the corresponding tab.

©Copy Right Date HYSTER COMPANY See Service Manual for service procedures. 5-15

HP990004

HOW TO FIND THE DESIRED PART NUMBER

WHEN THE PART NUMBER AND THE NEXT HIGHER ASSEMBLY IS NOT KNOWN:

1. Determine the function and application of the part required. Turn to the Sections Page. Choose the general area of reference most likely to include the part.
2. Turn to the section you chose. Use the Section Table of Contents to determine the assembly which would normally contain the part required. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS NOT KNOWN AND THE NEXT HIGHER ASSEMBLY IS KNOWN:

3. Determine the assembly the required part is used on. Turn to the Table of Contents (Page i).
4. Locate the assembly the required part is used on and turn to the page indicated for that assembly. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS KNOWN:

5. Use the Numerical Index (Page 16-1) to find the part number. Turn to the page listed and locate the part as indicated by the item number.

GENERAL:

The assembly breakdowns include part numbers, descriptions, quantities required, keys and footnotes to help in selecting correct parts.

6. Parts Supersession Information. Part numbers that have this history will be displayed in the parts list in the order that they were superseded (from oldest to newest). The superseded part numbers will be shown with a line through them.

Five periods in the PART NO. column (.) indicate that the part is either *Not Serviced Separately* or there is a reference to another figure. A figure reference is denoted by a pointing hand followed by a figure number in the DESCRIPTION column (☞ Figure 10)

7. Keys are used to show two or more similar assemblies, RH and LH assembly parts, etc. Select the appropriate key, "A", "B", "C", "D", or "E" and the corresponding quantity column to find the required parts. Two periods in the QTY column (..) indicate that the part is not used for that assembly.
8. Indented descriptions under the DESCRIPTION column are used to indicate assemblies and

subparts of assemblies. In the example on the previous page, *BEARING CAP* (Item 2) is a subpart of the major assembly *CASE*.

9. Quantities shown are for one assembly. The quantities of the subpart *BEARING CAP* are indicated as two and two. This means two per *CASE* assembly.
10. Serial number breaks identify the most current parts information and are shown as follows:
 - **S/N D001H2628**
Indicates last serial number affected.
 - S/N D001H2629** →
Indicates the first serial number affected.
 - S/N D001H1553** ↔ **S/N D001H3291**
Indicates a range of serial numbers affected.

ECN numbers for pending serial numbers are shown to allow for the inclusion of the most current parts information and are identified as follows:

→ **S/N Pending Per ECN 63243**

Indicates a pending serial number for last unit affected.

S/N Pending Per ECN 63243 →

Indicates a pending serial number for first unit affected.

Date breaks are used to indicate when a change occurred but a subsequent serial number break was not recorded. This is an arbitrary date usually based on the ECN release and are identified as follows:

→ **D/B 3/00**

Indicates that a change occurred sometime within that month for the item affected.

D/B 3/00 →

Indicates that a change occurred sometime within that month for the item affected.

D/B 3/00 ↔ **D/B 4/00**

Indicates a range of production dates of the item affected.

Contact your local dealer for Hyster lift trucks for serial number information for items with a ECN or a date break.

ORDERING PARTS:

When ordering replacement parts, give the unit serial number, part number, name of part and quantity required.

For any further information on parts, service, or ordering, consult your local dealer for Hyster lift trucks.