

# **310SL HL and 410L Backhoe Loader Operation and Test**

**(PIN: 1T0310HL\_\_F273920— )**

**(PIN: 1T0410LX\_\_F273920— )**

## **OPERATION & TEST TECHNICAL MANUAL**

**310SL HL and 410L Backhoe Loader**

**TM13299X19 10MAY19 (ENGLISH)**


**Worldwide Construction  
And Forestry Division**  
PRINTED IN U.S.A.

# Introduction

## Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When this symbol is seen on the machine or in this manual, be alert for the potential of personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and test sections help to quickly identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

MM16284,00026ED -19-17SEP18-1/1

## Manual Identification—READ THIS FIRST!

**IMPORTANT:** Use only supporting manuals designated for your specific machine. If incorrect manual is chosen, improper service may occur. Verify product identification number (PIN) when choosing the correct manual.

 
### Choosing the Correct Supporting Manuals

John Deere backhoe loaders are available in different machine configurations based on the various markets into which they are sold. Different supporting manuals exist for different machine configurations.


When necessary, product identification numbers are listed on the front covers of backhoe loader manuals. These numbers are used to identify the correct supporting manual for your machine.

### Product Identification Number

The product identification number (PIN) plate (1) is located on left side of machine on the loader frame. Each machine has a 17-character PIN (2) shown on PIN plate.

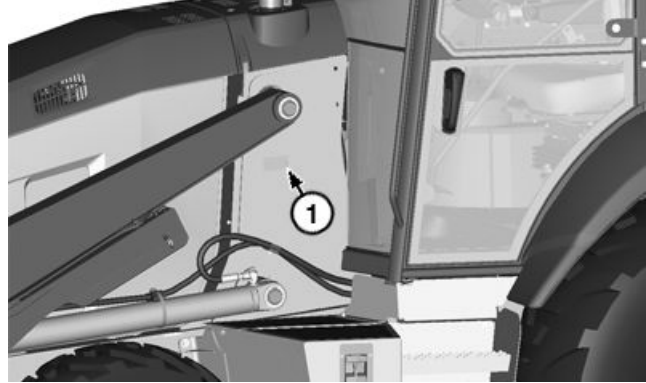

*PIN Plate Location*

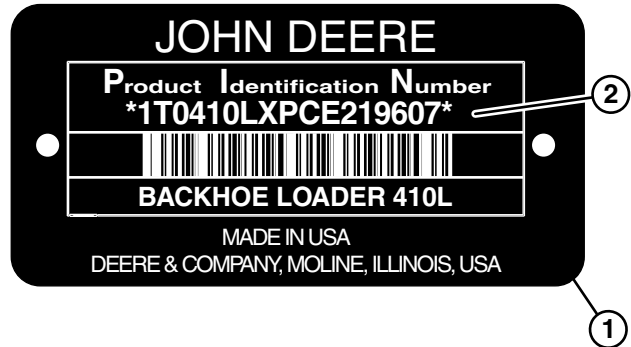 

*Example of PIN Plate*

1— PIN Plate

2— 17-Character PIN

TX1171862 —UN—17DEC14

TX1171648 —UN—11SEP14

The PIN identifies the producing factory, machine model number, machine option, year of manufacture, engine emission level, and machine serial number.

The following is an example for a machine that meets Final Tier 4 and Stage IV emission levels:

17-Character PIN Examples																
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
1	T	0	4	1	0	L	X	_	_	F	1	2	3	4	5	6

- **(1—3) World Code:** Identifies location where machine is manufactured.

**1T0** ..... **World Code** (manufacturing location)  
 1DW ..... Davenport Works  
 1T8 ..... Thibodaux Works  
 1T0 ..... Dubuque Works

- **(4—8) Machine Model and Series Identifier:** Identifies model number and series.

**410L** ..... **Machine Model and Series Identifier**  
**310SL** ..... **Machine Model and Series Identifier**

*NOTE: Characters 7—8 identify series and major machine configuration options. These characters will change from one machine to another.*

**X** ..... **Machine Option Code**  
 X ..... Base Machine

- **(9) Check Letter:** This is a random character assigned by the factory. This is not used in machine identification.

\_ ..... **Check Letter** (variable)

- **(10) Manufacturing Year Code:** Identifies year of machine manufacture.

\_ ..... **Manufacturing Year Code** (variable)  
 E ..... 2014  
 F ..... 2015  
 G ..... 2016  
 H ..... 2017

- **(11) Engine Emission Code:** Represents engine emission certification.

**F** ..... **Engine Emission Code**  
 C ..... Tier 2 and Stage II  
 D ..... Tier 3 and Stage III A  
 E ..... Interim Tier 4 and Stage III B  
 F ..... Final Tier 4 and Stage IV

- **(12—17) Machine Serial Number:** Identifies machine serial number. This character will change from one machine to another.

**123456** ..... **Machine Serial Number**

# Contents

## Section 9000—General Information

Group 01—Safety

## Section 9001—Diagnostics

Group 01—General Information

Group 10—Engine Control Unit (ECU) Diagnostic  
Trouble Codes

Group 20—Standard Display Monitor (SDM) Diagnostic  
Trouble Codes

Group 30—Transmission Control Unit (TCU) Diagnostic  
Trouble Codes

Group 40—Vehicle Control Unit (VCU) Diagnostic  
Trouble Codes

Group 50—Auxiliary Valve Controller (AVC) Diagnostic  
Trouble Codes

Group 60—Sealed Switch Module (SSM) Diagnostic  
Trouble Codes

Group 70—Vehicle Control Unit 2 (VC2) Diagnostic  
Trouble Codes

## Section 9005—Operational Checkout Procedure

Group 10—Operational Checkout Procedure

## Section 9010—Engine

Group 05—Theory of Operation

Group 10—System Diagrams

Group 15—Diagnostic Information

Group 20—Adjustments

Group 25—Tests

## Section 9015—Electrical System

Group 05—Theory of Operation

Group 10—System Diagrams

Group 15—Diagnostic Information

Group 16—Monitor Operation

Group 17—Diagnostic Test Box

Group 20—Adjustments

Group 25—Tests

## Section 9020—Power Train

Group 05—Theory of Operation

Group 10—System Diagrams

Group 15—Diagnostic Information

Group 20—Adjustments

Group 25—Tests

## Section 9025—Hydraulic System

Group 05—Theory of Operation

Group 10—System Diagrams

Group 15—Diagnostic Information

Group 20—Adjustments

Group 25—Tests

## Section 9031—Heating and Air Conditioning

Group 05—Theory of Operation

Group 10—System Diagrams

Group 15—Diagnostic Information

Group 25—Tests

*Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication.*

*The right is reserved to make changes at any time without notice.*

COPYRIGHT © 2019  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved.  
A John Deere ILLUSTRATION™ Manual  
Previous Editions  
Copyright © 2017, 2018

**Thanks very much for your reading,  
Want to get more information,  
Please click here, Then get the complete  
manual**

**JustClickHere** 

**NOTE:**

**If there is no response to click on the link above,  
please download the PDF document first, and then  
click on it.**

**Have any questions please write to me:  
[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**



## Section 9000 General Information

### Contents

	Page		Page
<b>Group 01—Safety</b>			
Recognize Safety Information .....	9000-01-1	Use Special Care When	
Follow Safety Instructions.....	9000-01-1	Operating.....	9000-01-16
Operate Only If Qualified .....	9000-01-1	Park and Prepare for Service	
Wear Protective Equipment.....	9000-01-2	Safely.....	9000-01-16
Protect Against Noise.....	9000-01-2	Service Cooling System Safely .....	9000-01-17
Avoid Unauthorized Machine		Service Accumulator Systems	
Modifications.....	9000-01-2	Safely.....	9000-01-17
Control Pattern .....	9000-01-2	Remove Paint Before Welding or	
Inspect Machine .....	9000-01-3	Heating .....	9000-01-17
Stay Clear of Moving Parts.....	9000-01-3	Make Welding Repairs Safely .....	9000-01-18
Avoid High-Pressure Fluids .....	9000-01-3	Drive Metal Pins Safely .....	9000-01-18
Avoid High-Pressure Oils .....	9000-01-4	Service Tires Safely.....	9000-01-19
Work In Ventilated Area.....	9000-01-4	Clean Exhaust Filter Safely .....	9000-01-20
Avoid Static Electricity Risk When			
Refueling .....	9000-01-5		
High Debris Applications .....	9000-01-5		
Prevent Fires .....	9000-01-6		
In Case of Machine Fire .....	9000-01-6		
Prevent Battery Explosions .....	9000-01-7		
Handle Chemical Products Safely.....	9000-01-7		
Decommissioning — Proper			
Recycling and Disposal of Fluids			
and Components .....	9000-01-8		
Exhaust Filter Ash Handling and			
Disposal.....	9000-01-8		
Prepare for Emergencies.....	9000-01-8		
Clean Debris from Machine.....	9000-01-9		
Add Cab Guarding for Special			
Uses .....	9000-01-9		
Handle Starting Fluid Safely .....	9000-01-9		
Use Steps and Handholds			
Correctly .....	9000-01-9		
Start Only From Operator's Seat.....	9000-01-10		
Use and Maintain Seat Belt.....	9000-01-10		
Prevent Unintended Machine			
Movement.....	9000-01-10		
Prevent Unintended Machine			
Movement—If Equipped With			
Pilot Controls .....	9000-01-10		
Avoid Work Site Hazards.....	9000-01-11		
Keep Riders Off Machine .....	9000-01-11		
Avoid Backover Accidents .....	9000-01-12		
Avoid Machine Tipover .....	9000-01-12		
Operate Boom With Care .....	9000-01-13		
Avoid Power Lines.....	9000-01-13		
Operating on Slopes.....	9000-01-13		
Operating or Traveling On Public			
Roads .....	9000-01-14		
Inspect and Maintain ROPS .....	9000-01-14		
Travel Safely.....	9000-01-14		
Prevent Acid Burns.....	9000-01-15		
Add and Operate Attachments			
Safely.....	9000-01-15		





## Recognize Safety Information

**This is the safety alert symbol. When you see this symbol on your machine or in this manual, be alert for the potential of personal injury.**

Follow the precautions and safe operating practices highlighted by this symbol.

A signal word — DANGER, WARNING, or CAUTION — is used with the safety alert symbol. DANGER identifies the most serious hazards.

On your machine, DANGER signs are red in color, WARNING signs are orange, and CAUTION signs are yellow. DANGER and WARNING signs are located near specific hazards. General precautions are on CAUTION labels.



TX,RECOGNIZE -19-28JUN10-1/1

T133555 —UN—15APR13

T133588 —19—28AUG00

## Follow Safety Instructions

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Use this operator's manual for correct safety sign placement. Be sure that new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

There can be additional safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine could impair the function or safety and affect machine life.



If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

TX,FOLLOW -19-20JAN11-1/1

TS201 —UN—15APR13

## Operate Only If Qualified

Do not operate this machine unless the operator's manual has been read carefully, and you have been qualified by supervised training and instruction.

Operator should be familiar with the job site and surroundings before operating. Try all controls and

machine functions with the machine in an open area before starting to work.

Know and observe all safety rules that may apply to every work situation and work site.

TX,QUALIFIED -19-18JAN11-1/1

 
### Wear Protective Equipment

Guard against injury from flying pieces or metal or debris; wear goggles or safety glasses.

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

Prolonged exposure to loud noise can cause impairment or loss of hearing. Wear suitable hearing protection such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises. Radio or music headphones are not suitable to use for hearing protection.

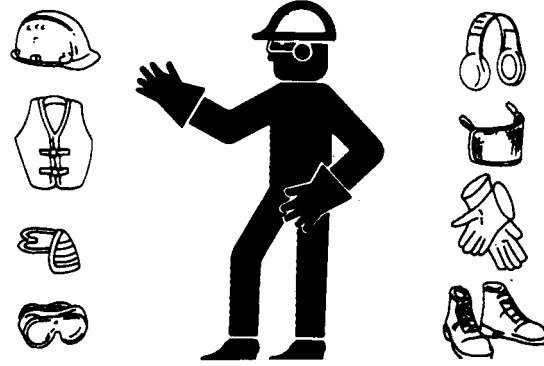

TS206—UN—15APR13

TX,WEAR,PE -19-22SEP10-1/1

### Protect Against Noise

There are many variables that affect the sound level range, including machine configuration, condition and maintenance level of the machine, ground surface, operating environmental, duty cycles, ambient noise, and attachments.

Exposure to loud noise can cause impairment or loss of hearing.

**Always wear hearing protection.** Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.



TS207—UN—23AUG88

DX,NOISE -19-03OCT17-1/1

### Avoid Unauthorized Machine Modifications

John Deere recommends using only genuine John Deere replacement parts to ensure machine performance. Never substitute genuine John Deere parts with alternate parts not intended for the application as these can create hazardous situations or hazardous performance. Non-John Deere parts, or any damage or malfunctions resulting from their use, are not covered by any John Deere warranty.

Modifications to this machine or addition of unapproved products or attachments may affect machine stability or

reliability and may create a hazard for the operator or others near the machine. The installer of any modification that may affect the electronic controls of this machine is responsible for establishing that the modification does not adversely affect the machine or its performance.

Always contact an authorized dealer before making machine modifications that change the intended use, weight, or balance of the machine or that alter machine controls, performance, or reliability.

KR46761,00010A9 -19-19FEB19-1/1

### Control Pattern

The control functions are described as they are arranged when the machine leaves the factory. Some control

functions can be changed to suit particular operating situations. Ensure that the operator is aware of all of the functions before operating any of the controls.

OUTJ002,00004CA -19-30JUN16-1/1

### Inspect Machine

Inspect machine carefully each day by walking around it before starting.

Keep all guards and shields in good condition and properly installed. Fix damage and replace worn or broken parts immediately. Pay special attention to hydraulic hoses and electrical wiring.



T6607AQ —UN—15APR13

 
TX,INSPECT -19-08SEP10-1/1

### Stay Clear of Moving Parts

Entanglements in moving parts can cause serious injury.

Stop engine before examining, adjusting, or maintaining any part of machine with moving parts.

Keep guards and shields in place. Replace any guard or shield that has been removed for access as soon as service or repair is complete.

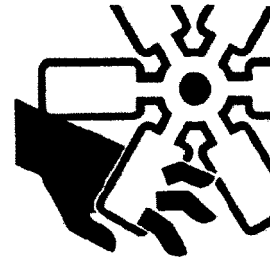

T133592 —UN—15APR13

TX,MOVING,PARTS -19-20JAN11-1/1


### Avoid High-Pressure Fluids

 Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high-pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

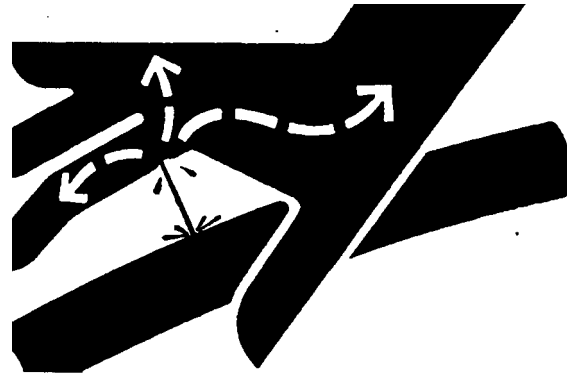

X9811 —UN—23AUG88


DX,FLUID -19-06OCT16-1/1

### Avoid High-Pressure Oils

 This machine uses a high-pressure hydraulic system. Escaping oil under pressure can penetrate the skin causing serious injury.

**Never search for leaks with your hands.** Protect hands. Use a piece of cardboard to find location of escaping oil. Stop engine and relieve pressure before disconnecting lines or working on hydraulic system.

**If hydraulic oil penetrates your skin, see a doctor immediately. Injected oil must be removed surgically within hours or gangrene could result.** Contact a knowledgeable medical source or the Deere & Company Medical Department in Moline, Illinois, U.S.A.

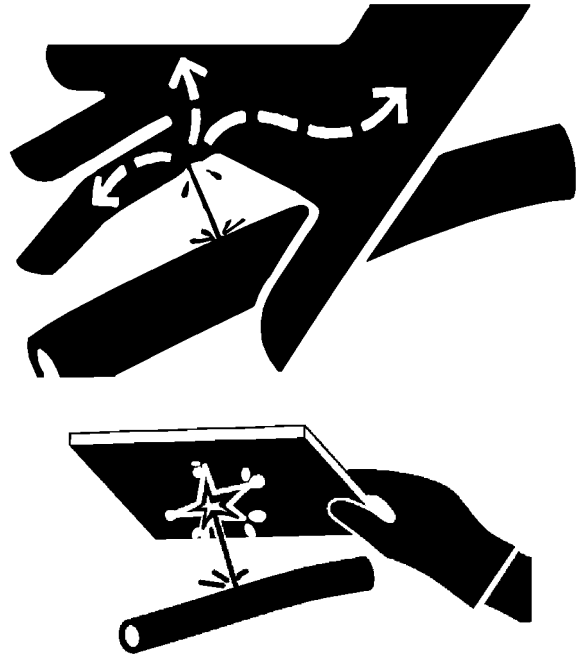

T133509 —UN—15APR13


T133840 —UN—20SEP00

TX,HPOILS -19-20JAN11-1/1

### Work In Ventilated Area

 Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

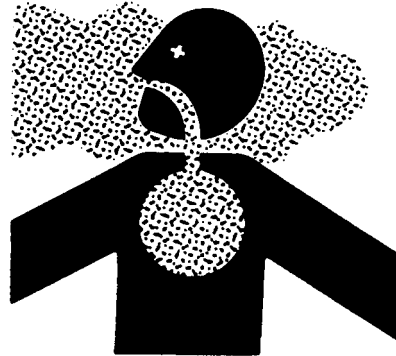

TS220 —UN—15APR13

DX,AIR -19-17FEB99-1/1


### Avoid Static Electricity Risk When Refueling

 The removal of sulfur and other compounds in Ultra-Low Sulfur Diesel (ULSD) fuel decreases its conductivity and increases its ability to store a static charge.

Refineries may have treated the fuel with a static dissipating additive. However, there are many factors that can reduce the effectiveness of the additive over time.

Static charges can build up in ULSD fuel while it is flowing through fuel delivery systems. Static electricity discharge when combustible vapors are present could result in a fire or explosion.

Therefore, it is important to ensure that the entire system used to refuel your machine (fuel supply tank, transfer pump, transfer hose, nozzle, and others) is properly grounded and bonded. Consult with your fuel or fuel system supplier to ensure that the delivery system is in compliance with fueling standards for proper grounding and bonding practices.

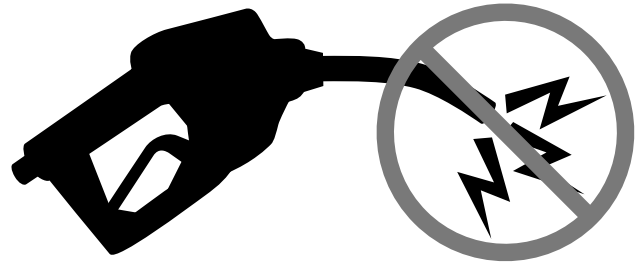

RG22142 —UN—17MAR14

RG21992 —UN—21AUG13

DX,FUEL,STATIC,ELEC -19-12JUL13-1/1

### High Debris Applications

Many operations create flammable debris such as mulching, shredding, recycling, and agricultural applications. Operating in such environments may require frequent cleaning of the machine and attachments. Frequency of cleaning will vary depending on a number of factors, including operating conditions and weather.



*Flammable Debris*

T133552 —UN—15APR13

MB60223,0005003 -19-29JUN16-1/1

## Prevent Fires

**Handle Fluids Safely:** All fuels, most lubricants, and some coolant mixtures are flammable. Store flammable fluids away from fire hazards. Never refuel machine while smoking or when near sparks or flame.

**Clean Machine Regularly:** Keep flammable debris (trash, leaves, twigs, straw, and so forth), grease and oil from accumulating in engine compartment, around fuel lines, hydraulic lines, exhaust components, and electrical wiring. Never store oily rags or flammable materials inside a machine compartment.

**Maintain Hoses, Tubes, and Wiring:** Replace hoses and tubes immediately if they begin to leak, and clean up any oil spills. Examine electrical wiring and connectors frequently for damage.

**Keep A Fire Extinguisher Available:** Always keep a multipurpose fire extinguisher on or near the machine. Know how to use an extinguisher properly.

 
**Be Aware of the Operating Environment:** Airborne debris may contain sparks or embers. Do not operate near any flame.



T133553 —UN—07SEP00



T133554 —UN—07SEP00

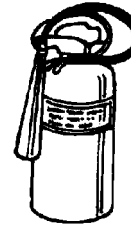

TX,PREVENT,FIRE -19-09JUN16-1/1

T133552 —UN—15APR13

## In Case of Machine Fire

**CAUTION:** Avoid personal injury from exposed flames. Maintain safe distance.

- Turn the engine off.
- Turn the battery disconnect switch to the OFF position (if equipped).
- If possible, fight the fire using the portable fire extinguisher or other fire suppression equipment (if equipped).
- Ensure that the fire does not spread to the surrounding area. Do not risk injury. If a fire is too far advanced, do not try to extinguish fire.
- Call for help.



*In Case of Machine Fire*

CN93077,00000B2 -19-05FEB19-1/1

TS227 —UN—15APR13

## Prevent Battery Explosions

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).

Keep battery electrolyte levels properly maintained.



Battery Explosions

KR46761,00010B4 -19-26JAN16-1/1

TS204—UN—15APR13

 
## Handle Chemical Products Safely

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)

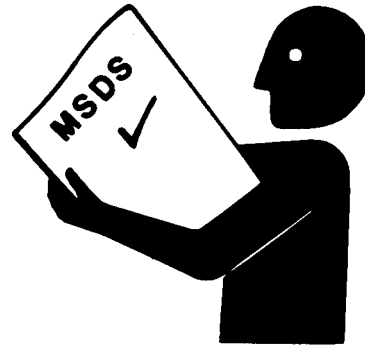

DX,MSDS,NA -19-03MAR93-1/1


TS1132—UN—15APR13



## Decommissioning — Proper Recycling and Disposal of Fluids and Components

 Safety and environmental stewardship measures must be taken into account when decommissioning a machine and/or component. These measures include the following:

- Use appropriate tools and personal protective equipment such as clothing, gloves, face shields or glasses, during the removal or handling of objects and materials.
- Follow instructions for specialized components.
- Release stored energy by lowering suspended machine elements, relaxing springs, disconnecting the battery or other electrical power, and releasing pressure in hydraulic components, accumulators, and other similar systems.
- Minimize exposure to components which may have residue from agricultural chemicals, such as fertilizers and pesticides. Handle and dispose of these components appropriately.
- Carefully drain engines, fuel tanks, radiators, hydraulic cylinders, reservoirs, and lines before recycling components. Use leak-proof containers when draining fluids. Do not use food or beverage containers.
- Do not pour waste fluids onto the ground, down a drain, or into any water source.
- Observe all national, state, and local laws, regulations, or ordinances governing the handling or disposal of waste fluids (example: oil, fuel, coolant, brake fluid);

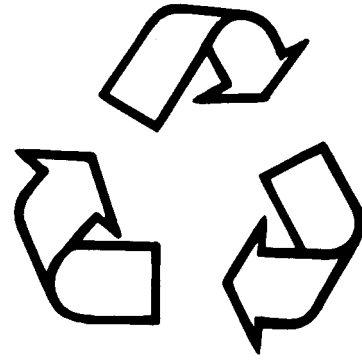

TS1133 —UN—15APR13

- filters; batteries; and, other substances or parts. Burning of flammable fluids or components in other than specially designed incinerators may be prohibited by law and could result in exposure to harmful fumes or ashes.
- Service and dispose of air conditioning systems appropriately. Government regulations may require a certified service center to recover and recycle air conditioning refrigerants which could damage the atmosphere if allowed to escape.
  - Evaluate recycling options for tires, metal, plastic, glass, rubber, and electronic components which may be recyclable, in part or completely.
  - Contact your local environmental or recycling center, or your John Deere dealer for information on the proper way to recycle or dispose of waste.

DX,DRAIN -19-01JUN15-1/1

## Exhaust Filter Ash Handling and Disposal

**CAUTION:** Under federal, state, and local laws or regulations, exhaust filter ash can be classified as a hazardous waste. Hazardous waste must be disposed of in accordance with all applicable federal, state, and local laws or regulations

governing hazardous waste disposal. Only a qualified service provider should remove ash from the exhaust filter. Personal protective equipment and clothing, maintained in a sanitary and reliable condition, should be used when handling and cleaning exhaust filter. See your authorized dealer for exhaust filter ash handling and disposal.

 
TX,ASH,DISP -19-20JAN11-1/1

## Prepare for Emergencies

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

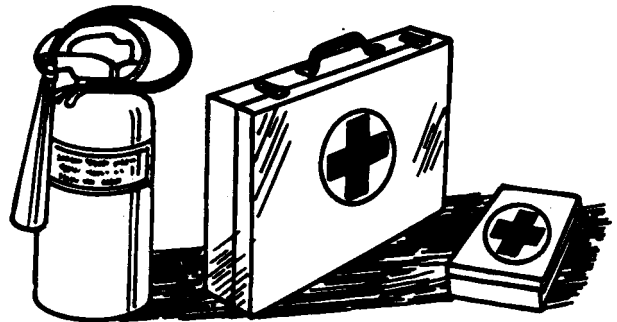

TS291 —UN—15APR13

DX,FIRE2 -19-03MAR93-1/1


### Clean Debris from Machine

 Keep engine compartment, radiator, batteries, hydraulic lines, exhaust components, fuel tank, and operator's station clean and free of debris.

Clean any oil spills or fuel spills on machine surfaces.

Temperature in engine compartment could go up immediately after engine is stopped. **BE ON GUARD FOR FIRES DURING THIS PERIOD.**

Open access door(s) to cool the engine faster, and clean engine compartment.

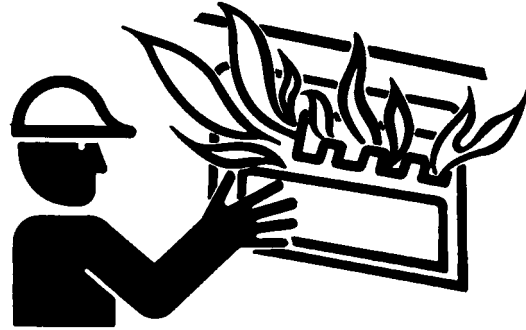

T6669AG —UN—15APR13

TX,DEBRIS -19-20JAN11-1/1

### Add Cab Guarding for Special Uses

Special work situations or machine attachments could create an environment with falling or flying objects. Working near an overhead bank, demolition work, using a hydraulic hammer or winch, working in a forestry application or wooded area, or working in a waste management application, for example, could require added guarding to protect the operator.

Additional level II FOPS (falling object protective structure), forestry protection packages, and special screens or guarding should be installed when falling or flying objects could enter or damage the machine. A rear screen should always be used with a winch to protect against a snapping cable. Before operating in any special work environments, follow the operator protection recommendations of the manufacturer of any specialized attachment or equipment. Contact your authorized John Deere dealer for information on protective guarding.

TX,CABGUARD -19-12FEB13-1/1

### Handle Starting Fluid Safely

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.

Do not use starting fluid on an engine equipped with glow plugs or an air intake heater.




TS1356 —UN—18MAR92

DX,FIRE3 -19-14MAR14-1/1

### Use Steps and Handholds Correctly

Prevent falls by facing the machine when you get on and off. Maintain 3-point contact with steps and handrails. Never use machine controls as handholds.

 Use extra care when mud, snow, or moisture present slippery conditions. Keep steps clean and free of grease or oil. Never jump when exiting machine. Never mount or dismount a moving machine.

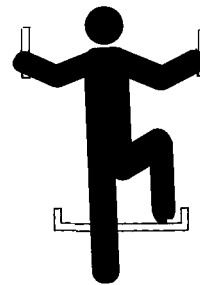

T133468 —UN—15APR13

TX,STEPS -19-09FEB11-1/1

### Start Only From Operator's Seat

Avoid unexpected machine movement. Start engine only while sitting in operator's seat. Ensure that all controls and working tools are in proper position for a parked machine.

Never attempt to start engine from the ground. Do not attempt to start engine by shorting across the starter solenoid terminals.



T133715 —UN—15APR13

TX,SOFOS -19-20JAN11-1/1

### Use and Maintain Seat Belt

**Use seat belt when operating machine.** Remember to fasten seat belt when loading and unloading from trucks and during other uses.

Examine seat belt frequently. Be sure that webbing is not cut or torn. Replace seat belt immediately if any part is damaged or does not function properly.

**The complete seat belt assembly should be replaced every three years, regardless of appearance.**



**USE  
SEAT  
BELT**

 
T133716 —19—17APR13

TX,SEAT,BELT -19-20JAN11-1/1

### Prevent Unintended Machine Movement

**Always set the park lock brake switch to the ON position (1) before leaving the operator's seat for any reason.**

Be careful not to accidentally actuate steering, travel or other controls. Engage park brake and lower work equipment to the ground during work interruptions. Stop the engine before allowing anyone to approach the machine. Follow proper parking procedures before leaving the operator's station.

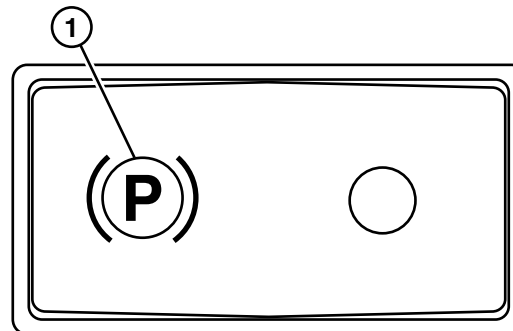


TX1014609 —UN—19DEC06

VD76477,0001204 -19-02FEB07-1/1

1— ON Position

### Prevent Unintended Machine Movement—If Equipped With Pilot Controls

 Be careful not to accidentally actuate control levers when co-workers are present. Always lock hydraulics on backhoe during work interruptions. Lock hydraulics before allowing anyone to approach machine.

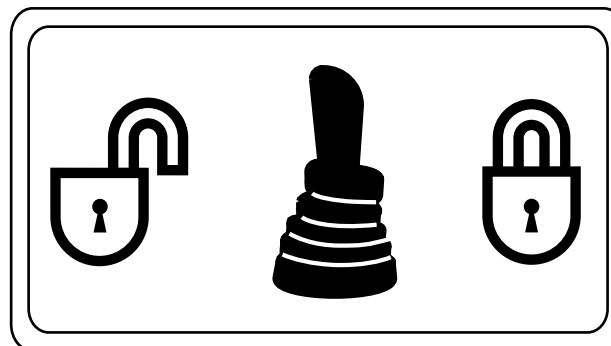

*Pilot Enable Switch*

TX1014474 —UN—12DEC06

VD76477,0001200 -19-05SEP12-1/1

## Avoid Work Site Hazards

**Avoid contact with gas lines, buried cables and water lines. Call utility line location services to identify all underground utilities before starting work.**

**Prepare work site properly.** Avoid operating near structures or objects that could fall onto the machine. Clear away debris that could move unexpectedly if run over.

 
**Avoid boom or attachment contact with overhead obstacles or overhead electrical lines.** Never move any part of machine or load closer than 3 m (10 ft) plus twice the line insulator length to overhead wires.

**Keep bystanders clear at all times.** Keep bystanders away from raised booms, attachments, and unsupported loads. Avoid swinging or raising booms, attachments, or loads over or near personnel. Use barricades or a signal person to keep vehicles and pedestrians away. Use a signal person if moving machine in congested areas or where visibility is restricted. Always keep signal person in view. Coordinate hand signals before starting machine.

**Operate only on solid footing** with strength sufficient to support machine. Be especially alert working near embankments or excavations.

**Avoid working under over-hanging embankments or stockpiles** that could collapse on machine.

**Reduce machine speed** when operating with tool on or near ground when obstacles may be hidden (e.g., during snow removal or clearing mud, dirt, etc.). At high speeds

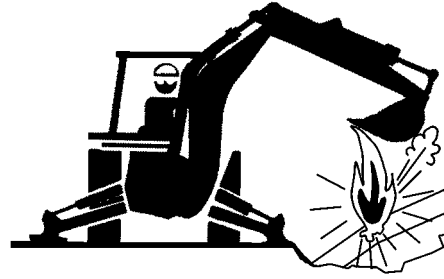

hitting obstacles (rocks, uneven concrete or manholes) can cause a sudden stop. Always wear your seat belt.

VD76477,00001C -19-03APR18-1/1

T147654—UN—01NOV01

T147655—UN—13DEC01

## Keep Riders Off Machine

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.



TX03768,0000BAF -19-27MAR09-1/1

T148715—UN—06DEC01

### Avoid Backover Accidents

**Before moving machine, be sure that all persons are clear of machine path.** Turn around and look directly for best visibility. Use mirrors to assist in checking all around machine. Keep windows and mirrors clean, adjusted, and in good repair.

**Be certain reverse warning alarm is working properly.**

**Use a signal person when backing if view is obstructed or when in close quarters.** Keep signal person in view at all times. Use prearranged hand signals to communicate.

Do not rely on the rear camera and radar object detection systems, if equipped, to determine if personnel are behind the machine. The system has limitations due to maintenance practices, environmental conditions, and operating range.



PC10857XW —UN—15APR13

TX,AVOID,BACKOVER -19-04MAR16-1/1

### Avoid Machine Tipover

**Use seat belt at all times.**

**Do not jump if the machine tips.** You will be unlikely to jump clear and the machine may crush you.

 
**Load and unload from trucks or trailers carefully.** Be sure truck is wide enough and secured on a firm level surface. Use loading ramps and attach them properly to truck bed.

**Be careful on slopes.** Use extra care on soft, rocky or frozen ground because machine may slip sideways in these conditions.

**Ensure solid footing.** Use extra care when operating on stockpile materials, or near banks or excavations that may cave-in and cause machine to tip or fall.



**USE  
SEAT  
BELT**

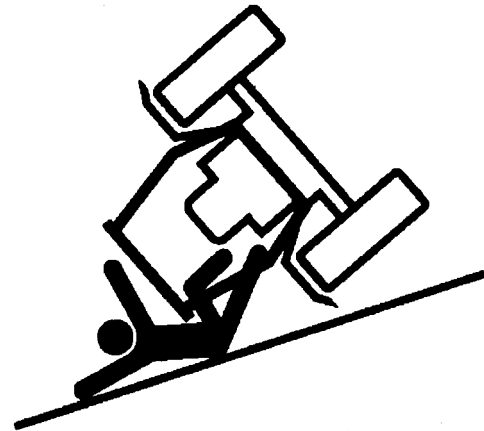

T147495 —19—26OCT01

TX03768.0000BA3 -19-07SEP06-1/1

### Operate Boom With Care

Always lower the boom so that the attachment is securely supported when operation is stopped.

When moving the machine, watch that enough clearance is available on both sides and above the boom. Extra clearance may be required, particularly where the ground is uneven.

Maintain a safe operating distance between the equipment and other personnel. Never swing boom, stick, attachment, or load elevated above the heads of bystanders.

Use only prearranged and approved signaling practices.



Operate Boom With Care

T147349 —UN—24OCT01

KR46761,00011B8 -19-28JUN16-1/1

 
### Avoid Power Lines

**CAUTION:** Power lines carrying more than 50 000 volts require a safety distance of 10 ft (3 m) plus 1/2 in (13 mm) for each additional 1000 volts above the 50 000 volt level.

Approach with caution areas where overhanging telephone or electric power lines are present. Serious injury or death by electrocution can result if the machine or any of its attachments are not kept a safe distance from high-voltage electric power lines.

Maintain a distance of 10 ft (3 m) between the machine, boom, stick, and any power line carrying up to 50 000 volts or less.

If state/province, local, or job site regulations require even greater safety distances than stated above, adhere strictly to these regulations for personal protection.

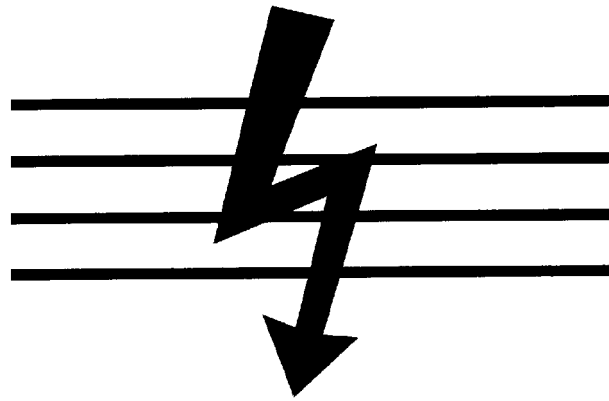

Avoid Power Lines

T147350 —UN—24OCT01

KR46761,00011B9 -19-28JUN16-1/1

### Operating on Slopes

Avoid side slope travel whenever possible. Drive up steep slope in forward and down in reverse.

Select low gear speed before starting down slope. The grade of the slope will be limited by ground condition and load being handled.

 
 
Use service brakes to control speed. Sudden brake application with a loaded bucket on downhill side could cause machine to tip forward.

JG33441,0000137 -19-27MAR15-1/1

### Operating or Traveling On Public Roads

Machines that work near vehicle traffic or travel slower than normal highway speeds must have proper lighting and markings to assure they are visible to other drivers.

Install additional lights, beacon lights, slow moving vehicle (SMV) emblems, or other devices and use as required to make the machine visible and identify it as a work machine. Check state and local regulations to assure compliance. Keep these devices clean and in working condition.

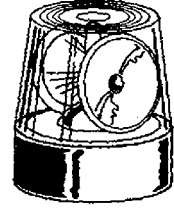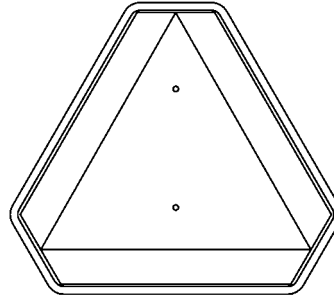

T141891 —UN—15APR13

TX,ROADS -19-20JAN11-1/1

### Inspect and Maintain ROPS

A damaged rollover protective structure (ROPS) should be replaced, not reused.

The protection offered by ROPS could be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting.

If ROPS was loosened or removed for any reason, inspect it carefully before operating the machine again.

To maintain the ROPS:

- Replace missing hardware using correct grade hardware.
- Check hardware torque.
- Check isolation mounts for damage, looseness, or wear; replace them if necessary.
- Check ROPS for cracks or physical damage.

TX,ROPS -19-20JAN11-1/1

### Travel Safely

When working on steep slopes, travel as straight up and down as possible to prevent roll over.

 
#### **DO NOT PARK ON A HILLSIDE OR AN INCLINE.**

Always park the machine on level ground.

Know the location of bystanders before moving the machine.

Always keep the reverse/travel warning alarm in working condition. The alarm warns bystanders when the machine starts to move in reverse.

Use a signal person when moving the machine in congested areas. Coordinate hand signals before starting the machine.

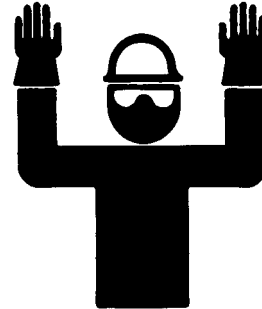

Travel Safely

T6964AD —UN—20DEC88

KR46761,00010AB -19-05FEB19-1/1