

**Series 400
6076
Diesel Engines
Serial Number
(500000-)**



JOHN DEERE

COMPONENT TECHNICAL MANUAL
Series 400 6076 Diesel Engines Serial
Number (500000-)

CTM42 (24MAR95) English

Deere Power Systems Group
CTM42 (24MAR95)

LITHO IN U.S.A.
ENGLISH



Introduction

FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Use this component technical manual in conjunction with the machine technical manual. An application listing in the introduction identifies product-model/component type-model relationship. See the machine technical manual for information on component removal and installation, and gaining access to the components.

This manual is divided in two parts: repair and operation and tests. Repair sections contain

necessary instructions to repair the component. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Component Technical Manuals are concise service guides for specific components. Component technical manuals are written as stand-alone manuals covering multiple machine applications.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

JOHN DEERE ENGINE OWNER:

Don't wait until you need warranty or other service to meet your local John Deere Engine Distributor or Service Dealer.

Learn who he is and where he is. At your first convenience, go meet him. He'll want to get to know you and to learn what your needs might be.

UTILISATEURS DE MOTEURS JOHN DEERE:

N'attendez pas d'être obligé d'avoir recours à votre Concessionnaire ou Point de Service le plus proche pour vous adresser à lui.

Renseignez-vous dès que possible pour l'identifier et le localiser. A la première occasion, prenez contact avec lui et faites-vous connaître. Il sera lui aussi heureux de faire votre connaissance et de savoir que vous pourrez compter sur lui le moment venu.

AN DEN BESITZER DES JOHN DEERE MOTORS:

Warten Sie nicht auf einen evt. Reparaturfall um den nächstgelegenen John Deere Händler kennen zu lernen.

Machen Sie sich bei ihm bekannt und nutzen Sie sein "Service Angebot".

PROPRIETARIO DEL MOTORE JOHN DEERE:

Non aspetti fino a quando ha bisogno della garanzia o di un altro tipo di assistenza per incontrarsi con il Suo Concessionario che fornisce l'assistenza tecnica.

Impari a conoscere chi è e dove si trova. Alla Sua prima occasione cerchi d'incontrarlo. Egli desidera farsi conoscere e conoscere le Sue necessità.

PROPIETARIO DE EQUIPO JOHN DEERE:

No espere hasta necesitar servicio de garantía o de otro tipo para conocer a su Distribuidor de Motores John Deere o al Concesionario de Servicio.

Entérese de quién es, y dónde está situado. Cuando tenga un momento, vaya a visitarlo. A él le gustará conocerlo, y saber cuáles podrían ser sus necesidades.

JOHN DEERE MOTORÄGARE:

Vänta inte med att besöka Din John Deere återförsäljare till dess att Du behöver service eller garanti reparation.

Bekanta Dig med var han är och vem han är. Tag första tillfälle att besöka honom. Han vill också träffa Dig för att få veta vad Du behöver och hur han kan hjälpa Dig.



Dealer Presentation Sheet

JOHN DEERE DEALERS

IMPORTANT: The changes listed below make your current CTM obsolete. Discard CTM42, dated 02 NOV 92. Please copy this page and route through your service department.

- Engine application charts updated to include the latest product models. See ENGINE APPLICATION CHART in Group 01.
- Engine coolant information revised. See ENGINE COOLANT RECOMMENDATIONS in Group 02.
- Recommendation to use ONLY JDG23 Lifting Sling and Deere provided lifting straps for lifting engines. Also recommend the use of SAE Grade 8 or higher grade cap screws and Loctite 242 when installing engine lifting straps added to Group 03.
- New “TORQUE-TO-YIELD” instructions for tightening cylinder head cap screws marked “SPECIAL” added to Group 05.
- Valve lift specifications revised in Group 05 and Group 16.
- Piston ring end gap specifications for new pistons have been added to Group 10.
- A revised (longer) JDG681A Tap for cleaning deeper tapped cylinder head cap screw holes in block added to Group 10.
- Use of JDG796 Alignment Tool for installing crankshaft rear oil seal housing added to Group 15.
- Detailed instructions for inspection of the vibration damper and the crankshaft dowel pin added to Group 15.
- Timing gear cover and rear oil seal housing replacement procedures for 6076HRW33, 34, and 35 Engines (equipped with structural front frame/oil sump), with engine installed in vehicle added to Group 15.
- Camshaft lobe lift specifications and valve lift specifications revised in Group 16.
- Recommendation against disassembly of the engine oil pump added to Group 20.
- Instructions for installation of structural front frame/oil sump on engines used in 8000 series tractors added to Group 20.
- Information and specifications for fan drive assembly with press-fit fan spacer added to Group 25.
- Torque specifications for turbocharger oil inlet line added to Group 30.
- Information to help identify A-Series and P-Series fuel injection pumps and fuel supply pumps added to Group 35.
- Instructions for disassembly and assembly of the fuel check valve deleted from Group 35. The check valve has been replaced by a non-serviceable assembly.
- In Group 100 — Engine Tune-Up and Break-In, the paragraph titled ALTITUDE COMPENSATION GUIDELINE changed to EFFECTS OF TEMPERATURE AND ALTITUDE ON ENGINE PERFORMANCE.
- In Group 105, the recommended temperatures and engine speeds for checking engine oil pressure revised. The procedure to pressure test the cooling system and radiator cap also revised.
- Dynamic timing procedure using TIME TRAC® timing kit to accurately check and adjust (rotary) injection pump-to-engine timing added to Group 115.
- Instructions and specifications for check and adjustment of the fuel shut-off solenoid added to Group 115.
- Instructions for changing 6076 generator set engines with mechanical governor from rated speed of 1800 RPM (60 Hz) to 1500 RPM (50 Hz) added to Group 115.

TIME TRAC® is a registered trademark of Stanadyne Automotive Corp.

RG,CTM42,DPS -19-21MAR95

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

ABOUT THIS MANUAL

This component technical manual covers the recommended repair procedure for 6076, 7.6 L (466 cu. in.) diesel engines produced in Waterloo, Iowa beginning with Engine Serial No. (500000—).

Before beginning repair of an engine, clean the engine and mount on a repair stand. (See Group 03 - Engine Mounting.)

Direction of engine crankshaft rotation in this manual is referenced facing the flywheel looking toward the fan. Front of engine is fan drive end.

Some components of this engine may be serviced without removing the engine from the machine. Refer to the specific machine technical manuals for information on components that can be serviced without removing the engine from the machine and for engine removal and installation procedures.

Read each module completely before performing any service.

Contents

	Page		Page
Group 00—Safety			
Safety	00-1	Group 04—Engine Rebuild Guide	
Group 01—General Information			
Unified Inch Bolt and Cap Screw Torque		6076 Engine Disassembly Sequence	04-1
Values	01-1	Sealant Application Guidelines	04-2
Metric Bolt and Cap Screw Torque		6076 Engine Assembly Sequence	04-4
Values	01-2	Group 05—Cylinder Head and Valves	
Engine Model Designation	01-3	Special or Essential Tools	05-1
Engine Serial Number Plate Information	01-4	Service Equipment and Tools	05-3
Engine Application Chart	01-5	Other Material	05-4
Engine Application Chart	01-6	Cylinder Head and Valves Specifications	05-5
Group 02—Fuels, Lubricants, and Coolant			
Diesel Fuel	02-1	Check and Adjust Valve Clearance	05-7
Lubricity of Diesel Fuels	02-1	Check Valve Lift	05-9
Engine Break-In Oil	02-2	Remove Cylinder Head	05-10
Engine Oil	02-3	Disassemble and Inspect Rocker Arm	
Oilscan and Coolscan	02-4	Shaft Assembly	05-12
Grease	02-4	Assemble Rocker Arm Shaft Assembly	05-14
Alternative and Synthetic Lubricants	02-5	Measure Valve Recess	05-14
Engine Coolant Requirements	02-5	Preliminary Cylinder Head and Valve	
Recommended Engine Coolant	02-7	Checks	05-15
Engine Coolant Specifications	02-8	Remove Valve Assembly	05-16
Replenish Supplemental Coolant		Inspect and Measure Valve Springs	05-17
Additives Between Coolant Changes	02-10	Inspect Valve Rotators and Wear Caps	05-17
Operating in Tropical Conditions	02-11	Clean Valves	05-18
Flush and Service Cooling System	02-12	Inspect and Measure Valves	05-18
Disposing of Coolant	02-13	Grind Valves	05-19
Group 03—Engine Mounting			
Engine Repair Stand	03-1	Inspect and Clean Cylinder Head	05-19
Safety Precautions	03-2	Check Cylinder Head Combustion Face	
Install 400 Series Adapters on Repair		Flatness	05-20
Stand	03-2	Measure Cylinder Head Thickness	05-21
Engine Lifting Procedure	03-3	Clean Valve Guides	05-22
Clean Engine	03-4	Measure Valve Guides	05-22
Disconnect Turbocharger Oil Inlet Line	03-4	Knurl Valve Guides	05-23
Mount Engine On Repair Stand	03-5	Clean and Inspect Valve Seats	05-23
		Measure Valve Seats	05-24
		Grind Valve Seats	05-25
		Remove Valve Seat Inserts and Measure	
		Bores	05-26
		Install Valve Seat Inserts	05-27

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

CTM42-19-24MAR95

COPYRIGHT© 1995
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright 1992, 1991 Deere & Company

Contents

		Page		Page
00	Inspect and Clean Cylinder Head Nozzle Bore	05-27	Inspect Piston Pins and Bushings	10-26
01	Clean and Inspect Push Rods	05-28	Remove Piston Pin Bushing	10-27
	Inspect and Clean Ventilator Outlet Hose	05-28	Clean and Inspect Piston Pin Bushing Bore in Rod	10-27
02	Clean and Inspect Top Deck of Cylinder Block	05-29	Install Piston Pin Bushing in Connecting Rod	10-28
	Measure Cylinder Liner Standout (Height above Block)	05-30	Complete Disassembly of Cylinder Block (If Required)	10-29
	Assemble Valve Assembly	05-31	Remove and Clean Piston Cooling Orifices	10-29
03	Install Cylinder Head	05-32	Inspect and Clean Cylinder Block	10-30
	Cylinder Head Cap Screw Types	05-33	Clean O-Ring Bore	10-32
	Clean, Inspect and Install Cylinder Head Cap Screws	05-34	Measure Cylinder Block	10-32
04	Torque-To-Yield Special Flanged-Head Cap Screws	05-36	Install Piston Cooling Orifices and Gallery Plugs	10-34
	Install Rocker Arm Assembly	05-37	Recheck Cylinder Liner Standout (Height above Block)	10-35
05	Complete Final Assembly Of Injection Pump Side	05-38	Install Liner Shims—If Required	10-36
	Complete Final Assembly On Exhaust Manifold Side	05-39	Install Cylinder Liner O-Rings and Packings	10-37
10	Perform Engine Break-In	05-42	Install Cylinder Liners	10-38
	Group 10—Cylinder Block, Liners, Pistons and Rods		Install Pistons and Connecting Rods	10-40
15	Special or Essential Tools	10-1	Torque-Turn Connecting Rod Cap Screws.	10-43
	Service Equipment and Tools	10-3	Check Engine Rotation for Excessive Tightness	10-43
	Other Material	10-3	Complete Final Assembly	10-44
16	Cylinder Block, Liners, Pistons, and Rods Specifications	10-4		
	Preliminary Liner, Piston, and Rod Checks	10-8	Group 15—Crankshaft, Main Bearings and Flywheel	
20	Remove Pistons and Connecting Rods	10-9	Special or Essential Tools	15-1
	Measure Cylinder Liner Standout (Height above Block)	10-12	Service Equipment and Tools	15-4
25	Remove Cylinder Liners	10-13	Other Material	15-5
	Deglazing Cylinder Liners	10-14	Crankshaft, Main Bearings, and Flywheel Specifications	15-6
	Clean Cylinder Liners	10-15	Failure Analysis	15-8
30	Disassemble and Clean Piston	10-15	Remove Crankshaft Rear Oil Seal Housing (With Oil Seal Housing Installed)	15-9
	Visually Inspect Pistons	10-16	Install Crankshaft Rear Oil Seal and Wear Sleeve (Without Engine Disassembly)	15-11
	Check Piston Ring Groove Wear	10-17	Inspect Vibration Damper	15-12
	Measure Oil Control Ring Groove	10-18	Check Crankshaft End Play	15-13
35	Install Piston Pin in Piston Pin Bore	10-18	Remove Damper Pulley	15-14
	Visually Inspect Cylinder Liners	10-19	Remove Front Oil Seal (With Timing Gear Cover Installed on Engine)	15-16
	Cylinder Liner Manufacturing Date Code Explanation	10-20		
100	Measure Piston Skirt OD	10-21		
	Measure Cylinder Liner ID	10-22		
	Measure Liner Flange Thickness	10-22		
105	Inspect and Measure Connecting Rod Bearings	10-23		
	Inspect Rod and Cap	10-24		

Continued on next page

Contents

	Page		Page
Remove Front Wear Sleeve (With Timing Gear Cover Installed or Removed)	15-17	Install Front Wear Sleeve	15-48
Install Front Wear Sleeve (With Timing Gear Cover Installed)	15-17	Install Front Oil Seal (With Timing Gear Cover Installed)	15-49
Install Front Oil Seal (With Timing Gear Cover Installed)	15-18	Install Damper Pulley Assembly	15-49
Replace Timing Gear Cover (6076HRW33, 34, and 35 Engines) —Engine Installed in Vehicle	15-19	Install SAE 3 Flywheel Housing	15-50
Remove Timing Gear Cover	15-20	Install Flywheel	15-51
Inspect, Measure and Repair Flywheel	15-20	Install SAE 1 and SAE 2 Flywheel Housing	15-51
Check Flywheel Housing Face Run-Out	15-21	Complete Final Assembly	15-52
Check Flywheel Face Flatness	15-21		
Check Pilot Bearing Bore Concentricity	15-22	Group 16—Camshaft and Timing Gear Train	
Remove Flywheel	15-22	Special or Essential Tools	16-1
Remove SAE 1 and SAE 2 Flywheel Housing	15-23	Service Equipment and Tools	16-3
Remove SAE 3 Flywheel Housing	15-23	Other Material	16-3
Replace Flywheel Ring Gear	15-24	Camshaft and Timing Gear Train Specifications	16-4
Replace Rear Oil Seal Housing (6076HRW33, 34, and 35 Engines) —Engines Installed in Vehicle	15-25	Check Valve Lift	16-6
Remove Rear Oil Seal Housing and Wear Sleeve (With Engine Disassembled)	15-26	Check Camshaft End Play	16-7
Remove Crankshaft Main Bearings	15-27	Remove Damper Pulley and Timing Gear Cover	16-7
Check Main Bearing Clearance	15-28	Measure Camshaft Drive Gear-to-Crankshaft Gear Backlash	16-8
Remove Crankshaft	15-29	Remove Camshaft	16-9
Inspect Crankshaft	15-30	Remove Camshaft Gears	16-11
Measure Assembled ID of Bearings And OD Of Crankshaft Journals	15-32	Measure Thrust Washer Thickness	16-11
Main Bearing Cap Line Bore Specifications	15-33	Inspect and Measure Camshaft Followers	16-12
Crankshaft Grinding Guidelines	15-34	Visually Inspect Camshaft	16-12
Thrust Bearing New Part Specifications	15-36	Measure Camshaft Journal OD and Bushing ID	16-13
Crankshaft Grinding Specifications	15-37	Measure Camshaft Lobe Lift	16-13
Replace Crankshaft Oil Pump Drive Gear	15-38	Install Camshaft Gears	16-14
Replace Crankshaft Gear	15-39	Service Camshaft Bushings using JDG602 Adapter Set	16-15
Inspect Thrust Bearings	15-40	Service Camshaft Bushings using JDG606 Adapter Set	16-17
Remove and Clean Piston Cooling Orifices	15-40	Install Camshaft	16-18
Install Main Bearings and Crankshaft	15-41	Install Thrust Washer and Timing Gear Cover	16-20
Install Crankshaft Rear Oil Seal Housing	15-43	Install Front Oil Seal (With Timing Gear Cover Installed)	16-21
Check Oil Seal Housing Runout	15-45	Complete Final Assembly	16-22
Crankshaft Rear Oil Seal And Wear Sleeve Handling Precautions	15-46		
Install Crankshaft Rear Oil Seal and Wear Sleeve Assembly	15-47	Group 20—Lubrication System	
Install Timing Gear Cover	15-48	Other Material	20-1
		Lubrication System Specifications	20-1
		Drain Engine Oil and Remove Oil Pan	20-2
		Oil Filter and Oil Conditioning Housing Assembly	20-3

Continued on next page

110
115
199
INDX

	Page		Page
Remove Oil Filter and Oil Conditioning Housing	20-4	Fan Belt Tension Specifications	25-26
Inspect and Replace Oil Filter Adapter	20-4	Group 30—Air Intake And Exhaust System	
Remove, Inspect, and Install Valves from Oil Conditioning Housing	20-5	Special or Essential Tools	30-1
Install Oil Filter and Oil Conditioning Housing	20-6	Other Material	30-2
Remove Engine Oil Cooler	20-7	Air Intake and Exhaust System Specifications	30-2
Clean, Inspect, and Install Engine Oil Cooler	20-8	Extending Turbocharger Life	30-4
Check Crankshaft Gear-To-Oil Pump Drive Gear Backlash	20-9	Remove Turbocharger	30-6
Remove Engine Oil Pump	20-9	Turbocharger Failure Analysis	30-8
Inspect and Clean Oil Pump	20-10	Turbocharger Seven-Step Inspection	30-10
Check Drive Shaft End Play	20-11	Perform Radial Bearing Clearance Test	30-15
Check Drive Shaft Side Movement	20-11	Perform Axial Bearing End Play Test	30-16
Check Pumping Gear Backlash	20-12	Repair Turbocharger	30-16
Inspect Oil Pump Drive Gear	20-12	Disassemble Turbocharger	30-17
Install Engine Oil Pump	20-13	Clean and Inspect Turbine and Compressor Housings	30-18
Install Oil Pan	20-14	Replace Center Housing Assembly and Assemble Turbocharger	30-19
Tighten cap screws on front frame/oil sump	20-15	Prelube Turbocharger	30-20
Group 25—Cooling System		Install Turbocharger	30-20
Special or Essential Tools	25-1	Remove, Inspect, and Install Intake Manifold	30-22
Other Material	25-2	Remove Vertically-Mounted Aftercooler and Intake Manifold	30-23
Cooling System Specifications	25-3	Remove and Disassemble Horizontally-Mounted Aftercooler Assembly	30-25
Service Equipment and Tools	25-5	Inspect and Repair Aftercooler	30-26
Replace Bearings in Standard Duty, Adjustable Fan Drive Assembly	25-6	Inspect and Repair Intake Manifold and Cover	30-26
Replace Bearings in Heavy Duty, Adjustable Fan Drive Assembly	25-8	Install Intake Manifold and Vertically-Mounted Aftercooler	30-27
Water Manifold Mounted Fixed Fan Drive Assembly	25-10	Assemble and Install Horizontally-Mounted Aftercooler Assembly	30-29
Replace Bearing in Injection Pump Drive Gear Mounted Fan Drive	25-12	Remove, Inspect, and Install Exhaust Manifold	30-31
Inspect and Check Belt Tensioner Spring Tension	25-13	Group 35—Fuel System	
Replace Belt Tensioner Assembly	25-14	Special or Essential Tools	35-1
Remove Water Pump	25-14	Other Material	35-4
Disassemble Water Pump	25-15	Diesel Fuel System Specifications	35-4
Inspect Water Pump Parts	25-18	Relieve Fuel System Pressure	35-6
Assemble Water Pump	25-19	Replace Rectangular Fuel Filter Element	35-6
Install Water Pump	25-21	Replace Fuel Check Valve	35-7
Remove and Test Thermostats	25-22	Remove Round Fuel Filter Element	35-8
Install Thermostats	25-23	Identification of fuel supply and fuel injection pumps	35-9
Remove Water Manifold	25-23	Remove Mechanical Fuel Supply Pump	35-10
Install Water Manifold	25-24		
Remove Coolant Heater	25-24		
Install Coolant Heater	25-25		
Complete Final Assembly	25-26		

Continued on next page

110

115

199

INDX

Contents

	Page		Page
Test Mechanical Fuel Supply Pump for Leaks	35-11	Inspect and Clean Cylinder Head Nozzle Bore	35-58
Disassemble Mechanical Fuel Supply Pump (Nippondenso)	35-12	Inspect and Clean Nozzle Seating Surface	35-59
Inspect and Repair Mechanical Fuel Supply Pump (Nippondenso)	35-14	Install Fuel Injection Nozzles	35-59
Assemble Mechanical Fuel Supply Pump (Nippondenso)	35-15	Group 100—Engine Tune-Up and Break-In	
Disassemble Mechanical Fuel Supply Pump (Robert Bosch)	35-16	Effects of Altitude and Temperature on Engine Performance	100-1
Inspect and Repair Mechanical Fuel Supply Pump (Robert Bosch)	35-17	Preliminary Engine Testing	100-2
Assemble Mechanical Fuel Supply Pump (Robert Bosch)	35-18	General Tune-Up Recommendations	100-3
Install Mechanical Fuel Supply Pump	35-18	Dynamometer Test	100-4
Remove and Install Electric Fuel Supply Pump	35-19	Engine Break-In Guidelines	100-5
Clean or Replace Electric Fuel Supply Pump Filter Screen	35-20	Perform Engine Break-In	100-6
Repair Aneroid	35-21	Check Crankcase Ventilation System	100-7
Remove Hydraulic Aneroid Activator	35-21	Check Air Intake System	100-7
Disassemble and Clean Hydraulic Aneroid Activator Parts	35-22	Check Exhaust System	100-8
Assemble and Install Hydraulic Aneroid Activator	35-22	Check and Service Cooling System	100-8
Service Injection Pump Overflow Valve	35-22	Check Electrical System	100-10
Remove and Install Fuel Shutoff Solenoid	35-24	Group 105—Engine System Operation and Test	
Identification of In-Line Injection Pumps	35-25	Special or Essential Tools	105-1
Remove In-Line Fuel Injection Pump	35-26	Engine Test Specifications	105-3
Install In-Line Fuel Injection Pump	35-29	Engine—Sectional View	105-4
Remove Rotary Fuel Injection Pump—Stanadyne DB4	35-33	General Engine Description	105-5
Install Rotary Fuel Injection Pump—Stanadyne DB4	35-34	How the Lubrication System Works	105-6
Remove Fuel Injection Nozzles	35-37	How the Cooling System Works	105-10
Diagnose Injection Nozzle Malfunction	35-40	Head Gasket Joint Construction and Operation	105-12
Test Fuel Injection Nozzles	35-42	Diagnosing Head Gasket Joint Failures	105-14
Perform Opening Pressure Test	35-43	Head Gasket Inspection and Repair Sequence **M:CTM42,G105,18 -19-	105-17
Injection Nozzle Specifications	35-44	Diagnosing Engine Malfunctions	105-18
Perform Nozzle Leakage Test	35-45	Test Engine Compression Pressure	105-21
Perform Chatter and Spray Pattern Test	35-46	Check Engine Oil Pressure	105-22
Disassemble Fuel Injection Nozzle	35-47	Inspect Thermostat and Test Opening Temperature	105-24
Clean and Inspect Fuel Injection Nozzle Assembly	35-49	Group 110—Air Intake System Operation and Test	
Perform Nozzle Slide Test	35-50	Special or Essential Tools	110-1
Clean Spray Orifices	35-50	Air Intake and Exhaust System Test Specifications	110-2
Inspect Nozzle Holder	35-51	Diagnosing Air Intake Malfunctions	110-3
Inspect Gland Nut	35-53	How the Air Intake and Exhaust System Works	110-4
Assemble Fuel Injection Nozzle	35-54	Air Cleaner Operation	110-4
Adjust Injection Nozzles	35-57	Diagnosing Turbocharger Malfunctions	110-6
		How The Turbocharger Works	110-7
		How The Turbocharger is Lubricated	110-7

Continued on next page

Contents

	Page		Page
How The Aftercooler Works—6076A Engines	110-8	How the Hydraulic Aneroid Activator Works	115-44
Check Intake Manifold Pressure (Turbocharger Boost)	110-9	Diagnose Malfunctions—Hydraulic Aneroid Activator	115-45
Group 115—Fuel System Operation and Test		Fuel Injection Nozzles—General Information	115-46
Special or Essential Tools	115-1	Fuel Injection Nozzle Operation	115-47
Fuel System Test Specifications	115-2	Diagnose Malfunctions—Fuel Injection Nozzle	115-48
Check and Adjust Rotary fuel pump Dynamic Timing	115-2	Test Fuel Injection Nozzles (Engine Running)	115-49
Fuel System Operation—In-Line Fuel Injection Pump	115-10	Fuel Drain Back Test Procedure	115-49
Fuel System Operation—Rotary Fuel Injection Pump	115-11	Group 199—Dealer Fabricated Tools	
Diagnose Fuel System Malfunctions	115-12	How to Make Tools	199-1
Mechanical Fuel Supply Pump Operation Operation	115-16	Cylinder Liner Holding Fixture	199-1
Diagnosing Mechanical Fuel Supply Pump Malfunctions	115-18	Index	
Test Mechanical Fuel Supply Pump for Leaks	115-19		
Check Mechanical Fuel Supply Pump Operation	115-20		
Service Mechanical Fuel Supply Pump	115-22		
Electric Fuel Supply Pump Operation	115-23		
Diagnose Electric Fuel Supply Pump Malfunction	115-24		
Test Electric Fuel Supply Pump Output Pressure and Flow	115-25		
Fuel Shut-Off Solenoid Resistance Test	115-27		
Rectangular Fuel Filter Operation	115-28		
Round (Final) Fuel Filter Operation	115-28		
Bleed the Fuel System	115-29		
Diagnose In-Line Fuel Injection Pump Malfunctions	115-32		
In-Line Fuel Injection Pump Operation	115-33		
Check Fast Idle Speed—In-Line Fuel Injection Pump	115-34		
Check and Adjust Engine Slow Idle Speed—In-Line Fuel Injection Pump	115-35		
Rotary Fuel Injection Pump Operation—Stanadyne DB4	115-38		
Diagnose Rotary Fuel Injection Pump Malfunctions	115-40		
Check and Adjust Engine Speeds on Rotary Pump	115-41		
How the Aneroid Works—In-Line Injection Pumps	115-42		
Diagnose Aneroid Malfunctions	115-43		

HANDLE FLUIDS SAFELY—AVOID FIRES

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.



DX,FLAME -19-04JUN90

00
-UN-23AUG88
TS227

PREVENT BATTERY EXPLOSIONS

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).



DX,SPARKS -19-03MAR93


-UN-23AUG88
TS204

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

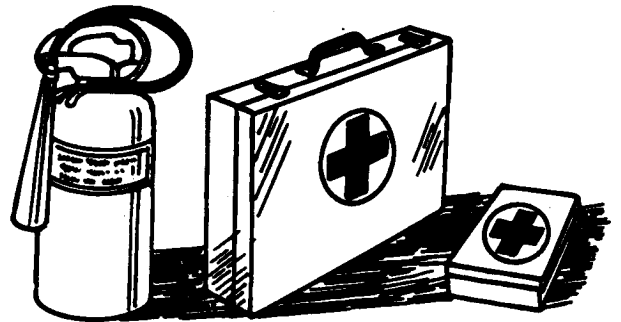

DX,FIRE2 -19-03MAR93

-UN-23AUG88
TS291

PREVENT ACID BURNS

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:


1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 15—30 minutes. Get medical attention immediately.

If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 quarts).
3. Get medical attention immediately.

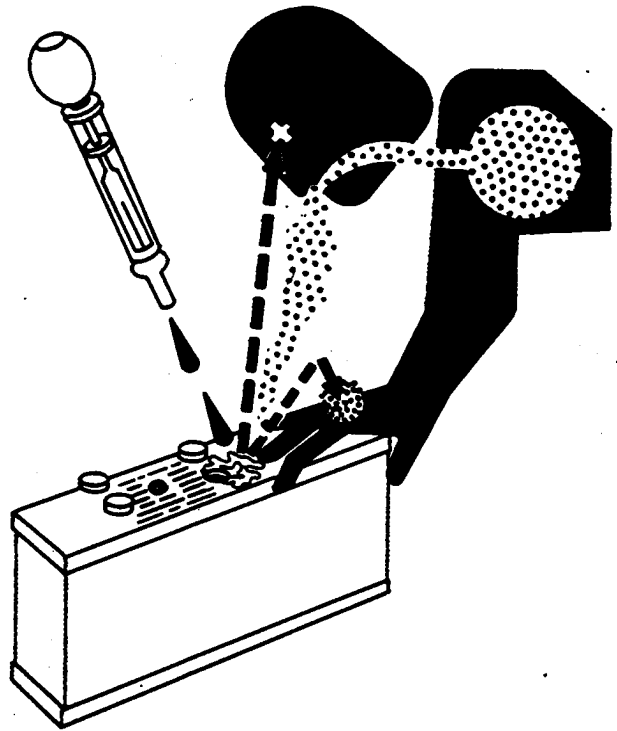

TS203 -JUN-23AUG88

DX,POISON -19-21APR93


AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

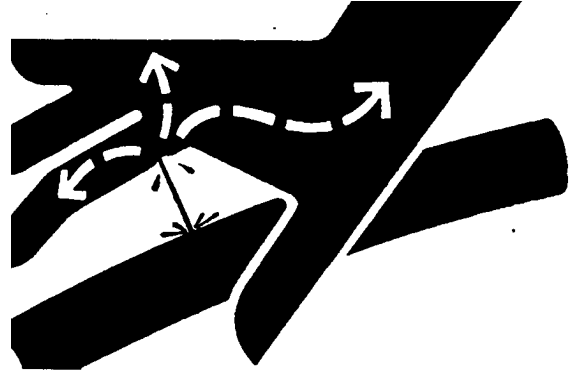

DX,FLUID -19-03MAR93

00
3
-JUN-23AUG88
X9811


WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

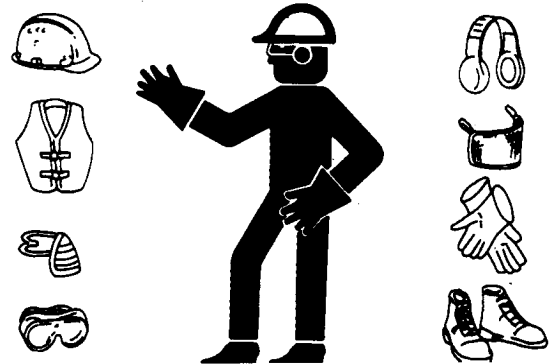


DX,WEAR -19-10SEP90

-JUN-23AUG88
TS206

SERVICE MACHINES SAFELY

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

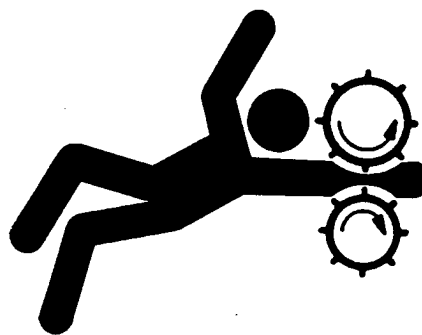

DX, LOOSE -19-04JUN90

TS228 -UN-23AUG88

WORK IN VENTILATED AREA

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.




DX, AIR -19-04JUN90

TS220 -UN-23AUG88

WORK IN CLEAN AREA

Before starting a job:

- Clean work area and machine.
- Make sure you have all necessary tools to do your job.
- Have the right parts on hand.
- Read all instructions thoroughly; do not attempt shortcuts.

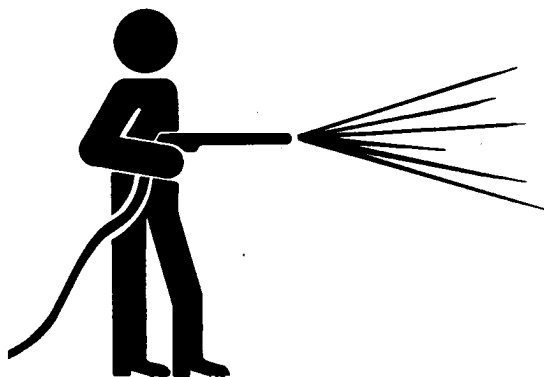

DX, CLEAN -19-04JUN90

T6642EJ -UN-18OCT88

REMOVE PAINT BEFORE WELDING OR HEATING


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

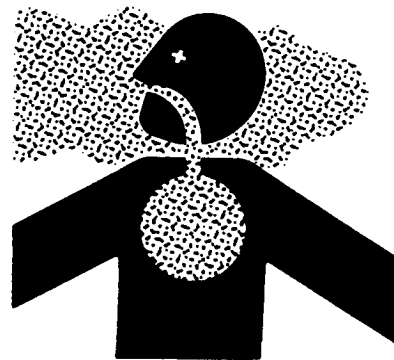

DX,PAINT -19-03MAR93

TS220 -UN-23AUG88

AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



DX,TORCH -19-03MAR93

TS953 -UN-15MAY90

ILLUMINATE WORK AREA SAFELY

Illuminate your work area adequately but safely. Use a portable safety light for working inside or under the machine. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.




DX,LIGHT -19-04JUN90

TS223 -UN-23AUG88

USE PROPER LIFTING EQUIPMENT

Lifting heavy components incorrectly can cause severe injury or machine damage.

Follow recommended procedure for removal and installation of components in the manual.

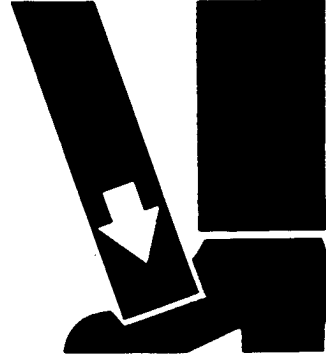

DX,LIFT

-19-04JUN90

TS226
-UN-23AUG88

PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



DX,SERV

-19-03MAR93

TS218
-UN-23AUG88

USE PROPER TOOLS

Use tools appropriate to the work. Makeshift tools and procedures can create safety hazards.

Use power tools only to loosen threaded parts and fasteners.

For loosening and tightening hardware, use the correct size tools. DO NOT use U.S. measurement tools on metric fasteners. Avoid bodily injury caused by slipping wrenches.

Use only service parts meeting John Deere specifications.



DX,REPAIR -19-04JUN90

00
7
-UN-08NOV89
TS779

DISPOSE OF WASTE PROPERLY


Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

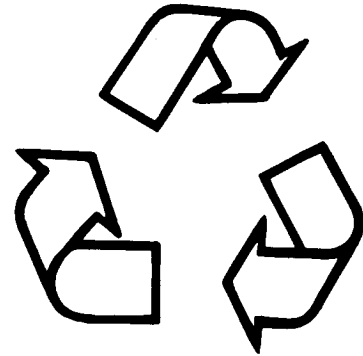

DX,DRAIN -19-03MAR93

-UN-26NOV90
TS1133

LIVE WITH SAFETY

Before returning machine to customer, make sure machine is functioning properly, especially the safety systems. Install all guards and shields.









DX,LIVE

-19-25SEP92

TS231 -19-07OCT88

 00
8

UNIFIED INCH BOLT AND CAP SCREW TORQUE VALUES

SAE Grade and Head Markings	NO MARK	1 or 2 ^b 	5 5.1 5.2 	8 8.2 
SAE Grade and Nut Markings	NO MARK	2 	5 	8 

01
-19-04MARG91
TS1162

Size	Grade 1				Grade 2 ^b				Grade 5, 5.1, or 5.2				Grade 8 or 8.2			
	Lubricated ^a		Dry ^a		Lubricated ^a		Dry ^a		Lubricated ^a		Dry ^a		Lubricated ^a		Dry ^a	
	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft
1/4	3.7	2.8	4.7	3.5	6	4.5	7.5	5.5	9.5	7	12	9	13.5	10	17	12.5
5/16	7.7	5.5	10	7	12	9	15	11	20	15	25	18	28	21	35	26
3/8	14	10	17	13	22	16	27	20	35	26	44	33	50	36	63	46
7/16	22	16	28	20	35	26	44	32	55	41	70	52	80	58	100	75
1/2	33	25	42	31	53	39	67	50	85	63	110	80	120	90	150	115
9/16	48	36	60	45	75	56	95	70	125	90	155	115	175	130	225	160
5/8	67	50	85	62	105	78	135	100	170	125	215	160	240	175	300	225
3/4	120	87	150	110	190	140	240	175	300	225	375	280	425	310	550	400
7/8	190	140	240	175	190	140	240	175	490	360	625	450	700	500	875	650
1	290	210	360	270	290	210	360	270	725	540	925	675	1050	750	1300	975
1-1/8	400	300	510	375	400	300	510	375	900	675	1150	850	1450	1075	1850	1350
1-1/4	570	425	725	530	570	425	725	530	1300	950	1650	1200	2050	1500	2600	1950
1-3/8	750	550	950	700	750	550	950	700	1700	1250	2150	1550	2700	2000	3400	2550
1-1/2	1000	725	1250	925	990	725	1250	930	2250	1650	2850	2100	3600	2650	4550	3350

DO NOT use these values if a different torque value or tightening procedure is given for a specific application. Torque values listed are for general use only. Check tightness of fasteners periodically.

Fasteners should be replaced with the same or higher grade. If higher grade fasteners are used, these should only be tightened to the strength of the original.

Shear bolts are designed to fail under predetermined loads. Always replace shear bolts with identical grade.


Make sure fasteners threads are clean and that you properly start thread engagement. This will prevent them from failing when tightening.

Tighten plastic insert or crimped steel-type lock nuts to approximately 50 percent of the dry torque shown in the chart, applied to the nut, not to the bolt head. Tighten toothed or serrated-type lock nuts to the full torque value.

^a "Lubricated" means coated with a lubricant such as engine oil, or fasteners with phosphate and oil coatings. "Dry" means plain or zinc plated without any lubrication.

^b Grade 2 applies for hex cap screws (not hex bolts) up to 152 mm (6-in.) long. Grade 1 applies for hex cap screws over 152 mm (6-in.) long, and for all other types of bolts and screws of any length.

METRIC BOLT AND CAP SCREW TORQUE VALUES

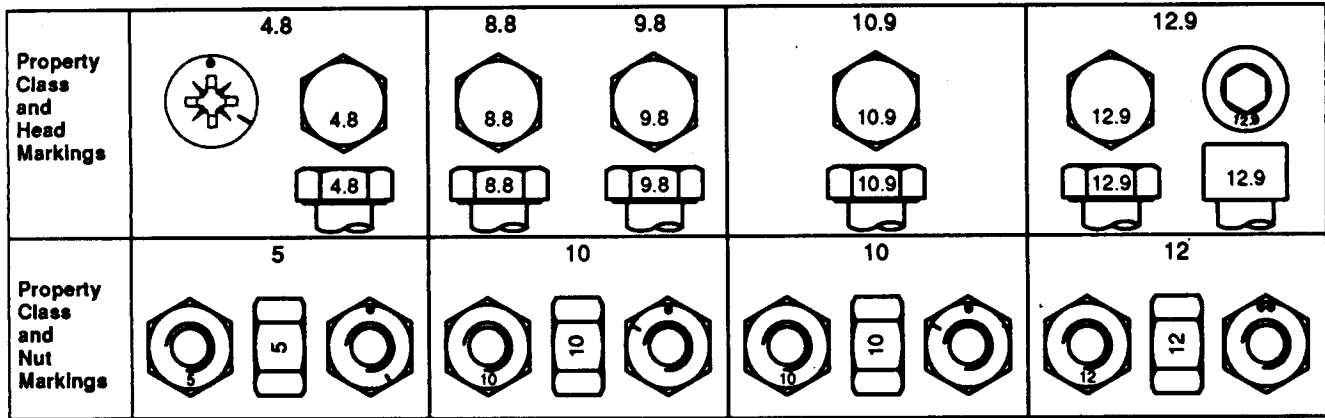

TS1163 -19-04MAR91

Size	Class 4.8				Class 8.8 or 9.8				Class 10.9				Class 12.9			
	Lubricated ^a		Dry ^a		Lubricated ^a		Dry ^a		Lubricated ^a		Dry ^a		Lubricated ^a		Dry ^a	
	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft
M6	4.8	3.5	6	4.5	9	6.5	11	8.5	13	9.5	17	12	15	11.5	19	14.5
M8	12	8.5	15	11	22	16	28	20	32	24	40	30	37	28	47	35
M10	23	17	29	21	43	32	55	40	63	47	80	60	75	55	95	70
M12	40	29	50	37	75	55	95	70	110	80	140	105	130	95	165	120
M14	63	47	80	60	120	88	150	110	175	130	225	165	205	150	260	190
M16	100	73	125	92	190	140	240	175	275	200	350	255	320	240	400	300
M18	135	100	175	125	260	195	330	250	375	275	475	350	440	325	560	410
M20	190	140	240	180	375	275	475	350	530	400	675	500	625	460	800	580
M22	260	190	330	250	510	375	650	475	725	540	925	675	850	625	1075	800
M24	330	250	425	310	650	475	825	600	925	675	1150	850	1075	800	1350	1000
M27	490	360	625	450	950	700	1200	875	1350	1000	1700	1250	1600	1150	2000	1500
M30	675	490	850	625	1300	950	1650	1200	1850	1350	2300	1700	2150	1600	2700	2000
M33	900	675	1150	850	1750	1300	2200	1650	2500	1850	3150	2350	2900	2150	3700	2750
M36	1150	850	1450	1075	2250	1650	2850	2100	3200	2350	4050	3000	3750	2750	4750	3500

DO NOT use these values if a different torque value or tightening procedure is given for a specific application. Torque values listed are for general use only. Check tightness of fasteners periodically.

Shear bolts are designed to fail under predetermined loads. Always replace shear bolts with identical property class.

Fasteners should be replaced with the same or higher property class. If higher property class fasteners are used, these should only be tightened to the strength of the original.

^a "Lubricated" means coated with a lubricant such as engine oil, or fasteners with phosphate and oil coatings. "Dry" means plain or zinc plated without any lubrication.

Make sure fasteners threads are clean and that you properly start thread engagement. This will prevent them from failing when tightening.

Tighten plastic insert or crimped steel-type lock nuts to approximately 50 percent of the dry torque shown in the chart, applied to the nut, not to the bolt head. Tighten toothed or serrated-type lock nuts to the full torque value.