

6076 Engines

Serial Number (—499999)

Deere Power Systems Group
CTM6 (17MAR97)

LITHO IN U.S.A.
ENGLISH

6076 Engines
Serial Number (—499999)

CTM6 (17MAR97)

Introduction

FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Use this component technical manual in conjunction with the machine technical manual. An application listing identifies product-model/component type-model relationship. See the machine technical manual for information on component removal and installation, and gaining access to the components.

This manual is divided in two parts: repair and diagnostics. Repair sections contain necessary instructions to repair the component. Diagnostic sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torques.

Binders, binder labels, and tab sets can be ordered by John Deere dealers direct from the John Deere Distribution Service Center.

This manual is part of a total product support program.

FOS MANUALS—REFERENCE

TECHNICAL MANUALS—MACHINE SERVICE

COMPONENT MANUALS—COMPONENT SERVICE

Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced technicians.

Technical Manuals are concise guides for specific machines. Technical manuals are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Component Technical Manuals are concise service guides for specific components. Component technical manuals are written as stand-alone manuals covering multiple machine applications.

MANUAL ORGANIZATION

Group 00—Introduction and Safety Information
Group 01—General Information
Group 02—Fuels, Lubricants and Coolant
Group 03—Engine Mounting
Group 04—Engine Rebuild Guide
Group 05—Cylinder Head and Valves
Group 10—Cylinder Block, Liners, Pistons and Rods
Group 15—Crankshaft, Main Bearings, and Flywheel
Group 16—Camshaft and Timing Gear Train

Group 20—Lubrication System
Group 25—Cooling System
Group 30—Air Intake and Exhaust System
Group 35—Fuel System
Group 100—Tune-Up
Group 105—Engine System Operation and Test
Group 110—Air Intake System Operation and Test
Group 115—Fuel System Operation and Tests
Group 199—Dealer Fabricated Tools

CTM6.IFC -19-24SEP91

Dealer Presentation Sheet

JOHN DEERE DEALERS

IMPORTANT: The important changes listed below make your current CTM obsolete. Discard CTM6, dated 15 Sep 89. Please remove this page and route through your service department.

Engine application charts have been updated to include new product models. See ENGINE APPLICATION CHART in Group 01.

Revised the engine oil module. See DIESEL ENGINE OIL in Group 02.

Revised the engine coolant module. See ENGINE COOLANT RECOMMENDATIONS in Group 02.

Revised valve lift specifications in Groups 05 and 105.

Included torque-turn procedure for tightening flanged-head cylinder head cap screws. See TORQUE-TURN FLANGED-HEAD CAP SCREWS in Group 05.

Added information on the manufacturing date codes stamped on cylinder liners. See INSTALL CYLINDER LINERS in Group 10.

Revised removal and installation procedures for the auxiliary drive in Groups 15 and 16.

Provided crankcase oil fill quantities for all 6076 engine applications. See ENGINE CRANKCASE OIL FILL QUANTITIES in Group 20.

CTM6,DPS -19-20MAR91

Dealer Presentation Sheet

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

Contents

Page	Page
Group 00—Introduction and Safety Information	
About This Manual	00-1
Safety	00-1
Group 01—General Information	
Inch Series Torque Chart	01-1
Metric Series Torque Chart	01-2
Bolt Identification Chart	01-3
Engine Model Designation	01-4
Engine Nameplate Information	01-6
Option Code Label	01-8
Engine Application Chart	
Industrial Equipment	01-8
OEM	01-9
Agricultural Equipment	01-9
Basic 6076 Engine Specifications	01-10
General Engine Description	01-11
Engine-Sectional View	01-12
Group 02—Fuels, Lubricants, and Coolant	
Diesel Fuel	02-1
Diesel Engine Oil	02-2
General Purpose Grease	02-3
Engine Coolant Recommendations	02-4
Engine Coolant Requirements	02-5
Group 03—Engine Mounting	
Engine Repair Stand	03-1
Safety Precautions	03-2
Install 400 Series Adapters on Repair Stand	03-2
Engine Lifting Procedure	03-3
Clean Engine	03-4
Disconnect Turbocharger Oil Inlet Line	03-4
Mount Engine On Repair Stand	03-5
Group 04—Engine Rebuild Guide	
6076 Engine Disassembly Sequence	04-1
Sealant Application Guidelines	04-2
6076 Engine Assembly Sequence	04-3
Group 05—Cylinder Head and Valves	
Essential Tools	05-1
Service Equipment and Tools	05-3
Other Materials	05-3
Cyl. Head and Valve Specifications	05-4
Diagnosing Malfunctions	05-7
Check and Adjust Valve Clearance	05-8
Check Valve Lift	05-10
Disconnect Turbocharger Oil Inlet Line	05-11
Remove Cylinder Head	05-12
Disassemble and Inspect Rocker Arm Shaft Assembly	05-14
Measure Valve Recess	05-15
Remove Valve Assembly	05-16
Inspect and Measure valve Springs	05-17
Inspect Valve Rotators and Wear Caps	05-17
Clean Valves	05-18
Inspect and Measure Valves	05-18
Grind Valves	05-19
Inspect and Clean Cylinder Head	05-19
Check Cylinder Head Flatness	05-20
Measure Cylinder Head Thickness	05-21
Clean Valve Guides	05-21
Measure Valve Guides	05-22
Knurl Guides	05-22
Clean Valve Seats	05-23
Measure Valve Seats	05-23
Grind Valve Seats	05-24
Replace Valve Inserts	05-25
Install Valves	05-26
Inspect and Clean Cylinder Head Nozzle Bore	05-27
Clean and Inspect Push Rods	05-28
Clean and Inspect Cylinder Head Cap Screws	05-28
Inspect and Clean Ventilator Outlet Hose	05-28
Clean and Inspect Top Deck of Cylinder Block	05-29
Measure Cylinder Liner Standout	05-30
Protect Cylinder Block Top Deck	05-30

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

CTM6-19-17MAR97

COPYRIGHT© 1991
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright 1989, 1988 Deere & Company

Contents

	Page		Page
00		Install Cylinder Liner O-Rings and Packings	10-39
		Install Cylinder Liners	10-40
01		Install Pistons and Connecting Rods	10-43
		Use TORQUE-TURN Method For Proper Torque	10-45
02		Check Engine Rotation for Excessive Tightness	10-45
		Complete Final Assembly	10-46
03		Group 10—Cylinder Block, Liners, Pistons and Rods	
		Essential Tools	10-1
		Service Equipment and Tools	10-3
04		Specifications	10-4
		Other Materials	10-6
		Diagnosing Malfunctions	10-7
05		Disconnect Turbocharger Oil Inlet Line	10-8
		Remove Pistons and Connecting Rods	10-9
		Measure Cylinder Liner Standout	10-12
		Remove Cylinder Liners	10-13
10		Inspect Pistons and Liners	10-14
		Measure Oil Control Ring Groove	10-21
		Measure Cylinder Liners	10-22
15		Deglazing Cylinder Liners	10-23
		Inspect and Measure Connecting Rod Bearings	10-24
		Inspect Rod and Cap	10-25
20		Inspect Piston Pins and Bushings	10-27
		Remove Piston Pin Bushing	10-28
		Clean and Inspect Rod Pin Bushing Bore	10-29
25		Install Rod Pin Bushing	10-30
		Complete Disassembly of Cylinder Block (If Required)	10-31
30		Remove and Clean Piston Cooling Orifices	10-31
		Inspect and Clean Cylinder Block	10-32
		Clean O-Ring Bore	10-34
35		Measure Cylinder Block	10-34
		Install Piston Cooling Orifices and Gallery Plugs	10-36
100		Recheck Cylinder Liner Standout	10-37
		Measure Liner Flange Thickness	10-38
105		Install Liner Shims—If Required	10-38
		Group 15—Crankshaft, Main Bearings and Flywheel	
		Essential Tools	15-1
		Service Equipment and Tools	15-2
		Other Materials	15-2
		Specifications	15-3
		Diagnosing Malfunctions	15-5
		General Information	15-5
		Disconnect Turbocharger Oil Inlet Line	15-6
		Remove Crankshaft Rear Oil Seal and Wear Sleeve	15-6
		/(Without Removing Oil Seal Housing)	
		Install Crankshaft Rear Oil Seal and Wear Sleeve	15-8
		/(Without Engine Disassembly)	
		Inspect Vibration Damper	15-9
		Remove Water Pump and Damper Pulley	15-10
		Remove Timing Gear Cover—Non-Auxiliary Engines	15-11
		Remove Auxiliary Drive Gear and Timing Gear Cover	15-11
		/—Auxiliary Drive Engines	
		Remove Front Oil Seal From Timing Gear Cover	15-13
		Install Front Oil Seal In Timing Gear Cover	15-13
		Check Crankshaft End Play	15-14
		Remove Front Wear Sleeve	15-14
		Remove and Inspect Crankshaft Gear	15-15
		Inspect, Measure and Repair Flywheel	15-15
		Check Flywheel Housing Face Run-Out	15-16
		Check Flywheel Face Flatness	15-16
		Check Pilot Bearing Bore Concentricity	15-17
		Remove Flywheel	15-17
		Remove SAE 1 And SAE 2 Flywheel Housing	15-18
		Remove SAE 3 Flywheel Housing	15-18
		Replace Flywheel Ring Gear	15-19
		Service Clutch Shaft Pilot Bushing—Quad Range Transmissions	15-20

Continued on next page

Contents

Page	Page		
Remove Rear Oil Seal Housing And Wear Sleeve	15-21	Remove Damper Pulley and Timing Gear Cover—Non-Auxiliary Drive Engines	16-8
/(With Engine Disassembled)		Remove Damper Pulley, Auxiliary Drive Gear and Timing Gear Cover	16-10
Remove Crankshaft Main Bearings	15-22	/—Auxiliary Drive Engines	
Check Main Bearing Clearance	15-23	Remove Front Oil Seal From Timing Gear Cover	16-12
Remove Crankshaft	15-24	Install Front Oil Seal In Timing Gear Cover	16-13
Inspect Crankshaft	15-25	Check Camshaft End Play	16-14
Measure Assembled ID of Bearings And OD Of Crankshaft Journals	15-26	Measure Camshaft Drive Gear-To-Crankshaft Gear Minimum Backlash	16-14
Main Bearing Cap Line Bore Specifications	15-27	Remove Camshaft	16-15
Thrust Bearing New Part Specifications	15-27	Remove Camshaft Gear, Spacer, and Thrust Plate	16-16
Crankshaft Grinding Guidelines	15-28	Measure Thrust Plate and Spacer	16-17
Crankshaft Grinding Specifications	15-30	Inspect And Measure Camshaft Followers	16-17
Replace Crankshaft Oil Pump Drive Gear	15-31	Visually Inspect Camshaft	16-17
Inspect Thrust Bearings	15-32	Measure Camshaft Journal OD and Bushing ID	16-18
Remove and Clean Piston Cooling Orifices	15-32	Measure Camshaft Lobe Lift	16-18
Install Main Bearings and Crankshaft	15-33	Assemble Camshaft	16-19
Install Oil Pump And Check Drive Gear-To-Crankshaft Clearance	15-35	Service Camshaft Bushings Using JDG602 Adapter Set	16-20
Install Rear Crankshaft Oil Seal Housing	15-36	Service Camshaft Bushings Using JDG606 Adapter Set	16-22
Check Oil Seal Housing Runout	15-37	Install Camshaft	16-23
Crankshaft Rear Oil Seal And Wear Sleeve Handling Precautions	15-38	Replace Auxiliary Drive Gear Bearings	16-25
Install Crankshaft Rear Oil Seal And Wear Sleeve (With Engine Disassem	15-39	Replace Auxiliary Drive Idler Gear Bearings	16-26
Install Crankshaft Gear	15-40	Install Timing Gear Cover—Non Auxiliary Drive Engines	16-27
Install Front Wear Sleeve	15-40	Install Timing Gear Cover and Auxiliary Drive Gear	16-28
Install SAE 3 Flywheel Housing	15-41	/—Auxiliary Drive Engines	
Install Flywheel	15-41	Install Rear Auxiliary Drive Gear	16-31
Install SAE 1 And SAE 2 Flywheel Housing	15-42	Complete Final Assembly	16-32
Install Timing Gear Cover—Non-Auxiliary Drive Engines	15-42		
Install Timing Gear Cover And Auxiliary Drive Idler Gear—Auxiliary Dri	15-43		
Install Rear Auxiliary Drive Gear	15-46		
Install Damper Pulley Assembly	15-46		
Complete Final Assembly	15-47		
		Group 20—Lubrication System	
Group 16—Camshaft and Timing Gear Train		Specifications	20-1
Essential Tools	16-1	Engine Crankcase Oil Fill Quantities	20-2
Service Equipment and Tools	16-2	Other Material	20-4
Other Material	16-3	How The Lubrication System Works	20-5
Specifications	16-4	Diagnosing Malfunctions	20-6
General Information	16-5	Disconnect Turbocharger Oil Inlet Line	20-7
Check Valve Lift	16-6	Drain Engine Oil and Remove Oil Pan	20-7
Disconnect Turbocharger Oil Inlet Line	16-7	Horizontal Oil Filter and Housing Assembly	20-8
Prepare Engine For Camshaft Removal	16-8		

Continued on next page

Contents

		Page		Page
	Remove Horizontal Oil Filter and Housing Assembly	20-9	Disassemble Water Pump	25-12
110	Vertical Oil Filter and Housing Assembly	20-10	Inspect Water Pump Parts	25-14
	Remove Vertical Oil Filter and Housing Assemblies	20-11	Assemble Water Pump	25-15
115	Inspect Oil Pressure Regulating Valve	20-12	Install Water Pump	25-17
	Inspect Oil Filter Bypass Valve	20-13	Remove and Test Thermostats	25-17
	Install Horizontal Oil Filter and Housing	20-14	Install Thermostats	25-18
199	Install Vertical Oil Filter and Housing Assemblies	20-15	Remove Water Manifold	25-19
	Remove Engine Oil Cooler	20-15	Inspect and Clean Water Manifold	25-19
	Clean Inspect, and Install Engine Oil Cooler	20-17	Install Water Manifold	25-20
	Remove Oil Cooler Bypass Housing	20-18	Remove Coolant Heater—If Equipped	25-20
	Remove and Inspect Oil Cooler Bypass Valve	20-18	Install Coolant Heater—If Equipped	25-21
	Engine Oil Pump Assembly—Deep Sump	20-19	Complete Final Assembly	25-22
	Engine Oil Pump Assembly—Standard Sump	20-20	Inspect and Tension Fan and Alternator V-Belts	25-23
	Check Crankshaft Gear-To-Oil Pump Drive Gear Backlash	20-21		
	Remove Engine Oil Pump	20-21	Group 30—Air Intake And Exhaust System	
	Inspect and Clean Oil Pump	20-22	Essential Tools	30-1
	Check Drive Shaft End Play	20-22	Other Material	30-2
	Check Drive Shaft Side Movement	20-23	Specifications	30-2
	Check Pumping Gear Backlash	20-23	How The Air Intake and Exhaust System Works	30-3
	Remove And Inspect Oil Pump Drive Gear	20-24	How The Turbocharger Works	30-3
	Install Oil Cooler Bypass Valve And Housing	20-25	How The Turbocharger is Lubricated	30-4
	Adjust Set Screw	20-26	Extending Turbocharger Life	30-4
	Install Engine Oil Pump	20-27	Diagnosing Turbocharger Malfunctions	30-7
	Install Oil Pan	20-29	Remove Turbocharger	30-10
			Turbocharger Seven-Step Inspection	30-11
	Group 25—Cooling System		Perform Axial End Play Bearing Test (Schwitzer 3LM)	30-17
	Essential Tools	25-1	Perform Radial Bearing Clearance Test (Schwitzer)	30-17
	Other Materials	25-2	Perform Raidal Bearing Test—(AiResearch/Garrett T04E)	30-18
	Specifications	25-3	Disassemble Turbocharger	30-19
	How The Cooling System Works	25-5	Clean and Inspect Turbine and Compressor Housings	30-21
	Diagnosing Malfunctions	25-6	Replace Center Housing and Rotating Assembly	30-22
	Medium Duty, Adjustable Fan Drive Assembly		Prelube Turbocharger	30-23
	Remove and Install	25-6	Install Turbocharger	30-24
	Replace Bearings	25-7	Remove and Inspect Intake Manifold (6076T and 6076H Engines)	30-26
	Heavy Duty, Adjustable Fan Drive Assembly		Install Intake Manifold (6076T and 6076H Engines)	30-27
	Remove and Install	25-8	How The Aftercooler Works—6076A Engines	30-28
	Replace Bearings	25-8	Single-Pass Aftercooler Assembly	30-29
	Replace Bearings In Water Manifold Mounted, Fixed Fan Drive Assembly	25-10	Two-Pass Aftercooler Assembly	30-30
	Remove Water Pump	25-11		

Continued on next page

Contents

	Page		Page
Remove Aftercooler and Intake Manifold (6076A Engines)	30-31	Test Fuel Injection Nozzles	35-38
Inspect and Repair Aftercooler (6076A Engines)	30-32	Make Opening Pressure Test	35-39
Inspect and Repair Intake Manifold (6076A Engines)	30-33	Perform Leakage Test	35-41
Install Intake Manifold and Single-Pass Aftercooler (6076A Engines)	30-34	Make Chatter and Spray Pattern Test	35-42
Install Intake Manifold and Two-Pass Aftercooler (6076A Engines)	30-37	Disassemble Fuel Injection Nozzle	35-43
Remove, Inspect, Install Exhaust Manifold Assembly	30-39	Clean and Inspect Fuel Injection Nozzle Assembly	35-45
Group 35—Fuel System		Perform Nozzle Slide Test	35-46
Essential Tools	35-1	Clean Spray Orifices	35-46
Other Material	35-3	Inspect Nozzle Holder	35-47
Specifications	35-4	Inspect Gland Nut	35-49
Relieve System Pressure	35-5	Assemble Fuel Injection Nozzle	35-50
Replace Dual Fuel Filters	35-5	Inspect and Clean Cylinder Head Nozzle Bore	35-52
Replace Single Fuel Filter	35-6	Inspect and Clean Nozzle Seating Surface	35-53
Remove and Inspect Fuel Check Valve Assembly—Dual Fuel Filter Systems	35-7	Install Fuel Injection Nozzles	35-53
Inspect and Clean Dual Fuel Filter Base	35-8	Group 100—Tune-Up	
Install Fuel Check Valve Assembly—Dual Filter Fuel Systems	35-9	Preliminary Engine Testing	100-1
Replace Fuel Check Valve Assembly—Single Filter Fuel Systems	35-10	General Tune-Up Recommendations	100-2
Inspect and Clean Single Fuel Filter Base	35-11	Check Crankcase Ventilation System	100-3
Bleed the Fuel System	35-12	Check Air Intake System	100-3
Diagnosing Fuel Supply Pump Malfunctions	35-14	Check Exhaust System	100-3
Remove Fuel Supply Pump	35-15	Check and Service Entire Cooling System	100-4
Test Fuel Supply Pump For Leaks	35-16	Inspect and Adjust V-Belts	100-5
Disassemble Fuel Supply Pump	35-17	Check Electrical System	100-6
Inspect and Repair Fuel Supply Pump	35-19	Group 105—Engine System Operation and Test	
Assemble Fuel Supply Pump	35-20	Essential Tools	105-1
Install Fuel Supply Pump	35-22	Specifications	105-3
General Information For Aneroid—If Equipped	35-22	Diagnose Malfunctions	105-4
Repair Aneroid	35-23	Dynamometer Test	105-6
Remove Hydraulic Aneroid Activator	35-23	Engine Break-In Instructions	105-7
Disassemble And Clean Hydraulic Aneroid Activator Parts	35-24	Test Engine Compression Pressure	105-8
Assemble and Install Hydraulic Aneroid Activator	35-24	Check and Adjust Valve Clearance	105-9
Service Overflow Valve	35-25	Check Valve Lift	105-11
Remove Fuel Shutoff Solenoid	35-26	Inspect Vibration Damper	105-12
Install Fuel Shutoff Solenoid	35-27	Check Crankshaft End Play	105-13
Remove Fuel Injection Pump	35-28	How the Lubrication System Works	105-14
Install Fuel Injection Pump	35-31	Check Engine Oil Pressure	105-15
Remove Fuel Injection Nozzles	35-35	How The Cooling System Works	105-16
		Pressure Test Cooling System and Radiator Cap	105-17
		Inspect Thermostat and Test Opening Temperature	105-18
		Group 110—Air Intake System Operation and Test	
		Essential Tools	110-1

Continued on next page

Contents

	Page		Page
Specifications	110-2	Group 199—Dealer Fabricated Tools	
How the Air Intake and Exhaust System Works	110-2	Fabricated Tools—Cylinder Liner Holding Fixture	199-1
Air Cleaner Operation	110-3		
Diagnosing Malfunctions	110-4	Index	
How The Turbocharger Works	110-5		
How The Turbocharger is Lubricated	110-5		
Diagnosing Turbocharger Malfunctions	110-6		
How The Aftercooler Works—6076A Engines	110-7		
Check Intake Manifold Pressure At Aneroid	110-8		
Check Intake Manifold Pressure At Intake Manifold	110-9		
Air Filter Restriction Indicator Switch Test	110-10		
Group 115—Fuel System Operation and Tests			
Essential Tools	115-1		
Specifications	115-1		
Fuel System Operation	115-2		
Diagnose Fuel System Malfunctions	115-3		
Supply Pump Operation	115-7		
Diagnose Supply Pump Malfunction	115-9		
Check Supply Pump Operation	115-10		
Service Supply Pump	115-12		
Bleed the Fuel System	115-13		
Diagnose In-Line Type Injection Pump Malfunctions	115-15		
In-Line Type Fuel Injection Pump Operation	115-16		
Check and Adjust Injection Pump Timing	115-16		
Check Engine Fast Idle Speed	115-19		
Check and Adjust Engine Slow Idle Speed	115-20		
How The Aneroid Works (If Equipped)	115-22		
Diagnose Aneroid Malfunctions	115-23		
How The Hydraulic Aneroid Activator Works	115-24		
Diagnose Malfunctions—Hydraulic Aneroid Activator	115-25		
Fuel Injection Nozzle—General Information	115-26		
Fuel Injection Nozzle Operation	115-27		
Diagnose Malfunctions—Fuel Injection Nozzle	115-28		
Test Fuel Injection Nozzles (Engine Running)	115-29		
Fuel Drain Back Test Procedure	115-29		


ABOUT THIS MANUAL

This Component Technical Manual (CTM6) covers the recommended repair procedure for all 6076, 7.6 L (466 cu. in.) diesel engines, serial no. (—499999), and produced in Waterloo, Iowa. For repair information on 6076 engines produced after serial no. (499999—) refer to CTM42.

Before beginning repair of an engine, clean engine and mount on a repair stand. (See ENGINE MOUNTING in Group 03.)

Some components of this engine may be serviced without removing the engine from the machine. Refer to the specific machine technical manuals for information or components that can be serviced without removing the engine from the machine and for engine removal and installation procedures.

Follow only the procedures that apply to the engine model number you are working on. If only one procedure is given, that procedure applies to all 6076 diesel engines in this manual.

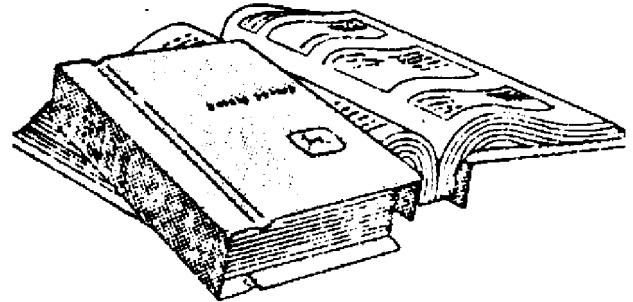

00
1
RG4624 -UN-15DEC88

S55,2000,DA -19-24SEP91

HANDLE FLUIDS SAFELY—AVOID FIRES

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.



TS227 -UN-23AUG88

DX,FLAME -19-04JUN90

00
2

PREVENT BATTERY EXPLOSIONS

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).



DX, SPARKS -19-04JUN90


TS204
-UN-23AUG88

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

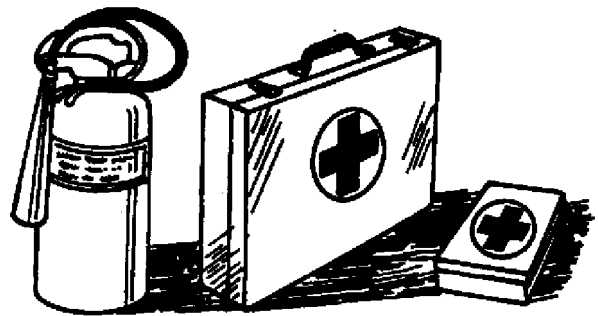

DX, FIRE2 -19-04JUN90

TS291
-UN-23AUG88

PREVENT ACID BURNS

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:


1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 10—15 minutes. Get medical attention immediately.

If acid is swallowed:

1. Drink large amounts of water or milk.
2. Then drink milk of magnesia, beaten eggs, or vegetable oil.
3. Get medical attention immediately.

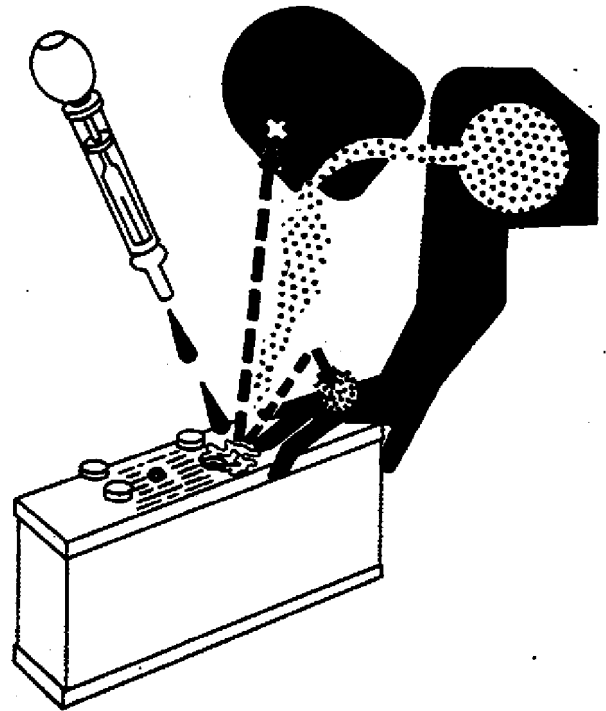

DX.POISON -19-04JUN90

00
3

TSS203 -UN-23AUG88

00
4


AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

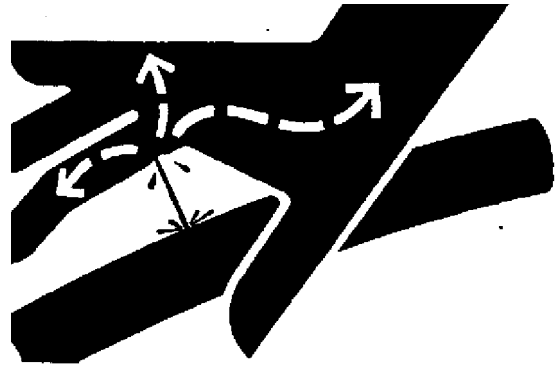

X9811 -JUN-23AUG88

DX,FLUID -19-09AUG91


WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

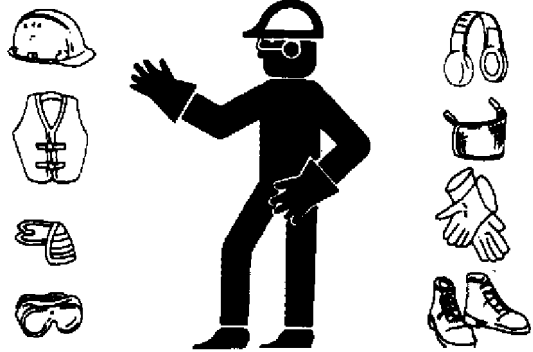


TS206 -JUN-23AUG88

DX,WEAR -19-10SEP90

SERVICE MACHINES SAFELY

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

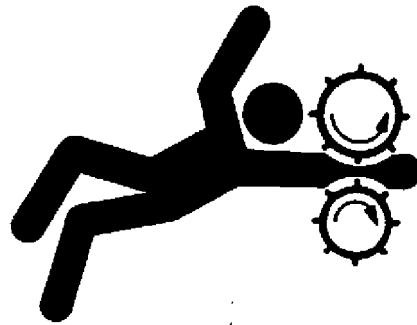


DX, LOOSE -19-04JUN90

TS228 -UN-23AUG88

WORK IN VENTILATED AREA

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

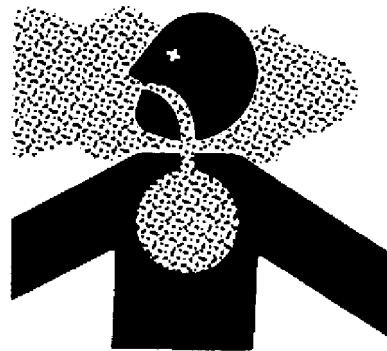


DX, AIR -19-04JUN90

TS220 -UN-23AUG88

WORK IN CLEAN AREA

Before starting a job:

- Clean work area and machine.
- Make sure you have all necessary tools to do your job.
- Have the right parts on hand.
- Read all instructions thoroughly; do not attempt shortcuts.

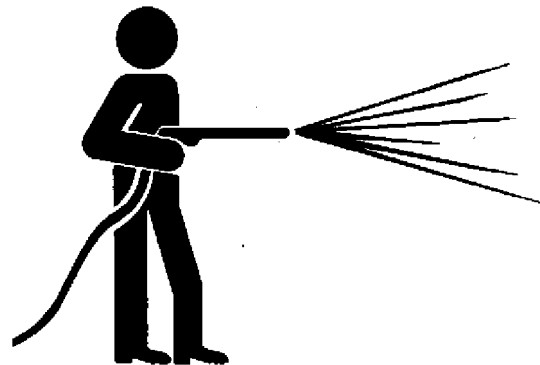

DX, CLEAN -19-04JUN90

T6642EJ -UN-18OCT88

00
6

REMOVE PAINT BEFORE WELDING OR HEATING


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

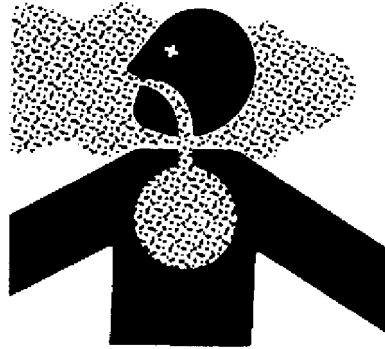

DX,PAINT -19-04JUN90

TS220 -UN-23AUG88

AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



DX,TORCH -19-05OCT90

TS953 -UN-15MAY90

ILLUMINATE WORK AREA SAFELY

Illuminate your work area adequately but safely. Use a portable safety light for working inside or under the machine. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.




DX,LIGHT -19-04JUN90

TS223 -UN-23AUG88

USE PROPER LIFTING EQUIPMENT

Lifting heavy components incorrectly can cause severe injury or machine damage.

Follow recommended procedure for removal and installation of components in the manual.

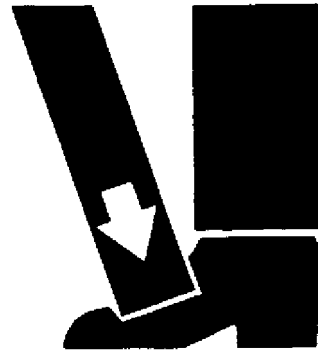

DX,LIFT -19-04JUN90

TS226 -UN-23AUG88


AVOID HARMFUL ASBESTOS DUST

Avoid breathing dust that may be generated when handling components containing asbestos fibers. Inhaled asbestos fibers may cause lung cancer.

Components in products that may contain asbestos fibers are brake pads, brake band and lining assemblies, clutch plates, and some gaskets. The asbestos used in these components is usually found in a resin or sealed in some way. Normal handling is not hazardous as long as airborne dust containing asbestos is not generated.

Avoid creating dust. Never use compressed air for cleaning. Avoid brushing or grinding material containing asbestos. When servicing, wear an approved respirator. A special vacuum cleaner is recommended to clean asbestos. If not available, apply a mist of oil or water on the material containing asbestos.

Keep bystanders away from the area.

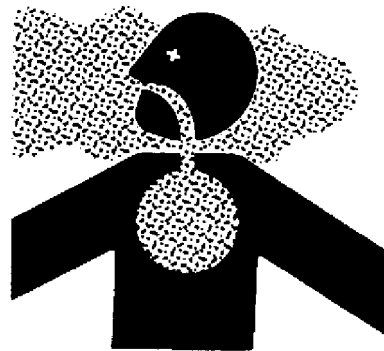

DX,DUST -19-15MAR91

TS220 -UN-23AUG88

PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate or service machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



DX,SERV -19-04JUN90

TS218 -UN-23AUG88

USE PROPER TOOLS

Use tools appropriate to the work. Makeshift tools and procedures can create safety hazards.

Use power tools only to loosen threaded parts and fasteners.

For loosening and tightening hardware, use the correct size tools. DO NOT use U.S. measurement tools on metric fasteners. Avoid bodily injury caused by slipping wrenches.

Use only service parts meeting John Deere specifications.



DX,REPAIR -19-04JUN90

TS779 -UN-08NOV89

DISPOSE OF WASTE PROPERLY


Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

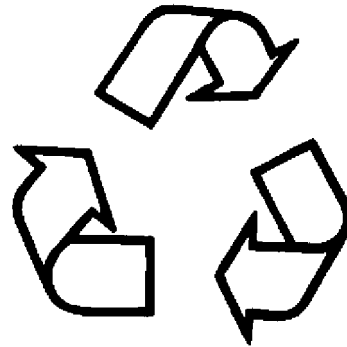

DX,DRAIN -19-09AUG91

00
9
TS1133 -JUN-26NOV90

LIVE WITH SAFETY







Before returning machine to customer, make sure machine is functioning properly, especially the safety systems. Install all guards and shields.



DX,LIVE -19-04JUN90

TS231 -19-07OCT88

UNIFIED INCH BOLT AND CAP SCREW TORQUE VALUES

SAE Grade and Head Markings	NO MARK	1 or 2 ^b 	5 5.1 5.2 	8 8.2 
SAE Grade and Nut Markings	NO MARK	2 	5 	8 

Size	Grade 1				Grade 2 ^b				Grade 5, 5.1, or 5.2				Grade 8 or 8.2			
	Lubricated ^a		Dry ^a		Lubricated ^a		Dry ^a		Lubricated ^a		Dry ^a		Lubricated ^a		Dry ^a	
	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft
1/4	3.7	2.8	4.7	3.5	6	4.5	7.5	5.5	9.5	7	12	9	13.5	10	17	12.5
5/16	7.7	5.5	10	7	12	9	15	11	20	15	25	18	28	21	35	26
3/8	14	10	17	13	22	16	27	20	35	26	44	33	50	36	63	46
7/16	22	16	28	20	35	26	44	32	55	41	70	52	80	58	100	75
1/2	33	25	42	31	53	39	67	50	85	63	110	80	120	90	150	115
9/16	48	36	60	45	75	56	95	70	125	90	155	115	175	130	225	160
5/8	67	50	85	62	105	78	135	100	170	125	215	160	215	160	300	225
3/4	120	87	150	110	190	140	240	175	300	225	375	280	425	310	550	400
7/8	190	140	240	175	190	140	240	175	490	360	625	450	700	500	875	650
1	290	210	360	270	290	210	360	270	725	540	925	675	1050	750	1300	975
1-1/8	470	300	510	375	470	300	510	375	900	675	1150	850	1450	1075	1850	1350
1-1/4	570	425	725	530	570	425	725	530	1300	950	1650	1200	2050	1500	2600	1950
1-3/8	750	550	950	700	750	550	950	700	1700	1250	2150	1550	2700	2000	3400	2550
1-1/2	1000	725	1250	925	990	725	1250	930	2250	1650	2850	2100	3600	2650	4550	3350

DO NOT use these values if a different torque value or tightening procedure is given for a specific application. Torque values listed are for general use only. Check tightness of fasteners periodically.

Shear bolts are designed to fail under predetermined loads. Always replace shear bolts with identical grade.

Fasteners should be replaced with the same or higher grade. If higher grade fasteners are used, these should only be tightened to the strength of the original.

Make sure fasteners threads are clean and that you properly start thread engagement. This will prevent them from failing when tightening.

Tighten plastic insert or crimped steel-type lock nuts to approximately 50 percent of the dry torque shown in the chart, applied to the nut, not to the bolt head. Tighten toothed or serrated-type lock nuts to the full torque value.

^a "Lubricated" means coated with a lubricant such as engine oil, or fasteners with phosphate and oil coatings. "Dry" means plain or zinc plated without any lubrication.

^b Grade 2 applies for hex cap screws (not hex bolts) up to 152 mm (6-in.) long. Grade 1 applies for hex cap screws over 152 mm (6-in.) long, and for all other types of bolts and screws of any length.