

**6076
Natural Gas
Engines
Serial Number
(500000—)**



JOHN DEERE

 
COMPONENT TECHNICAL MANUAL

**6076 Natural Gas Engines Serial
Number (500000—)**

CTM82 (11JUN93) English

**Deere Power Systems Group
CTM82 (11JUN93)**

LITHO IN U.S.A.
ENGLISH



Introduction

FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Use this component technical manual in conjunction with the machine technical manual. An application listing in the introduction identifies product-model/component type-model relationship. See the machine technical manual for information on component removal and installation, and gaining access to the components.

This manual is divided in two parts: repair and operation and tests. Repair sections contain

necessary instructions to repair the component. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Component Technical Manuals are concise service guides for specific components. Component technical manuals are written as stand-alone manuals covering multiple machine applications.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

ABOUT THIS MANUAL

This component technical manual covers the recommended repair procedure for 6076, 7.6 L (466 cu. in.) natural gas engines produced in Waterloo, Iowa beginning with Engine Serial No. (500000—).

Before beginning repair of an engine, clean the engine and mount on a repair stand. (See Group 03 - Engine Mounting.)

Direction of engine crankshaft rotation in this manual is referenced from the flywheel end looking toward the front. Front of engine is fan drive end.

Read each module completely before performing any service.

Contents

	Page		Page
Group 00—Safety		Cylinder Head and Valves Specifications	05-4
General	00-1	Service Equipment and Tools	05-6
Group 01—General Information		Other Material	05-7
Unified Inch Bolt and Cap Screw Torque		Check and Adjust Valve Clearance	05-7
Values	01-1	Check Valve Lift	05-9
Metric Bolt and Cap Screw Torque		Remove Cylinder Head	05-10
Values	01-2	Disassemble and Inspect Rocker Arm	
Engine Model Designation	01-3	Shaft Assembly	05-12
Engine Serial Number Plate Information	01-4	Assemble Rocker Arm Shaft Assembly	05-13
Group 02—Fuels, Lubricants, and Coolant		Measure Valve Recess	05-14
Engine Oil	02-1	Preliminary Cylinder Head and Valve	
Natural Gas Recommendations	02-2	Checks	05-15
Oilscan® and Coolscan™	02-3	Remove Valve Assembly	05-16
Grease	02-3	Inspect and Measure Valve Springs	05-16
Engine Coolant Requirements	02-4	Inspect Valve Rotators and Wear Caps	05-17
John Deere Engine Cooling Fluid	02-8	Clean Valves	05-17
Check Effectiveness of Coolant Solution	02-9	Inspect and Measure Valves	05-18
Replenishing Supplemental Coolant		Grind Valves	05-19
Additives	02-10	Inspect and Clean Cylinder Head	05-19
Flushing and Servicing Cooling System	02-11	Check Cylinder Head Combustion Face	
Disposing of Coolant	02-12	Flatness	05-20
Group 03—Engine Mounting		Measure Cylinder Head Thickness	05-21
Engine Repair Stand	03-1	Clean Valve Guides	05-22
Safety Precautions	03-2	Measure Valve Guides	05-22
Install 400 Series Adapters on Repair		Knurl Valve Guides	05-23
Stand	03-2	Clean and Inspect Valve Seats	05-23
Engine Lifting Procedure	03-3	Measure Valve Seats	05-24
Clean Engine	03-3	Grind Valve Seats	05-25
Disconnect Turbocharger Oil Inlet Line	03-4	Remove Valve Seat Inserts	05-26
Mount Engine On Repair Stand	03-5	Measure Valve Seat Bore	05-27
Group 04—Engine Rebuild Guide		Install Valve Seat Inserts	05-27
Engine Disassembly Sequence	04-1	Inspect and Clean Cylinder Head Spark	
Sealant Application Guidelines	04-2	Plug Bore	05-28
Engine Assembly Sequence	04-4	Clean and Inspect Push Rods	05-28
Group 05—Cylinder Head and Valves		Inspect and Clean Ventilator Outlet Hose	05-29
Special or Essential Tools	05-1	Clean and Inspect Top Deck of Cylinder	
		Block	05-29
		Measure Cylinder Liner Standout (Height	
		above Block)	05-30
		Assemble Valve Assembly	05-31
		Install Cylinder Head	05-32

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

CTM82-19-11JUN93

COPYRIGHT© 1993
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

Contents

		Page		Page
00	Tighten Flanged-Head Cylinder Head Cap		Install Piston Cooling Orifices and Gallery	
	Screws	05-34	Plugs	10-36
01	TORQUE-TURN Flanged-Head Cap		Measure Liner Flange Thickness	10-37
	Screws	05-35	Recheck Cylinder Liner Standout (Height	
	Install Rocker Arm Assembly	05-36	above Block)	10-37
02	Complete Final Assembly Of Water Pump		Install Liner Shims—If Required	10-38
	Side	05-37	Install Cylinder Liner O-Rings and	
03	Complete Final Assembly On Exhaust		Packings	10-39
	Manifold Side	05-38	Cylinder Liner Manufacturing Date Code	
	Perform Engine Break-In	05-40	Explanation	10-40
			Install Cylinder Liners	10-41
			Install Pistons and Connecting Rods	10-43
			Use TORQUE-TURN Method For Proper	
			Torque	10-45
			Check Engine Rotation for Excessive	
			Tightness	10-46
			Complete Final Assembly	10-46
	Group 10—Cylinder Block, Liners, Pistons and		Group 15—Crankshaft, Main Bearings and	
	 Rods		 Flywheel	
04	Special or Essential Tools	10-1	Special or Essential Tools	15-1
	Service Equipment and Tools	10-3	Service Equipment and Tools	15-4
	Other Material	10-4	Other Material	15-4
05	Cylinder Block, Liners, Pistons, and Rods		Crankshaft, Main Bearings, and Flywheel	
	Specifications	10-5	Specifications	15-5
	Preliminary Liner, Piston, and Rod		Failure Analysis	15-7
	Checks	10-9	Remove Crankshaft Rear Oil Seal	
10	Remove Pistons and Connecting Rods	10-10	Housing	
	Measure Cylinder Liner Standout (Height		(With Oil Seal Housing Installed)	15-8
	above Block)	10-14	Install Crankshaft Rear Oil Seal and	
15	Remove Cylinder Liners	10-15	Wear Sleeve	
	Remove Piston Rings	10-16	(Without Engine Disassembly)	15-10
	Clean Pistons	10-17	Inspect Vibration Damper	15-11
16	Clean Cylinder Liners	10-17	Check Crankshaft End Play	15-12
	Visually Inspect Pistons	10-18	Remove Damper Pulley	15-13
	Check Piston Ring Groove Wear	10-18	Remove Crankshaft Front Oil Seal	
	Install Piston Pin in Piston	10-19	(With Timing Gear Cover Installed on	
20	Visually Inspect Cylinder Liners	10-20	Engine)	15-14
	Measure Piston Skirt OD	10-21	Remove Crankshaft Front Wear Sleeve	
	Measure Oil Control Ring Groove	10-22	(With Timing Gear Cover Installed or	
25	Measure Cylinder Liners	10-23	Removed)	15-15
	Deglazing Cylinder Liners	10-24	Install Crankshaft Front Wear Sleeve	15-16
	Inspect and Measure Connecting Rod		Install Crankshaft Front Oil Seal	
	Bearings	10-25	(With Timing Gear Cover Installed)	15-17
30	Inspect Rod and Cap	10-26	Remove Timing Gear Cover	15-17
	Inspect Piston Pins and Bushings	10-27	Inspect, Measure and Repair Flywheel	15-18
	Remove Piston Pin Bushing	10-29	Check Flywheel Housing Face Run-Out	15-18
35	Clean and Inspect Connecting Rod Pin		Check Flywheel Face Flatness	15-19
	Bore	10-29	Check Pilot Bearing Bore Concentricity	15-19
	Install Piston Pin Bushing in Connecting		Remove Flywheel	15-20
	Rod	10-31		
40	Remove and Clean Piston Cooling			
	Orifices	10-32		
100	Inspect and Clean Cylinder Block	10-32		
	Clean Cylinder Liner O-Ring Bore	10-34		
	Measure Cylinder Block	10-34		

Continued on next page

Contents

	Page		Page
Remove SAE 1 and SAE 2 Flywheel Housing	15-20	Remove Camshaft Gear and Ignition Timing Wheel	16-10
Remove SAE 3 Flywheel Housing	15-21	Measure Thrust Washer Thickness	16-10
Replace Flywheel Ring Gear	15-21	Inspect and Measure Camshaft Followers	16-11
Remove Rear Oil Seal Housing and Wear Sleeve (With Engine Disassembled)	15-22	Visually Inspect Camshaft	16-11
Remove Crankshaft Main Bearings	15-23	Measure Camshaft Journal OD and Bushing ID	16-12
Check Main Bearing Clearance	15-24	Measure Camshaft Lobe Lift	16-12
Remove Crankshaft	15-25	Install Camshaft Gear and Ignition Timing Wheel	16-13
Remove and Inspect Crankshaft Gear	15-26	Service Camshaft Bushings using JDG602 Adapter Set	16-14
Inspect Crankshaft	15-27	Service Camshaft Bushings using JDG606 Adapter Set	16-16
Measure Assembled ID of Bearings And OD Of Crankshaft Journals	15-28	Install Camshaft	16-17
Main Bearing Cap Line Bore Specifications	15-30	Install Thrust Washer and Timing Gear Cover	16-19
Crankshaft Grinding Guidelines	15-31	Complete Final Assembly	16-20
Thrust Bearing New Part Specifications	15-33		
Crankshaft Grinding Specifications	15-34	Group 20—Lubrication System	
Replace Crankshaft Oil Pump Drive Gear	15-35	Other Material	20-1
Inspect Thrust Bearings	15-36	Lubrication System Specifications	20-1
Remove and Clean Piston Cooling Orifices	15-36	Drain Engine Oil and Remove Oil Pan	20-2
Install Main Bearings	15-37	Oil Filter and Oil Conditioning Housing Assembly	20-3
Install Crankshaft Gear	15-38	Remove Oil Filter and Oil Conditioning Housing	20-4
Install Crankshaft	15-39	Remove, Inspect, and Install Valves from Oil Conditioning Housing	20-5
Install Crankshaft Rear Oil Seal Housing	15-40	Install Oil Filter and Oil Conditioning Housing	20-6
Check Oil Seal Housing Runout	15-41	Remove Engine Oil Cooler	20-7
Crankshaft Rear Oil Seal And Wear Sleeve Handling Precautions	15-42	Clean, Inspect, and Install Engine Oil Cooler	20-8
Install Crankshaft Rear Oil Seal and Wear Sleeve Assembly	15-43	Engine Oil Pump Assembly—Deep and Standard Sump	20-9
Install Timing Gear Cover	15-44	Check Crankshaft Gear-To-Oil Pump Drive Gear Backlash	20-10
Install SAE 3 Flywheel Housing	15-45	Remove Engine Oil Pump	20-10
Install Flywheel	15-46	Inspect and Clean Oil Pump	20-11
Install SAE 1 and SAE 2 Flywheel Housing	15-47	Check Drive Shaft End Play	20-11
Install Damper Pulley Assembly	15-48	Check Drive Shaft Side Movement	20-12
Complete Final Assembly	15-48	Check Pumping Gear Backlash	20-12
		Inspect Oil Pump Drive Gear	20-13
Group 16—Camshaft and Timing Gear Train		Install Engine Oil Pump	20-13
Special or Essential Tools	16-1	Install Oil Pan	20-15
Other Material	16-3		
Camshaft and Timing Gear Train Specifications	16-4	Group 25—Cooling System	
Check Valve Lift	16-5	Special or Essential Tools	25-1
Check Camshaft End Play	16-6	Other Material	25-2
Measure Camshaft Drive Gear-to-Crankshaft Gear Backlash	16-6	Cooling System Specifications	25-3
Remove Timing Gear Cover	16-7		
Remove Camshaft	16-8		

Continued on next page

105

110

115

120

125

199

INDX

Contents

105
110
115
120
125
199

INDX

Page

Page

Service Equipment and Tools 25-4
 Remove Engine Water Pump 25-5
 Disassemble Engine Water Pump 25-6
 Inspect Water Pump Parts 25-8
 Assemble Engine Water Pump 25-9
 Install Engine Water Pump 25-11
 Remove and Install Auxiliary Water Pump 25-12
 Inspect and Clean Aftercooler Orifice Fitting 25-13
 Remove and Test Thermostats 25-13
 Install Thermostats 25-14
 Remove Water Manifold 25-15
 Water Manifold Mounted Fixed Fan Drive Assembly 25-16
 Install Water Manifold 25-17
 Remove Coolant Heater 25-17
 Install Coolant Heater 25-18
 Complete Final Assembly 25-19

Group 30—Air Intake And Exhaust System

Special or Essential Tools 30-1
 Other Material 30-1
 Air Intake and Exhaust System Specifications 30-1
 Extending Turbocharger Life 30-3
 Remove Turbocharger 30-6
 Turbocharger Failure Analysis 30-7
 Turbocharger Seven-Step Inspection 30-9
 Perform Radial Bearing Clearance Test 30-13
 Perform Axial Bearing End Play Test 30-14
 Repair Turbocharger 30-14
 Prelube Turbocharger 30-15
 Install Turbocharger 30-16
 Remove Aftercooler Assembly 30-17
 Inspect and Repair Aftercooler 30-18
 Inspect and Repair Intake Manifold and Aftercooler Cover 30-19
 Assemble and Install Aftercooler Assembly 30-20
 Remove, Inspect, and Install Exhaust Manifold 30-22

Group 35—Fuel System

Other Material 35-1
 Fuel System Specifications 35-1
 Replace Natural Gas Filter 35-2
 Remove and Install 20 PSI Carburetor 35-3
 Remove and Install 4 PSI Carburetor 35-4
 Replace Diaphragm(s) in Carburetor 35-5
 Service Natural Gas Regulator 35-6

Group 40—Ignition System and Electronic Governor

Special or Essential Tools 40-1
 Other Materials 40-2
 Ignition System and Electronic Governor Specifications 40-2
 Check Ignition Timing Indicator Alignments 40-3
 Remove and Install Spark Plugs 40-4
 Inspect, Clean, and Adjust Spark Plugs 40-4
 Remove and Install Ignition Timing Sensor 40-5
 Remove and Install Ignition Sensor Plate 40-5
 Remove and Install Manifold Absolute Pressure Sensor 40-6
 Remove and Install Charge Air Temperature Switch 40-6
 Remove and Install Ignition Coils 40-7
 Remove and Install Ignition Control Unit 40-7
 Remove and Install Ignition System Mounting Plate 40-8
 Remove and Install Electronic Governor 40-8
 Remove and Install Throttle Actuator 40-9
 Remove and Install Electronic Governor Speed Sensor 40-10
 Remove and Install Governor and Ignition System Wiring Harness 40-11
 Replace Weather Pack™ Connector 40-12
 Install Weather Pack™ Contact 40-13

Group 100—Engine Tune-Up and Break-In

Altitude Compensation Guideline 100-1
 Preliminary Engine Testing 100-1
 General Tune-Up Recommendations 100-2
 Dynamometer Test 100-3
 Engine Break-In Guidelines 100-3
 Engine Break-In Instructions 100-4
 Check Crankcase Ventilation System 100-4
 Check Air Intake System 100-5
 Check Exhaust System 100-5
 Check and Service Cooling System 100-6
 Check Electrical System 100-8

Group 105—Engine System Operation and Test

Special or Essential Tools 105-1
 Engine Test Specifications 105-2
 Engine—Sectional View 105-4
 General Engine Description 105-5
 How the Lubrication System Works 105-6
 How the Cooling System Works 105-10

Continued on next page

Contents

	Page		Page
Head Gasket Joint Construction and Operation	105-14	Troubleshoot Primary and Secondary Ignition System	120-6
Diagnosing Head Gasket Joint Failures	105-16	Troubleshoot Ignition Timing and Governor Speed Sensors	120-8
Head Gasket Inspection and Repair Sequence	105-19	Adjust Overspeed Shutdown	120-9
Test Engine Compression Pressure	105-21	Adjust Ignition Timing	120-10
Check Engine Oil Pressure	105-22	How the Electronic Governor Works	120-11
Pressure Test Cooling System and Radiator Cap	105-23	Troubleshoot Remote Speed Potentiometer	120-12
Inspect Thermostat and Test Opening Temperature	105-24	Troubleshoot Throttle Actuator	120-13
Group 110—Air Intake System Operation and Test		Adjust Electronic Governor	120-14
Special or Essential Tools	110-1	Wiring Diagrams	
Service Equipment and Tools	110-1	Instrument Panel/Engine	120-16
Air Intake and Exhaust System Test Specifications	110-1	Reading a Wiring Diagram	120-17
How the Air Intake and Exhaust System Works	110-2	Wiring Harness Connectors	120-18
Air Cleaner Operation	110-2	Ignition System and Electronic Governor	120-19
Diagnosing Turbocharger Malfunctions	110-3	Primary Ignition System	120-20
How The Turbocharger Works	110-4	Group 125—Engine Diagnostics	
How The Turbocharger is Lubricated	110-4	Diagnose Engine Malfunctions	125-1
How The Aftercooler Works	110-5	Group 199—Dealer Fabricated Tools	
Check Intake Manifold Pressure	110-6	How to Make Tools	199-1
Troubleshoot Charge Air Temperature Switch (CATS)	110-7	Cylinder Liner Holding Fixture	199-1
How the Pyrometer Shutdown Works	110-8	Index	
Adjust Pyrometer Shutdown Temperature	110-9		
Group 115—Fuel System Operation and Test			
Service Equipment and Tools	115-1		
Fuel System Test Specifications	115-1		
How the Fuel System Works	115-2		
Adjust Low Idle Speed	115-6		
Adjust Low Idle Fuel Mixture	115-6		
Adjust Air/Fuel Mixture	115-7		
Adjust Regulator Differential Gas Pressure	115-8		
Group 120—Ignition System Operation and Test			
Special or Essential Tools	120-1		
Service Equipment and Tools	120-1		
How the Ignition System Works	120-2		
Ignition Control Unit (ICU) Self-Diagnostic Test	120-4		
Troubleshoot Manifold Absolute Pressure (MAP) Sensor	120-5		

Contents

HANDLE FLUIDS SAFELY—AVOID FIRES

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.



DX,FLAME -19-04JUN90

00
1
-UN-23AUG88
TS227

HANDLE NATURAL GAS SAFELY


Handle natural gas with care: it is highly flammable. Do NOT smoke while working on or around natural gas equipment.

Natural gas fumes may cause sickness or death. Work in well ventilated area.

Shut off natural gas supply before servicing equipment.

Have a manual valve installed away from the engine to shut off gas supply in case of an emergency.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris.

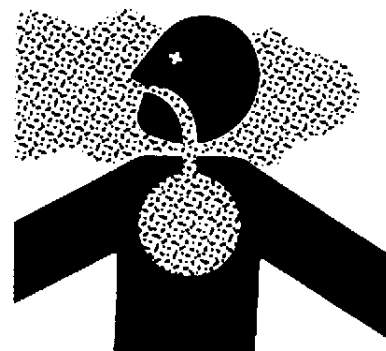

RG,NATGAS,SFTY -19-26FEB93

-UN-23AUG88
TS227
-UN-23AUG88
TS220

PREVENT BATTERY EXPLOSIONS

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).



DX,SPARKS -19-03MAR93


TS204
-UN-23AUG88

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

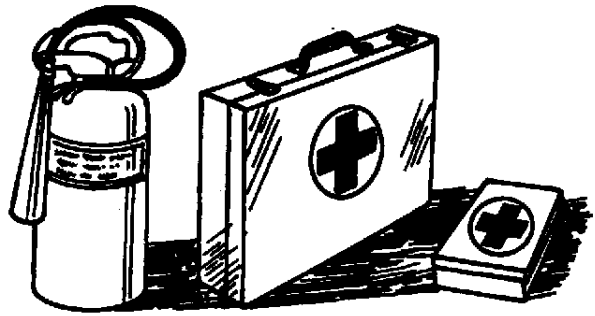

DX,FIRE2 -19-03MAR93

TS291
-UN-23AUG88

PREVENT ACID BURNS

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:


1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 15—30 minutes. Get medical attention immediately.

If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 quarts).
3. Get medical attention immediately.

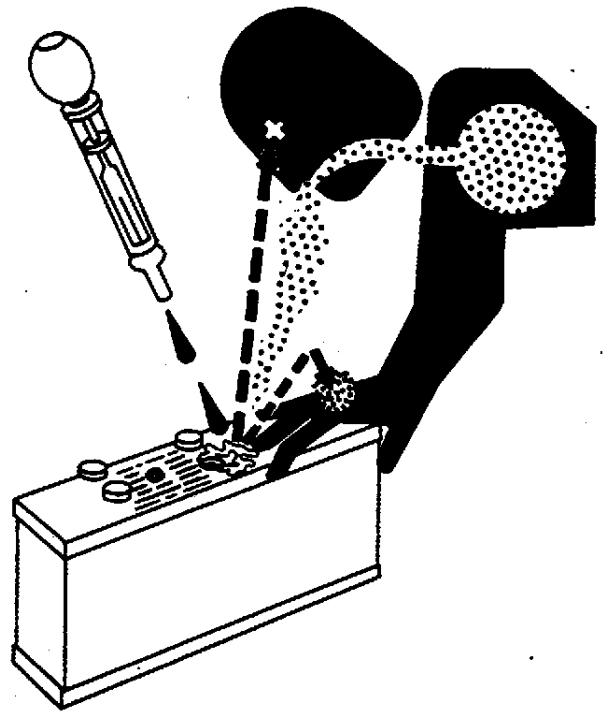

DX,POISON -19-21APR93

TS203 -UN-23AUG88

00
3

00
4


AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

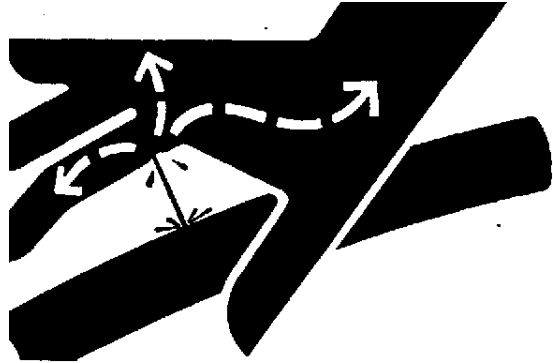

-JUN-23AUG88

X9811

DX,FLUID -19-03MAR93


WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

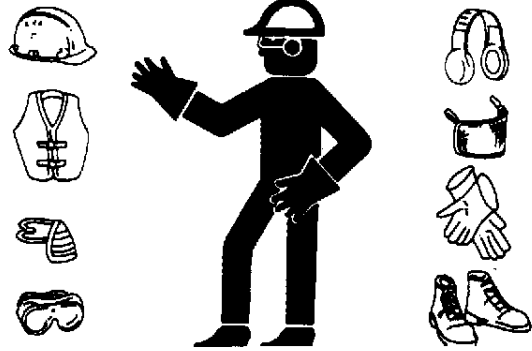

-JUN-23AUG88


TS206

DX,WEAR -19-10SEP90

SERVICE MACHINES SAFELY

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

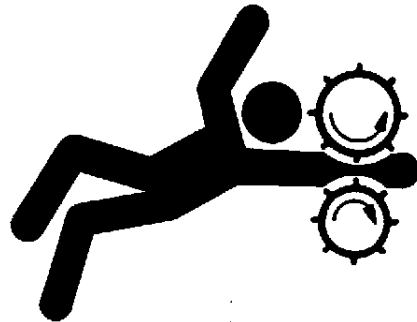


DX, LOOSE -19-04JUN90

TS228 -UN-23AUG88

WORK IN VENTILATED AREA

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

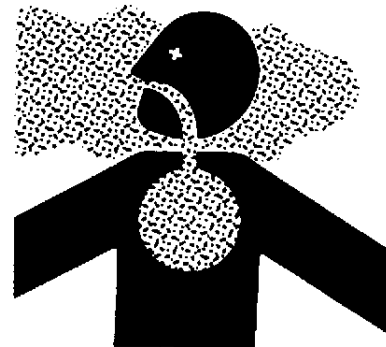


DX, AIR -19-04JUN90

TS220 -UN-23AUG88

WORK IN CLEAN AREA

Before starting a job:

- Clean work area and machine.
- Make sure you have all necessary tools to do your job.
- Have the right parts on hand.
- Read all instructions thoroughly; do not attempt shortcuts.

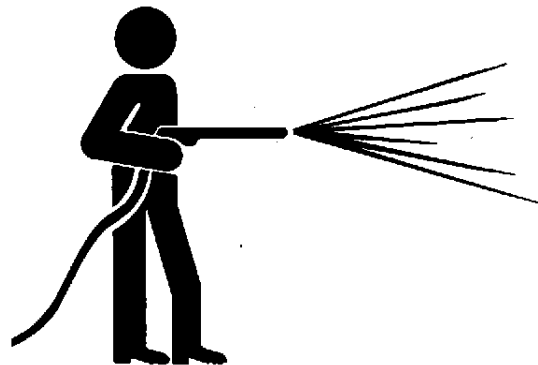

DX, CLEAN -19-04JUN90

T6642EJ -UN-18OCT88

REMOVE PAINT BEFORE WELDING OR HEATING


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

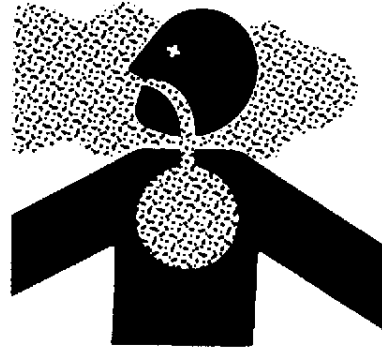

DX,PAINT -19-03MAR93

TS220 -UN-23AUG88

AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



DX,TORCH -19-03MAR93

TS953 -UN-15MAY90

ILLUMINATE WORK AREA SAFELY

Illuminate your work area adequately but safely. Use a portable safety light for working inside or under the machine. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.




DX,LIGHT -19-04JUN90

TS223 -UN-23AUG88

USE PROPER LIFTING EQUIPMENT

Lifting heavy components incorrectly can cause severe injury or machine damage.

Follow recommended procedure for removal and installation of components in the manual.

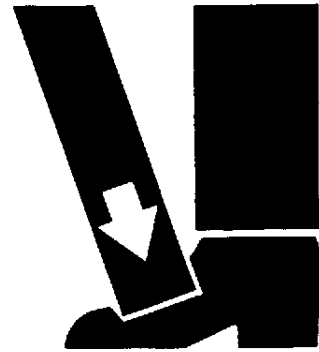

DX,LIFT -19-04JUN90

TS226 -UN-23AUG88

PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



DX,SERV -19-03MAR93

TS218 -UN-23AUG88

USE PROPER TOOLS

Use tools appropriate to the work. Makeshift tools and procedures can create safety hazards.

Use power tools only to loosen threaded parts and fasteners.

For loosening and tightening hardware, use the correct size tools. DO NOT use U.S. measurement tools on metric fasteners. Avoid bodily injury caused by slipping wrenches.

Use only service parts meeting John Deere specifications.



-UN-08NOV89
TSS779

DX,REPAIR -19-04JUN90

DISPOSE OF WASTE PROPERLY


Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

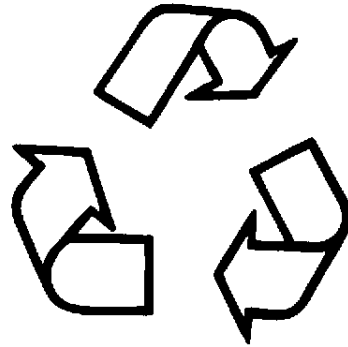

-UN-26NOV90
TSS1133

DX,DRAIN -19-03MAR93

LIVE WITH SAFETY

Before returning machine to customer, make sure machine is functioning properly, especially the safety systems. Install all guards and shields.



DX,LIVE -19-25SEP92











TS231 -19-07OCT88

00
9

Safety/General

00
10

UNIFIED INCH BOLT AND CAP SCREW TORQUE VALUES

SAE Grade and Head Markings	NO MARK 	1 or 2 ^b	5 	5.1 	5.2 	8 	8.2 
SAE Grade and Nut Markings	NO MARK 	2	5 			8 	

Size	Grade 1				Grade 2 ^b				Grade 5, 5.1, or 5.2				Grade 8 or 8.2			
	Lubricated ^a		Dry ^a		Lubricated ^a		Dry ^a		Lubricated ^a		Dry ^a		Lubricated ^a		Dry ^a	
	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft
1/4	3.7	2.8	4.7	3.5	6	4.5	7.5	5.5	9.5	7	12	9	13.5	10	17	12.5
5/16	7.7	5.5	10	7	12	9	15	11	20	15	25	18	28	21	35	26
3/8	14	10	17	13	22	16	27	20	35	26	44	33	50	36	63	46
7/16	22	16	28	20	35	26	44	32	55	41	70	52	80	58	100	75
1/2	33	25	42	31	53	39	67	50	85	63	110	80	120	90	150	115
9/16	48	36	60	45	75	56	95	70	125	90	155	115	175	130	225	160
5/8	67	50	85	62	105	78	135	100	170	125	215	160	215	160	300	225
3/4	120	87	150	110	190	140	240	175	300	225	375	280	425	310	550	400
7/8	190	140	240	175	190	140	240	175	490	360	625	450	700	500	875	650
1	290	210	360	270	290	210	360	270	725	540	925	675	1050	750	1300	975
1-1/8	470	300	510	375	470	300	510	375	900	675	1150	850	1450	1075	1850	1350
1-1/4	570	425	725	530	570	425	725	530	1300	950	1650	1200	2050	1500	2600	1950
1-3/8	750	550	950	700	750	550	950	700	1700	1250	2150	1550	2700	2000	3400	2550
1-1/2	1000	725	1250	925	990	725	1250	930	2250	1650	2850	2100	3600	2650	4550	3350

DO NOT use these values if a different torque value or tightening procedure is given for a specific application. Torque values listed are for general use only. Check tightness of fasteners periodically.

Fasteners should be replaced with the same or higher grade. If higher grade fasteners are used, these should only be tightened to the strength of the original.

Shear bolts are designed to fail under predetermined loads. Always replace shear bolts with identical grade.


Make sure fasteners threads are clean and that you properly start thread engagement. This will prevent them from failing when tightening.

Tighten plastic insert or crimped steel-type lock nuts to approximately 50 percent of the dry torque shown in the chart, applied to the nut, not to the bolt head. Tighten toothed or serrated-type lock nuts to the full torque value.

^a "Lubricated" means coated with a lubricant such as engine oil, or fasteners with phosphate and oil coatings. "Dry" means plain or zinc plated without any lubrication.

^b Grade 2 applies for hex cap screws (not hex bolts) up to 152 mm (6-in.) long. Grade 1 applies for hex cap screws over 152 mm (6-in.) long, and for all other types of bolts and screws of any length.

METRIC BOLT AND CAP SCREW TORQUE VALUES

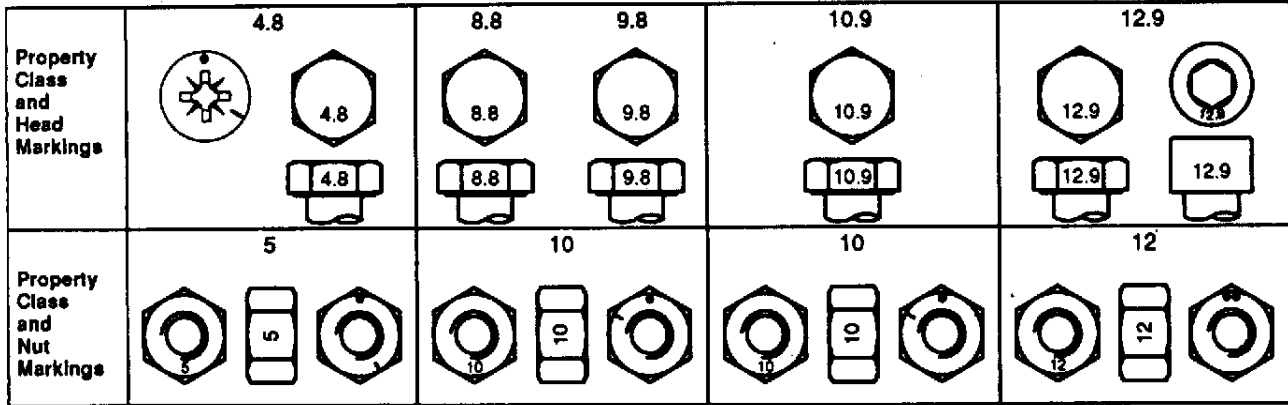

Size	Class 4.8				Class 8.8 or 9.8				Class 10.9				Class 12.9			
	Lubricated ^a		Dry ^a		Lubricated ^a		Dry ^a		Lubricated ^a		Dry ^a		Lubricated ^a		Dry ^a	
	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft
M6	4.8	3.5	6	4.5	9	6.5	11	8.5	13	9.5	17	12	15	11.5	19	14.5
M8	12	8.5	15	11	22	16	28	20	32	24	40	30	37	28	47	35
M10	23	17	29	21	43	32	55	40	63	47	80	60	75	55	95	70
M12	40	29	50	37	75	55	95	70	110	80	140	105	130	95	165	120
M14	63	47	80	60	120	88	150	110	175	130	225	165	205	150	260	190
M16	100	73	125	92	190	140	240	175	275	200	350	225	320	240	400	300
M18	135	100	175	125	260	195	330	250	375	275	475	350	440	325	560	410
M20	190	140	240	180	375	275	475	350	530	400	675	500	625	460	800	580
M22	260	190	330	250	510	375	650	475	725	540	925	675	850	625	1075	800
M24	330	250	425	310	650	475	825	600	925	675	1150	850	1075	800	1350	1000
M27	490	360	625	450	950	700	1200	875	1350	1000	1700	1250	1600	1150	2000	1500
M30	675	490	850	625	1300	950	1650	1200	1850	1350	2300	1700	2150	1600	2700	2000
M33	900	675	1150	850	1750	1300	2200	1650	2500	1850	3150	2350	2900	2150	3700	2750
M36	1150	850	1450	1075	2250	1650	2850	2100	3200	2350	4050	3000	3750	2750	4750	3500

DO NOT use these values if a different torque value or tightening procedure is given for a specific application. Torque values listed are for general use only. Check tightness of fasteners periodically.

Shear bolts are designed to fail under predetermined loads. Always replace shear bolts with identical property class.

Fasteners should be replaced with the same or higher property class. If higher property class fasteners are used, these should only be tightened to the strength of the original.

^a "Lubricated" means coated with a lubricant such as engine oil, or fasteners with phosphate and oil coatings. "Dry" means plain or zinc plated without any lubrication.

Make sure fasteners threads are clean and that you properly start thread engagement. This will prevent them from failing when tightening.

Tighten plastic insert or crimped steel-type lock nuts to approximately 50 percent of the dry torque shown in the chart, applied to the nut, not to the bolt head. Tighten toothed or serrated-type lock nuts to the full torque value.