

# 710G BACKHOE LOADER



**JOHN DEERE**

## PARTS CATALOG

710G BACKHOE LOADER

PC2819 (FEB-08) English

**Worldwide Construction and Forestry Division**

Worldwide Edition

Litho in U.S.A. (Revised)

COPYRIGHT © 2008

DEERE & COMPANY

Moline, Illinois


All rights reserved

customer service email: [admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)



## INTRODUCTION AND CUSTOMER INFORMATION

T161038 -UN-28OCT02

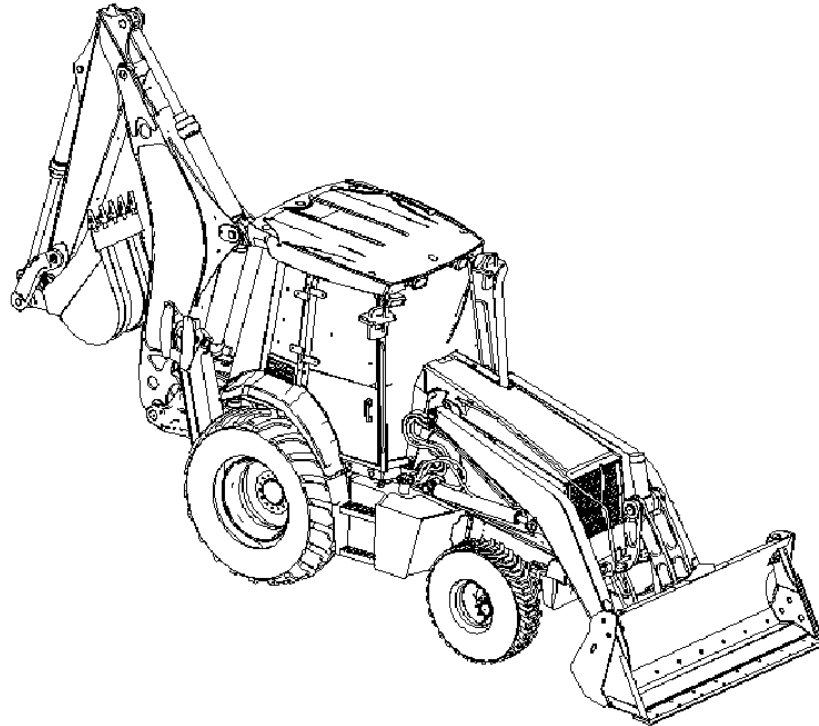

T161038

*SIDE VIEW OF JOHN DEERE BACKHOE LOADER  
(MANUFACTURED 2002- )*

### **TO THE CUSTOMER**

THE PART NUMBERS IN THIS PARTS CATALOG WERE CORRECT AT THE TIME YOUR CATALOG WAS PUBLISHED. IT IS OUR POLICY TO CONSTANTLY IMPROVE OUR MACHINES AND, THEREFORE, PART NUMBERS MAY CHANGE. WHEN ORDERING PARTS, VERIFY PART NUMBERS THROUGH YOUR DEALER.

*(SPECIFICATIONS AND DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.)*

## SERIAL NUMBER LOCATIONS

EACH 710G BACKHOE LOADER HAS SIX SERIAL NUMBERS, A PRODUCT IDENTIFICATION NUMBER PLATE, AN ENGINE SERIAL NUMBER PLATE, A HYDRAULIC PUMP SERIAL NUMBER PLATE, A MFWD AXLE SERIAL NUMBER PLATE, A TRANSMISSION SERIAL NUMBER PLATE, AND A REAR AXLE SERIAL NUMBER PLATE.

THE PRODUCT IDENTIFICATION NUMBER IS ON THE LEFT-HAND SIDE OF THE LOADER FRAME JUST ABOVE THE LIFT CYLINDER PIVOT BOSS.

THE ENGINE SERIAL NUMBER PLATE IS LOCATED ON THE RIGHT-HAND SIDE OF THE CYLINDER BLOCK NEAR THE FUEL PUMP.

THE MFWD AXLE SERIAL NUMBER PLATE IS LOCATED ON THE RIGHT-HAND (REAR) SIDE OF THE MFWD AXLE HOUSING.

THE REAR AXLE SERIAL NUMBER PLATE IS LOCATED ON THE RIGHT-HAND (FRONT) SIDE OF THE AXLE HOUSING.

THE TRANSMISSION SERIAL NUMBER PLATE IS LOCATED ON THE BOTTOM-REAR FACE OF THE HOUSING.

THE HYDRAULIC PUMP SERIAL NUMBER IS LOCATED ON THE BOTTOM FACE OF THE PUMP.

LEFT-HAND SIDE, RIGHT-HAND SIDE, FRONT AND REAR OF THE BACKHOE LOADER ARE VIEWED BY FACING IN THE DIRECTION OF THE BACKHOE LOADER FORWARD TRAVEL.

LEFT-HAND SIDE, RIGHT-HAND SIDE, FRONT AND REAR OF THE BACKHOE COMPONENTS ARE DETERMINED WHEN SEATED IN THE BACKHOE OPERATING POSITION.

IF PRODUCT IDENTIFICATION NUMBERS OR SERIAL NUMBERS ARE REQUIRED FOR WARRANTY CLAIMS OR CORRESPONDENCE PERTAINING TO THIS PRODUCT. IT IS EXTREMELY IMPORTANT THAT ALL CHARACTERS BE FURNISHED. THIS POINT CANNOT BE OVEREMPHASIZED.

**Thanks very much for your reading,  
Want to get more information,  
Please click here, Then get the complete  
manual**

**JustClickHere** 

**NOTE:**

**If there is no response to click on the link above,  
please download the PDF document first, and then  
click on it.**

**Have any questions please write to me:  
[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**

## ENGINE SERIAL NUMBER PLATE

T134833 -UN-23OCT00



T134833

- |  |                               |
|--|-------------------------------|
| 1. DESIGNATES ENGINE MANUFACTURER                      | P-JOHN DEERE MOTORES          |
| 2. DESIGNATES NUMBER OF CYL. AND LITERS                | 6068 (6.8 LITER)              |
| 3. DESIGNATES FUEL TYPE OR SPECIAL CONDITIONS.         | TT TURBOCHARGED DIESEL ENGINE |
| 4. DESIGNATES ENGINE SERIAL NUMBER                     | 123456                        |
| 5. DESIGNATES THE ENGINE APPLICATION AND FACTORY USER. | PE6068TT057                   |

## SERIAL NUMBER LISTING INFORMATION

SERIAL NUMBER INFORMATION IS LISTED TO SHOW ON WHICH MACHINES EACH PART CAN BE USED; FOR EXAMPLE:

- THE PART CAN BE USED ON ALL MACHINES.
- 000000- THE PART CAN BE USED ON ALL MACHINES BEGINNING WITH THE SERIAL NUMBER LISTED.
- 000000 THE PART CAN BE USED ON ALL MACHINES UP TO AND INCLUDING THE SERIAL NUMBER LISTED.
- 000000-000000 THE PART CAN BE USED ON ALL MACHINES BETWEEN AND INCLUDING THE SERIAL NUMBERS LISTED.

WHEN XXXXXX'S ARE LISTED IN PLACE OF A SERIAL NUMBER, A SERIAL NUMBER CHANGE WAS MADE BUT THE EXACT SERIAL NUMBER WAS NOT AVAILABLE WHEN THE CATALOG WAS PRODUCED.

## DIRECTION ARROW

ARROWS ARE USED WITH ILLUSTRATIONS TO INDICATE THE FRONT OF THE UNIT. "RIGHT-HAND" AND "LEFT-HAND" SIDES OF THE LOADER OR TRACTOR PARTS ARE DETERMINED BY FACING IN THE DIRECTION OF MACHINE FORWARD TRAVEL

EXCEPTION: FOR ALL BACKHOE PARTS, "RIGHT-HAND" AND "LEFT-HAND" SIDES, "FRONT" AND "REAR" ARE DETERMINED WHEN SEATED FOR BACKHOE OPERATION.

## BOX-ENCLOSED ILLUSTRATIONS

A KEY NUMBER, SHOWN IN THE PARTS LIST, IS ASSIGNED TO A BOX ENCLOSING ALL PARTS SOLD AS A SERVICE ASSEMBLY.

## COMPLETE GOODS LISTINGS

COMPLETE GOODS ARE LISTED IN THE REMARKS COLUMN. ORDER SEPARATELY. DO NOT INCLUDE ON REPLACEMENT PARTS ORDER.

## SI UNITS OF MEASURE

METRIC DIMENSIONS ARE GIVEN, WHERE APPLICABLE, THROUGHOUT THIS PARTS CATALOG.

## CHANGE INDICATOR LINE

CHANGES AFFECTING THE ORDERING OF PARTS ARE IDENTIFIED BY VERTICAL LINES MARKED IN THE LEFT-HAND MARGIN OF REVISED PARTS LISTING IMAGES. A LINE IS ALSO AT THE LEFT-HAND EDGE OF THE SAME PART NUMBER IN THE NUMERICAL INDEX TO SHOW THE LOCATION OF REVISED INFORMATION.

## REMARKS AND ABBREVIATIONS

THE FOLLOWING REMARKS AND ABBREVIATIONS MAY APPEAR THROUGHOUT THE PARTS CATALOG. REFER TO THE FOLLOWING CHART FOR TRANSLATIONS TO LANGUAGES OTHER THAN ENGLISH.

## MFWD AXLE SERIAL NUMBER PLATE

TP19438 -UN-01JAN94

The diagram shows a rectangular serial number plate with four mounting holes. At the top, it reads "Zahnradfabrik Passau GmbH". Below this, there are two main sections: "Type" and "Serial No.". The "Type" field is labeled with a bracket and the number 4. The "Serial No." field is labeled with a bracket and the number 5. Below these, there are two more sections: "Parts List No." (labeled with bracket 3) and "Total Ratio/Version:" (labeled with brackets 6 and 7). Under "Total Ratio/Version:", there are three rows, each with "Ltri:" (labeled with bracket 9) and "List of Lubricants" (labeled with bracket 8). The "List of Lubricants" section contains three rows, each with "TE-ML" and a bracket labeled 8. At the bottom, there is a "Customer's Code No." field labeled with a bracket and the number 1. A ZF logo is located on the left side of the plate.

TP19438

- 1. DESIGNATES CUSTOMER'S CODE NUMBER
- 2. DESIGNATES TYPE OF LUBRICANT
- 3. DESIGNATES ZF-PARTS-LIST NUMBER
- 4. DESIGNATES AXLE TYPE
- 5. DESIGNATES AXLE SERIAL NUMBER
- 6. DESIGNATES TOTAL - RATIO OF THE AXLE
- 7. DESIGNATES VERSION
- 8. DESIGNATES LUBRICANT SPECIFICATION
- 9. DESIGNATES CAPACITY

JOHN DEERE PART NUMBER  
 M1L-L-2105B, SAE90  
 4464 006 101  
 AP-11H  
 12345  
 20.28  
 SP. DIFF. (WITH OR WITHOUT SELF-LOCKING  
 DIFFERENTIAL)  
 05  
 LTR (DIFFERENTIAL CARRIER AND PLANETARY GEAR  
 ASSEMBLY)



## REMARKS AND ABBREVIATIONS

TX1007193 -UN-04MAY06

PHRASE	ENGLISH	FRANCAIS	DEUTSCH	ITALIANO	ESPAÑOL	SVENSKA
ALSO ORDER, ORD W/	Also order	Commander aussi	Ebenso bestellen	Ordinare anche	Pedir también	Beställ även
AMP	Ampere	Ampère	Ampere	Ampere	Amperio	Ampere
APPL, APPL ONLY	This application only	Uniquement pour cette utilisation	Nur für diese Anwendung	Solo per questa applicazione	Solo para este propósito	Endast för denna användning
AR	As required	Selon le besoin	Nach Bedarf	Secondo necessità	Según necesidad	Vid behov
ASSY	Complete assembly	Ensemble complet	Kompl.-Zusammenbau	Gruppo completo	Montaje completo	Komplett montering
CA, CONVENIENCE ASSY	Convenience assembly	Ensemble convenance	Komfort-Zusammenbau	Montaggio pratico	Montaje de conveniencia	Lämplig montering
CCW	Counter-clockwise	Sens anti-horaire	Gegen Uhrzeigersinn	Senso antiorario	A la izquierda	Moturs
COMPLETE	Complete	Complet	Vollständig	Completo	Completo	Fullständig
COMPLETE GOODS	Complete goods	Compléter marchandises	Vollst. Waren	Merci complete	Mercancías completas	Kompleta varor
CTL CUT TO LENGTH	Cut to length	Couper à la longueur	Auf Länge zurechtschneiden	Tagliare alla lunghezza	Corte a la longitud	Skära till längd
CW	Clockwise	Sens horaire	Im Uhrzeigersinn	In senso orario	A la derecha	Medurs
FOR	For	Pour	Für	Per	Para	För
FRONT	Front	Avant	Vorn	Anteriore	Frente	Fram
GAS	Gasoline	Essence	Benzin	Benzina	Gasolina	Bensin
HP	Horsepower	Puissance en cv	Leistung	Potenza	Potencia	Hästkraft
HFWD	Hydraulic Front-wheel Drive	Traction Avant Hydraulique	Hydraulischer Vorderradantrieb	Trazione Anteriore Idraulica	Tracción Delantera Hidraulica	Hydraulisk Framhjulsdrift
HS, HEAD MARKED	High strength, head marked	Haute résistance, tête marquée	Hochfest, vorn gekennzeichnet	Contrassegnato in testa, ad alta resistenza	Alta fuerza, marca en cabeza	Hög styrka, huvudmärkt
ID	Inside diameter	Diamètre intérieur	Innendurchmesser	Diametro interno	Diá. interior	Innerdiameter
INCH	Inch	Pouce	In.	Pollice	Pulg.	Tum
INCL KEYS	Includes keys...	Comprend les positions...	Einschließlich Schlüssel...	Include le chiavette...	Incluye posiciones...	Inklusive nycklar...
INCL, INCLUDES	Includes...	Comprend...	Enthält...	Include...	Incluye...	Inkluderar...
INCLUDES PARTS/ ITEMS MARKED	Includes parts/items marked...	Comprend les pièces/articles marqués...	Enthält gekennzeichnete Teile/Pos. ...	Include i pezzi e gli elementi contrassegnati...	Incluye piezas marcadas...	Inkluderar markerade delar/artiklar...
INNER	Inner	Intérieur	Innerer	Interno	Interno	Inre, invändig
KIT	Kit	Kit	Kit	Kit	Juego	Sats
L	Number of links	Nombre de maillons	Anzahl der Glieder	Numero di maglie	Nº de eslabones	Antal länkar
LGTH	Length	Longueur	Länge	Lunghezza	Longitud	Längd
LGP	Low Ground Pressure	Faible Pression Au Sol	Niederer Bodendruck	Bassa Pressione Sul Suelo	Baja Presion Sobre El Suelo	Laagt Marktryck
LH	Left-hand	Gauche	Links	Sinistra	Izquierda	Vänster
LT	Long Track	Chenille Longue	Mit Langem Laufwerk	Cingolo Lungo	Cadena Largo	Laangt Larvband
LOW, LOWER	Lower	Inférieur	Unterer	Inferiore	Inferior	Nedre
MAKE FROM, MF MARKED	Make from Marked	Faireavec Marqué	Herstellen von Markiert	Fabbricare da Contrassegnato	Hacer de Marcado	Tillverka av Märkt

TX1007193

## REMARKS AND ABBREVIATIONS

TX1007195

-UN-04MAY06

PHRASE	ENGLISH	FRANCAIS	DEUTSCH	ITALIANO	ESPAÑOL	SVENSKA
MATCHED SET	Matched set	Ensemble assorti	Passender Satz	Set abbinato	Sistema emparejado	Anpassad sats
MFWD	Mechanical Front-Wheel Drive	Pont Avant	Allradantrieb	Ruota Motrice Meccanica Anteriore	Traccion Delantera Mecanica	Mekanisk Framhjulsdrift
NA, NOT USED THIS APPL	Not used this application	Ne sert pas pour cette application	In dieser Anwendung nicht benutzt	Non usato in questa applicazione	No se usa en esta aplicación	Ej använd i detta sammanhang
NLA	No longer available	Epuisé	Nicht mehr lieferbar	Non più disponibile	Descontinuado	Ej längre tillgänglig
NSEP	Not supplied separately	Non livré séparément	Nicht einzeln lieferbar	Non fornito separatamente	No se suministra por separado	Kan ej erhållas separat
OD	Outside diameter	Diamètre extérieur	Außendurchmesser	Diametro esterno	Diá. exterior	Ytterdiameter
OPTIONAL	Optional	En option	Wahlweise	Opzionale	Opcional	Valfri
OR	Or	Ou	Oder	Oppure	O	Eller
ORD, ORDER	Order	Commander	Bestellen	Ordinare	Pídase	Order
OS	Oversize	Sur-dimension	Übergröße	Maggiorato	Sobretamaño	Överdimension
OUTER	Outer	Externe	Äußerer	Esterno	Externo	Yttre, utvändigt
PKG, PACKG	Package, Packet of	Emballage, paquet de	Verpackung, verpackt mit	In confezione da	Paquete de	I sats; paket
PTO	Power Take Off	Prise De Force	Zapfwelle	Presa Di Forza	Toma De Fuerza	Kraftuttag
RATIO	Ratio	Rapport	Übersetzungsverhältnis	Rapporto	Índice	Förhållande
REAR	Rear	Arrière	Hinten	Posteriore	Trasero	Bak; bakre
REMAN	Remanufactured	Echange Standard	Generalveberholt	Refatto	Refabricador por	Renoverad
REPL	Replaces	Remplace	Ersetzt	Sostituisce	Sustituye	Ersätter
RH	Right-hand	Droit	Rechts	Destra	Derecha	Höger
SN	Serial number	Numéro de série	Seriennummer	Numero di serie	Nº de serie	Seriennummer
STD	Standard	Standard	Standard	Standard	Normal	Standard
SUB	Replaced by	Remplacé par	Ersetzt durch	Sostituito da	Sustituido por	Ersatt med
SUB COMPONENTS	Substitute components (of the kit or assy)	Substituer les composants (du kit ou de l'ensemble)	Komponenten ersetzen (des Kits oder der Baugruppe)	Sostituire i componenti (del kito del gruppo)	Sustituir los componentes	Ersätta komponenterna (i satsen eller monteringen)
SUB FOR	Substitutes for	Remplace	Ersatz für	Sostituisce	Sustitución para	Ersätter
TEETH, Z	Number of gear teeth	Nombre de dents d'engrenages	Zahl der Zahnradzähne	Numero di denti dell'ingranaggio	Nº de dientes de engranaje	Antal redskapständer
TK	Thickness	Épaisseur	Stärke	Spessore	Espesor	Tjocklek
UP, UPPER	Upper	Supérieur	Oberer	Superiore	Superior	Övre
US	Undersize	Sous-dimension	Untergröße	Minorato	Subtamaño	Underdimension
USE WITH	Use with	À utiliser avec	Verwenden mit	Usare con	Usar con	Använd med
USE UNTIL EXHAUSTED	Use until exhausted	Utilisation jusqu'à épuisé	Verwenden, bis erschöpft	Usare fino all'esaurimento	Usar hasta agotar	Använda till uttömd
W/	With	Avec	Mit	Con	Con	Med; inklusive
W/O	Without	Sans	Ohne	Senza	Sin	Utan; exklusive
WHOLE GOODS	Whole goods	Marchandises entières	Vollständige Waren	Merci intere	Mercancías enteras	Hela varor
XLT	Extra Long Track	Chenille Extra Longue	Mit Extra Langem Laufwerk	Cingolo Extra Lungo	Cadena Extra Larga	Extra Laangt Larvband
VEC	Vehicle Electronic Controller	Controlleur Electronique Du Vehicule	Elektronisches Steuergeraet Des Fahrzeugs	Unità Di Comando Elettronica Del Veicolo	Unidad de Control Electronico del Vehiculo	Elektronisk Fordonsstyrenhet
VLC	Vehicle Load Center	Coffret De Repartition Du Vehicule	Verteilerstation Des Fahrzeugs	Centro Di Carico Del Veicolo	Centro De Cargas Del Vehiculo	Fordonets Elcentral

TX1007195

## ALPHABETICAL INDEX

PAGE

PAGE

### A

A/C PRESSURE SWITCH HARNESS.....	1674-4
A/C SWITCH.....	1674-6
ACCU-SWING VALVE KIT.....	3362-29A
ACCUMULATOR.....	1060-6
ACCUMULATOR SEAL KIT.....	2160-22
ACCUMULATOR VALVE.....	2160-22
ACCUMULATOR, MANIFOLD (PILOT CONTROL).....	3362-30
ACCUMULATOR, RIDE CONTROL.....	2160-22
ACUTATOR DOOR RELAY.....	1674-4
ADAPTER STC.....	0960-6
ADAPTER, ENGINE OIL COOLER.....	0419-2
ADAPTER, EXHAUST.....	0410-2
ADAPTERS STC.....	0960-8
ADJUSTING STRAP, ALTERNATOR.....	0423-2
AIR CLEANER.....	0520-2
AIR CLEANER ELEMENT.....	0520-2
AIR CLEANER HOSE.....	0520-2
AIR CLEANER RESTRICTION INDICATOR SWITCH.....	0520-2
AIR CONDITIONING.....	1830-6
AIR CONDITIONING.....	1830-7A
AIR CONDITIONING.....	1830-7C
AIR CONDITIONING (FREEZE/COMPRESSOR) SWITCH.....	1830-7A
AIR CONDITIONING COMPRESSOR.....	1830-12
AIR CONDITIONING COMPRESSOR MOUNTING BRACKETS.....	1830-12
AIR CONDITIONING COMPRESSOR DIODE.....	1674-8
AIR CONDITIONING COMPRESSOR DRIVE BELT.....	1830-12
AIR CONDITIONING COMPRESSOR HOSES.....	1830-12
AIR CONDITIONING CONDENSER.....	1830-12
AIR CONDITIONING DOOR RELAY.....	1674-4
AIR CONDITIONING DUCTS.....	1830-2
AIR CONDITIONING DUCTS.....	1830-4
AIR CONDITIONING RECEIVER DRYER.....	1830-12
AIR CONDITIONING THERMOSTAT SWITCH.....	1816-12
AIR HEATER SPACER.....	0414-2
AIR INTAKE.....	0414-2
AIR PRE-CLEANER.....	0520-4
AIR SUSPENSION SEAT COMPRESSOR.....	1821-16
AIR SUSPENSION SEAT SWITCH.....	1674-6
AIR SUSPENSION SEAT WIRE HARNESS.....	1821-16
AIR TEMPERATURE SENSOR, ENGINE.....	0433-4
ALARM, BACK-UP.....	2004-3
ALARM, TRAVEL WARNING.....	2004-3
ALTERNATOR (SN -960384).....	1672-2
ALTERNATOR (SN 960385-).....	1672-4
ALTERNATOR ADJUSTING STRAP.....	0423-2
ALTERNATOR FAN (SN -960384).....	1672-2
ALTERNATOR FAN (SN 960385-).....	1672-4
ALTERNATOR MOUNTING BRACKETS.....	0423-2
ALTERNATOR PULLEY (SN -960384).....	1672-2
ALTERNATOR PULLEY (SN 960385-).....	1672-4
ANCHOR, TIE BAND MOUNT, HARNESS SERIAL NO. -953497.....	1673-4
ANCHOR, TIE BAND MOUNT, HARNESS SERIAL NO. 953498.....	1673-6
ANGLE, BACKREST ADJUSTMENT.....	1821-2
ANTENNA, RADIO.....	2001-2

ANTI-STALL CONTROL (SERIAL NO.-951374).....	1675-1
ANTI-STALL CONTROL (SERIAL NO.951375-).....	1675-2
ARM (FRAME), SUSPENSION SEAT SCISSOR.....	1821-10
ARM RESTS.....	1821-2
ARM, LOADER LIFT.....	3140-2
ARM, PILOT CONTROLLER (LEFT SIDE).....	1816-14
ARM, PILOT CONTROLLER (RIGHT SIDE).....	1816-16
ARM, STANDARD.....	3346-2
ARM, STABILIZER.....	3348-2
ARMS, ROCKER.....	0402-4
AUDIBLE ALARM, QUICK COUPLER PIN ENGAGEM ENT.....	1674-5C
AUXILIARY CUTTING EDGE.....	3102-4
AUXILIARY CUTTING EDGE 2.0 CUBIC YARD.....	3102-14
AUXILIARY CUTTING EDGE, MULTI-PURPOSE BUCKET.....	3102-8
AUXILIARY EQUIPMENT HYDRAULICS, EXTENDIB LE DIPPERSTICK.....	3363-18
AUXILIARY EQUIPMENT HYDRAULICS, STANDARD DIPPERSTICK.....	3363-16
AUXILIARY FUNCTION PEDAL (PILOT CONTROL).....	3315-13A
AUXILIARY SECTION RELIEF VALVE.....	3162-12
AUXILIARY SECTION, BACKHOE VALVE.....	3362-22
AUXILIARY SECTION, LOADER VALVE.....	3162-12
AUXILIARY VALVE.....	3362-28
AUXILIARY VALVE SOLINOID.....	3362-28
AUXILIARY, LOW PRESSURE RETURN KIT.....	3363-28
AXLE HOUSING.....	0201-2
AXLE HOUSING ASSEMBLY (MFWD).....	0250-4
AXLE HOUSING, FRONT (WITHOUT MFWD).....	0230-2
AXLE MOUNTING HARDWARE, REAR.....	0201-6
AXLE ROLLER BEARING.....	0201-2
AXLE SHAFT.....	0201-2
AXLE SWIVEL HOUSING, FRONT (WITHOUT MFWD).....	0230-3
AXLE, FRONT (MFWD).....	0250-2
AXLE, FRONT (WITHOUT MFWD).....	0230-1

### B

BACK-UP ALARM.....	2004-3
BACKHOE BOOM.....	3344-2
BACKHOE BOOM CYLINDER.....	3365-2
BACKHOE BOOM CYLINDER REPAIR KIT.....	3365-2
BACKHOE BOOM LOCK.....	3315-20
BACKHOE BOOM LOCK CONTROL LEVER.....	3315-16
BACKHOE BOOM PINS.....	3344-2
BACKHOE BOOM PROTECTION KIT.....	3344-4
BACKHOE BUCKET.....	3302-2
BACKHOE BUCKET CUTTING EDGE.....	3302-2
BACKHOE BUCKET CYLINDER.....	3365-3
BACKHOE BUCKET CYLINDER HYDRAULICS.....	3363-6
BACKHOE BUCKET CYLINDER PIN.....	3345-2
BACKHOE BUCKET CYLINDER REPAIR KIT.....	3365-3
BACKHOE BUCKET PINS.....	3302-2
BACKHOE CONSOLE (PILOT CONTROL).....	1816-4
BACKHOE CONTROL LEVER CONVERSION LINKAGE (SAE PATTERN).....	3315-24
BACKHOE CONTROL VALVE.....	3362-6

## ALPHABETICAL INDEX - CONTINUED

	PAGE		PAGE
BACKHOE CONTROL VALVE .....	3362-8	BEACON, ROTATING .....	1673-2
BACKHOE CONTROL VALVE LINKAGE, TWO LEVER.....	3315-4	BEACON, STROBE .....	1673-2
BACKHOE CONTROL VALVE SECTIONS.....	3362-8	BEARING KIT .....	0325-1
BACKHOE CONTROL VALVE TIE BOLTS .....	3362-8	BEARING, DIFFERENTIAL QUILL.....	1011-2
BACKHOE CONTROLS COVER .....	1816-2	BEARING, CRANKSHAFT THRUST .....	0401-2
BACKHOE CONTROLS, PILOT CONTROLLER ARM (LEFT SIDE).....	1816-14	BEARING, FRONT AXLE HOUSING (WITHOUT MFWD) .....	0230-2
BACKHOE CONTROLS, PILOT CONTROLLER ARM (RIGHT SIDE) .....	1816-16	BEARINGS, MAIN.....	0401-2
BACKHOE CROWD CYLINDER.....	3365-4	BEARINGS, CONNECTING ROD .....	0403-2
BACKHOE CROWD CYLINDER REPAIR KIT .....	3365-4	BELL HOUSING.....	0341-4
BACKHOE EXTENSION CYLINDER.....	3365-13	BELLVILLE WASHER, FIRST GEAR.....	0350-4
BACKHOE EXTENSION CYLINDER REPAIR KIT .....	3365-13	BELLVILLE WASHER, FORWARD .....	0350-12
BACKHOE LEVERS COVER.....	1816-2	BELLVILLE WASHER, REVERSE .....	0350-14
BACKHOE STABILIZER CYLINDER (SER.NO. -932172) .....	3365-8	BELLVILLE WASHER, 2ND GEAR .....	0350-6
BACKHOE STABILIZER CYLINDER (SER.NO. -932172) .....	3365-9	BELLVILLE WASHER, 3RD GEAR .....	0350-8
BACKHOE STABILIZER CYLINDER (SER.NO. 932173-952813) .....	3365-10	BELLVILLE WASHER, 4TH GEAR .....	0350-10
BACKHOE STABILIZER CYLINDER (SER.NO. 952814- ) .....	3365-11	BELT, TETHER.....	1821-16
BACKHOE STABILIZER CYLINDER HYDRAULICS .....	3363-2	BELT, AIR CONDITIONING COMPRESSOR DRIVE .....	1830-12
BACKHOE STABILIZER CYLINDER REPAIR KIT (SER.NO. -932172) .....	3365-8	BELT, FAN DRIVE .....	0510-2
BACKHOE STABILIZER CYLINDER REPAIR KIT (SER.NO. -932172) .....	3365-9	BELTS, SEAT .....	1821-2
BACKHOE STABILIZER CYLINDER REPAIR KIT (SER.NO. 932173-952813) .....	3365-10	BELTS, TETHER WITH NON-SUSPENDED SEAT .....	1821-12
BACKHOE STABILIZER CYLINDER REPAIR KIT (SER.NO. 952814- ) .....	3365-11	BEVEL DRIVE GEAR (MFWD) .....	0250-10
BACKHOE SWING CYLINDER (S/N -957322) .....	3365-5	BLOCK, CYLINDER.....	0404-2
BACKHOE SWING CYLINDER (S/N 957323- ) .....	3365-6	BLOWER MOTOR PRESSURIZER .....	1830-6
BACKHOE SWING CYLINDER REPAIR KIT (S/N -957322) .....	3365-5	BLOWER MOTOR PRESSURIZER .....	1830-7A
BACKHOE SWING CYLINDER REPAIR KIT (S/N 957323- ) .....	3365-6	BLOWER MOTOR PRESSURIZER .....	1830-7C
BACKHOE SWING LOCK CONTROL LEVER .....	3315-16	BOLT, STRIKER, HOOD .....	1910-2
BACKHOE VALVE AUXILIARY SECTION .....	3362-22	BOLTS, REAR AXLE MOUNTING .....	0201-6
BACKHOE VALVE BOOM SECTION.....	3362-12	BOOM CYL. KIT, LOWERING DEVICE, CONTROLLED .....	3363-20
BACKHOE VALVE BOOM, PILOT SECTION .....	3362-40	BOOM CYL. KIT, LOWERING DEVICE, CONTROLLED .....	3363-21A
BACKHOE VALVE BUCKET SECTION .....	3362-14	BOOM CYL. KIT, CONTROLLED LOWERING DEVICE.....	3363-20
BACKHOE VALVE BUCKET, PILOT SECTION .....	3362-42	BOOM CYL. KIT, CONTROLLED LOWERING DEVICE.....	3363-21A
BACKHOE VALVE CROWD SECTION.....	3362-16	BOOM CYLINDER HYDRAULIC HOSES .....	3363-4
BACKHOE VALVE CROWD, PILOT SECTION.....	3362-44	BOOM CYLINDER HYDRAULIC OIL LINES .....	3363-4
BACKHOE VALVE EXTENDIBLE SECTION .....	3362-20	BOOM CYLINDER HYDRAULICS, LOADER .....	3163-2
BACKHOE VALVE INLET SECTION .....	3362-10	BOOM CYLINDER PINS, LOADER .....	3140-4
BACKHOE VALVE MOUNTING PLATE .....	3315-2	BOOM CYLINDER REPAIR KIT, BACKHOE .....	3365-2
BACKHOE VALVE MOUNTING PLATE (PILOT CONTROL) .....	3315-3A	BOOM CYLINDER, BACKHOE .....	3365-2
BACKHOE VALVE OUTLET SECTION .....	3362-24	BOOM CYLINDER, LOADER .....	3165-1
BACKHOE VALVE SWING SECTION .....	3362-18	BOOM LEVER LOCK COVER .....	1816-10
BACKHOE VALVE SWING, PILOT SECTION .....	3362-46	BOOM LEVER LOCK COVER .....	1816-12
BACKHOE VALVE TWO LEVER CONTROL LINKAGE.....	3315-4	BOOM LIFT CYLINDER.....	3165-2
BACKREST ADJUSTMENT ANGLE .....	1821-2	BOOM LOCK, BACKHOE.....	3315-20
BAFFLE, HEAT AND NOISE .....	1834-2	BOOM SECTION RELIEF VALVE.....	3162-10
BAFFLES, RADIATOR .....	0510-4	BOOM SECTION RELIEF VALVE .....	3362-12
BAR, CYLINDER SERVICE LOCK.....	1313-2	BOOM SECTION, BACKHOE VALVE.....	3362-12
BARRIER, HEAT AND NOISE .....	1834-2	BOOM SECTION, LOADER VALVE.....	3162-10
BASE, NON-SUSPENDED SEAT .....	1821-12	BOOM SERVICE LOCK BAR .....	1313-2
BASE, SEAT FOR NON-SUSPENDED SEAT .....	1821-14	BOOM, BACKHOE .....	3344-2
BATTERIES, DUAL .....	1671-4	BOOM, BACKHOE, PINS .....	3344-2
BATTERY BOX .....	1913-2	BOOM, BACKHOE, PROTECTION KIT .....	3344-4
BATTERY COVER .....	1913-2	BOOM, LOADER .....	3140-2
BATTERY DISCONNECT SWITCH .....	1671-6	BOOM, PILOT SECTION RELIEF VALVE .....	3362-40
		BOOM, PILOT SECTION, BACKHOE VALVE.....	3362-40
		BOOT, MECHANICAL SUSPENDED SEAT .....	1821-8
		BOOT, WINCH CONTROL (PILOT CONTROL) .....	1816-4
		BOWL, SEDIMENT BOWL (FUEL FILTER) .....	0420-2
		BOX, BATTERY .....	1913-2
		BOX, TOOL .....	1913-2
		BRACKET, AIR CLEANER MOUNTING .....	0520-2
		BRACKET, ENGINE MOUNTING .....	0540-2
		BRACKET, EXTERNAL REAR VIEW MIRROR .....	2002-3
		BRACKET, INTERIOR REAR VIEW MIRROR .....	2002-2
		BRACKET, LICENCE PLATE .....	1314-2
		BRACKET, SELECTIVE FLOW MOUNTING .....	3362-26
		BRACKET, SELECTIVE FLOW MOUNTING .....	3362-27A





## ALPHABETICAL INDEX - CONTINUED

PAGE	PAGE
CHARGE PUMP, AXIAL BEARING.....0360-1	CONTROL, ANTI-STALL
CHARGE PUMP, TRANSMISSION.....0360-1	(SERIAL NO.-951374)..... 1675-1
CHARGE VALVE, BRAKE.....1060-6	CONTROL, ANTI-STALL
CIRCUIT BREAKERS.....1674-2	(SERIAL NO.951375-)..... 1675-2
CLUTCH ASSEMBLY, FIRST GEAR.....0350-4	CONTROL, RIDE..... 2160-22
CLUTCH ASSEMBLY, FORWARD.....0350-12	CONTROL, TEMPERATURE HEATER..... 1830-8
CLUTCH ASSEMBLY, FOURTH GEAR.....0350-10	CONTROLLED LOWERING DEVICE, CROWD CYL. KIT ..... 3363-22
CLUTCH ASSEMBLY, REVERSE.....0350-14	CONTROLLER ARM, PILOT
CLUTCH ASSEMBLY, SECOND GEAR.....0350-6	(LEFT SIDE)..... 1816-14
CLUTCH ASSEMBLY, THIRD GEAR.....0350-8	CONTROLLER ARM, PILOT
CLUTCH BACKING PLATE.....0350-4	(RIGHT SIDE)..... 1816-16
CLUTCH BACKING PLATE.....0350-6	CONTROLLER, ENGINE..... 0413-2
CLUTCH BACKING PLATE.....0350-8	CONTROLLER, FLEX
CLUTCH BACKING PLATE.....0350-10	(SERIAL NO.951375-)..... 1675-2
CLUTCH BACKING PLATE.....0350-12	CONTROLLER, LEFT HAND VALVE..... 3362-34
CLUTCH BACKING PLATE.....0350-14	CONTROLLER, RIGHT HAND VALVE..... 3362-36
CLUTCH CARRIER, FIRST GEAR.....0350-4	CONVERSION, BACKHOE CONTROL LEVER
CLUTCH CARRIER, FORWARD.....0350-12	LINKAGE (SAE PATTERN)..... 3315-24
CLUTCH CARRIER, FOURTH GEAR.....0350-10	CONVERTER, TORQUE..... 0350-1
CLUTCH CARRIER, REVERSE.....0350-14	COOLANT RECOVERY TANK..... 0510-2
CLUTCH CARRIER, SECOND GEAR.....0350-6	COOLANT TEMPERATURE SENSOR, ENGINE..... 0433-4
CLUTCH CARRIER, THIRD GEAR.....0350-8	COOLANT, ENGINE HEATER..... 0505-4
CLUTCH DISK, PARK BRAKE.....1111-2	COOLER LINES..... 2160-14
COLD WEATHER STARTING AID.....0505-2	COOLER, FUEL..... 0560-4
COLD WEATHER STARTING AID SOLENOID.....0505-2	COOLER, HYDRAULIC OIL..... 0510-2
COLUMN, STEERING.....0960-2	COOLER, TRANSMISSION OIL..... 0510-2
COLUMN, STEERING.....0960-4	CORD, MANUAL HOLDER ATTACHMENT..... 1811-2
COLUMN, TILT STEERING.....0960-4	CORE, HEATER (20,000 BTU)..... 1830-10
COMPRESSOR DIODE, A/C.....1674-8	CORNER WINDOWPANE, REAR
COMPRESSOR MOUNTING BRACKETS,	(SER.NO. -920856)..... 1814-8
AIR CONDITIONING..... 1830-12	CORNER WINDOWPANE, REAR
COMPRESSOR, AIR CONDITIONING..... 1830-12	(SER.NO. 920857- )..... 1814-9A
COMPRESSOR, AIR SUSPENSION SEAT..... 1821-16	COUNTERWEIGHT FRAME..... 1749-3
CONDENSER, AIR CONDITIONING..... 1830-12	COUNTERWEIGHT, FRONT..... 1749-2
CONNECTING ROD.....0403-2	COUPLER FRAME, FORKLIFT..... 3103-2
CONNECTING ROD BEARINGS.....0403-2	COUPLER, CYLINDER, FRONT..... 3104-4
CONNECTORS, WEATHERPACK.....1674-22	COUPLER, HYDRAULIC HOSES..... 3163-6
CONSOLE WIRING HARNESS, FRONT.....1674-2	COUPLER, HYDRAULIC LINES..... 3163-6
CONSOLE WIRING HARNESS, SIDE.....1674-4	COUPLER, HYDRAULIC, FRONT..... 3104-2
CONSOLE, BACKHOE	COUPLER, LOADER BUCKET VALVE..... 3162-16
(PILOT CONTROL)..... 1816-4	COUPLER, QUICK CONNECT..... 2160-12
CONSOLE, FRONT..... 1816-8	COVER, BACKHOE CONTROLS..... 1816-2
CONTROLLED LOWERING DEVICE, BOOM CYL. KIT..... 3363-20	COVER, BACKHOE LEVERS..... 1816-2
CONTROLLED LOWERING DEVICE, BOOM CYL. KIT..... 3363-21A	COVER, BATTERY..... 1913-2
CONTROL CABLE, HEATER VALVE.....1830-6	COVER, BOOM LEVER LOCK..... 1816-10
CONTROL CABLE, HEATER VALVE.....1830-7C	COVER, BOOM LEVER LOCK..... 1816-12
CONTROL CABLE, HEATER VALVE.....1830-8	COVER, FLOOR TO FRONT CONSOLE..... 1812-2
CONTROL COVER, BACKHOE, TWO LEVER..... 1816-2	COVER, FUSE PANEL..... 1816-8
CONTROL HANDLE, PILOT, BUTTON FUNCTION KIT..... 3362-38	COVER, JUMP START PROTECTION..... 1674-8
CONTROL LEVER, TRANSMISSION.....0315-4	COVER, LINKAGE..... 1812-2
CONTROL LEVER, BACKHOE BOOM LOCK..... 3315-16	COVER, LOADER CONTROL..... 1816-12
CONTROL LEVER, BACKHOE SWING LOCK..... 3315-16	COVER, LOADER VALVE HYDRAULIC HOSES..... 3163-4
CONTROL VALVE LINKAGE, STABILIZER..... 3315-22	COVER, MIDDLE FLOOR..... 1812-2
CONTROL VALVE LINKAGE, BACKHOE, TWO LEVER..... 3315-4	COVER, NO SHIFTER..... 1811-2
CONTROL VALVE PISTON.....0360-2	COVER, OIL FILLER OPENING..... 0407-2
CONTROL VALVE SECTIONS, BACKHOE..... 3362-8	COVER, OPERATOR STATION..... 1927-2
CONTROL VALVE, BACKHOE..... 3362-6	COVER, REAR FLOOR..... 1812-2
CONTROL VALVE, BACKHOE..... 3362-8	COVER, ROCKER ARM..... 0402-3
CONTROL VALVE, LOADER..... 3162-4	COVER, STABILIZER CONTROL..... 1816-10
CONTROL VALVE, PILOT, LEFT..... 3362-34	COVER, STABILIZER CONTROL..... 1816-12
CONTROL VALVE, PILOT, RIGHT..... 3362-36	COVER, STEERING COLUMN..... 1816-6
CONTROL VALVE, SELECTIVE FLOW SOLENOID..... 3362-26	COVER, THERMOSTAT..... 0418-2
CONTROL VALVE, SELECTIVE FLOW SOLENOID..... 3362-27A	COVER, TIMING GEAR..... 0402-6
CONTROL VALVE, SELECTIVE FLOW SOLENOID..... 3362-28	COVER, WHEEL HUB (WITHOUT MFWD)..... 0230-4
CONTROL VALVE, SELECTIVE FLOW SOLENOID..... 3362-100	COVER, REMOTE START POST..... 1671-8
CONTROL VALVE, TRANSMISSION.....0360-2	COVER, SEAT BELT..... 1821-2
	CRANKSHAFT..... 0401-2



## ALPHABETICAL INDEX - CONTINUED

	PAGE	PAGE
DOORS,CAB.....	1814-2	
DOORS,CAB.....	1814-4	
DP SWITCH KIT.....	2160-20	
DRAIN PACKAGE, ENVIRONMENTAL.....	1369-6	
DRAIN VALVE,RADIATOR.....	0510-2	
DRIVE SHAFT YOKE (MFWD).....	0250-3	
DRIVE SHAFT, UNIVERSAL (MFWD).....	0250-3	
DRIVE SHAFT,REAR, TRANSMISSION.....	0325-1	
DRIVE WHEEL (SERIAL NO. 943698-).....	0110-4	
DRIVE WHEEL (SERIAL NO. 943698-).....	0110-5A	
DRIVE WHEEL,FRONT(MFWD).....	0110-3	
DRIVE WHEEL,REAR.....	0110-2	
DRIVE,PLANETARY (MFWD).....	0250-8	
DRIVER LINK.....	3345-2	
DRYER,RECEIVER, AIR CONDITIONING.....	1830-12	
DUAL BATTERIES.....	1671-4	
DUAL BATTERY CABLES.....	1671-4	
DUCTS, AIR CONDITIONING.....	1830-2	
DUCTS, AIR CONDITIONING.....	1830-4	
DUCTS, CAB HEATER.....	1830-2	
DUCTS, CAB HEATER.....	1830-4	
<b>E</b>		
EDGING, ISOLATOR.....	0510-2	
ELBOW,EXHAUST.....	0410-2	
ELECTRICAL, FRONT COUPLER HARNESS.....	1674-5C	
ELECTRICAL, PILOT ENABLE.....	1674-5A	
ELECTRONIC ETHER STARTING AID.....	0505-2	
ELEMENT, AIR CLEANER.....	0520-2	
ELEMENT, FILTER.....	2160-20	
ELEMENT,FINAL FUEL FILTER.....	0420-4	
ELEMENT,PRIMARY FUEL FILTER.....	0420-2	
EMBLEM, SMV.....	2008-2	
ENABLE SWITCH, REAR WIPER.....	1814-14	
ENGINE CONTROLLER.....	0413-2	
ENGINE COOLANT HEATER.....	0505-4	
ENGINE COOLANT TEMPERATURE SWITCH (FRONT WIRE HARNESS).....	1674-9A	
ENGINE FLYWHEEL.....	0433-2	
ENGINE FRONT PLATE.....	0404-1	
ENGINE FRONT WIRE HARNESS.....	1674-9A	
ENGINE MOUNT ISOLATOR.....	0540-2	
ENGINE MOUNTING BRACKET.....	0540-2	
ENGINE OIL COOLER.....	0419-2	
ENGINE OIL COOLER ADAPTER.....	0419-2	
ENGINE OIL DIPSTICK.....	0407-3	
ENGINE OIL DIPSTICK TUBE.....	0407-3	
ENGINE OIL FILL INLET CAP.....	0407-2	
ENGINE OIL FILL PLUG.....	0402-3	
ENGINE OIL FILTER.....	0407-6	
ENGINE OIL FILTER HEADER.....	0407-6	
ENGINE OIL PAN.....	0407-4	
ENGINE OIL PRESSURE REGULATING VALVE.....	0404-2	
ENGINE OIL PRESSURE SWITCH.....	1674-8	
ENGINE OIL PUMP.....	0407-8	
ENGINE OIL PUMP GEAR.....	0407-8	
ENGINE OIL PUMP HOUSING.....	0407-8	
ENGINE OIL PUMP INTAKE.....	0407-8	
ENGINE PISTON.....	0403-2	
ENGINE SIDE PANELS.....	1910-2	
ENGINE SIDE SHIELDS.....	1910-2	
ENGINE SPEED CONTROL.....	0515-2	
ENGINE SPEED CONTROL CABLE.....	0515-2	
ENGINE SPEED CONTROL LEVER.....	0515-2	
ENGINE SPEED CONTROL POTENTIOMETER.....	0515-2	
ENGINE SPEED SENSOR.....	0515-2	
ENGINE SUPPORT.....	0540-2	
ENGINE THERMOSTAT.....	0418-2	
ENGINE VENTILATING HOSE.....	0408-2	
ENGINE VENTILATING SYSTEM.....	0408-2	
ENGINE WIRING HARNESS.....	1674-8	
ENVIRONMENTAL DRAIN PACKAGE.....	1369-6	
ETHER SWITCH.....	1674-6	
EVAPORATOR.....	1830-6	
EVAPORATOR.....	1830-7A	
EVAPORATOR.....	1830-7C	
EVAPORATOR TEMPERATURE SWITCH.....	1830-7A	
EXHAUST ADAPTER.....	0410-2	
EXHAUST ELBOW.....	0410-2	
EXHAUST EXTENSION.....	0530-2	
EXHAUST MANIFOLD.....	0410-3	
EXHAUST VALVE.....	0409-2	
EXPANSION VALVE.....	1830-6	
EXPANSION VALVE.....	1830-7A	
EXPANSION VALVE.....	1830-7C	
EXTENDIBLE ARM LOCKING PIN.....	3346-4	
EXTENDIBLE ARM PAD.....	3346-4	
EXTENDIBLE ARM WEARSTRIPS.....	3346-4	
EXTENDIBLE DIPPER PEDAL (PILOT CONTROL).....	3315-11A	
EXTENDIBLE DIPPERSTICK.....	3346-4	
EXTENDIBLE DIPPERSTICK AUXILIARY HYDRAUL ICS.....	3363-18	
EXTENDIBLE DIPPERSTICK BUCKET, CYLINDER HYDRAULIC HOSES.....	3363-8	
EXTENDIBLE SECTION SHUT-OFF PLUG.....	3362-20	
EXTENDIBLE SECTION, BACKHOE VALVE.....	3362-20	
EXTENSION CYLINDER.....	3365-14	
EXTENSION CYLINDER.....	3365-16	
EXTENSION CYLINDER.....	3365-18	
EXTENSION CYLINDER HYDRAULICS HOSES (WITH EXTENDIBLE DIPPERSTICK).....	3363-14	
EXTENSION CYLINDER REPAIR KIT, BACKHOE.....	3365-13	
EXTENSION CYLINDER, BACKHOE.....	3365-13	
EXTENSION, EXHAUST.....	0530-2	
EXTERNAL REAR VIEW MIRROR.....	2002-3	
<b>F</b>		
FAN DRIVE BELT.....	0510-2	
FAN DRIVE BELT TENSIONER.....	0429-4	
FAN DRIVE HOUSING.....	0429-4	
FAN DRIVE HUB.....	0429-4	
FAN DRIVE PULLEY.....	0429-4	
FAN SHROUD.....	0510-2	
FAN SHROUD, RADIATOR.....	0510-2	
FAN, ALTERNATOR (SN -960384).....	1672-2	
FAN, ALTERNATOR (SN 960385-).....	1672-4	
FAN, CAB HEATER (20,000 BTU).....	1830-10	
FENDERS.....	1927-2	
FIFTH FUNCTION FOOT CONTROL.....	3315-10	
FIFTH FUNCTION PEDAL.....	3315-10	
FIFTH FUNCTION PEDAL (PILOT CONTROL).....	3315-11A	
FILTER ELEMENT.....	2160-20	
FILTER ELEMENT, PILOT CONTROL (SN -943092).....	3363-1A	
FILTER, BREATHER, HYDRAULIC RESERVOIR.....	2160-18	
FILTER, CHARGE PUMP.....	0360-1	





## ALPHABETICAL INDEX - CONTINUED

	PAGE		PAGE
<b>H</b>			
HARNES CONNECTOR KIT .....	1674-8	HOSES, MAIN HYDRAULIC .....	2160-12
HARNES, ANCHOR, TIE BAND MOUNT		HOSES, MAIN HYDRAULIC .....	2160-14
SERIAL NO. -953497 .....	1673-4	HOSES, MAIN HYDRAULIC, LOAD SENSE .....	2160-16
HARNES, ANCHOR, TIE BAND MOUNT		HOSES, MAIN HYDRAULIC, LOAD SENSE .....	2160-17A
SERIAL NO. 953498- .....	1673-6	HOSES, MULTI-PURPOSE BUCKET .....	3102-10
HARNES, ENGINE FRONT .....	1674-9A	HOSES, MULTI-PURPOSE BUCKET .....	3102-16
HARNES, ENGINE WIRING .....	1674-8	HOSES, RADIATOR .....	0510-2
HARNES, LOAD COUPLER CONTROL CHASSIS .....	1674-5C	HOSES, STEERING (WITHOUT MFWD) .....	0960-8
HARNES, LOADER COUPLER, CAB .....	1674-5C	HOSES, STEERING FOR MECHANICAL	
HARNES, PATTERN SELECTOR .....	3362-32	FRONT WHEEL DRIVE .....	0960-6
HARNES, PILOT ENABLE WIRING .....	1674-5A	HOSES, SWING CYLINDER .....	3363-12
HARNES, PUMP CONTROL AND RELAY .....	1674-16	HOSES, THIRD FUNCTION HYDRAULIC HOSES .....	3163-4
HARNES, QUICK COUPLER .....	1674-5C	HOSES, AIR CONDITIONING COMPRESSOR .....	1830-12
HARNES, RADIO .....	2001-2	HOSES, AIR CONDITIONING COMPRESSOR,	
HARNES, RIDE CONTROL .....	2160-22	RECEIVER DRYER .....	1830-12
HARNES, ROOF WIRING		HOSES, RECEIVER DRYER,	
SERIAL NO. -953497 .....	1673-4	AIR CONDITIONING COMPRESSOR .....	1830-12
HARNES, ROOF WIRING		HOUSING AXLE .....	0201-2
SERIAL NO. 953498- .....	1673-6	HOUSING, BELL .....	0341-4
HARNES, SIDE CONSOLE WIRING, WITH CAB .....	1674-4	HOUSING, BRAKE .....	1011-2
HARNES, WIRE AIR SEAT .....	1821-16	HOUSING, BRAKE VALVE .....	1060-2
HARNES, A/C PRESSURE SWITCH .....	1674-4	HOUSING, DIFFERENTIAL .....	0201-2
HEAD, CYLINDER .....	0409-2	HOUSING, DIFFERENTIAL WITH LOCK .....	0210-2
HEADER, ENGINE OIL FILTER .....	0407-6	HOUSING, FAN DRIVE .....	0429-4
HEADER, PRIMARY FUEL FILTER .....	0420-2	HOUSING, FLYWHEEL .....	0433-3
HEADLINER LAMP .....	1811-4	HOUSING, FRONT INSTRUMENT PANEL .....	1816-8
HEADLINER, CAB .....	1811-4	HOUSING, GRILLE .....	1921-2
HEADLINER, ROPS .....	1811-2	HOUSING, PARK BRAKE .....	1111-2
HEADREST, SEAT .....	1821-3	HOUSING, SIDE INSTRUMENT PANEL .....	1816-10
HEAT AND NOISE BARRIER .....	1834-2	HOUSING, SIDE INSTRUMENT PANEL .....	1816-12
HEATER CORE (20,000 BTU) .....	1830-10	HOUSING, SWIVEL, FRONT AXLE	
HEATER HOSE, CANOPY .....	1830-8	(WITHOUT MFWD) .....	0230-3
HEATER VALVE CONTROL .....	1830-8	HOUSING, TRANSMISSION .....	0341-4
HEATER VALVE CONTROL CABLE .....	1830-6	HOUSING, ENGINE OIL PUMP .....	0407-8
HEATER VALVE CONTROL CABLE .....	1830-7C	HOUSING, FRONT AXLE (MFWD) .....	0250-6
HEATER VALVE CONTROL CABLE, CANOPY .....	1830-8	HOUSING, FRONT AXLE (MWF) .....	0250-4
HEATER VALVE KNOB .....	1830-8	HOUSING, FRONT AXLE (WITHOUT MFWD) .....	0230-2
HEATER, CAB (20,000 BTU) .....	1830-10	HUB, FAN DRIVE .....	0429-4
HEATER, CANOPY .....	1830-8	HUB, FRONT AXLE WHEEL (WITHOUT MFWD) .....	0230-4
HEATER, ENGINE COOLANT .....	0505-4	HUB, FRONT AXLE (MFWD) .....	0250-6
HEATER, TEMPERATURE CONTROL .....	1830-8	HYDRAULIC COOLER LINES .....	2160-14
HEIGHT ADJUSTER FOR NON-SUSPENDED SEAT .....	1821-14	HYDRAULIC CYLINDER, MULTI-PURPOSE BUCKET .....	3102-10
HIGH AMBIENT BAFFLE .....	0510-4	HYDRAULIC CYLINDER, MULTI-PURPOSE BUCKET .....	3102-16
HIGH PRESSURE SWITCH .....	1830-6	HYDRAULIC FILTER, LOW PRESSURE AUX. KIT .....	3363-28
HIGH PRESSURE SWITCH .....	1830-7A	HYDRAULIC FRONT COUPLER .....	3104-2
HIGH PRESSURE SWITCH .....	1830-7C	HYDRAULIC FRONT COUPLER CYLINDER .....	3104-4
HINGE PINS, MULTI-PURPOSE BUCKET .....	3102-8	HYDRAULIC FRONT COUPLER HARNESS .....	1674-5C
HINGES, CAB DOORS .....	1814-2	HYDRAULIC FRONT COUPLER VALVE .....	3162-16
HINGES, CAB DOORS .....	1814-4	HYDRAULIC FRONT COUPLER, HOSES .....	3163-6
HOLDER, SWING LOCK PIN .....	1811-2	HYDRAULIC FRONT COUPLER, LINES .....	3163-6
HOOD .....	1910-2	HYDRAULIC HOSE, RIDE CONTROL .....	2160-22
HOOD LATCH .....	1910-2	HYDRAULIC HOSES .....	3363-28
HOOD SUPPORT .....	1910-2	HYDRAULIC HOSES, BOOM CYLINDER .....	3363-4
HORN .....	2004-2	HYDRAULIC HOSES, CROWD CYLINDER .....	3363-10
HORN (FRONT WIRE HARNESS) .....	1674-9A	HYDRAULIC HOSES, EXTENDIBLE DIPPERSTICK	
HORN SWITCH .....	1674-6	BUCKET CYLINDER .....	3363-8
HOSE SEGMENT .....	3348-4	HYDRAULIC HOSES, EXTENSION CYLINDER	
HOSE, AIR CLEANER .....	0520-2	(WITH EXTENDIBLE DIPPERSTICK) .....	3363-14
HOSE, ENGINE VENTILATING .....	0408-2	HYDRAULIC LINES .....	2160-14
HOSE, HYDRAULIC, RIDE CONTROL .....	2160-22	HYDRAULIC LOADER COUPLER VALVE .....	3162-16
HOSE, WINDSHIELD WASHER .....	1814-12	HYDRAULIC OIL COOLER .....	0510-2
HOSES, FUEL .....	0560-2	HYDRAULIC OIL FILTER .....	2160-20
HOSES, HYDRAULIC .....	3363-28	HYDRAULIC OIL LINES LOADER BUCKET	
HOSES, LOADER BOOM LIFT CYLINDER HOSES .....	3163-2	CYLINDER .....	3163-4
HOSES, LOADER BUCKET CYLINDER HOSES .....	3163-4	HYDRAULIC OIL LINES, BOOM CYLINDER .....	3363-4
		HYDRAULIC OIL LINES, CROWD CYLINDER .....	3363-10

## ALPHABETICAL INDEX - CONTINUED

	PAGE		PAGE
HYDRAULIC OIL LINES,MULTI-PURPOSE BUCKET.....	3102-10	<b>J</b>	
HYDRAULIC OIL LINES,MULTI-PURPOSE BUCKET.....	3102-16	JOY STICK, CONTROL VALVE, BUTTON FUNCION KIT.....	3362-38
HYDRAULIC OIL LINES,THIRD FUNCTION.....	3163-4	JOY STICK, CONTROL VALVE, LEFT.....	3362-34
HYDRAULIC PUMP, MAIN (SER.NO. -951374).....	2160-2	JOY STICK, CONTROL VALVE, RIGHT.....	3362-36
HYDRAULIC PUMP, MAIN (SN. 951375-962205).....	2160-3A	JUMP START PROTECTION COVER.....	1674-8
HYDRAULIC PUMP, MAIN SERVICE REPAIR KITS.....	2160-4	<b>K</b>	
HYDRAULIC PUMP, MAIN SERVICE REPAIR KITS.....	2160-6	KEY,IGNITION SWITCH.....	1674-6
HYDRAULIC PUMP, MAIN SERVICE REPAIR KITS.....	2160-8	KINGPIN, FRONT AXLE (WITHOUT MFWD).....	0230-3
HYDRAULIC RESERVOIR.....	2160-18	KIT, ACCU-SWING VALVE.....	3362-29A
HYDRAULIC RESERVOIR BREATHER FILTER.....	2160-18	KIT, AIR PRE-CLEANER.....	0520-4
HYDRAULIC RIDE CONTROL.....	2160-22	KIT, BACKHOE BOOM CYLINDER REPAIR.....	3365-2
HYDRAULIC TEMPERATURE SENDER.....	1674-8	KIT, BACKHOE BUCKET CYLINDER REPAIR.....	3365-3
HYDRAULIC VALVE, LOADER.....	3162-2	KIT, BACKHOE CROWD CYLINDER REPAIR.....	3365-4
HYDRAULICS, AUXILIARY EQUIPMENT, EXTENDI BLE DIPPERSTICK.....	3363-18	KIT, BACKHOE EXTENSION CYLINDER REPAIR.....	3365-13
HYDRAULICS, AUXILIARY EQUIPMENT, STANDAR D DIPPERSTICK.....	3363-16	KIT, BACKHOE STABILIZER CYLINDER REPAIR (SER.NO. -932172).....	3365-8
HYDRAULICS, BACKHOE BUCKET CYLINDER.....	3363-6	KIT, BACKHOE STABILIZER CYLINDER REPAIR (SER.NO. -932172).....	3365-9
HYDRAULICS, BACKHOE STABILIZER CYLINDER.....	3363-2	KIT, BACKHOE STABILIZER CYLINDER REPAIR (SER.NO. 932173-952813).....	3365-10
HYDRAULICS, CROWD CYLINDER.....	3363-10	KIT, BACKHOE STABILIZER CYLINDER REPAIR (SER.NO. 952814- ).....	3365-11
HYDRAULICS, LOADER BOOM CYLINDER.....	3163-2	KIT, BACKHOE SWING CYLINDER REPAIR (S/N -957322).....	3365-5
HYDRAULICS, MAIN.....	2160-12	KIT, BACKHOE SWING CYLINDER REPAIR (S/N 957323- ).....	3365-6
HYDRAULICS, MAIN.....	2160-14	KIT, BEARING.....	0325-1
HYDRAULICS, PILOT CONTROL.....	3363-1C	KIT, CYLINDER LINER O-RING.....	0403-2
HYDRAULICS, PILOT SELECTOR VALVE.....	3363-1C	KIT, DP SWITCH.....	2160-20
HYDRAULICS, SELECTOR VALVE (PILOT CONTROL).....	3363-1A	KIT, FRONT COUPLER CYLINDER REPAIR.....	3104-4
HYDRAULICS, SERVICE BRAKE.....	1060-8	KIT, HARNESS CONNECTOR.....	1674-8
HYDRAULICS, STEERING (WITHOUT MFWD).....	0960-8	KIT, LOADER BOOM LIFT CYLINDER.....	3165-1
HYDRAULICS, STEERING VALVE WITH MECHANICAL FRONT WHEEL DRIVE.....	0960-6	KIT, LOADER BUCKET CYLINDER REPAIR.....	3165-4
HYDRAULICS, SWING CYLINDER.....	3363-12	KIT, LOCTITE SERVICE.....	1330-2
<b>I</b>		KIT, LOW PRESSURE AUXILIARY.....	3363-28
IGNITION SWITCH.....	1674-6	KIT, O-RING.....	1369-4
IGNITION SWITCH KEY.....	1674-6	KIT, PATTERN SELECTOR VALVE.....	3362-32
INLET OIL FILL.....	0407-2	KIT, PROTECTION, BACKHOE BOOM.....	3344-4
INLET SECTION RELIEF VALVE.....	3362-10	KIT, RADIATOR BAFFLES.....	0510-4
INLET SECTION, BACKHOE VALVE.....	3362-10	KIT, REAR WINDOW LATCH (SER.NO. -920856).....	1814-8
INLET SECTION, LOADER VALVE.....	3162-6	KIT, REAR WINDOW LATCH (SER.NO. 920857- ).....	1814-9A
INLET, WATER PUMP.....	0417-2	KIT, SELECTIVE FLOW CONTROL.....	1674-16
INPUT FLANGE,(MFWD).....	0250-12	KIT, STABILIZER GUARD.....	1746-2
INPUT PINION, SPIRAL BEVEL.....	0210-1	KIT, SUSPENDED SEAT POSITION SENSOR.....	1821-8
INPUT SHAFT.....	0350-2	KIT, UNIVERSAL DRIVE SHAFT (MFWD).....	0250-3
INPUT SHAFT SEAL.....	1111-2	KIT, WINDOW SEAL (SER.NO. -920856).....	1814-8
INSIDE MIRROR.....	2002-2	KIT, WINDOW SEAL (SER.NO. 920857- ).....	1814-9A
INSTRUMENT PANEL VANDAL GUARD.....	1816-10	KIT,FUEL FILTER SERVICE.....	0420-4
INSTRUMENT PANEL, SIDE.....	1816-10	KIT,HYDRAULIC RIDE CONTROL.....	2160-22
INSTRUMENT PANEL, SIDE.....	1816-12	KIT,MULTI-PURPOSE BUCKET CYLINDER REPAIR (SERIAL NO.-925076).....	3102-12
INTAKE MANIFOLD.....	0414-2	KIT,MULTI-PURPOSE BUCKET CYLINDER REPAIR (SERIAL NO.925977- ).....	3102-13
INTAKE VALVE.....	0409-2	KIT,PILOT CONTROL HANDLE,BUTTON FUNCTION.....	3362-38
INTAKE, ENGINE OIL PUMP.....	0407-8	KIT,PRIMARY FUEL FILTER SERVICE.....	0420-2
INTERIOR REAR VIEW MIRROR.....	2002-2	KIT,REAR DRIVE WHEEL SPACER.....	0110-2
INTERMEDIATE PLATE.....	0360-6	KIT,SAE BACKHOE CONTROL VALVE LINKAGE PATTERN KIT.....	3315-24
INTERMEDIATE PLATE GASKETS.....	0360-6		
ISOLATOR EDGING.....	0510-2		
ISOLATOR SEAL.....	0510-2		
ISOLATOR, ENGINE MOUNT.....	0540-2		
ISOLATORS, CAB MOUNTING.....	1811-4		
ISOLATORS, ROPS FRAME.....	1811-2		

## ALPHABETICAL INDEX - CONTINUED

	PAGE		PAGE
KIT,SEAT SLIDE LATCH .....	1821-4	LINES, BUCKET CYLINDER BOOM, EXTENDIBLE .....	3363-8
KIT,SLIDE PUCK SERVICE .....	1821-6	LINES, BUCKET CYLINDER, BACKHOE .....	3363-6
KIT,STC ADAPTER REPAIR .....	0960-6	LINES, FUEL FILTER-INJECTION PUMP .....	0413-4
KIT,STC ADAPTER REPAIR .....	0960-8	LINES, FUEL INJECTION .....	0413-2
KIT,SWIVEL LATCH .....	1821-6	LINES, HYDRAULIC .....	2160-14
KITS, BOOM LIFT CYLINDER.....	3165-2	LINES, HYDRAULIC COOLER .....	2160-14
KITS, EXTENSION CYLINDER .....	3365-14	LINES, QUICK COUPLER HYDRAULIC .....	3163-6
KITS, EXTENSION CYLINDER .....	3365-16	LINES, SERVICE BRAKE .....	1060-8
KITS, EXTENSION CYLINDER .....	3365-18	LINK, BUCKET PIN.....	3346-2
KITS, MAIN HYDRAULIC PUMP REPAIR .....	2160-6	LINKAGE, BACKHOE CONTROL (SAE PATTERN) .....	3315-24
KITS, MAIN HYDRAULIC PUMP REPAIR .....	2160-8	LINKAGE, BUCKET LEVELING.....	3115-2
KITS, MAIN HYDRAULIC PUMP, REPAIR .....	2160-4	LINKAGE, FLOOR COVER.....	1812-2
KITS, STABILIZER VALVE .....	3362-4	LINKAGE, TWO LEVER BACKHOE CONTROL VALVE.....	3315-4
KNOB, HEATER VALVE .....	1830-8	LINKAGE,LOADER BUCKET .....	3140-6
		LINKAGE,LOADER CONTROL VALVE .....	3115-4
		LINKAGE,RETURN-TO-DIG .....	3115-2
		LINKAGE,STABILIZER VALVE .....	3315-22
		LINKAGE,THIRD FUNCTION LOADER CONTROL	
		VALVE .....	3115-6
		LOAD SENSE DIAGNOSTIC RECEPTACLE .....	2160-16
		LOAD SENSE DIAGNOSTIC RECEPTACLE .....	2160-17A
		LOADER ARM SERVICE LOCK .....	1313-2
		LOADER BOOM .....	3140-2
		LOADER BOOM CYLINDER HYDRAULICS .....	3163-2
		LOADER BOOM CYLINDER PINS .....	3140-4
		LOADER BOOM LIFT CYLINDER.....	3165-1
		LOADER BOOM LIFT CYLINDER REPAIR KIT .....	3165-1
		LOADER BOOM OIL LINES .....	3163-2
		LOADER BOOM SERVICE LOCK .....	1313-2
		LOADER BUCKET	
		1.24 CUBIC METER.....	3102-4
		LOADER BUCKET	
		1.43 CUBIC METER.....	3102-4
		LOADER BUCKET CUTTING EDGE .....	3102-4
		LOADER BUCKET CYLINDER.....	3165-4
		LOADER BUCKET CYLINDER PINS .....	3102-6
		LOADER BUCKET CYLINDER REPAIR KIT .....	3165-4
		LOADER BUCKET HYDRAULIC CYLINDER .....	3165-4
		LOADER BUCKET LIFT CYLINDER HYDRAULICS .....	3163-4
		LOADER BUCKET LINK PINS.....	3102-6
		LOADER BUCKET LINKAGE .....	3140-6
		LOADER BUCKET LINKAGE PINS .....	3140-6
		LOADER BUCKET PINS.....	3102-6
		LOADER CONTROL COVER .....	1816-12
		LOADER CONTROL VALVE .....	3162-2
		LOADER CONTROL VALVE .....	3162-4
		LOADER CONTROL VALVE LEVER .....	3115-4
		LOADER CONTROL VALVE LINKAGE .....	3115-4
		LOADER COUPLER BUCKET	
		2.0 CUBIC YARD.....	3102-14
		LOADER COUPLER, VALVE .....	3162-16
		LOADER FORKLIFT FORKS.....	3103-2
		LOADER LIFT ARM .....	3140-2
		LOADER LIFT ARM .....	3163-2
		LOADER LIFT ARM CYLINDER .....	3165-2
		LOADER LIFT ARM PIN .....	3140-2
		LOADER VALVE AUXILIARY SECTION .....	3162-12
		LOADER VALVE BOOM SECTION.....	3162-10
		LOADER VALVE BUCKET SECTION .....	3162-8
		LOADER VALVE HYDRAULIC HOSE COVER .....	3163-4
		LOADER VALVE INLET SECTION .....	3162-6
		LOADER VALVE OUTLET SECTION .....	3162-14
		LOCK BAR, BOOM SERVICE .....	1313-2
		LOCK PIN, HYDRAULIC FRONT COUPLER .....	3104-2
		LOCK PIN, SWING .....	1811-2
		LOCK RING, WHEEL (SERIAL NO. 943698-).....	0110-4
		LOCK RING, WHEEL (SERIAL NO. 943698-).....	0110-5A
L			
LABELS .....	1320-2		
LABELS, SPANISH .....	1320-6		
LABELS,FRENCH.....	1320-4		
LAMP, HEADLINER .....	1811-4		
LATCH, HOOD .....	1910-2		
LATCH, REAR WINDOW			
(SER.NO. -920856) .....	1814-8		
LATCH, REAR WINDOW			
(SER.NO. 920857- ) .....	1814-9A		
LATCH, SIDE WINDOW LATCH .....	1814-2		
LATCH, SIDE WINDOW LATCH .....	1814-4		
LATCH,SEAT SWIVEL .....	1821-6		
LEAD, WIRE, KIT .....	1674-18		
LEAD, WIRE, KIT .....	1674-20		
LEVER CONVERSION LINKAGE, BACKHOE			
(SAE PATTERN) .....	3315-24		
LEVER, STABILIZER .....	3315-22		
LEVER, THIRD FUNCTION LOADER CONTROL .....	3115-6		
LEVER, THROTTLE .....	0515-2		
LEVER, TRANSMISSION CONTROL .....	0315-4		
LEVER,BACKHOE BOOM LOCK CONTROL .....	3315-16		
LEVER,BACKHOE SWING LOCK CONTROL .....	3315-16		
LEVER,ENGINE SPEED CONTROL .....	0515-2		
LEVER,LOADER CONTROL VALVE .....	3115-4		
LEVER,SEAT LUMBAR SUPPORT CONTROL .....	1821-4		
LEVER,SEAT SLIDE CONTROL .....	1821-4		
LEVER,SEAT SWIVEL CONTROL .....	1821-4		
LEVERS, BACKHOE COVER .....	1816-2		
LICENCE PLATE BRACKET.....	1314-2		
LICENCE PLATE LIGHT .....	1314-2		
LIFT ARM CYLINDER .....	3165-2		
LIFT ARM, LOADER .....	3140-2		
LIFT ARM, LOADER .....	3163-2		
LIFT BRACKET, TRANSMISSION.....	0341-4		
LIFT CYLINDER, LOADER BOOM.....	3165-1		
LIGHT SWITCH, FRONT .....	1674-2		
LIGHT, DOME .....	1811-4		
LIGHT, LICENCE PLATE .....	1314-2		
LIGHT,CAB DOME .....	2001-2		
LIGHTS,STANDARD AND DELUXE			
SERIAL NO. -953497 .....	1673-4		
LIGHTS,STANDARD AND DELUXE			
SERIAL NO. 953498- .....	1673-6		
LIMITED SLIP DIFFERENTIAL (MFWD).....	0250-10		
LINER, CYLINDER .....	0403-2		
LINES, AUXILIARY EQUIPMENT, EXTENDIBLE D			
IPPERSTICK.....	3363-18		
LINES, AUXILIARY EQUIPMENT, STANDARD DIP			
PERSITCK .....	3363-16		