

HP1488 -UN-01JAN94



HP1488

JOHN DEERE 4420 COMBINE WITH 215 PLATFORM

(SPECIFICATIONS AND DESIGN SUBJECT TO CHANGE WITHOUT NOTICE)

NOTE

FOR 200 SERIES PLATFORM PARTS INFORMATION, REFER TO JOHN DEERE 200 SERIES PLATFORM PARTS CATALOG - PC-1558.

FOR 40 SERIES CORN HEAD PARTS INFORMATION, REFER TO JOHN DEERE 40 SERIES CORN HEAD PARTS CATALOG - PC-1223.

FOR 50 SERIES ROW-CROP HEAD PARTS INFORMATION, REFER TO JOHN DEERE 50 SERIES ROW-CROP HEAD PARTS CATALOG - PC-1549.

FOR 50A SERIES ROW-CROP HEAD PARTS INFORMATION, REFER TO JOHN DEERE 50A SERIES ROW-CROP HEAD PARTS CATALOG - PC-1747.

FOR THREE-ROLLER BELT PICKUP PARTS INFORMATION, REFER TO JOHN DEERE THREE-ROLLER BELT PICKUP PARTS CATALOG - PC-1189.

IMPORTANT

THIS PARTS CATALOG CONTAINS PARTS INFORMATION FOR THE 4420 COMBINE. MACHINE VINTAGE IS DETERMINED BY THE COMBINE SERIAL NUMBER OR THE PRODUCT IDENTIFICATION NUMBER (PIN). IT IS IMPORTANT THAT THE CORRECT NUMBERS BE USED WHEN ORDERING PARTS.

SERIAL NUMBER AND PRODUCT IDENTIFICATION NUMBER (PIN) PLATES

USE ALL NUMBERS, LETTERS AND SPACES SHOWN ON THE SERIAL NUMBER PLATE OR THE PRODUCT IDENTIFICATION NUMBER PLATE IN WARRANTY CORRESPONDENCE.

COMBINES (-550000)

ON THESE COMBINES, THE SERIAL NUMBER PLATE IS LOCATED ON THE REAR LEFT-HAND UPRIGHT.

AN EXAMPLE OF THE SERIAL NUMBER ON THIS PLATE IS:

E4420550000H

E - EQUIPMENT
4420 - COMBINE MODEL
550000 - COMBINE SEPARATOR SERIAL NUMBER
H - MANUFACTURING UNIT (HARVESTER WORKS)

COMBINES (550001-)

ON THESE COMBINES, THE PRODUCT IDENTIFICATION PLATE (PIN) IS LOCATED NEAR THE RIGHT-HAND SIDE OF THE TOOL BOX. AN EXAMPLE OF THE TWO-LINES ON THIS PIN PLATE IS:

H04420X550001
COMBINE

(FIRST LINE)

H0 - MANUFACTURING UNIT (HARVESTER WORKS)
4420 - MODEL IDENTIFIER
X - CONFIGURATION CODE/MODEL IDENTIFIER SUFFIX
550001 - SEQUENTIAL NUMBER USED IN SERIAL NO. COLUMN

(SECOND LINE)

COMBINE - TYPE OF PRODUCT

ENGINE SERIAL NUMBER

THE ENGINE SERIAL NUMBER PLATE IS LOCATED ON THE RIGHT-HAND SIDE OF THE ENGINE BLOCK.

ENGINES (-XXXXXX)

AN EXAMPLE OF THE ONE-LINE, FIFTEEN-DIGIT NUMBER ON THIS SERIAL NUMBER PLATE IS:

6329DH03XXXXXT

6 - NUMBER OF CYLINDERS
329 - CUBIC INCH DISPLACEMENT
D - FUEL TYPE
H - MANUFACTURING UNIT OF MACHINE (HARVESTER WORKS)
03 - ENGINE VERSION
XXXXXX - ENGINE SERIAL NUMBER
T - MANUFACTURING UNIT OF ENGINE (JOHN DEERE DUBUQUE WORKS)

ENGINES (XXXXXX-)

AN EXAMPLE OF THE TWO-LINE NUMBER ON THIS SERIAL NUMBER PLATE IS:

T06329DXXXXXX
6329DH03

(FIRST LINE)

T0 - MANUFACTURING UNIT (JOHN DEERE DUBUQUE WORKS)
6 - NUMBER OF CYLINDERS
329 - CUBIC INCH DISPLACEMENT
D - CONFIGURATION CODE/MODEL IDENTIFIER SUFFIX
XXXXXX - SEQUENTIAL NUMBER USED IN SERIAL NO. COLUMN

(SECOND LINE)

6 - NUMBER OF CYLINDERS
329 - CUBIC INCH DISPLACEMENT
D - FUEL TYPE (NON-TURBOCHARGED DIESEL)
H - MANUFACTURING UNIT OF MACHINE (HARVESTER WORKS)
03 - ENGINE VERSION

PARTS LISTING INFORMATION

SERIAL NUMBER OR PRODUCT IDENTIFICATION NUMBER (PIN) INFORMATION SHOWS ON WHICH MACHINES A PART MAY BE USED. FOR EXAMPLE:

- THE PART CAN BE USED ON ALL MACHINES.

-000000 THE PART CAN BE USED ON ALL MACHINES UP TO AND INCLUDING THE SERIAL NUMBER LISTED.

000000- THE PART CAN BE USED ON ALL MACHINES BEGINNING WITH THE SERIAL NUMBER LISTED.

000000-000000 THE PART CAN BE USED ON ALL MACHINES BETWEEN AND INCLUDING THE SERIAL NUMBERS LISTED.

WHEN XXXXXX'S ARE LISTED IN PLACE OF A SERIAL NUMBER, A SERIAL NUMBER WAS MADE, BUT THE EXACT SERIAL NUMBER WAS NOT AVAILABLE WHEN THE CATALOG WAS PRINTED.

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

DIRECTION ARROW

ARROWS ARE USED WITH ILLUSTRATIONS TO INDICATE THE FRONT OF THE UNIT. "RIGHT-HAND" AND "LEFT-HAND" SIDES ARE DETERMINED BY FACING IN THE DIRECTION OF MACHINE FORWARD TRAVEL.

BOX-ENCLOSED ILLUSTRATIONS

A KEY NUMBER, SHOWN IN THE PARTS LIST, IS ASSIGNED TO A BOX ENCLOSING ALL PARTS SOLD AS A SERVICE ASSEMBLY. A BOX NOT KEYED INCLUDES NON-CURRENT PARTS.

KITS

KIT INFORMATION WILL BE FOUND IMMEDIATELY FOLLOWING THE STORY IN WHICH IT IS USED. THE ILLUSTRATION IS REPEATED WITH ONLY THE KIT PARTS CALLED OUT AND WITH ALL OTHER PARTS SHOWN IN PHANTOM FOR RELATIONSHIP.

JDM REMANUFACTURED COMPONENTS

THE SERVICE PARTS LISTED IN THIS CATALOG ARE INTENDED FOR THE REPAIR OF ORIGINAL EQUIPMENT COMPONENTS. ALTHOUGH MOST SERVICE PARTS MAY BE USED TO REPAIR REMANUFACTURED COMPONENTS, THE REMANUFACTURED DESIGN MAY CHANGE PARTS SUFFICIENTLY SO THAT SERVICE PARTS ARE INADEQUATE OR NOT USABLE.

BOLT AND CAP SCREW STRENGTH IDENTIFICATION

BOLTS AND CAP SCREWS REQUIRED TO HAVE HIGH-STRENGTH QUALITIES EQUIVALENT TO SAE GRADE 8 ARE IDENTIFIED THROUGHOUT THIS CATALOG BY THE DESCRIPTION HS SAE 8. ALL STANDARD BOLTS AND CAP SCREWS ARE SAE GRADE 5 OR LOWER.

COMPLETE GOODS LISTINGS

COMPLETE GOODS ARE LISTED IN BOLD FACE TYPE. ORDER SEPARATELY. DO NOT INCLUDE ON REPLACEMENT PARTS ORDER.

SI UNITS OF MEASURE

METRIC DIMENSIONS ARE GIVEN, WHERE APPLICABLE, THROUGHOUT THIS PARTS CATALOG.

TRADEMARKS

THROUGHOUT THIS PARTS CATALOG, YOU WILL FIND THE FOLLOWING DEERE & COMPANY TRADEMARKS:

DIAL-A-MATIC™
HARVESTRAK™

TORQ-GARD SUPREME®
QUIK-TATCH™

CHANGE INDICATOR LINE

CHANGES AFFECTING THE ORDERING OF PARTS ARE IDENTIFIED BY VERTICAL LINES MARKED IN THE LEFT-HAND MARGIN OF REVISED PARTS LISTING IMAGES. A LINE IS ALSO AT THE LEFT-HAND EDGE OF THE SAME PART NUMBER IN THE NUMERICAL INDEX TO SHOW THE LOCATION OF REVISED INFORMATION.

SECTIONAL INDEX

	SECTION
GENERAL INFORMATION	10
BASIC ENGINE	20
FUEL AND AIR	30
ELECTRICAL	40
POWER TRAIN	50
STEERING AND BRAKES	60
HYDRAULICS	70
SEPARATOR SHELL	80
OPERATOR'S STATION	90
HEADERS - REFER TO INDIVIDUAL HEADER PARTS CATALOGS	100
FEEDER HOUSE	110
SEPARATOR	120
GRAIN TANK AND UNLOADING AUGER	130
MAJOR DRIVES	140
HEADER HEIGHT CONTROL	160
DECALS, BELTS AND CHAINS	170
NUMERICAL INDEX	180

ALPHABETICAL INDEX

GRID	A	PAGE	GRID	PAGE	
1F3	ACCUMULATOR PRESSURE GAUGE	40 - 10	1H18	AXLE, FINAL DRIVE (HEAVY-DUTY)	50 - 16
2C11	ACCUMULATOR, NAMEPLATE	70 - 45	1I24	AXLE, REAR	60 - 18
2C11	ACCUMULATOR,PRESS.CTL.VALVE AND MTG.BKT.	70 - 45	1I25	AXLE, REAR	60 - 19
2K12	ACTUATOR SWITCH AND MOUNTING	160 - 8	1H6	AXLE, SPACERS	50 - 4
1I25	ADJUSTABLE REAR AXLE	60 - 19	1H5	AXLE, WHEEL, DRIVE	50 - 3
1D5	AID, COLD WEATHER STARTING	30 - 9	B		
1E15	AIR CLEANER	30 - 44	1H25	BALL JOINT,RELATIVE GRD. SPD. INDICATOR	50 - 23
2E11	AIR COND. COMPR. MOUNTING AND SUPPORTS.....	90 - 30	2H4	BAR, CYLINDER SHEAR.....	120 - 25
2E12	AIR COND. COMPRESSOR MTG. & SUPTS.	90 - 31	2I6	BAR, FINGER, CHAFFER FRAME	120 - 54
2E13	AIR COND. CONDENSER AND RECEIVER-DRIER	90 - 33	1F8	BATTERY BOOT	40 - 15
2E13	AIR CONDITIONER	90 - 33	1F8	BATTERY, BRACKETS AND CABLES	40 - 15
2E14	AIR CONDITIONER LINES	90 - 34	1F7	BATTERY, BRACKETS, CABLES, AND SHIELDS.....	40 - 14
2E14	AIR CONDITIONER, LO PRESSURE SWITCH	90 - 34	1H17	BEARING CAP AND FINAL DRIVE HOUSING	50 - 15
1F12	AIR CONDITIONING WIRING ON ENGINE	40 - 20	1B12	BEARING, MAIN.....	20 - 19
1F13	AIR CONDITIONING WIRING ON ENGINE	40 - 21	1B13	BEARING, MAIN.....	20 - 20
2E16	AIR CONDITIONING, O-RING KIT	90 - 36	1H18	BEARINGS, FINAL DRIVE (HEAVY-DUTY)	50 - 16
2I11	AIR DUCTS, CLEANING FAN	120 - 59	2G23	BEATER AND TACHOMETER DRIVE	120 - 20
2E4	AIR INTAKE AT REAR OF OPERATOR'S CAB.....	90 - 23	2H1	BEATER AND TACHOMETER DRIVE	120 - 22
1B25	AIR INTAKE MANIFOLD	20 - 32	3B3	BEATER DRIVE SHEAVES AND BELTS	170 - 12
1E16	AIR INTAKE TUBE	30 - 45	3A25	BELT AND SHEAVES, SECONDARY COUNTERSHAFT ..	170 - 9
2J6	AIR INTAKE TUBE COVER.....	130 - 4	1C17	BELT TIGHTENER, RADIATOR FAN DRIVE	20 - 49
1E14	AIR INTAKE TUBES.....	30 - 43	1G5	BELT, ALTERNATOR.....	40 - 38
1D20	AIRTEX FUEL TRANSFER PUMP ASSEMBLY	30 - 24	3A21	BELT, ENGINE R.H. SIDE.....	170 - 3
1G5	ALTERNATOR SHEAVE AND BELT	40 - 38	1C16	BELT, RADIATOR FAN	20 - 48
1G7	ALTERNATOR SUPPORTS, FRONT AND REAR	40 - 41	3A22	BELT, ROTARY SCREEN	170 - 5
1G6	ALTERNATOR, COMPLETE, 90 AMP	40 - 39	3B4	BELT, SHOE GRAIN SUPPLY AUGERS DRIVE	170 - 13
1G1	ALTERNATOR, 72 AMP.....	40 - 34	3B2	BELTS AND CHAINS, FEEDER HOUSE DRIVE	170 - 11
1G3	ALTERNATOR, 90 AMP.....	40 - 36	3B3	BELTS AND SHEAVES, BEATER DRIVE	170 - 12
2K15	AMPLIFIER AND CIRCUIT BOX	160 - 11	3B10	BELTS AND SHEAVES, LOADING AUGER DRIVE.....	170 - 21
1F23	ANTENNA, RADIO	40 - 32	2G23	BELTS, BEATER AND TACHOMETER DRIVE	120 - 20
1G8	ARMATURE ASSEMBLY, STARTER MOTOR	40 - 42	2H1	BELTS, BEATER AND TACHOMETER DRIVE	120 - 22
1G11	ARMATURE, STARTING MOTOR.....	40 - 45	3B10	BELTS, CLEAN GRAIN ELEVATOR	170 - 21
2D21	ARMRESTS	90 - 15	3A24	BELTS, PRIMARY	170 - 7
2J12	AUGER COUNTERSHAFT, UNLOADING	130 - 10	2H17	BLADE, STRAW CHOPPER	120 - 38
2J16	AUGER DR.TIGHTENER,AUXILIARY UNLOADING.....	130 - 14	2H22	BLADE, STRAW SPREADER	120 - 43
2J10	AUGER DRIVE CONTROL, UNLOADING.....	130 - 8	1F21	BLADE, WINDSHIELD WIPER	40 - 30
3B9	AUGER DRIVE SHEAVES AND SPROCKETS	170 - 19	2K10	BLOCK, CHECK (AUTO HEIGHT).....	160 - 6
2I25	AUGER DRIVE TIGHTENER, UPPER TAILINGS.....	120 - 74	1A22	BLOCK, CYLINDER	20 - 4
3B12	AUGER DRIVES, UNLOADING	170 - 23	1A24	BLOCK, CYLINDER	20 - 6
2J17	AUGER HINGE AND SWING, UNLOADING.....	130 - 15	2K6	BLOCK, VALVE, MAIN (AUTO HEIGHT)	160 - 2
2J18	AUGER HOUSING, OUTER UNLOADING	130 - 16	2F2	BOTTOM, FEEDER HOUSE FALSE	110 - 9
2H24	AUGER HOUSING, SHOE GRAIN SUPPLY.....	120 - 45	2C20	BOX, TOOL.....	80 - 7
2K9	AUGER SWING	160 - 5	2C19	BRACE, CROSS, SEPARATOR	80 - 6
2B7	AUGER SWING CONTROL VALVE, UNLOADING	70 - 12	1F9	BRACKET AND CIRCUIT BREAKERS	40 - 17
2B6	AUGER SWING CONTROL, HYDRAULIC	70 - 11	1F21	BRACKET AND WINDSHIELD WIPER	40 - 30
2B11	AUGER SWING HOSES AND LINE, UNLOADING	70 - 17	2C11	BRACKET,MTG.,ACCUMULATOR,AND PRES.CTL. VALVE	70 - 45
2B9	AUGER SWING HYDRAULIC CYLINDER,UNLOADING	70 - 15	1H25	BRACKET,RELATIVE GROUND SPEED INDICATOR.....	50 - 23
2B12	AUGER SWING LINE, UNLOADING.....	70 - 18	2D16	BRACKETS, OPERATOR'S CAB MOUNTING	90 - 10
2I12	AUGER, CLEAN GRAIN	120 - 60	2C8	BRACKETS, PLATFORM LIFT	70 - 42
2J15	AUGER, INNER UNLOADING	130 - 13	1I10	BRAKE LINES	60 - 3
2I20	AUGER, LOWER TAILINGS	120 - 69	1I12	BRAKE MASTER CYLINDER	60 - 5
2J17	AUGER, OUTER UNLOADING	130 - 15	1I9	BRAKE PEDALS AND LINKAGE.....	60 - 2
2I24	AUGER, UPPER TAILINGS.....	120 - 73	1I13	BRAKE SLAVE CYLINDER	60 - 6
2J20	AUGERS, GRAIN TANK AUXILIARY UNLOADING	130 - 18	1I14	BRAKE SLAVE CYLINDER	60 - 7
2H25	AUGERS, SHOE GRAIN SUPPLY	120 - 47	1I15	BRAKE SLAVE CYLINDER KIT.....	60 - 9
1E2	AUTOMATIC ADVANCE	30 - 31	1I8	BRAKE, PARKING	60 - 1
2K9	AUTOMATIC HEADER HEIGHT LINES	160 - 5	1I11	BRAKES AND HOUSING.....	60 - 4
2B13	AUX. UNLDG. AUG. HYD. DR. SELECTOR VALVE	70 - 19	2I22	BUCKET, TAILINGS ELEVATOR	120 - 71
2B13	AUX. UNLDG. AUG. HYD. DR. VALVE SUPPORT	70 - 19	1F3	BULB, ACCUMULATOR PRESSURE GAUGE	40 - 10
2B14	AUX. UNLDG. AUGER HYD. DRIVE OIL LINES	70 - 20	2D16	BUSHINGS, OPERATOR'S CAB MOUNTING	90 - 10
2J11	AUXILIARY UNLDG. AUGER HYD. DR. CONTROL	130 - 9			
2J16	AUXILIARY UNLOADING AUG. DRIVE TIGHTENER	130 - 14			
2J16	AUXILIARY UNLOADING AUGER DR.MOTOR SUPT.	130 - 14			
2B15	AUXILIARY UNLOADING AUGER HYD. DR. MOTOR	70 - 21			
2J21	AUXILIARY UNLOADING AUGERS DRIVE SHAFT.....	130 - 19			

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
	C				
2D23	CAB BODY, OPERATOR'S	90-17	2E9	COMPRESSOR, HI PRESSURE SWITCH	90-28
2E2	CAB ROOF	90-21	2G17	CONCAVE ADJUSTING CONTROLS	120-13
2E2	CAB ROOF RECIRCULATING FILTERS	90-21	2G16	CONCAVE ADJUSTING SHAFT	120-12
1F12	CAB, OPERATOR'S	40-20	2G11	CONCAVE, OPEN-BAR	120-7
1F13	CAB, OPERATOR'S	40-21	2G16	CONCAVE, SECTOR	120-12
2F13	CABLE, FLOAT SPRING INDICATOR	110-20	2G14	CONCAVE, SPIKE-TOOTH	120-10
1I8	CABLE, PARKING BRAKE	60-1	2E13	CONDENSER AND RECEIVER-DRIER, AIR COND.....	90-33
1H25	CABLE, RELATIVE GROUND SPEED INDICATOR.....	50-23	1A21	CONDITIONER, COOLANT AND STOP LEAK.....	20-3
1G15	CABLE, WIRING.....	40-50	1F3	CONNECTOR, ACCUMULATOR PRESSURE GAUGE	40-10
1F8	CABLES, BATTERY AND BRACKETS	40-15	1G17	CONNECTOR, ELECTRICAL, SERVICE KIT	40-52
1B17	CAMSHAFT.....	20-24	1G21	CONNECTORS, SUPPLEMENTARY TERMINALS.....	40-56
1B12	CAP, MAIN BEARING	20-19	2D22	CONSOLE AND INSTRUMENT PANEL	90-16
1F23	CAPACITOR, RADIO	40-32	2A23	CONTROL VALVE, HYDRAULIC.....	70-4
1B13	CAPS, MAIN BEARING	20-20	2B1	CONTROL VALVE, HYDRAULIC.....	70-6
2I4	CHAFFER AND SIEVE.....	120-51	2B7	CONTROL VALVE, UNLOADING AUGER SWING	70-12
2I6	CHAFFER FRAME, UPPER SHOE.....	120-54	2B8	CONTROL VALVE, UNLOADING AUGER SWING	70-13
2F10	CHAIN GUIDES, DRIVE, FEEDER CONVEYOR	110-17	2K14	CONTROL, DIAL-A-MATIC HEADER HEIGHT	160-10
2I14	CHAIN, CLEAN GRAIN ELEVATOR CONVEYOR	120-62	2K15	CONTROL, DIAL-A-MATIC HEADER HEIGHT	160-11
2F8	CHAIN, CONVEYOR, FEEDER	110-15	2B6	CONTROL, HYDRAULIC AUGER SWING	70-11
3A24	CHAIN, PRIMARY.....	170-7	2F24	CONTROL, PLATFORM VARIABLE BELT DRIVE	110-31
3B2	CHAINS AND BELTS, FEEDER HOUSE DRIVE	170-11	2J10	CONTROL, UNLOADING AUGER DRIVE.....	130-8
2K10	CHECK BLOCK (AUTO HEIGHT)	160-6	2C11	CONTROL,PRES.VALVE,ACCUMULATOR AND MTG. BKT.	70-45
2H15	CHOPPER CURTAIN AND SHIELDS, STRAW	120-36	2B4	CONTROL,VARIABLE SPEED CYLINDER-SEP.SIDE	70-9
2H9	CHOPPER HOUSING, STRAW	120-30	2J11	CONTROLS, AUXILIARY UNLDG. AUG. HYD. DR.....	130-9
2H11	CHOPPER, STRAW	120-32	1I8	CONTROLS, BRAKE, PARKING	60-1
2H13	CHOPPER, STRAW, PLATES AND FINS.....	120-34	2G17	CONTROLS, CONCAVE	120-13
2K15	CIRCUIT BOX AND AMPLIFIER	160-11	1H3	CONTROLS, GEARSHIFT	50-1
1F9	CIRCUIT BREAKERS AND BRACKET	40-17	1H24	CONTROLS, GROUND SPEED.....	50-22
1H25	CLAMP, RELATIVE GROUND SPEED INDICATOR	50-23	1H24	CONTROLS, GROUND SPEED INDICATOR	50-22
2I12	CLEAN GRAIN AUGER AND HOUSING	120-60	1I8	CONTROLS, HYDROSTATIC DRIVE REEL.....	60-1
3B10	CLEAN GRAIN ELEVATOR.....	170-21	2D9	CONTROLS, PIVOTING LADDER.....	90-3
3B10	CLEAN GRAIN ELEVATOR BELTS	170-21	2B16	CONTROLS, REEL LIFT	70-22
2I14	CLEAN GRAIN ELEVATOR CONVEYOR CHAIN.....	120-62	2J1	CONTROLS, SEPARATOR DRIVE	120-75
2I14	CLEAN GRAIN ELEVATOR CONVEYOR SHAFT	120-62	1I1	CONTROLS, SPEED, SELECTIVE GROUND	50-24
2I14	CLEAN GRAIN ELEVATOR CONVEYOR SHEAVE.....	120-62	1D4	CONTROLS, THROTTLE.....	30-8
2I14	CLEAN GRAIN ELEVATOR CONVEYOR SPROCKETS	120-62	2K1	CONTROLS, VARIABLE SPEED CLEANING FAN	140-4
2I17	CLEAN GRAIN ELEVATOR DRIVE IDLER.....	120-65	2B5	CONTROLS, VARIABLE SPEED CYLINDER	70-10
2I16	CLEAN GRAIN ELEVATOR DRIVE TIGHTENER.....	120-64	1C9	COOLANT HEATER, ENGINE.....	20-41
2I13	CLEAN GRAIN ELEVATOR HOUSING.....	120-61	1B22	COOLER, OIL, ENGINE.....	20-29
3B10	CLEAN GRAIN ELEVATOR SHEAVES.....	170-21	1B23	COOLER, OIL, ENGINE.....	20-30
2I12	CLEAN GRAIN LOWER AUGER AND HOUSING	120-60	1I4	COUNTERSHAFT SHEAVE, PROPULSION DRIVE.....	50-27
1E15	CLEANER, AIR	30-44	2I15	COUNTERSHAFT, CLEAN GRAIN ELEVATOR DRIVE.....	120-63
2I9	CLEANING FAN	120-57	2F21	COUNTERSHAFT, PLAT. LOWER VAR. DR. BELT	110-28
3B5	CLEANING FAN	170-15	2F22	COUNTERSHAFT, PLATFORM UPPER CHAIN DRIVE	110-29
2I11	CLEANING FAN AIR DUCTS	120-59	2J24	COUNTERSHAFT, PRIMARY	140-2
2K1	CLEANING FAN DRIVE ADJUSTMENT	140-4	3A24	COUNTERSHAFT, PRIMARY	170-7
2I10	CLEANING FAN HOUSING AND SHIELD	120-58	1I5	COUNTERSHAFT, PROPULSION DRIVE.....	50-28
3B5	CLEANING SHOE AND STRAW WALKER DRIVES	170-15	2K1	COUNTERSHAFT, SEPARATOR, SECONDARY	140-4
2D14	CLOSURE, ENGINE POWERSHAFT	90-8	1H12	COUNTERSHAFT, TRANSMISSION	50-10
1H22	CLUTCH AND HOUSING, DRIVE WHEEL.....	50-20	2J12	COUNTERSHAFT, UNLOADING AUGER.....	130-10
1H23	CLUTCH INPUT SHAFT AND HOUSING	50-21	2E21	COUPLER AND SHIELDS, QUIK-TATCH.....	110-1
1H21	CLUTCH PEDAL AND LINKAGE.....	50-19	2B23	COUPLERS AND HOSES	70-32
2E9	CLUTCH, COMPRESSOR	90-28	1F3	COVER, ACCUMULATOR PRESSURE GAUGE	40-10
1F2	CLUTCH, PLATFORM ELECTROMAGNETIC.....	40-9	2J6	COVER, AIR INTAKE TUBE	130-4
2E8	CLUTCH, PULLEY, AND COMPRESSOR COIL	90-27	2J8	COVER, EXTENSION SHEETS, GRAIN TANK	130-6
1G10	COIL ASSEMBLY, STARTING MOTOR	40-44	1E6	COVER, FUEL INJECTION PUMP	30-35
2E8	COIL, CLUTCH, PULLEY, AND COMPRESSOR	90-27	2J13	COVER, INNER UNLOADING AUGER	130-11
2K11	COIL, SOLENOID CONTROL VALVE (AUTO HGT.).....	160-7	1B10	COVER, ROCKER ARM	20-17
1D5	COLD WEATHER STARTING AID	30-9	1B11	COVER, ROCKER ARM	20-18
2E9	COMPRESSOR CHARGE LABEL	90-28	2J7	COVER, SIDE SHEETS, GRAIN TANK	130-5
2E9	COMPRESSOR CLUTCH.....	90-28	1B4	COVER, TIMING GEAR.....	20-11
2E8	COMPRESSOR COIL, CLUTCH, AND PULLEY	90-27	2J9	COVER, TOP SHEETS, GRAIN TANK	130-7
2E10	COMPRESSOR HARDWARE SET	90-29	2J20	COVERS, GRAIN TANK AUXILIARY UNLOADING	130-18
2E11	COMPRESSOR, AIR COND., MTG. & SUPTS.	90-30	2G17	CRANK, CONCAVE CONTROL.....	120-13
2E12	COMPRESSOR, AIR COND., MTG. & SUPTS.	90-31	2I8	CRANK, SHOE PITMAN	120-56
			1B14	CRANKSHAFT AND IDLER GEARS	20-21

ALPHABETICAL INDEX - CONTINUED

<i>GRID</i>		<i>PAGE</i>	<i>GRID</i>		<i>PAGE</i>
1B15	CRANKSHAFT AND IDLER GEARS	20-22	2J10	DRIVE CONTROL, UNLOADING AUGER.....	130-8
1B16	CRANKSHAFT KIT, UNDERSIZE	20-23	2H18	DRIVE IDLER, STRAW CHOPPER.....	120-39
2H6	CRANKSHAFT, STRAW WALKER	120-27	2J21	DRIVE SHAFT, AUXILIARY UNLOADING AUGERS	130-19
2H7	CRANKSHAFT, STRAW WALKER	120-28	2I16	DRIVE TIGHTENER, CLEAN GRAIN ELEVATOR	120-64
2H15	CURTAIN AND SHIELDS, STRAW CHOPPER	120-36	2G19	DRIVE TIGHTENER, CYLINDER.....	120-15
2H4	CURTAINS, SEPARATOR	120-25	2H18	DRIVE TIGHTENER, STRAW CHOPPER.....	120-39
2D20	CUSHIONS, SEAT	90-14	2I25	DRIVE TIGHTENER, UPPER TAILINGS AUGER.....	120-74
1A22	CYLINDER BLOCK.....	20-4	2J16	DRIVE TIGHTENER,AUXILIARY UNLOADING AUG.....	130-14
1A24	CYLINDER BLOCK.....	20-6	1H4	DRIVE WHEEL AND SPACERS	50-2
2B4	CYLINDER CONTROL,VARIABLE SPEED-SEP.SIDE	70-9	1H5	DRIVE WHEEL AXLE.....	50-3
2G19	CYLINDER DRIVE TIGHTENER	120-15	1H22	DRIVE WHEEL CLUTCH AND HOUSING	50-20
1B7	CYLINDER HEAD.....	20-14	1H7	DRIVE WHEELS, FENDERS	50-5
1B8	CYLINDER HEAD.....	20-15	1E4	DRIVE, FUEL INJECTION PUMP	30-33
1B9	CYLINDER HEAD OVERHEAT WARNING SENSOR	20-16	1G9	DRIVE, STARTING MOTOR	40-43
1B20	CYLINDER LINER KIT.....	20-27	3B7	DRIVES, STRAW CHOPPER	170-17
1A21	CYLINDER LINER PACKING LUBRICANT.....	20-3	3B7	DRIVES, STRAW SPREADER	170-17
2G21	CYLINDER SHAFT SHEAR HUB AND SHEAVE	120-17	3B5	DRIVES, STRAW WALKER	170-15
2G15	CYLINDER TACHOMETER, VARIABLE SPEED	120-11	3B12	DRIVES, UNLOADING AUGER	170-23
1114	CYLINDER, BRAKE	60-7	2K7	DROP RATE VALVE (AUTO HEIGHT)	160-3
1114	CYLINDER, BRAKE ROD	60-7	2F7	DRUM, FEEDER.....	110-14
1113	CYLINDER, BRAKE SLAVE.....	60-6	2I11	DUCTS, CLEANING FAN AIR	120-59
112	CYLINDER, HYD., SELECTIVE GROUND SPEED	50-25			
1112	CYLINDER, HYDRAULIC, BRAKE-MASTER	60-5		E	
2C6	CYLINDER, HYDRAULIC, FDR. HSE. VAR. DR.....	70-40	1F21	ELECTRIC MOTOR, WINDSHIELD WIPER	40-30
1123	CYLINDER, HYDRAULIC, POWER STEERING	60-17	1D11	ELECTRIC SHUT-OFF KIT, FUEL INJECTION PUMP	30-15
2C8	CYLINDER, PLATFORM LIFT	70-42	1G17	ELECTRICAL CONNECTOR SERVICE KIT	40-52
2G9	CYLINDER, RASP-BAR	120-5	1F2	ELECTROMAGNETIC CLUTCH, PLATFORM.....	40-9
2G18	CYLINDER, SEP., DR. INTERMEDIATE SHAFT	120-14	2I16	ELEVATOR DRIVE TIGHTENER, CLEAN GRAIN	120-64
2H4	CYLINDER, SEPARATOR, SHEAR BAR	120-25	2I13	ELEVATOR, CLEAN GRAIN	120-61
2G13	CYLINDER, SPIKE-TOOTH	120-9	3B10	ELEVATOR, CLEAN GRAIN	170-21
2B9	CYLINDER,UNLOADING AUGER SWING HYDRAULIC	70-15	2I21	ELEVATOR, TAILINGS.....	120-70
			3B9	ELEVATOR, TAILINGS.....	170-19
	D		2C22	ENGINE COMPARTMENT REAR SHEET	80-9
3B17	DECALS	170-28	2D2	ENGINE COMPARTMENT WALKWAY	80-14
3B16	DECALS, FRONT AND REAR.....	170-27	1C9	ENGINE COOLANT HEATER	20-41
3B14	DECALS, R.H. AND L.H.	170-25	1A25	ENGINE FRONT PLATE	20-7
1F16	DIAL-A-MATIC HDR. HEIGHT CONTROL SWITCH.....	40-25	1B1	ENGINE FRONT PLATE	20-8
2K14	DIAL-A-MATIC HEADER HEIGHT CONTROL	160-10	1B22	ENGINE OIL COOLER.....	20-29
2K15	DIAL-A-MATIC HEADER HEIGHT CONTROL	160-11	1B23	ENGINE OIL COOLER.....	20-30
1D3	DIESEL FUEL FILTER, EXPORT	30-7	1A25	ENGINE OIL FILTER AND DIPSTICK.....	20-7
1C23	DIESEL FUEL LINES AND FILTER	30-2	1B1	ENGINE OIL FILTER AND DIPSTICK.....	20-8
1D2	DIESEL FUEL LINES, EXPORT	30-6	1B24	ENGINE OIL PUMP	20-31
1H15	DIFF. GEARS, SHAFTS, AND BEARINGS.....	50-13	1A20	ENGINE OIL, TORQ-GARD SUPREME	20-1
1H11	DIFFERENTIAL AND TRANSMISSION	50-9	1C1	ENGINE OVERHAUL GASKET SET	20-33
1H15	DIFFERENTIAL GEARS AND BEARINGS	50-13	1C3	ENGINE OVERHAUL GASKET SET	20-35
1H15	DIFFERENTIAL GEARS AND SHAFTS	50-13	2J23	ENGINE POWERSHAFT	140-1
1H14	DIFFERENTIAL PINION SHAFT AND GEARS.....	50-12	2D14	ENGINE POWERSHAFT CLOSURE	90-8
1G1	DIODE RING, ALTERNATOR, 72 AMP.....	40-34	3A21	ENGINE R.H. SIDE SHEAVES	170-3
1G3	DIODE TRIO ASSEMBLY, ALTERNATOR, 90 AMP	40-36	3A21	ENGINE R.H. SIDE TIGHTENERS	170-3
1A25	DIPSTICK, ENGINE OIL	20-7	3A21	ENGINE R.H. SIDE-BELT	170-3
1B1	DIPSTICK, ENGINE OIL	20-8	1B10	ENGINE ROCKER ARM COVER	20-17
3A22	DISK, ROTARY SCREEN	170-5	1B11	ENGINE ROCKER ARM COVER	20-18
1C13	DISPLACER, ROTARY SCREEN DRIVE BELT	20-45	1C8	ENGINE SUPPORTS	20-40
2D4	DOOR SEALS, ROTARY SCREEN.....	80-16	1F18	ENGINE TACH-HOUR METER	40-27
2I13	DOOR, CLEAN GRAIN ELEVATOR	120-61	1C4	ENGINE TUNE-UP GASKET SET.....	20-36
2G7	DOOR, CYLINDER.....	120-3	1C5	ENGINE TUNE-UP GASKET SET.....	20-37
2C24	DOOR, ENGINE COMPARTMENT, MIDDLE	80-11	1A20	ENGINE VALVE STEM LUBRICANT.....	20-1
2C23	DOOR, ENGINE COMPARTMENT, UPPER.....	80-10	1B10	ENGINE VENTILATOR TUBE	20-17
2D5	DOOR, OIL RESERVOIR.....	80-17	1B11	ENGINE VENTILATOR TUBE	20-18
2C18	DOOR, REAR HOOD.....	80-5	1F6	ENGINE WIRING HARNESS.....	40-13
2G7	DOOR, REMOTE DUMP STONE TRAP.....	120-3	2C24	ENGINE, MIDDLE DOOR FRAME.....	80-11
2D3	DOOR, ROTARY SCREEN	80-15	2D1	ENGINE, SEALS AND RUBBER CUSHIONS.....	80-13
2G11	DOOR, STONE TRAP	120-7	2C23	ENGINE, UPPER DOOR FRAME AND HINGES	80-10
2I21	DOOR, TAILINGS ELEVATOR	120-70	1B25	EXHAUST MANIFOLD	20-32
2D25	DOORS FOR OPERATOR'S CAB.....	90-19			

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
1E17	EXHAUST PIPES AND MUFFLER	30-46	1H20	FINAL DRIVE PINION, HEAVY-DUTY	50-18
2J9	EXTENSION, TOP SHEETS, GRAIN TANK COVER	130-7	1H20	FINAL DRIVE SHAFT, HEAVY-DUTY	50-18
2J5	EXTENSIONS, GRAIN TANK	130-3	2I4	FINGER, BAR, CHAFFER FRAME	120-51
			2I6	FINGER, BAR, CHAFFER FRAME	120-54
			2H11	FINS, STRAW CHOPPER	120-32
	F		2H13	FINS, STRAW CHOPPER	120-34
			1I24	FIXED REAR AXLE	60-18
2I11	FAN AIR DUCTS, CLEANING	120-59	1C10	FLAT ROTARY SCREEN	20-42
1C17	FAN DRIVE BELT TIGHTENER, RADIATOR	20-49	2F13	FLOAT SPRING, INDICATOR	110-20
1G1	FAN, ALTERNATOR, 72 AMP	40-34	2F12	FLOAT SPRINGS	110-19
1G3	FAN, ALTERNATOR, 90 AMP	40-36	2D12	FLOOR MATS, OPERATOR'S PLATFORM	90-6
2I9	FAN, CLEANING	120-57	2D12	FLOORBOARD AND SHLDS, OPERATOR'S PLATFORM ..	90-6
3B5	FAN, CLEANING	170-15	2K8	FLOW CONTROL PLUG (AUTO HEIGHT)	160-4
1C16	FAN, SHEAVE, AND SUPPORT	20-48	2B16	FLOW CONTROL VALVE KNOB	70-22
2K1	FAN, SPEED CONTROLS, CLEANING	140-4	2B25	FLOW CONTROL VALVE, HYDROSTATIC DR. REEL	70-34
2F16	FDR.HSE.VAR.DR.MIDDLE BELT TIGHTENER	110-23	1B2	FLYWHEEL HOUSING ASSEMBLY	20-9
2F19	FDR.HSE.VARIABLE BELT DRIVE LOWER SHAFT	110-26	1B3	FLYWHEEL HOUSING ASSEMBLY	20-10
2G1	FDR.HSE.VARIABLE DR.LOWER BELT TIGHTENER	110-33	1H11	FORK, TRANSMISSION	50-9
2G7	FEED PLATE	120-3	2C15	FRAME AND SHEETS, SEPARATOR R.H. SIDE	80-2
2F8	FEEDER CONVEYOR CHAIN	110-15	2F3	FRAME, FEEDER HOUSE	110-10
2F9	FEEDER CONVEYOR CHAIN DRIVE TIGHTENER	110-16	2F5	FRAME, FEEDER HOUSE	110-12
2F10	FEEDER CONVEYOR DRIVE CHAIN GUIDES	110-17	2I5	FRAME, LOWER SHOE, SIEVE	120-53
2G2	FEEDER CONVEYOR DRIVE TIGHTENER, L.H.	110-34	2C16	FRAME, SEPARATOR	80-3
2F11	FEEDER CONVEYOR, DRIVE CHAIN GUIDES	110-18	2C16	FRAME, SEPARATOR L.H.	80-3
2F7	FEEDER CONVEYOR, IDLER SHAFT	110-14	2I6	FRAME, UPPER SHOE, CHAFFER	120-54
2G2	FEEDER HOUSE CHAIN DRIVE TIGHTENER, L.H.	110-34	1G7	FRONT AND REAR ALTERNATOR SUPPORTS	40-41
3B2	FEEDER HOUSE DRIVE BELTS AND CHAINS	170-11	2C25	FRONT ENGINE COMPARTMENT PANEL	80-12
2F20	FEEDER HOUSE DRIVE CHAIN LOWER SHAFT	110-27	1E20	FRONT WIRING HARNESS	40-2
3B2	FEEDER HOUSE DRIVE SHEAVES	170-11	1C25	FUEL FILTER	30-4
3B2	FEEDER HOUSE DRIVE SPROCKETS	170-11	1D1	FUEL FILTER	30-5
2F2	FEEDER HOUSE FALSE BOTTOM	110-9	1D8	FUEL INJECTION LINES	30-12
2C3	FEEDER HOUSE OIL LINES, VARIABLE DRIVE	70-37	1D22	FUEL INJECTION NOZZLE	30-27
2F17	FEEDER HOUSE SPROCKETS AND SLIP CLUTCH	110-24	1E11	FUEL INJECTION NOZZLE	30-40
2E24	FEEDER HOUSE TOP SHEETS	110-5	1D21	FUEL INJECTION NOZZLE ASSEMBLY	30-25
2F25	FEEDER HOUSE UPPER DRIVE TIGHTENER	110-32	1D8	FUEL INJECTION PUMP	30-12
2F17	FEEDER HOUSE UPPER SHAFT	110-24	1D24	FUEL INJECTION PUMP	30-29
2F19	FEEDER HOUSE VARIABLE BELT DRIVE SHEAVE	110-26	1D12	FUEL INJECTION PUMP AUTOMATIC ADVANCE GROUP	30-16
2C6	FEEDER HOUSE VARIABLE DRIVE HYD. CYL.	70-40	1E6	FUEL INJECTION PUMP COVER	30-35
2F7	FEEDER HOUSE, DRUM	110-14	1E4	FUEL INJECTION PUMP DRIVE	30-33
2F3	FEEDER HOUSE, FRAME	110-10	1D14	FUEL INJECTION PUMP DRIVE GROUP	30-18
2F5	FEEDER HOUSE, FRAME	110-12	1D10	FUEL INJECTION PUMP ELEC. SHUT-OFF GROUP	30-14
2F14	FEEDER HOUSE, R.H. SHIELD	110-21	1D11	FUEL INJECTION PUMP ELECTRIC SHUT-OFF KIT	30-15
2E23	FEEDER HOUSE, SHEETS, FRONT	110-4	1D19	FUEL INJECTION PUMP GASKET KIT	30-23
2F3	FEEDER HOUSE, SHEETS, SIDE	110-10	1E10	FUEL INJECTION PUMP GASKET KIT	30-39
2F5	FEEDER HOUSE, SHEETS, SIDE	110-12	1D15	FUEL INJECTION PUMP GOVERNOR GROUP	30-19
2F14	FEEDER HOUSE, SHIELDS, LEFT-HAND	110-21	1D16	FUEL INJECTION PUMP HEAD	30-20
1H7	FENDER, DRIVE WHEEL	50-5	1E4	FUEL INJECTION PUMP HEAD	30-33
1F20	FIELD LIGHTS	40-29	1D13	FUEL INJECTION PUMP HOUSING	30-17
1D3	FILTER, DIESEL FUEL, EXPORT	30-7	1E2	FUEL INJECTION PUMP HOUSING	30-31
1C23	FILTER, DIESEL LINES	30-2	1D17	FUEL INJECTION PUMP LINKAGE GROUP	30-21
1A25	FILTER, ENGINE OIL	20-7	1D16	FUEL INJECTION PUMP ROTOR	30-20
1B1	FILTER, ENGINE OIL	20-8	1E4	FUEL INJECTION PUMP ROTOR	30-33
1C25	FILTER, FUEL	30-4	1D18	FUEL INJECTION PUMP TRANSFER GROUP	30-22
1D1	FILTER, FUEL	30-5	1D6	FUEL INJECTION SYSTEM	30-10
1D3	FILTER, FUEL	30-7	1D8	FUEL INJECTION SYSTEM	30-12
2A20	FILTER, OIL RESERVOIR	70-1	1D24	FUEL INJECTION SYSTEM	30-29
2E2	FILTERS, RECIRCULATING, CAB ROOF	90-21	1C23	FUEL LINES	30-2
1H16	FINAL DRIVE	50-14	1D2	FUEL LINES, DIESEL, EXPORT	30-6
1H18	FINAL DRIVE AXLE (HEAVY-DUTY)	50-16	1C22	FUEL TANK AND SUPPORTS	30-1
1H19	FINAL DRIVE AXLE, GEAR, AND BEARINGS	50-17	1E12	FUEL TRANSFER PUMP	30-41
1H19	FINAL DRIVE AXLE, HEAVY-DUTY	50-17	1E13	FUEL TRANSFER PUMP	30-42
1H18	FINAL DRIVE BEARINGS (HEAVY-DUTY)	50-16	1E12	FUEL TRANSFER PUMP KIT	30-41
1H19	FINAL DRIVE BEARINGS, HEAVY-DUTY	50-17	1E22	FUEL, GAUGE SENDING UNIT	40-4
1H20	FINAL DRIVE BEARINGS, HEAVY-DUTY	50-18	1E22	FUEL, PUMP	40-4
1H18	FINAL DRIVE GEAR (HEAVY-DUTY)	50-16			
1H19	FINAL DRIVE GEAR, HEAVY-DUTY	50-17			
1H17	FINAL DRIVE HOUSING AND BEARING CAP	50-15			

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE			
G								
1E10	GASKET KIT.....	30-39	2B20	HOSES, REEL DRIVE OIL	70-28			
1D19	GASKET KIT, FUEL INJECTION PUMP.....	30-23	2C4	HOSES, VARIABLE DRIVE FEEDER HOUSE	70-38			
1C1	GASKET SET, ENGINE OVERHAUL	20-33	1I11	HOUSING AND BRAKES.....	60-4			
1C3	GASKET SET, ENGINE OVERHAUL	20-35	1H23	HOUSING AND CLUTCH INPUT SHAFT	50-21			
1C4	GASKET SET, ENGINE TUNE-UP	20-36	1H22	HOUSING AND CLUTCH, DRIVE WHEEL.....	50-20			
1C5	GASKET SET, ENGINE TUNE-UP	20-37	2I18	HOUSING AND LOADING AUGER.....	120-67			
1C19	GAUGE TUBE, OIL PRESSURE.....	20-51	1G1	HOUSING, ALTERNATOR, 72 AMP	40-34			
1F3	GAUGE, ACCUMULATOR PRESSURE	40-10	1G3	HOUSING, ALTERNATOR, 90 AMP	40-36			
1F17	GAUGES AND SWITCHES ON INSTRUMENT PANEL.....	40-26	2H24	HOUSING, AUGER, SHOE GRAIN SUPPLY	120-45			
2I19	GEAR CASE LOADING AUGER	120-68	2I2	HOUSING, CLEAN GRAIN AUGER	120-60			
1H18	GEAR, FINAL DRIVE (HEAVY-DUTY)	50-16	2I3	HOUSING, CLEAN GRAIN ELEVATOR	120-61			
1H14	GEARS AND DIFFERENTIAL PINION SHAFT.....	50-12	2I10	HOUSING, CLEANING FAN	120-58			
1H12	GEARS AND TRANSMISSION COUNTERSHAFT.....	50-10	1H17	HOUSING, FINAL DRIVE.....	50-15			
1B14	GEARS, IDLER AND CRANKSHAFT	20-21	1B2	HOUSING, FLYWHEEL	20-9			
1B15	GEARS, IDLER AND CRANKSHAFT	20-22	1B3	HOUSING, FLYWHEEL	20-10			
1H3	GEARSHIFT CONTROLS.....	50-1	1D13	HOUSING, FUEL INJECTION PUMP	30-17			
2D24	GLASS, OPERATOR'S CAB	90-18	1E2	HOUSING, FUEL INJECTION PUMP	30-31			
1D15	GOVERNOR ASSEMBLY.....	30-19	2I20	HOUSING, LOWER TAILINGS	120-69			
2H25	GRAIN SUPPLY AUGERS, SHOE	120-47	2J18	HOUSING, OUTER UNLOADING AUGER	130-16			
2J3	GRAIN TANK	130-1	1G10	HOUSING, STARTING MOTOR	40-44			
2J20	GRAIN TANK AUXILIARY UNLOADING AUGERS	130-18	2H9	HOUSING, STRAW CHOPPER	120-30			
2J20	GRAIN TANK AUXILIARY UNLOADING COVERS	130-18	2H10	HOUSING, STRAW CHOPPER	120-31			
2J8	GRAIN TANK COVER EXTENSION SHEETS	130-6	2H22	HOUSING, STRAW SPREADER.....	120-43			
2J7	GRAIN TANK COVER SIDE SHEETS	130-5	2I13	HOUSING, STRAW SPREADER.....	120-61			
2J9	GRAIN TANK COVER TOP SHEETS	130-7	2I21	HOUSING, TAILINGS ELEVATOR	120-70			
2J5	GRAIN TANK EXTENSIONS	130-3	2I24	HOUSING, UPPER TAILINGS AUGER.....	120-73			
2J13	GRAIN TANK INNER UNLOADING AUG. COVER	130-11	1H25	HOUSING,RELATIVE GROUND SPEED INDICATOR.....	50-23			
2J4	GRAIN TANK SKIRTS	130-2	2G21	HUB, SHEAR, CYLINDER SHAFT, AND SHEAVE	120-17			
2J7	GRAIN TANK, SIDE SHEETS, COVER	130-5	2B6	HYDRAULIC AUGER SWING CONTROL.....	70-11			
2J14	GRASS SEED UNLOADING ATTACHMENT	130-12	2A23	HYDRAULIC CONTROL VALVE	70-4			
2F13	GROUND SPEED, CONTROL LEVER	110-20	2B1	HYDRAULIC CONTROL VALVE	70-6			
1H24	GROUND SPEED, INDICATOR.....	50-22	2B23	HYDRAULIC HOSE	70-32			
2H20	GUARD AND MOUNTING, STRAW SPREADER.....	120-41	2A21	HYDRAULIC PUMP	70-2			
1H8	GUARD, TRANSMISSION SHEAVE	50-6	2B3	HYDRAULIC PUMP LINES, MAIN.....	70-8			
2F11	GUIDE, FEEDER CONVEYOR DRIVE CHAIN.....	110-18	2A22	HYDRAULIC PUMP TORQUE ARM AND SUPPORT	70-3			
2K3	GUIDES, SEPARATOR AUGER DRIVE BELT	140-6	2B18	HYDRAULIC PUMP, HYDROSTATIC DRIVE REEL.....	70-25			
2K3	GUIDES, UNLOADING AUGER DRIVE BELT	140-6	2B25	HYDROSTATIC DR. REEL FLOW CONTROL VALVE.....	70-34			
H								
2D12	HANDRAILS, OPERATOR'S PLATFORM.....	90-6	2B18	HYDROSTATIC DRIVE REEL HYDRAULIC PUMP	70-25			
1F6	HARNESS, ENGINE WIRING	40-13	2B19	HYDROSTATIC DRIVE REEL PUMP MOUNTING.....	70-27			
1E20	HARNESS, FRONT WIRING	40-2	1I8	HYDROSTATIC DRIVE REEL, CONTROL KNOB	60-1			
1F21	HARNESS, WIPER.....	40-30	I					
2K13	HARNESS, WIRING	160-9	2H18	IDLER, STRAW CHOPPER DRIVE.....	120-39			
2K14	HARNESS, WIRING	160-10	2F13	INDICATOR, FLOAT SPRING	110-20			
1E21	HARNESS, WIRING, MIDDLE	40-3	1F5	INDICATOR, LOW SHAFT SPEED	40-12			
1E22	HARNESS, WIRING, REAR.....	40-4	1H25	INDICATOR, RELATIVE GROUND SPEED	50-23			
1E22	HARNESS, WIRING, TAIL LAMP	40-4	1E11	INJECTION NOZZLE, FUEL	30-40			
1B7	HEAD, CYLINDER	20-14	1E10	INJECTION PUMP GASKET KIT.....	30-39			
1B8	HEAD, CYLINDER	20-15	1D6	INJECTION SYSTEM, FUEL	30-10			
1D16	HEAD, FUEL INJECTION PUMP.....	30-20	2J15	INNER UNLOADING AUGER	130-13			
1E4	HEAD, FUEL INJECTION PUMP.....	30-33	1H13	INPUT SHAFT, TRANSMISSION.....	50-11			
1F24	HEADPHONE, RADIO	40-33	2D22	INSTRUMENT PANEL AND CONSOLE	90-16			
2E17	HEATER AND HOSES.....	90-37	2C22	INSTRUMENT WALL, ENGINE COMPARTMENT	80-9			
1C9	HEATER, COOLANT, ENGINE	20-41	1B25	INTAKE MANIFOLD, AIR	20-32			
2E9	HI PRESSURE SWITCH, COMPRESSOR	90-28	2E4	INTAKE, AIR, REAR OF OPERATOR'S CAB.....	90-23			
2J17	HINGE AND SWING, UNLOADING AUGER.....	130-15	2G22	INTERMEDIATE SHAFT, CYL. DR., SLOW SPEED	120-19			
2D25	HINGES FOR OPERATOR'S CAB	90-19	2G18	INTERMEDIATE SHAFT, CYLINDER DRIVE	120-14			
2C18	HOOD, REAR	80-5	K					
1F14	HORNS, SIGNAL	40-23	1A21	KIT FOR OFF SEASON STORAGE	20-3			
1F3	HOSE, ACCUMULATOR PRESSURE GAUGE.....	40-10	2C2	KIT, ADJUSTING SCREW	70-36			
2B23	HOSES AND COUPLERS	70-32	1I15	KIT, BRAKE SLAVE CYLINDER	60-9			
2E17	HOSES AND HEATER.....	90-37	2E10	KIT, COMPRESSOR HARDWARE	90-29			

ALPHABETICAL INDEX - CONTINUED

<i>GRID</i>		<i>PAGE</i>	<i>GRID</i>		<i>PAGE</i>			
1B20	KIT, CYLINDER LINER	20-27	2B3	MAIN HYDRAULIC PUMP LINES	70-8			
1G17	KIT, ELECTRICAL CONNECTOR SERVICE.....	40-52	2K6	MAIN VALVE BLOCK (AUTO HEIGHT)	160-2			
1D11	KIT, FUEL INJECTION PUMP ELECTRIC SHUT- OFF	30-15	1B25	MANIFOLD, EXHAUST.....	20-32			
1D19	KIT, FUEL INJECTION PUMP GASKET	30-23	1C7	MANIFOLD, WATER.....	20-39			
1E10	KIT, FUEL INJECTION PUMP GASKET	30-39	1F18	METER, TACH-HOUR, ENGINE	40-27			
1E12	KIT, FUEL TRANSFER.....	30-41	1F4	MICRO SWITCH, STRAW WALKER SENSING UNIT	40-11			
2C1	KIT, HYDRO. DR. REEL FLOW CONTROL VALVE	70-35	1E21	MIDDLE WIRING HARNESS	40-3			
1G15	KIT, TERMINAL AND WIRING	40-50	2D24	MIRROR, OPERATOR'S CAB	90-18			
2E16	KIT,O-RING, AIR CONDITIONING.....	90-36	2E5	MIRROR, RIGHT-HAND.....	90-24			
2B10	KIT,UNLOADING AUGER SWING HYD.CYLINDER.....	70-16	2B15	MOTOR, HYD. DR. AUXILIARY UNLDG. AUGER	70-21			
2H16	KNIFE AND SUPPORT, STRAW CHOPPER	120-37	2B17	MOTOR, REEL	70-23			
2B16	KNOB, FLOW CONTROL VALVE	70-22	1G7	MOTOR, STARTING.....	40-41			
2D18	KNOB, OPERATOR'S PLATFORM SEAT.....	90-12	1G9	MOTOR, STARTING.....	40-43			
L								
2E9	LABEL, COMPRESSOR CHARGE	90-28	1G11	MOTOR, STARTING.....	40-45			
2D8	LADDER AND LANDING, OPERATOR'S PLATFORM.....	90-1	1F21	MOTOR, WINDSHIELD WIPER.....	40-30			
2D9	LADDER, PIVOTING CONTROLS.....	90-3	2K12	MOUNTING AND ACTUATOR SWITCH.....	160-8			
2C19	LADDER, SEPARATOR	80-6	2H20	MOUNTING AND GUARD, STRAW SPREADER.....	120-41			
2D25	LATCHES FOR OPERATOR'S CAB	90-19	2E11	MOUNTING., COMPRESSOR, AIR COND.	90-30			
1I8	LEVER, PARKING BRAKE	60-1	2E12	MOUNTING., COMPRESSOR, AIR COND.	90-31			
2D9	LEVER, PIVOTING LADDER	90-3	1I24	MOUNTING, REAR AXLE	60-18			
1D4	LEVER, THROTTLE	30-8	2B9	MOUNTING,UNLOADING AUGER SWING HYDRAULIC...	70-15			
2B5	LEVER, VAR. SPEED CYL. ON OPER. PLATFORM	70-10	1H9	MUD SHIELD, TRANSMISSION DRIVE	50-7			
2C8	LIFT BRACKETS, PLATFORM	70-42	1E17	MUFFLER AND EXHAUST PIPES	30-46			
2C8	LIFT CYLINDER, PLATFORM	70-42	N					
2B16	LIFT, PLATFORM.....	70-22	2C11	NAMEPLATE, ACCUMULATOR.....	70-45			
1F20	LIGHTS, FIELD	40-29	1D21	NOZZLE, FUEL INJECTION	30-25			
1E23	LIGHTS, WARNING	40-5	1D22	NOZZLE, FUEL INJECTION	30-27			
2B11	LINE AND HOSES, UNLOADING AUGER SWING	70-17	1E11	NOZZLE, FUEL INJECTION	30-40			
2B12	LINE, UNLOADING AUGER SWING.....	70-18	O					
1B20	LINER, PISTON	20-27	2E16	O-RING KIT, AIR CONDITIONING	90-36			
1B21	LINER, PISTON	20-28	1B22	OIL COOLER, ENGINE	20-29			
2E14	LINES, AIR CONDITIONER.....	90-34	1B23	OIL COOLER, ENGINE	20-30			
2K9	LINES, AUTOMATIC HEADER HEIGHT	160-5	2B20	OIL HOSES, REEL DRIVE	70-28			
1I10	LINES, BRAKE	60-3	2B14	OIL LINES, AUX UNLDG. AUGER HYD. DRIVE	70-20			
1C23	LINES, FUEL	30-2	2C7	OIL LINES, PLATFORM LIFT	70-41			
1D8	LINES, FUEL INJECTION	30-12	2B22	OIL LINES, REEL LIFT	70-31			
2B14	LINES, OIL, AUX. UNLDG. AUGER HYD. DR.	70-20	2C9	OIL LINES, REEL LIFT	70-43			
2C7	LINES, OIL, PLATFORM LIFT	70-41	1I3	OIL LINES, SELECTIVE GROUND SPEED	50-26			
2B3	LINES, PUMP, MAIN HYDRAULIC	70-8	1I19	OIL LINES, STEERING	60-13			
2C9	LINES, REEL LIFT OIL	70-43	1I21	OIL LINES, STEERING	60-15			
1I3	LINES, SELECTIVE GROUND SPEED OIL	50-26	1I20	OIL LINES, STEERING LOWER-FRONT	60-14			
1I20	LINES, STEERING LOWER OIL-FRONT	60-14	1I22	OIL LINES, STEERING LOWER-REAR	60-16			
1I22	LINES, STEERING LOWER OIL-REAR	60-16	2C3	OIL LINES,VARIABLE DRIVE FEEDER HOUSE	70-37			
2C3	LINES,OIL,VARIABLE DRIVE FEEDER HOUSE	70-37	1B5	OIL PAN, ENGINE	20-12			
1I9	LINKAGE AND BRAKE PEDALS.....	60-2	1B6	OIL PAN, ENGINE	20-13			
1H21	LINKAGE AND CLUTCH PEDAL.....	50-19	1C19	OIL PRESSURE GAUGE TUBE	20-51			
2E14	LO PRESSURE SWITCH, AIR CONDITIONER	90-34	1B24	OIL PUMP, LUBRICATING, ENGINE	20-31			
2I18	LOADING AUGER AND HOUSING.....	120-67	2A20	OIL RESERVOIR	70-1			
3B10	LOADING AUGER DRIVE SHEAVES AND BELTS	170-21	2D5	OIL RESERVOIR DOOR	80-17			
2E3	LOUVERS AND PANELS, OPERATOR'S CAB	90-22	1A20	OIL, ENGINE, TORQ-GARD SUPREME.....	20-1			
1F5	LOW SHAFT SPEED INDICATOR	40-12	2G11	OPEN-BAR CONCAVE.....	120-7			
2I20	LOWER TAILINGS AUGER	120-69	1F12	OPERATOR'S CAB	40-20			
2I23	LOWER TAILINGS AUGER DRIVE TIGHTENER.....	120-72	1F13	OPERATOR'S CAB	40-21			
2I20	LOWER TAILINGS HOUSING	120-69	2D23	OPERATOR'S CAB BODY.....	90-17			
1A21	LUBRICANT, PACKING, CYLINDER LINER.....	20-3	2E7	OPERATOR'S CAB COMPRESSOR AND VALVE.....	90-26			
1A20	LUBRICANT, STEM, ENGINE VALVE	20-1	2D25	OPERATOR'S CAB DOORS	90-19			
M								
1B12	MAIN BEARING CAPS AND BEARINGS	20-19	1F11	OPERATOR'S CAB ELECTRICAL SWITCHES	40-19			
1B13	MAIN BEARING CAPS AND BEARINGS	20-20	1F11	OPERATOR'S CAB ELECTRICAL WIRING	40-19			

ALPHABETICAL INDEX - CONTINUED

<i>GRID</i>		<i>PAGE</i>	<i>GRID</i>		<i>PAGE</i>
2D16	OPERATOR'S CAB MOUNTING BUSHINGS	90 - 10	1E6	PUMP COVER, FUEL INJECTION	30 - 35
2D16	OPERATOR'S CAB MOUNTING SEALS	90 - 10	1E22	PUMP, FUEL	40 - 4
2E3	OPERATOR'S CAB PANELS AND LOUVERS	90 - 22	1D8	PUMP, FUEL INJECTION	30 - 12
2E6	OPERATOR'S CAB PRESSURIZER	90 - 25	1D24	PUMP, FUEL INJECTION	30 - 29
2E1	OPERATOR'S CAB SOUND INSULATION AND SEAL	90 - 20	1D20	PUMP, FUEL TRANSFER	30 - 24
2D25	OPERATOR'S CAB TOOL POCKET	90 - 19	1E12	PUMP, FUEL TRANSFER	30 - 41
2E4	OPERATOR'S CAB, AIR INTAKE, REAR	90 - 23	1E13	PUMP, FUEL TRANSFER	30 - 42
2D24	OPERATOR'S CAB, GLASS	90 - 18	2A21	PUMP, HYDRAULIC	70 - 2
2D24	OPERATOR'S CAB, MIRROR	90 - 18	2B18	PUMP, HYDROSTATIC DRIVE REEL	70 - 25
2D12	OPERATOR'S PLATFORM FLOOR MATS	90 - 6	1I17	PUMP, STEERING	60 - 11
2D12	OPERATOR'S PLATFORM HANDRAILS	90 - 6	1E8	PUMP, TRANSFER	30 - 37
2D8	OPERATOR'S PLATFORM LADDER AND LANDING	90 - 1			
2D17	OPERATOR'S PLATFORM SEAT SUPPORTS	90 - 11		Q	
2D18	OPERATOR'S PLATFORM SEAT SUPPORTS	90 - 12			
2D12	OPERATOR'S PLATFORM SHLDS AND FLOORBOARD ..	90 - 6	2E21	QUIK-TATCH COUPLER AND SHIELDS	110 - 1
2J18	OUTER UNLOADING AUGER HOUSING	130 - 16			
	P			R	
2I22	PADDLE, TAILINGS ELEVATOR	120 - 71	1C14	RADIATOR	20 - 46
1B5	PAN, OIL, ENGINE	20 - 12	1C15	RADIATOR	20 - 47
1B6	PAN, OIL, ENGINE	20 - 13	1C17	RADIATOR FAN DRIVE BELT TIGHTENER	20 - 49
2C25	PANEL, COMPARTMENT, FRONT ENGINE	80 - 12	1F22	RADIO	40 - 31
2E3	PANELS AND LOUVERS, OPERATOR'S CAB	90 - 22	1F23	RADIO	40 - 32
1H25	PIN, RELATIVE GROUND SPEED INDICATOR	50 - 23	1F24	RADIO, HEADPHONES	40 - 33
1B20	PISTON LINER	20 - 27	2D18	RAIL, OPERATOR'S PLATFORM SEAT	90 - 12
1B21	PISTON LINER	20 - 28	1H11	RAIL, SHIFTER, TRANSMISSION	50 - 9
1B20	PISTONS AND CONNECTING RODS	20 - 27	2D2	RAILING, SAFETY	80 - 14
1B21	PISTONS AND CONNECTING RODS	20 - 28	2G9	RASP-BAR CYLINDER	120 - 5
2I8	PITMAN, SHOE	120 - 56	1I24	REAR AXLE MOUNTING	60 - 18
2D9	PIVOTING LADDER CONTROLS	90 - 3	1J1	REAR AXLE SPINDLES	60 - 20
2G7	PLATE, FEED	120 - 3	1I25	REAR AXLE, ADJUSTABLE	60 - 19
2H11	PLATE, STRAW CHOPPER	120 - 32	1I24	REAR AXLE, FIXED	60 - 18
2H13	PLATE, STRAW CHOPPER	120 - 34	1J2	REAR AXLE, TIE ROD, STEERING	60 - 21
2F16	PLATF.VAR.DR.MIDDLE BELT TIGHTENER	110 - 23	2C18	REAR HOOD	80 - 5
2G1	PLATF.VARIABLE DR.LOWER BELT TIGHTENER	110 - 33	1J3	REAR WHEELS	60 - 22
2G2	PLATFORM CHAIN DRIVE TIGHTENER, L.H.	110 - 34	2B20	REEL DRIVE OIL HOSES	70 - 28
1F2	PLATFORM ELECTROMAGNETIC CLUTCH	40 - 9	2B25	REEL FLOW CONTROL VALVE, HYDROSTATIC DR.	70 - 34
2D8	PLATFORM LADDER AND LANDING, OPERATOR'S ..	90 - 1	2B16	REEL LIFT CONTROLS	70 - 22
2B16	PLATFORM LIFT AND REEL LIFT CONTROLS	70 - 22	2B22	REEL LIFT OIL LINES	70 - 31
2C8	PLATFORM LIFT BRACKETS	70 - 42	2C9	REEL LIFT OIL LINES	70 - 43
2C8	PLATFORM LIFT CYLINDER	70 - 42	2B17	REEL MOTOR	70 - 23
2C7	PLATFORM LIFT OIL LINES	70 - 41	1E23	REFLECTORS	40 - 5
2C8	PLATFORM LIFT SAFETY STOP	70 - 42	2G7	REINFORCEMENT, CYLINDER DOOR	120 - 3
2D12	PLATFORM SHLDS AND FLOORBOARD, OPERATOR'S ..	90 - 6	1H25	RELATIVE GROUND SPEED INDICATOR	50 - 23
2F25	PLATFORM UPPER DRIVE TIGHTENER	110 - 32	2G7	REMOTE DUMP STONE TRAP	120 - 3
2K8	PLUG, FLOW CONTROL (AUTO HEIGHT)	160 - 4	2A20	RESERVOIR, OIL	70 - 1
1I23	POWER STEERING CYLINDER	60 - 17	1B19	ROCKER ARM AND VALVES	20 - 26
1I18	POWER STEERING, CONTROL VALVE	60 - 12	1B18	ROCKER ARMS AND VALVES	20 - 25
1I21	POWER STEERING, OIL LINES	60 - 15	2D3	ROD, SAFETY	80 - 15
2D14	POWERSHAFT CLOSURE, ENGINE	90 - 8	1B20	RODS, CONNECTING AND PISTON	20 - 27
2J23	POWERSHAFT, ENGINE	140 - 1	1B21	RODS, CONNECTING AND PISTON	20 - 28
1E14	PRECLEANER	30 - 43	2E2	ROOF, CAB	90 - 21
2C11	PRESS.CTL.VALVE AND MTG.BKT, ACCUMULATOR ..	70 - 45	2H3	ROTARY DEFLECTOR DRIVE TIGHTENER	120 - 24
1F3	PRESSURE GAUGE, ACCUMULATOR	40 - 10	3A22	ROTARY SCREEN DISK, BELT, AND TIGHTENERS	170 - 5
2E6	PRESSURIZER, OPERATOR'S CAB	90 - 25	2D3	ROTARY SCREEN DOOR AND SAFETY ROD	80 - 15
3A24	PRIMARY BELTS	170 - 7	2D4	ROTARY SCREEN DOOR SEALS	80 - 16
3A24	PRIMARY CHAIN	170 - 7	1C13	ROTARY SCREEN DRIVE BELT DISPLACER	20 - 45
2J24	PRIMARY COUNTERSHAFT	140 - 2	1C13	ROTARY SCREEN DRIVE BELT TIGHTENERS	20 - 45
3A24	PRIMARY COUNTERSHAFT	170 - 7	1C18	ROTARY SCREEN DRIVE BELT TIGHTENERS	20 - 50
2J25	PRIMARY CTR'SHAFT. CYL. DRIVE SHEAVE	140 - 3	1C12	ROTARY SCREEN DRIVE SHAFT	20 - 44
3A24	PRIMARY SHEAVES	170 - 7	1C10	ROTARY SCREEN, FLAT	20 - 42
3A24	PRIMARY SPROCKETS	170 - 7	1G1	ROTOR, ALTERNATOR, 72 AMP	40 - 34
3A24	PRIMARY TIGHTENERS	170 - 7	1G3	ROTOR, ALTERNATOR, 90 AMP	40 - 36
1I4	PROPULSION DRIVE COUNTERSHAFT SHEAVE	50 - 27	1D16	ROTOR, FUEL INJECTION PUMP	30 - 20
1C6	PUMP ASSEMBLY, WATER	20 - 38	1E4	ROTOR, FUEL INJECTION PUMP	30 - 33

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
2H17	ROTOR, STRAW CHOPPER.....	120-38	3B2	SHEAVES, FEEDER HOUSE DRIVE	170-11
	S		3A24	SHEAVES, PRIMARY.....	170-7
2D2	SAFETY RAILING.....	80-14	2J25	SHEAVES,DRIVE,PRIMARY CTR'SHAFT CYL.....	140-3
2D3	SAFETY ROD AND ROTARY SCREEN DOOR.....	80-15	3B4	SHEAVES,SHOE GRAIN SUPPLY AUGERS DRIVE.....	170-13
2C8	SAFETY STOP, PLATFORM LIFT	70-42	2J8	SHEET, EXTENSION, GRAIN TANK COVER	130-6
1E22	SAFETY SWITCH, NEUTRAL	40-4	2E23	SHEET, FEEDER HOUSE, FRONT	110-4
1C10	SCREEN ROTARY, FLAT	20-42	2F3	SHEET, FEEDER HOUSE, SIDE	110-10
2G7	SEAL, CYLINDER DOOR.....	120-3	2F5	SHEET, FEEDER HOUSE, SIDE	110-12
2D1	SEALS, ENGINE COMPARTMENT.....	80-13	2C16	SHEET, SEPARATOR, SIDE	80-3
2E1	SEALS, OPERATOR'S CAB	90-20	2C14	SHEET, SEPARATOR, TOP	80-1
2D16	SEALS, OPERATOR'S CAB MOUNTING	90-10	2J9	SHEET, TOP, GRAIN TANK COVER	130-7
2D4	SEALS, ROTARY SCREEN DOOR.....	80-16	2C15	SHEETS AND FRAME, SEPARATOR R.H. SIDE	80-2
2D19	SEAT BACKREST SUPPORTS.....	90-13	2G7	SHEETS, SEPARATOR FRONT	120-3
2D20	SEAT CUSHIONS.....	90-14	2E24	SHEETS, TOP, FEEDER HOUSE	110-5
2D17	SEAT SUPPORTS, OPERATOR'S PLATFORM.....	90-11	2I10	SHIELD AND CLEANING FAN HOUSING	120-58
2K1	SECONDARY COUNTERSHAFT.....	140-4	2F15	SHIELD, DRIVE, VARIABLE BELT	110-22
2K2	SECONDARY COUNTERSHAFT DR.TIGHTENER	140-5	2E23	SHIELD, FEEDER DRUM	110-4
3A25	SECONDARY COUNTERSHAFT SHEAVES AND BELT....	170-9	2F14	SHIELD, FEEDER HOUSE LEFT-HAND.....	110-21
2G16	SECTOR, CONCAVE	120-12	2E22	SHIELD, LOWER, L.H., SPECIAL	110-3
1I1	SELECTIVE GROUND SPEED CONTROLS	50-24	1H9	SHIELD, MUD, TRANSMISSION DRIVE.....	50-7
1I2	SELECTIVE GROUND SPEED CYLINDER	50-25	2E23	SHIELD, PLATFORM AUGER	110-4
1I3	SELECTIVE GROUND SPEED OIL LINES.....	50-26	2F14	SHIELD, R.H., FEEDER HOUSE.....	110-21
2B13	SELECTOR VALVE, AUX. UNLOADING AUGER	70-19	2C20	SHIELD, R.H., SEPARATOR	80-7
1F4	SENSING UNIT, STRAW WALKER, PLUGGING	40-11	2H19	SHIELD, SHEAVE, STRAW CHOPPER	120-40
1B9	SENSOR CYLINDER HEAD OVERHEAT WARNING	20-16	2H7	SHIELD, STRAW SPREADER.....	120-28
2K3	SEPARATOR AUGER DRIVE BELT GUIDES	140-6	2E21	SHIELDS AND COUPLER, QUIK-TATCH.....	110-1
2C19	SEPARATOR CROSS BRACE	80-6	2H15	SHIELDS AND CURTAIN, STRAW CHOPPER	120-36
2H4	SEPARATOR CURTAINS.....	120-25	1F7	SHIELDS, CABLES, BRACKETS, AND BATTERY.....	40-14
2J1	SEPARATOR DRIVE CONTROLS.....	120-75	2H23	SHIELDS, STRAW SPREADER	120-44
2G7	SEPARATOR FRONT SHEETS.....	120-3	2D12	SHLDS AND FLOORBOARD,OPERATOR'S PLATFORM ..	90-6
2C16	SEPARATOR L.H. FRAME	80-3	2H8	SHOE AND STRAW WALKER DRIVE TIGHTENER	120-29
2C16	SEPARATOR L.H. SIDE SHEETS.....	80-3	2I3	SHOE GR.SUPPLY AUGERS DR.TIGHTENER	120-50
2C19	SEPARATOR LADDER	80-6	2H24	SHOE GRAIN SUPPLY AUGER HOUSING	120-45
2C20	SEPARATOR R.H. SHIELD	80-7	2H25	SHOE GRAIN SUPPLY AUGERS	120-47
2C15	SEPARATOR R.H. SIDE SHEETS AND FRAME	80-2	2I3	SHOE GRAIN SUPPLY AUGERS DR. SHIELD	120-50
2C14	SEPARATOR TOP SHEET	80-1	3B4	SHOE GRAIN SUPPLY AUGERS DRIVE BELT	170-13
2K1	SEPARATOR, SECONDARY COUNTERSHAFT	140-4	2I1	SHOE GRAIN SUPPLY AUGERS DRIVE SHAFT	120-48
1G17	SERVICE KIT, ELECTRICAL CONNECTOR.....	40-52	2I1	SHOE GRAIN SUPPLY AUGERS DRIVE SHEAVE.....	120-48
2F19	SHAFT AND SHEAVE, FDR.HSE.VAR.BELT DRIVE.....	110-26	3B4	SHOE GRAIN SUPPLY AUGERS DRIVE SHEAVES	170-13
2I8	SHAFT AND SHOE PITMAN.....	120-56	2I8	SHOE PITMAN AND SHAFT	120-56
2J21	SHAFT, AUXILIARY UNLOADING AUGERS DRIVE	130-19	2I4	SHOE, CHAFFER AND SIEVE	120-51
2I14	SHAFT, CLEAN GRAIN ELEVATOR CONVEYOR.....	120-62	2I6	SHOE, CHAFFER FRAME, UPPER	120-54
1H23	SHAFT, CLUTCH INPUT	50-21	3B5	SHOE, CLEANING	170-15
2G16	SHAFT, CONCAVE ADJUSTING.....	120-12	2I4	SHOE, SIEVE AND CHAFFER	120-51
1C12	SHAFT, DRIVE, ROTARY SCREEN	20-44	2I5	SHOE, SIEVE FRAME, LOWER	120-53
2F17	SHAFT, UPPER, FEEDER HOUSE.....	110-24	2I4	SIEVE AND CHAFFER.....	120-51
2I1	SHAFT,DRIVE,SHOE GRAIN SUPPLY AUGERS.....	120-48	2I5	SIEVE FRAME, LOWER SHOE.....	120-53
2F20	SHAFT,LOWER,FEEDER HOUSE DRIVE CHAIN	110-27	1F14	SIGNAL HORNS.....	40-23
1H15	SHAFTS AND BEARINGS	50-13	1E24	SIGNAL, TURN.....	40-7
1H15	SHAFTS, BRGS., AND DIFFERENTIAL GEARS	50-13	2J4	SKIRTS, GRAIN TANK.....	130-2
2G21	SHEAVE AND CYLINDER SHAFT SHEAR HUB	120-17	1I13	SLAVE CYLINDER, BRAKE.....	60-6
1G5	SHEAVE, ALTERNATOR	40-38	2F17	SLIP CLUTCH AND SPROCKETS, FEEDER HOUSE.....	110-24
2I14	SHEAVE, CLEAN GRAIN ELEVATOR CONVEYOR	120-62	2G22	SLOW SPD.CYL.DRIVE INTERMEDIATE SHAFT	120-19
1I4	SHEAVE, PROPULSION DRIVE COUNTERSHAFT.....	50-27	2K5	SOLENOID CONTROL VALVE (AUTO HEIGHT).....	160-1
2H19	SHEAVE, ROTOR, STRAW CHOPPER	120-40	1G12	SOLENOID SWITCH STARTER MOTOR	40-46
2I1	SHEAVE,DRIVE,SHOE GRAIN SUPPLY AUGERS	120-48	1H6	SPACER, AXLE	50-4
3A25	SHEAVES AND BELT, SECONDARY COUNTERSHAFT ..	170-9	1H4	SPACERS AND DRIVE WHEEL	50-2
3B3	SHEAVES AND BELTS, BEATER DRIVE	170-12	2G14	SPIKE-TOOTH CONCAVE	120-10
3B10	SHEAVES AND BELTS, LOADING AUGER DRIVE.....	170-21	2G13	SPIKE-TOOTH CYLINDER	120-9
3B9	SHEAVES AND SPROCKETS, AUGER DRIVE	170-19	1J1	SPINDLES, REAR AXLE	60-20
2G23	SHEAVES, BEATER AND TACHOMETER DRIVE.....	120-20	1F15	SPOTLIGHT	40-24
2H1	SHEAVES, BEATER AND TACHOMETER DRIVE.....	120-22	2H23	SPREADER SHIELDS, STRAW	120-44
3B10	SHEAVES, CLEAN GRAIN ELEVATOR	170-21	2H20	SPREADER, STRAW, MOUNTING AND GUARD	120-41
3A21	SHEAVES, ENGINE R.H. SIDE.....	170-3	2D18	SPRING, OPERATOR'S PLATFORM SEAT	90-12
			2F12	SPRINGS, FLOAT	110-19
			3B9	SPROCKETS AND SHEAVES, AUGER DRIVE	170-19
			2F17	SPROCKETS AND SLIP CLUTCH, FEEDER HOUSE.....	110-24

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
3B2	SPROCKETS, FEEDER HOUSE DRIVE.....	170 - 11	2B11	SWING HOSES AND LINE, UNLOADING AUGER	70 - 17
3A24	SPROCKETS, PRIMARY	170 - 7	2B12	SWING LINE, UNLOADING AUGER.....	70 - 18
2114	SPROCKETS,CLEAN GRAIN ELEVATOR CONVEYOR	120 - 62	2K9	SWING, AUGER.....	160 - 5
1G8	STARTER MOTOR ARMATURE ASSEMBLY	40 - 42	1F4	SWITCH, MICRO, STRAW WALKER SENSING UNIT.....	40 - 11
1G8	STARTER MOTOR DRIVE MOTOR	40 - 42	1E22	SWITCH, NEUTRAL SAFETY	40 - 4
1G12	STARTER MOTOR SOLENOID SWITCH	40 - 46	1G14	SWITCH, SOLENOID, STARTER	40 - 49
1G14	STARTER SOLENOID SWITCH	40 - 49	1G13	SWITCH, SOLENOID, STARTING MOTOR	40 - 47
1G7	STARTING MOTOR	40 - 41	1F16	SWITCH,DIAL-A-MATIC HDR.HEIGHT CONTROL.....	40 - 25
1G9	STARTING MOTOR	40 - 43	1F17	SWITCHES AND GAUGES ON INSTRUMENT PANEL.....	40 - 26
1G11	STARTING MOTOR	40 - 45	1F11	SWITCHES, OPERATOR'S CAB ELECTRICAL	40 - 19
1G11	STARTING MOTOR ARMATURE	40 - 45	1D24	SYSTEM, FUEL INJECTION	30 - 29
1G9	STARTING MOTOR DRIVE.....	40 - 43			
1G10	STARTING MOTOR HOUSING AND COIL ASSEMBLY	40 - 44		T	
1G13	STARTING MOTOR SOLENOID SWITCH	40 - 47			
1G1	STATOR, ALTERNATOR, 72 AMP	40 - 34	1F18	TACH-HOUR METER, ENGINE.....	40 - 27
1G3	STATOR, ALTERNATOR, 90 AMP	40 - 36	2H1	TACHOMETER AND BEATER DRIVE	120 - 22
1116	STEERING COLUMN AND WHEEL	60 - 10	2G23	TACHOMETER DRIVE AND BEATER	120 - 20
1118	STEERING CONTROL VALVE	60 - 12	2G15	TACHOMETER, VARIABLE SPEED CYLINDER	120 - 11
1121	STEERING LOWER OIL LINES (MIDDLE).....	60 - 15	2I20	TAILINGS AUGER, LOWER	120 - 69
1120	STEERING LOWER OIL LINES-FRONT.....	60 - 14	3B9	TAILINGS ELEVATOR	170 - 19
1122	STEERING LOWER OIL LINES-REAR	60 - 16	2I22	TAILINGS ELEVATOR BUCKET	120 - 71
1117	STEERING PUMP	60 - 11	2I22	TAILINGS ELEVATOR CONVEYOR CHAIN.....	120 - 71
1J2	STEERING TIE RODS.....	60 - 21	2I21	TAILINGS ELEVATOR HOUSING	120 - 70
1119	STEERING UPPER OIL LINES	60 - 13	2I22	TAILINGS ELEVATOR, PADDLE.....	120 - 71
1123	STEERING, CYLINDER	60 - 17	2I20	TAILINGS HOUSING, LOWER	120 - 69
1119	STEERING, OIL LINES	60 - 13	2I24	TAILINGS, AUGER, UPPER	120 - 73
2G11	STONE TRAP AND DOOR	120 - 7	1E23	TAILLIGHTS	40 - 5
2G7	STONE TRAP, REMOTE DUMP.....	120 - 3	2J3	TANK, GRAIN.....	130 - 1
1A21	STOP LEAK AND COOLANT CONDITIONER	20 - 3	1G15	TERMINAL AND WIRING KIT	40 - 50
1H25	STOP, RELATIVE GROUND SPEED INDICATOR.....	50 - 23	1G21	TERMINALS, SUPPLEMENTARY, AND CONNECTORS....	40 - 56
2C8	STOP, SAFETY, PLATFORM LIFT	70 - 42	1C7	THERMOSTAT AND WATER MANIFOLD	20 - 39
1A21	STORAGE KIT	20 - 3	1D4	THROTTLE CONTROL.....	30 - 8
3B7	STRAW CHOPPER AND STRAW SPREADER DRIVES....	170 - 17	1J2	TIE RODS, STEERING	60 - 21
2H15	STRAW CHOPPER CURTAIN AND SHIELDS.....	120 - 36	1C17	TIGHTENER, BELT, RADIATOR FAN DRIVE	20 - 49
2H18	STRAW CHOPPER DRIVE IDLER	120 - 39	2I16	TIGHTENER, CLEAN GRAIN ELEVATOR DRIVE	120 - 64
2H18	STRAW CHOPPER DRIVE TIGHTENER	120 - 39	2F16	TIGHTENER, DR., F.H. VAR. DR. MIDDLE	110 - 23
2H9	STRAW CHOPPER HOUSING	120 - 30	2F25	TIGHTENER, DR., FDR.HSE. AND PLAT.UPPER.....	110 - 32
2H10	STRAW CHOPPER HOUSING	120 - 31	2F16	TIGHTENER, DR., PLAT. VAR. DR. MIDDLE	110 - 23
2H16	STRAW CHOPPER KNIFE AND SUPPORT.....	120 - 37	2K2	TIGHTENER, DR., SECONDARY COUNTERSHAFT.....	140 - 5
2H11	STRAW CHOPPER PLATES AND FINS	120 - 32	2I3	TIGHTENER, DR., SHOE GRAIN SUPPLY AUGER	120 - 50
2H13	STRAW CHOPPER PLATES AND FINS	120 - 34	2I23	TIGHTENER, DRIVE, LOWER TAILINGS AUGER.....	120 - 72
2H17	STRAW CHOPPER ROTOR AND BLADES	120 - 38	1C18	TIGHTENER, DRIVE, RADIATOR FAN.....	20 - 50
2H19	STRAW CHOPPER ROTOR SHEAVE	120 - 40	2G2	TIGHTENER, FEEDER CONVEYOR DRIVE, L.H.	110 - 34
2H19	STRAW CHOPPER SHIELD	120 - 40	2F9	TIGHTENER, FEEDER CONVEYOR DRIVE, R.H.....	110 - 16
2H22	STRAW SPREADER	120 - 43	2G2	TIGHTENER, PLATFORM CHAIN DRIVE, L.H.	110 - 34
3B7	STRAW SPREADER AND STRAW CHOPPER DRIVES....	170 - 17	1C18	TIGHTENER, RADIATOR FAN DRIVE BELT	20 - 50
2H22	STRAW SPREADER BLADE	120 - 43	2H18	TIGHTENER, STRAW CHOPPER DRIVE.....	120 - 39
2H22	STRAW SPREADER HOUSING	120 - 43	2I25	TIGHTENER, UPPER TAILINGS AUGER DRIVE.....	120 - 74
2H20	STRAW SPREADER MOUNTING AND GUARD	120 - 41	2J16	TIGHTENER,AUXILIARY UNLOADING AUG.DRIVE	130 - 14
2H23	STRAW SPREADER SHIELDS	120 - 44	2G1	TIGHTENER,FDR.HSE.VARIABLE DR.LOWER BELT.....	110 - 33
3B5	STRAW WALKER DRIVES AND CLEANING SHOE	170 - 15	2G1	TIGHTENER,PLATF.VARIABLE DR.LOWER BELT	110 - 33
2H6	STRAW WALKER FRONT CRANKSHAFT	120 - 27	2G19	TIGHTENERS, DRIVE, CYLINDER	120 - 15
2H7	STRAW WALKER REAR CRANKSHAFT	120 - 28	2G20	TIGHTENERS, DRIVE, INTERMEDIATE SHAFT	120 - 16
1F4	STRAW WALKER, PLUGGING SENSING UNIT	40 - 11	2H3	TIGHTENERS, DRIVE, ROTARY DEFLECTOR	120 - 24
2H5	STRAW WALKERS	120 - 26	1C18	TIGHTENERS, DRIVE, ROTARY SCREEN	20 - 50
1H25	STRIP, RELATIVE GROUND SPEED INDICATOR	50 - 23	2H8	TIGHTENERS, DRIVE, SHOE AND STRAW WALKER	120 - 29
1G21	SUPPLEMENTARY TERMINALS AND CONNECTORS.....	40 - 56	3A21	TIGHTENERS, ENGINE R.H. SIDE.....	170 - 3
2A22	SUPPORT AND HYDRAULIC PUMP TORQUE ARM	70 - 3	3A24	TIGHTENERS, PRIMARY.....	170 - 7
2J16	SUPPORT,AUXILIARY UNLDG.AUGER DR.MOTOR.....	130 - 14	3A22	TIGHTENERS, ROTARY SCREEN	170 - 5
1C22	SUPPORTS AND FUEL TANK	30 - 1	1C13	TIGHTENERS, ROTARY SCREEN DRIVE BELT.....	20 - 45
2E11	SUPPORTS., COMPRESSOR, AIR COND.	90 - 30	1B4	TIMING GEAR COVER	20 - 11
2E12	SUPPORTS., COMPRESSOR, AIR COND.	90 - 31	2C20	TOOL BOX	80 - 7
2D19	SUPPORTS, BACKREST, SEAT.....	90 - 13	2D25	TOOL POCKET FOR OPERATOR'S CAB	90 - 19
1C8	SUPPORTS, ENGINE	20 - 40	1A20	TORQ-GARD SUPREME ENGINE OIL.....	20 - 1
2D18	SUPPORTS, OPERATOR'S PLATFORM SEAT.....	90 - 12	1E8	TRANSFER PUMP	30 - 37
2D17	SUPPORTS, SEAT, OPERATOR'S PLATFORM	90 - 11	1E12	TRANSFER PUMP, FUEL	30 - 41
2J17	SWING AND HINGE, UNLOADING AUGER.....	130 - 15			

ALPHABETICAL INDEX - CONTINUED

<i>GRID</i>		<i>PAGE</i>	<i>GRID</i>		<i>PAGE</i>
1E13	TRANSFER PUMP, FUEL	30 - 42	1B11	VENTILATOR TUBE, ENGINE.....	20 - 18
1H10	TRANSMISSION	50 - 8	1G3	VOLTAGE REGULATOR, ALTERNATOR, 90 AMP	40 - 36
1H11	TRANSMISSION AND DIFFERENTIAL	50 - 9	1G1	VOLTAGE REGULATOR,ALTERNATOR,72 AMP	40 - 34
1H12	TRANSMISSION COUNTERSHAFT AND GEARS	50 - 10			
1H9	TRANSMISSION DRIVE MUD SHIELD.....	50 - 7		W	
1H13	TRANSMISSION INPUT SHAFT	50 - 11			
2G7	TRAP, REMOTE DUMP STONE	120 - 3	2H5	WALKERS, STRAW	120 - 26
1E16	TUBE, AIR INTAKE	30 - 45	2D2	WALKWAY, ENGINE COMPARTMENT	80 - 14
1C19	TUBE, GAUGE, OIL PRESSURE	20 - 51	1E23	WARNING LIGHTS.....	40 - 5
1E14	TUBES, AIR INTAKE	30 - 43	1B9	WARNING SENSOR, CYLINDER HEAD OVERHEAT	20 - 16
1E24	TURN SIGNALS	40 - 7	1C7	WATER MANIFOLD AND THERMOSTAT	20 - 39
	U		1C6	WATER PUMP ASSEMBLY.....	20 - 38
1B16	UNDERSIZE CRANKSHAFT KIT.....	20 - 23	1J3	WEIGHT, REAR WHEEL	60 - 22
2J14	UNLOADING ATTACHMENT, GRASS SEED.....	130 - 12	1I16	WHEEL AND STEERING COLUMN	60 - 10
2J16	UNLOADING AUG.DRIVE TIGHTENER,AUXILIARY	130 - 14	1H4	WHEEL, DRIVE	50 - 2
2J12	UNLOADING AUGER COUNTERSHAFT	130 - 10	1H22	WHEEL, DRIVE, CLUTCH AND HOUSING	50 - 20
2J16	UNLOADING AUGER DR.MOTOR SUPT.,AUXILIARY	130 - 14	1H7	WHEEL, FENDER.....	50 - 5
2K3	UNLOADING AUGER DRIVE BELT GUIDES.....	140 - 6	1J3	WHEEL, REAR	60 - 22
2J10	UNLOADING AUGER DRIVE CONTROL	130 - 8	1J3	WHEEL, WEIGHTS	60 - 22
3B12	UNLOADING AUGER DRIVES	170 - 23	1F21	WINDSHIELD WIPER AND BRACKET	40 - 30
2J17	UNLOADING AUGER HINGE AND SWING	130 - 15	1F21	WIPER HARNESS	40 - 30
2J18	UNLOADING AUGER HOUSING, OUTER	130 - 16	1G15	WIRING AND TERMINAL KIT	40 - 50
2B7	UNLOADING AUGER SWING CONTROL VALVE	70 - 12	1G15	WIRING CRIMPING TOOL	40 - 50
2B8	UNLOADING AUGER SWING CONTROL VALVE	70 - 13	2K13	WIRING HARNESS	160 - 9
2B11	UNLOADING AUGER SWING HOSES AND LINE.....	70 - 17	2K14	WIRING HARNESS	160 - 10
2B10	UNLOADING AUGER SWING HYD.CYLINDER KIT	70 - 16	1F6	WIRING HARNESS, ENGINE	40 - 13
2B9	UNLOADING AUGER SWING HYDRAULIC CYLINDER	70 - 15	1E20	WIRING HARNESS, FRONT	40 - 2
2B9	UNLOADING AUGER SWING HYDRAULIC MOUNTING ..	70 - 15	1E21	WIRING HARNESS, MIDDLE	40 - 3
2B12	UNLOADING AUGER SWING LINE	70 - 18	1E22	WIRING HARNESS, REAR	40 - 4
2J11	UNLOADING AUGER, AUXILIARY, DR. CONTROL	130 - 9	1E22	WIRING HARNESS, TAIL LAMP.....	40 - 4
2J15	UNLOADING AUGER, INNER	130 - 13	1F12	WIRING ON ENGINE, AIR CONDITIONING.....	40 - 20
2J13	UNLOADING AUGER, INNER COVER	130 - 11	1F13	WIRING ON ENGINE, AIR CONDITIONING.....	40 - 21
2J17	UNLOADING AUGER, OUTER	130 - 15	1G15	WIRING STRIPPING TOOL	40 - 50
2J21	UNLOADING AUGERS DRIVE SHAFT, AUXILIARY	130 - 19	1F11	WIRING, OPERATOR'S CAB ELECTRICAL.....	40 - 19
2I25	UPPER AUGER DRIVE TIGHTENER, TAILINGS.....	120 - 74	1G21	WIRING, SUPPLEMENTARY TERMINALS AND CONNECTORS	40 - 56
2F17	UPPER SHAFT, FEEDER HOUSE	110 - 24			
2I24	UPPER TAILINGS AUGER AND HOUSING.....	120 - 73			
2I25	UPPER TAILINGS AUGER DRIVE TIGHTENER	120 - 74			
	V				
2E7	VALVE AND COMPRESSOR, OPERATOR'S CAB	90 - 26			
2B13	VALVE SUPPORT	70 - 19			
2B13	VALVE, AUX. UNLDG. AUGER SELECTOR	70 - 19			
2K5	VALVE, CONTROL, SOLENOID (AUTO HEIGHT).....	160 - 1			
2K7	VALVE, DROP RATE (AUTO HEIGHT)	160 - 3			
2E13	VALVE, EXPANSION, AIR CONDITIONER	90 - 33			
2A23	VALVE, HYDRAULIC CONTROL.....	70 - 4			
2B1	VALVE, HYDRAULIC CONTROL.....	70 - 6			
2B25	VALVE, HYDROSTATIC DR.REEL FLOW CONTROL.....	70 - 34			
1I18	VALVE, STEERING CONTROL	60 - 12			
2B7	VALVE, UNLOADING AUGER SWING CONTROL	70 - 12			
2B8	VALVE, UNLOADING AUGER SWING CONTROL	70 - 13			
2C11	VALVE,PRES.CTL.AND MTG.BKT,ACCUMULATOR	70 - 45			
1B18	VALVES AND ROCKER ARMS.....	20 - 25			
1B19	VALVES AND ROCKER ARMS.....	20 - 26			
2E9	VALVES, SERICE, COMPRESSOR CLUTCH	90 - 28			
2F15	VARIABLE BELT DRIVE SHIELD	110 - 22			
2C4	VARIABLE DRIVE FEEDER HOUSE HYD. HOSES	70 - 38			
2C3	VARIABLE DRIVE FEEDER HOUSE OIL LINES	70 - 37			
2B4	VARIABLE SPEED CYLINDER CONTROL-SEP.SIDE.....	70 - 9			
2G15	VARIABLE SPEED CYLINDER TACHOMETER	120 - 11			
1B10	VENTILATOR TUBE, ENGINE.....	20 - 17			

1A20

ENGINE

X3377 -UN-07NOV94


TORQ-GARD SUPREME ENGINE OIL



KEY	PART NO.	PART NAME	QTY	SERIAL NO.	REMARKS
..	AR63980	OIL	1	(237 ML) (SAE 5W/20)	
..	AR63979	OIL	1	(237 ML) (SAE 30)	
..	AR63228	OIL	1	(946 ML) (SAE 5W/20)	
..	AR63223	OIL	1	(946 ML) (SAE 10W/20)	
..	AR63218	OIL	1	(946 ML) (SAE 30)	
..	AR63229	OIL	1	(18.9 L) (SAE 5W/20)	
..	AR63224	OIL	1	(18.9 L) (SAE 10W/20)	
..	AR63219	OIL	1	(18.9 L) (SAE 30)	
..	AR63230	OIL	1	(208.5 L) (SAE 5W/20)	
..	AR63227	OIL	1	(208.5 L) (SAE 10W/20)	
..	AR63222	OIL	1	(208.5 L) (SAE 30)	

ENGINE VALVE STEM LUBRICANT

T14906 -UN-01JAN94

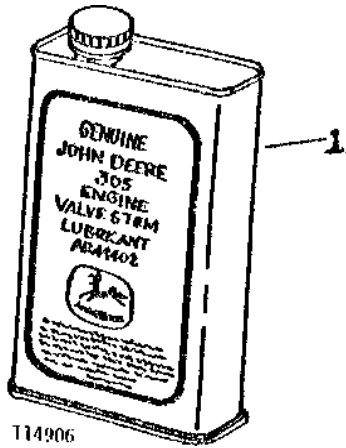

KEY	PART NO.	PART NAME	QTY	SERIAL NO.	REMARKS
1	AR44402	OIL	1	(0.9 L) CAN	

MEMORANDA

1A21

ENGINE

**CYLINDER LINER PACKING LUBRICANT
(NOT ILLUSTRATED)**

KEY	PART NO.	PART NAME	QTY	SERIAL NO.	REMARKS
..	AR54749	LUBRICANT	1		(0.9 L) CAN

**KIT FOR OFF-SEASON STORAGE
(NOT ILLUSTRATED)**

KEY	PART NO.	PART NAME	QTY	SERIAL NO.	REMARKS
..	AR41785	KIT	1		KIT, OFF-SEASON STORAGE, FOR ENGINE POWERED EQUIPMENT, THIS KIT CONTAINS QUART (0.9L) CAN OF INTERNAL CORROSION INHIBITOR, 1 ROLL OF TAPE AND 6 PLASTIC BAGS, (SUB FOR AR41870)

**STOP LEAK AND COOLANT CONDITIONER
(NOT ILLUSTRATED)**

KEY	PART NO.	PART NAME	QTY	SERIAL NO.	REMARKS
..	RE12842	COOLANT	1		.91 KG (32 OZ.) (SUB FOR T19566)
..	T11847	SEALANT	1		(NO LONGER AVAILABLE)