


1A2

6622 COMBINE

H33992 -UN-01JAN94

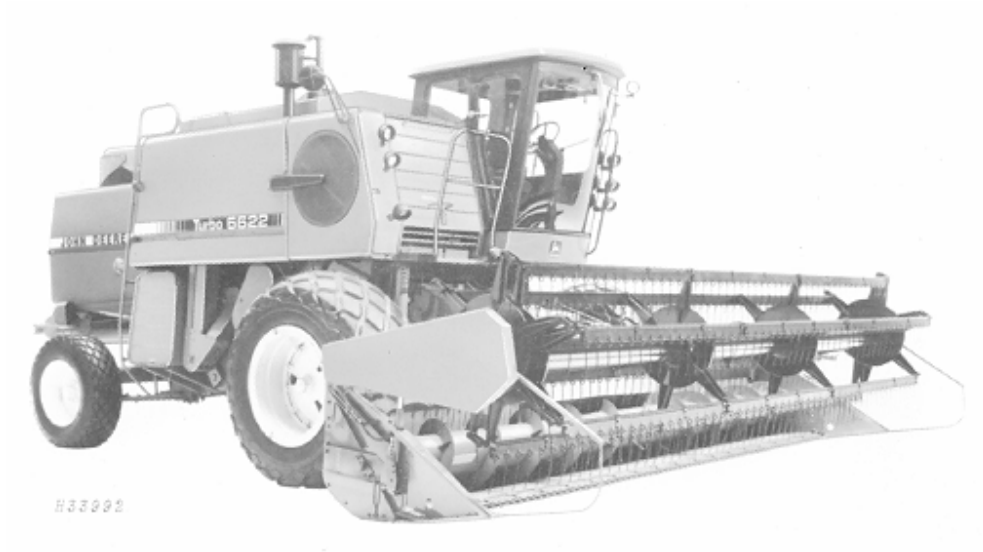

JOHN DEERE 6622 COMBINE

(SPECIFICATIONS AND DESIGN SUBJECT TO CHANGE WITHOUT NOTICE)

1A3

6622 COMBINE

NOTE

IN ADDITION TO TITAN COMBINES, PARTS INFORMATION FOR TITAN II COMBINES IS ALSO LOCATED IN THIS CATALOG. SERIAL NUMBER (610401-) INDICATES TITAN II PARTS.

IMPORTANT

THIS PARTS CATALOG CONTAINS PARTS INFORMATION FOR THE 6622 COMBINE. MACHINE VINTAGE IS DETERMINED BY THE SERIAL NUMBER OR THE PRODUCT IDENTIFICATION NUMBER (PIN). IT IS IMPORTANT THAT THE CORRECT NUMBERS BE USED WHEN ORDERING PARTS.

SERIAL NUMBER AND PRODUCT IDENTIFICATION NUMBER (PIN) PLATES

USE ALL NUMBERS, LETTERS AND SPACES SHOWN ON THE SERIAL NUMBER PLATE OR THE PRODUCT IDENTIFICATION NUMBER PLATE IN WARRANTY CORRESPONDENCE.

COMBINES (-556000)

ON THESE COMBINES, THE SERIAL NUMBER PLATE IS LOCATED ON THE REAR LEFT-HAND UPRIGHT.

AN EXAMPLE OF THE SERIAL NUMBER ON THIS PLATE IS:

E6622556000H

E - EQUIPMENT
6622 - COMBINE MODEL
556000 - COMBINE SEPARATOR SERIAL NUMBER
H - MANUFACTURING UNIT (HARVESTER WORKS)

COMBINES (556001-)

ON THESE COMBINES, THE PRODUCT IDENTIFICATION PLATE (PIN) IS LOCATED NEAR THE RIGHT-HAND SIDE OF THE TOOL BOX. AN EXAMPLE OF THE TWO-LINES ON THIS PIN PLATE IS:

H06622X556001
COMBINE

(FIRST LINE)

H0 - MANUFACTURING UNIT (HARVESTER WORKS)
6622 - MODEL IDENTIFIER
X - CONFIGURATION CODE/MODEL IDENTIFIER SUFFIX
556001 - SEQUENTIAL NUMBER USED IN SERIAL NO. COLUMN

(SECOND LINE)

COMBINE - TYPE OF PRODUCT

1A4

6622 COMBINE

ENGINE SERIAL NUMBER

THE ENGINE SERIAL NUMBER PLATE IS LOCATED ON THE RIGHT-HAND SIDE OF THE ENGINE BLOCK.

ENGINES (-227599)

AN EXAMPLE OF THE ONE-LINE, SIXTEEN-DIGIT NUMBER ON THIS SERIAL NUMBER PLATE IS:

6466TH01227599RG

6 - NUMBER OF CYLINDERS
466 - CUBIC INCH DISPLACEMENT
T - FUEL TYPE (TURBOCHARGED DIESEL)
H - MANUFACTURING UNIT OF MACHINE (HARVESTER WORKS)
01 - ENGINE VERSION
227599 - ENGINE SERIAL NUMBER
RG - MANUFACTURING UNIT OF ENGINE (JOHN DEERE ENGINE WORKS)

ENGINES (227600-)

AN EXAMPLE OF THE TWO-LINE NUMBER ON THIS SERIAL NUMBER PLATE IS:

RG6466227600
6466TH05

(FIRST LINE)

RG - MANUFACTURING UNIT (JOHN DEERE ENGINE WORKS)
6 - NUMBER OF CYLINDERS
466 - CUBIC INCH DISPLACEMENT
A - CONFIGURATION CODE/MODEL IDENTIFIER SUFFIX
227600 - SEQUENTIAL NUMBER USED IN SERIAL NO. COLUMN

(SECOND LINE)

6 - NUMBER OF CYLINDERS
466 - CUBIC INCH DISPLACEMENT
T - FUEL TYPE (TURBOCHARGED DIESEL)
H - MANUFACTURING UNIT OF MACHINE (HARVESTER WORKS)
05 - ENGINE VERSION

PARTS LISTING INFORMATION

SERIAL NUMBER OR PRODUCT IDENTIFICATION NUMBER (PIN) INFORMATION SHOWS ON WHICH MACHINES A PART MAY BE USED. FOR EXAMPLE:

- THE PART CAN BE USED ON ALL MACHINES.

-000000 THE PART CAN BE USED ON ALL MACHINES UP TO AND INCLUDING THE SERIAL NUMBER LISTED.

000000- THE PART CAN BE USED ON ALL MACHINES BEGINNING WITH THE SERIAL NUMBER LISTED.

000000-000000 THE PART CAN BE USED ON ALL MACHINES BETWEEN AND INCLUDING THE SERIAL NUMBERS LISTED.

WHEN XXXXXX'S ARE LISTED IN PLACE OF A SERIAL NUMBER, A SERIAL NUMBER WAS MADE, BUT THE EXACT SERIAL NUMBER WAS NOT AVAILABLE WHEN THE CATALOG WAS PRINTED.

1A5

6622 COMBINE

DIRECTION ARROW

ARROWS ARE USED WITH ILLUSTRATIONS TO INDICATE THE FRONT OF THE UNIT. "RIGHT-HAND" AND "LEFT-HAND" SIDES ARE DETERMINED BY FACING IN THE DIRECTION OF MACHINE FORWARD TRAVEL.

BOX-ENCLOSED ILLUSTRATIONS

A KEY NUMBER, SHOWN IN THE PARTS LIST, IS ASSIGNED TO A BOX ENCLOSING ALL PARTS SOLD AS A SERVICE ASSEMBLY. A BOX NOT KEYED INCLUDES NON-CURRENT PARTS.

KITS

KIT INFORMATION WILL BE FOUND IMMEDIATELY FOLLOWING THE STORY IN WHICH IT IS USED. THE ILLUSTRATION IS REPEATED WITH ONLY THE KIT PARTS CALLED OUT AND WITH ALL OTHER PARTS SHOWN IN PHANTOM FOR RELATIONSHIP.

JDM REMANUFACTURED COMPONENTS

THE SERVICE PARTS LISTED IN THIS CATALOG ARE INTENDED FOR THE REPAIR OF ORIGINAL EQUIPMENT COMPONENTS. ALTHOUGH MOST SERVICE PARTS MAY BE USED TO REPAIR REMANUFACTURED COMPONENTS, THE REMANUFACTURED DESIGN MAY CHANGE PARTS SUFFICIENTLY SO THAT SERVICE PARTS ARE INADEQUATE OR NOT USABLE.

BOLT AND CAP SCREW STRENGTH IDENTIFICATION

BOLTS AND CAP SCREWS REQUIRED TO HAVE HIGH-STRENGTH QUALITIES EQUIVALENT TO SAE GRADE 8 ARE IDENTIFIED THROUGHOUT THIS CATALOG BY THE DESCRIPTION HS SAE 8. ALL STANDARD BOLTS AND CAP SCREWS ARE SAE GRADE 5 OR LOWER.

COMPLETE GOODS LISTINGS

COMPLETE GOODS ARE LISTED IN BOLD FACE TYPE. ORDER SEPARATELY. DO NOT INCLUDE ON REPLACEMENT PARTS ORDER.

SI UNITS OF MEASURE

METRIC DIMENSIONS ARE GIVEN, WHERE APPLICABLE, THROUGHOUT THIS PARTS CATALOG.

TRADEMARKS

THROUGHOUT THIS PARTS CATALOG, YOU WILL FIND THE FOLLOWING DEERE & COMPANY TRADEMARKS:

DIAL-A-MATIC™
HARVESTRAK™

TORQ-GARD SUPREME®
QUIK-TATCH™

CHANGE INDICATOR LINE

CHANGES AFFECTING THE ORDERING OF PARTS ARE IDENTIFIED BY VERTICAL LINES MARKED IN THE LEFT-HAND MARGIN OF REVISED PARTS LISTING IMAGES. A LINE IS ALSO AT THE LEFT-HAND EDGE OF THE SAME PART NUMBER IN THE NUMERICAL INDEX TO SHOW THE LOCATION OF REVISED INFORMATION.

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

1A6

6622 COMBINE

SECTIONAL INDEX

	SECTION
GENERAL INFORMATION	10
BASIC ENGINE	20
FUEL AND AIR	30
ELECTRICAL	40
POWER TRAIN	50
STEERING AND BRAKES	60
HYDRAULICS	70
SEPARATOR SHELL	80
OPERATOR'S STATION	90
CUTTING PLATFORM	100
FEEDER HOUSE	110
SEPARATOR	120
GRAIN TANK AND UNLOADING AUGER	130
MAJOR DRIVES	140
LEVELING SYSTEM	150
DECALS, BELTS AND CHAINS	170
NUMERICAL INDEX	180

MEMORANDA

ALPHABETICAL INDEX

GRID		PAGE	GRID		PAGE
A					
1H21	ACCESSORIES, PANEL, INSTRUMENT	40-35	3G20	AUGER DRIVE KIT	100-67
1H2	ACTUATOR, LOW SHAFT SPEED MONITORS	40-15	3G20	AUGER DRIVE LUBE FITTING	100-67
4I23	ADAPTER, DECLUTCHING IDLER	140-15	3G20	AUGER DRIVE SHAFT	100-67
4G19	ADAPTER, R.H. SIDE LUBE BANK SYSTEM	120-142	3G23	AUGER DRIVE SHAFT, PLATFORM	100-71
4F6	ADJUSTING BRACKET,CL.GRAIN LOWER ELEV.	120-103	3G20	AUGER DRIVE SHIELD.....	100-67
2I22	ADJUSTING SCREW KIT	70-85	3G23	AUGER DRIVE SHIELD, PLATFORM.....	100-71
1E23	AID, COLD WEATHER STARTING.....	30-9	3H2	AUGER DRIVE SHIELDS.....	100-75
1F4	AIR CLEANER	30-15	3G23	AUGER DRIVE SPACER, PLATFORM.....	100-71
3D13	AIR CONDITIONER BELT	90-35	3G23	AUGER DRIVE SPRING, PLATFORM	100-71
3E4	AIR CONDITIONER EXPANSION VALVE.....	90-53	3G23	AUGER DRIVE SPROCKET, PLATFORM	100-71
3D17	AIR CONDITIONER HI PRESSURE SWITCH	90-39	5C16	AUGER DRIVE SPROCKETS AND CHAINS	170-5
3D25	AIR CONDITIONER LINES AND CONDENSER.....	90-49	3F17	AUGER DRIVE TIGHTENER AND SHIELD	100-35
3E4	AIR CONDITIONER LINES AND EVAPORATOR.....	90-53	4G6	AUGER DRIVE TIGHTENER, LOADING	120-129
3D13	AIR CONDITIONER PULLEY	90-35	4G14	AUGER DRIVE TIGHTENER, LOWER TAILINGS	120-137
3D13	AIR CONDITIONING COMPRESSOR.....	90-35	3F16	AUGER DRIVE TUBE AND KNIFE	100-33
3E3	AIR CONDITIONING KIT, O-RING	90-52	3G20	AUGER DRIVE UNIVERSAL JOINT YOKE	100-67
3D12	AIR FILTER, CAB.....	90-34	3G23	AUGER DRIVE, PLATFORM	100-71
1F3	AIR INTAKE TUBES.....	30-14	3F10	AUGER SPROCKET.....	100-27
1F5	AIR INTAKE TUBES-AIR CLEANER TO MANIFOLD.....	30-16	2G25	AUGER SWING CONTROL LEVER, UNLOADING	70-39
3D9	AIR LOUVER AND PANEL	90-31	2G20	AUGER SWING,HYDRAULIC OIL LINES AND HOSE.....	70-33
1J5	ALTERNATOR ADJUSTING STRAP	40-70	4H4	AUGER SWIVEL SHROUD,HORIZONTAL UNLDG.....	130-7
1J5	ALTERNATOR BRACKET	40-70	4I2	AUGER SWIVEL, HORIZONTAL UNLOADING	130-31
1J3	ALTERNATOR SHEAVE AND BELT.....	40-68	4I4	AUGER TUBE END,HORIZONTAL UNLDG.AUGER	130-33
1J4	ALTERNATOR, COMPLETE, 90 AMP	40-69	4F6	AUGER, CLEAN GRAIN LOWER ELEVATOR	120-103
1I24	ALTERNATOR, 72 AMP.....	40-64	3G19	AUGER, CROSS, FLIGHT EXTENSIONS.....	100-65
1I25	ALTERNATOR, 72 AMP.....	40-65	4H11	AUGER, FRONT CROSS, GRAIN TANK	130-15
1J1	ALTERNATOR, 90 AMP.....	40-66	4I4	AUGER, HORIZONTAL UNLOADING	130-33
1I22	AM PUSH-BUTTON RADIO.....	40-61	4F25	AUGER, LOADING	120-123
1I22	AM-FM PUSH-BUTTON RADIO.....	40-61	4G2	AUGER, LOADING	120-125
3F2	ANGLES, CUTTING PLATFORM	100-19	4G8	AUGER, LOWER TAILINGS	120-131
1I23	ANTENNA, RADIO	40-63	4F8	AUGER, LOWER, CLEAN GRAIN.....	120-105
5C9	ARM AND MOUNTING (AUTO.LEVELING CONTROL).....	150-31	3F12	AUGER, PLATFORM	100-29
2G16	ARM SUPPORT, MAIN HYDRAULIC PUMP TORQUE	70-29	3G14	AUGER, PLATFORM	100-59
3F19	ARM, BAT REEL DR.....	100-37	4H12	AUGER, REAR CROSS, GRAIN TANK	130-16
4I23	ARM, DECLUTCHING IDLER	140-15	4H9	AUGER, UNLOADING, COUNTERSHAFT	130-13
3F6	ARM, DRIVE, CUTTERBAR.....	100-23	4H25	AUGER, VERTICAL, GRAIN TANK.....	130-29
4C12	ARM, DUAL-RANGE CYLINDER DRIVE	120-30	4E4	AUGERS, SHOE GRAIN SUPPLY	120-75
2F7	ARM, L.H., REAR AXLE CONTROL	60-34	2G17	AUXILIARY UNLOADING AUGER HYD. MOTOR	70-30
3G10	ARM, LIFTING GUARDS	100-55	2F7	AXLE CONTROL ARMS, REAR	60-34
3F20	ARM, PICKUP REEL	100-39	2B15	AXLE PIVOT SHAFT AND SUPPORT	50-8
3F23	ARM, PICKUP REEL ECCENTRIC SPIDER.....	100-42	2B16	AXLE PIVOT SHAFT AND SUPPORT	50-9
2F7	ARM, R.H., REAR AXLE CONTROL.....	60-34	2C3	AXLE, FINAL DRIVE	50-21
4I21	ARM,IDLER,SECONDARY CTRSHAFT DRIVE IDLER	140-13	2F4	AXLE, REAR.....	60-31
4G14	ARM,LOWER TAILINGS AUGER DRIVE TIGHTENER	120-137	2F3	AXLE, REAR MOUNTING	60-29
1J7	ARMATURE, STARTER	40-72	2F9	AXLE, REAR, TRASH SHIELD	60-36
3C20	ARMREST.....	90-17	B		
2F7	ARMS, CENTER, REAR AXLE CONTROL.....	60-34	2G1	BACK PLATE KIT, MAIN HYD. PUMP	70-14
2F7	ARMS, CONTROL, REAR AXLE	60-34	2F25	BACK PLATE REPAIR KIT	70-13
3E17	ARMS, REEL SUPPORT	100-9	3H2	BACKETS, AUGER DRIVE	100-75
3F24	ARMS, REEL SUPPORT	100-43	3C18	BACKREST SUPPORTS, SEAT	90-15
1C15	ARMS, ROCKER	20-34	1E1	BAFFLE, ROTARY	20-72
3C23	ASH TRAY	90-20	2B14	BALANCE BEAM AND FRONT SUPPORT	50-7
1F6	ASPIRATOR	30-17	3I25	BALL JOINT, REVERSER CONTROL.....	110-45
4G15	AUGER AND HOUSING, UPPER TAILINGS	120-138	4C24	BAR, CYLINDER SHEAR.....	120-44
4H7	AUGER CONTROL LEVER, UNLOADING	130-11	4E13	BAR, FINGER.....	120-85
4H15	AUGER COVERS, GRASS SEED UNLOADING	130-19	4B13	BAR, RASP.....	120-5
4H13	AUGER COVERS,GRAIN TANK INNER UNLOADING	130-17	4B14	BAR, RASP, CYLINDER (DUAL-RANGE CYLINDER DRIVE)	120-6
3G21	AUGER DRIVE AND KNIFE DRIVE SHAFTS	100-69	4I13	BAR,PRIMARY COUNTERSHAFT AND MOUNTINGS	140-5
3H2	AUGER DRIVE BRACKETS.....	100-75	4I16	BARREL, HYDRAULIC CYLINDER, PRIMARY COUNTERSHAFT SHEAVES (DUAL-RANGE).....	140-8
3G23	AUGER DRIVE CARRIER, PLATFORM	100-71	2J8	BARREL, HYDRAULIC LIFT REEL MASTER CYL.	70-98
3G23	AUGER DRIVE CHAIN, PLATFORM.....	100-71	5B8	BARREL, LEVELING CYLINDER	150-3
3G20	AUGER DRIVE DRIVE LINE	100-67	2F1	BARREL, POWER STEERING CYLINDER.....	60-27
4I5	AUGER DRIVE GEAR CASE,HORIZONTAL UNLDG.	130-34			
3G23	AUGER DRIVE HUB, PLATFORM	100-71			
3G23	AUGER DRIVE JAW, PLATFORM	100-71			

ALPHABETICAL INDEX - CONTINUED

<i>GRID</i>		<i>PAGE</i>	<i>GRID</i>		<i>PAGE</i>
2H18	BARREL, UNLOADING AUG. SWING HYD. CYLINDER	70-57	5D15	BELT, ENGINE R.H. SIDE	170-29
3F19	BAT REEL DR. ARM	100-37	3I17	BELT, FEEDER CONVEYOR DRIVE SHAFT	110-36
3F19	BAT REEL DR. CHAIN	100-37	4G4	BELT, GEAR CASE, LOADING AUGER	120-127
3F19	BAT REEL DR. MOUNTINGS	100-37	3G12	BELT, KNIFE DRIVE CASE	100-57
3F19	BAT REEL DR. SHAFT	100-37	5D7	BELT, LOADING AUGER DRIVE	170-21
3F19	BAT REEL DR. SHIELD	100-37	4G8	BELT, LOWER TAILINGS AUGER	120-131
3F19	BAT REEL DR. SLAT	100-37	4B19	BELT, O-RING, CYLINDER SPEED TACHOMETER	120-11
3F19	BAT REEL DR. SPROCKETS	100-37	4C17	BELT, O-RING, CYLINDER TACHOMETER	120-35
2I18	BAT REEL, HYDRAULIC DRIVE REEL LINES	70-81	5C14	BELT, PLATFORM	170-3
3E13	BAT, PICKUP REEL	100-3	4I15	BELT, PRIMARY COUNTERSHAFT SHEAVES	140-7
3F20	BAT, PICKUP REEL	100-39	4I16	BELT, PRIMARY COUNTERSHAFT SHEAVES (DUAL RANGE CYLINDER DRIVE)	140-8
1H10	BATTERY CABLES AND MOUNTINGS	40-23	1E12	BELT, RADIATOR FAN	20-84
2B14	BEAM, BALANCE	50-7	1E7	BELT, ROTARY SCREEN	20-79
3F2	BEAM, TOP, CUTTING PLATFORM	100-19	1E5	BELT, ROTARY SCREEN DRIVE	20-76
3F10	BEARING HOUSING	100-27	5C23	BELT, SEPARATOR DRIVE	170-12
4I13	BEARING, BALL, PRIMARY COUNTERSHAFT	140-5	5C18	BELT, SHEAVES, AND TIGHTENERS-LH	170-7
4I23	BEARING, DECLUTCHING IDLER	140-15	5C14	BELT, SICKLE DRIVE	170-3
2C11	BEARING, HYDROSTATIC DRIVE PUMP	50-30	4D19	BELT, STRAW CHOPPER DRIVE	120-65
2C12	BEARING, HYDROSTATIC DRIVE PUMP	50-31	4D20	BELT, STRAW CHOPPER ROTOR	120-67
3G4	BEARING, PLATFORM FRAME	100-47	4H9	BELT, UNLOADING AUGER COUNTERSHAFT	130-13
2F4	BEARING, REAR AXLE	60-31	4C17	BELT, V, BEATER AND TACHOMETER DRIVE	120-35
2F6	BEARING, REAR WHEELS	60-33	4F22	BELT, CLEAN GRAIN ELEV. DRIVE COUNTERSHAFT	120-120
2C4	BEARINGS AND DRIVE SHAFT	50-23	4B24	BELT, CYLINDER DRIVE INTERMEDIATE SHAFT	120-17
2C3	BEARINGS, FINAL DRIVE	50-21	4F23	BELT, DR., CTRSHAFT, CLEAN GRAIN ELEVATOR	120-121
2C4	BEARINGS, FINAL DRIVE	50-23	5D7	BELT, DRIVE, CLEAN GR. ELEV. COUNTERSHAFT	170-21
2C18	BEARINGS, HYDROSTATIC DRIVE PUMP	50-37	5D5	BELT, DRIVE, FRONT, STRAW SPREADER	170-19
1C2	BEARINGS, MAIN	20-21	5C22	BELT, DRIVE, HYDROSTATIC DRIVE UNIT	170-11
3G16	BEARINGS, PLATFORM AUGER	100-61	2I10	BELT, HYDROSTATIC DRIVE REEL HYD. PUMP	70-73
4G13	BEARINGS, TAILINGS ELEVATOR CONVEYOR	120-136	4G14	BELT, LOWER TAILINGS AUG. DRIVE TIGHTENER	120-137
2B22	BEARINGS, TRANSMISSION	50-15	5C25	BELT, PRIMARY CTR'SHAFT TO HYD. REEL DRIVE	170-14
2B24	BEARINGS, TRANSMISSION	50-17	5D7	BELTS AND SHEAVES, LOADING AUGER DRIVE	170-21
5D2	BEATER AND CYLINDER TACHOMETER BELTS	170-16	5D2	BELTS, BEATER AND CYLINDER TACHOMETER	170-16
5D2	BEATER AND CYLINDER TACHOMETER SHEAVES	170-16	5D9	BELTS, CLEAN GRAIN ELEVATOR	170-23
4C17	BEATER AND TACHOMETER DRIVE	120-35	4I11	BELTS, ENGINE POWERSHAFT	140-3
4C18	BEATER AND TACHOMETER DRIVE	120-36	5C19	BELTS, FEEDER HOUSE DRIVE	170-8
4C18	BEATER BELT	120-36	5C20	BELTS, FEEDER HOUSE DRIVE	170-9
4C20	BEATER DRIVE	120-39	5C22	BELTS, HYDROSTATIC GROUND DRIVE	170-11
4C21	BEATER DRIVE, BELT, DUAL-RANGE	120-41	5D9	BELTS, LOADING AUGER	170-23
4C21	BEATER DRIVE, DUAL-RANGE	120-41	5D1	BELTS, PRIMARY COUNTERSHAFT TO CYLINDER	170-15
4C21	BEATER DRIVE, SHEAVE, DUAL-RANGE	120-41	5D6	BELTS, SHOE GRAIN SUPPLY AUGERS DRIVE	170-20
4C17	BEATER DRUM	120-35	4B22	BEVEL GEAR, CONCAVE ADJUSTING CONTROLS	120-15
3I4	BEATER DRUM, FEEDER	110-23	4E22	BLADE, CLEANING FAN	120-95
4B17	BEATER GRATE	120-9	4D22	BLADE, STRAW SPREADER	120-69
1F2	BELL CRANK	30-13	1I6	BLADE, WINDSHIELD WIPER	40-45
3I25	BELL CRANK, REVERSER CONTROL	110-45	4D17	BLADES, STRAW CHOPPER	120-63
4I24	BELT GUIDES, SEPARATOR, UNLDG. AUGER DRIVE	140-16	2J12	BLEEDER SCREW, SLAVE CYLINDER	70-102
4C18	BELT TACHOMETER DRIVE	120-36	5B8	BLEEDER VALVE, LEVELING CYLINDER	150-3
3F9	BELT TIGHTENER, KNIFE DRIVE	100-26	1B12	BLOCK, CYLINDER (TH 01)	20-6
2D13	BELT TIGHTENER, PROPULSION DRIVE	50-57	1B14	BLOCK, CYLINDER (TH 01)	20-8
3D13	BELT, AIR CONDITIONER	90-35	1B22	BLOCK, CYLINDER (6466AH 01)	20-16
1J3	BELT, ALTERNATOR	40-68	1B16	BLOCK, ENGINE SHORT (TH 01)	20-10
4C18	BELT, BEATER	120-36	1B20	BLOCK, ENGINE SHORT (TH 01)	20-14
4C21	BELT, BEATER DRIVE, DUAL-RANGE	120-41	1B24	BLOCK, ENGINE SHORT (TH 05)	20-18
4E22	BELT, CLEANING FAN	120-95	4G16	BLOCK, TIGHTENER, UPPER TAILINGS AUG. DRIVE	120-139
5D1	BELT, CYLINDER	170-15	2C14	BLOCKS, CYLINDER, HYDROSTATIC DRIVE PUMP	50-33
4F14	BELT, DRIVE, CLEAN GRAIN ELEVATOR	120-111	2C15	BLOCKS, CYLINDER, HYDROSTATIC DRIVE PUMP	50-34
5D7	BELT, DRIVE, CLEAN GRAIN ELEVATOR	170-21	1H25	BLOWER AND HARNESS, CAB ROOF WIRING	40-39
5D3	BELT, DRIVE, CLEANING FAN DRIVE	170-17	1H25	BLOWER NOISE SUPPRESSOR CONDENSER	40-39
4F14	BELT, DRIVE, LOADING AUGER DRIVE	120-111	3D11	BLOWER, PRESSURIZER	90-33
5D5	BELT, DRIVE, REAR, STRAW CHOPPER	170-19	2D8	BODY, HYDROSTATIC CHARGE PUMP	50-51
5C24	BELT, DRIVE, SECONDARY COUNTERSHAFT	170-13	1E4	BOGIE WHEELS, ROTARY SCREEN	20-75
5D11	BELT, DRIVE, TAILINGS AUGER	170-25	2E9	BOOT, BRAKE SLAVE CYLINDER	60-10
5D1	BELT, DRIVE, TORQ-SENSING COUNTERSHAFT	170-15	4F16	BOOT, CLEAN GRAIN ELEVATOR HOUSING	120-114
5D13	BELT, DRIVE, UNLOADING AUGER	170-27	4F4	BOOT, CLEAN GRAIN LOWER ELEVATOR HOUSING	120-101
4C7	BELT, DUAL-RANGE CYLINDER DRIVE GEAR CASE	120-24	2E12	BOOT, PARKING BRAKE	60-13
			4G18	BOOT, SEPARATOR DRIVE CONTROLS	120-141

1A9

6622 COMBINE

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
2E16	BOOT, STEERING COLUMN	60-17	1C24	BYPASS VALVE, OIL COOLER (TH 01, 05)	20-44
4F10	BOOT,CLEAN GRAIN ELEVATOR UPPER HOUSING	120-107	1C25	BYPASS VALVE, OIL COOLER (TH 05)	20-45
3H21	BOTTOM SHEETS, FEEDER HOUSE	110-15			
3H23	BOTTOM SHEETS, REVERSER FEEDER HOUSE	110-17		C	
3H25	BOTTOM SHEETS, REVERSER FEEDER HOUSE	110-19			
3B18	BOX, TOOL.....	80-13	3D12	CAB AIR FILTER AND HOUSING.....	90-34
1H19	BOX,CONTROL,LOW SHAFT SPEED MONITORING	40-33	3C25	CAB AND MIRROR	90-22
4F16	BRACE, CLEAN GRAIN ELEVATOR HOUSING	120-114	3D3	CAB DOORS	90-25
3B14	BRACE, CROSS, SEPARATOR	80-8	3D9	CAB PANEL, UPPER	90-31
4F25	BRACE, LOADING AUGER AND HOUSING	120-123	3D7	CAB ROOF AND COVERS	90-29
3B14	BRACE, REAR, SEPARATOR CROSS.....	80-8	3D7	CAB ROOF AND COVERS, INNER	90-29
3B11	BRACE, SEPARATOR L.H. SIDE SHEET	80-5	3D6	CAB ROOF AND SUPPORTS.....	90-28
3B9	BRACE, SEPARATOR R.H. SIDE SHEET	80-3	3D8	CAB ROOF HEADLINER	90-30
4H9	BRACE, UNLOADING AUGER COUNTERSHAFT.....	130-13	1H25	CAB ROOF WIRING HARNESS AND BLOWER	40-39
4F4	BRACE,CLEAN GRAIN LOWER ELEVATOR HOUSING....	120-101	3C15	CAB SEAL	90-12
4C4	BRACES, CYLINDER DRIVE SUPPORT	120-21	3D1	CAB WINDOWS	90-23
3H13	BRACES, FEEDER HOUSE.....	110-7	1F2	CABLE SUPPORTS	30-13
3J8	BRACES, FEEDER HOUSE MIDDLE BELT	110-53	2C6	CABLE, CONTROL, HYDROSTATIC DRIVE	50-25
4C5	BRACES, INTERMEDIATE DRIVE SUPPORT (DUAL-RANGE CYLINDER DRIVE)	120-22	4B19	CABLE, CYLINDER SPEED TACHOMETER	120-11
3H11	BRACES, PLATFORM	110-5	1G9	CABLE, FUEL SHUT-OFF CONTROL	30-47
5C6	BRACKET AND LEVELING LIMIT SWITCH	150-28	1G21	CABLE, MODULE, ELECTROMAGNETIC CLUTCH.....	40-9
1F3	BRACKET, AIR INTAKE TUBES	30-14	2E12	CABLE, PARKING BRAKE	60-13
1J5	BRACKET, ALTERNATOR.....	40-70	1I23	CABLE, RADIO EXTERNAL ANTENNA	40-63
4F11	BRACKET, CLEAN GRAIN ELEVATOR HOUSING	120-108	3I25	CABLE, REVERSER CONTROL	110-45
3J9	BRACKET, FEEDER CONVEYOR DRIVE	110-54	1E25	CABLE, THROTTLE LINKAGE CONTROL	30-11
3J10	BRACKET, FEEDER CONVEYOR DRIVE	110-55	2G24	CABLE, VARIABLE CYLINDER CONTROL	70-37
1G6	BRACKET, FUEL SHUT-OFF	30-44	1J13	CABLE, WIRING.....	40-78
1G10	BRACKET, FUEL SHUT-OFF	30-48	2B12	CABLES AND MOUNTINGS, GEARSHIFT	50-5
4G24	BRACKET, GRAIN TANK.....	130-3	3H9	CABLES AND MTG.,PLATFORM LEVELING-RH.....	110-3
2I17	BRACKET, HYDRAULIC DRIVE REEL OIL LINES	70-80	1H10	CABLES, BATTERY	40-23
3H3	BRACKET, KNIFE DRIVE	100-76	1C5	CAMSHAFT.....	20-24
4G6	BRACKET, LOADING AUGER DRIVE TIGHTENER	120-129	1C5	CAMSHAFT GEAR.....	20-24
3F22	BRACKET, PICKUP REEL DR.	100-41	1D25	CAP, ENGINE COOLANT HEATER	20-71
1I22	BRACKET, RADIO	40-61	2F15	CAP, HYDRAULIC OIL RESERVOIR	70-3
2F9	BRACKET, REAR AXLE TRASH SHIELD.....	60-36	1E11	CAP, RADIATOR	20-83
1H17	BRACKET, SPOTLIGHT.....	40-31	1F6	CAP, RAIN	30-17
1G17	BRACKET, UNLOADING AUGER LIGHT	40-5	3G23	CARRIER, AUGER DRIVE, PLATFORM.....	100-71
4H4	BRACKET, UNLOADING AUGER SWIVEL SHROUD	130-7	3G12	CASE, KNIFE DRIVE	100-57
4F6	BRACKET,ADJ.,CLEAN GRAIN LOWER ELEVATOR	120-103	1D13	CENTER HOUSING, TURBOCHARGER.....	20-58
4I21	BRACKET,SECONDARY CTRSHAFT DRIVE IDLER	140-13	1D17	CENTER HOUSING, TURBOCHARGER	20-63
4I24	BRACKET,SEPARATOR AUG.DRIVE BELT GUIDES	140-16	1D15	CENTER HOUSING, TURBOCHARGER(AIRESEARCH)....	20-60
4I24	BRACKET,UNLDG.AUGER DRIVE BELT GUIDES	140-16	4E9	CHAFFER AND SIEVE.....	120-81
4G16	BRACKET,UPPER TAILINGS AUG.DR.TIGHTENER	120-139	4E13	CHAFFER FRAME AND COVER	120-85
3C20	BRACKETS, ARMREST	90-17	4E15	CHAFFER FRAME BRACKETS.....	120-87
4E15	BRACKETS, CHAFFER FRAME	120-87	4E15	CHAFFER FRAME SWINGERS.....	120-87
3H2	BRACKETS, KNIFE DRIVE	100-75	3I14	CHAIN DRIVE TIGHTENER, FEEDER BEATER	110-33
1H2	BRACKETS, MOUNTING, LOW SHAFT SPEED	40-15	3J11	CHAIN GUIDES, FEEDER CONVEYOR DRIVE.....	110-56
3G18	BRACKETS, PLATFORM AUGER.....	100-63	3I15	CHAIN SHIELD, FEEDER CONVEYOR	110-34
2E12	BRAKE CONTROLS, PARKING	60-13	3I16	CHAIN SHIELDS, FEEDER CONVEYOR	110-35
2E5	BRAKE LINES, LEFT-HAND	60-5	3G23	CHAIN, AUGER DRIVE, PLATFORM	100-71
2E3	BRAKE LINES, RIGHT-HAND	60-3	3F19	CHAIN, BAT REEL DR.	100-37
2E8	BRAKE MASTER CYLINDER	60-9	4F6	CHAIN, CLEAN GRAIN LOWER ELEVATOR.....	120-103
2E1	BRAKE PEDALS AND LINKAGE	60-1	4F14	CHAIN, CLEAN GRAIN UPPER ELEVATOR	120-111
2E9	BRAKE SLAVE CYLINDER	60-10	4B22	CHAIN, CONCAVE ADJUSTING CONTROLS	120-15
2E10	BRAKE SLAVE CYLINDER KIT.....	60-11	4F15	CHAIN, CONVEYOR, CLEAN GRAIN ELEVATOR	120-113
2E6	BRAKES, DRIVE WHEEL	60-7	3I10	CHAIN, CONVEYOR, FEEDER	110-29
2E14	BRAKES, PARKING (L.H. ILLUSTRATED).....	60-15	3F24	CHAIN, CYL. ROD EX., REEL SUPPORT ARMS	100-43
1H12	BREAKER, CIRCUIT	40-25	3I9	CHAIN, FEEDER BEATER DRIVE	110-28
1E18	BREATHER, FUEL TANK	30-3	3I11	CHAIN, FEEDER CONVEYOR	110-30
4I11	BRUSH, ENGINE POWERSHAFT	140-3	3J9	CHAIN, FEEDER CONVEYOR DRIVE	110-54
4B19	BULB, CYLINDER SPEED TACHOMETER	120-11	3J10	CHAIN, FEEDER CONVEYOR DRIVE	110-55
2F4	BUSHING, REAR AXLE	60-31	4H11	CHAIN, GRAIN TANK FRONT CROSS AUGER	130-15
2F9	BUSHING, RUBBER, REAR AXLE TRASH SHIELD	60-36	4H12	CHAIN, GRAIN TANK REAR CROSS AUGER.....	130-16
1H12	BUSS BAR, CIRCUIT BREAKER	40-25	3G25	CHAIN, KNIFE DRIVE	100-73
1H21	BUZZER, WARNING	40-35	4F14	CHAIN, LOADING AUGER	120-111
1C18	BYPASS VALVE, OIL COOLER (TH 01)	20-38	4F25	CHAIN, LOADING AUGER	120-123

1A10

6622 COMBINE

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
5D7	CHAIN, LOADING AUGER	170-21	4I21	CLEVIS, SECONDARY CTRSHAFT DRIVE IDLER	140-13
3F22	CHAIN, PICKUP REEL DR.	100-41	3G9	CLIP, CUTTERBAR KNIFE GUARDS (NON-CLOG)	100-53
5C14	CHAIN, PLATFORM	170-3	1G21	CLUTCH, ELECTROMAGNETIC, HEADER	40-9
4I19	CHAIN, SECONDARY COUNTERSHAFT	140-11	3F10	CLUTCH, SLIP	100-27
4E16	CHAIN, SHOE PITMAN	120-88	4E6	CLUTCH, SLIP	120-77
4D7	CHAIN, STRAW WALKER DRIVE TIGHTENER	120-53	3I8	CLUTCH, SLIP, FEEDER BEATER	110-27
4G13	CHAIN, TAILINGS ELEVATOR CONVEYOR	120-136	3J5	CLUTCH, SLIP, FEEDER HOUSE	110-50
4H9	CHAIN, UNLOADING AUGER COUNTERSHAFT	130-13	4G8	CLUTCH,SLIP,LOWER TAILINGS AUGER	120-131
4G15	CHAIN, UPPER TAILINGS AUGER	120-138	1G21	COIL, ELECTROMAGNETIC CLUTCH	40-9
5D7	CHAIN,CLEAN GR.LOWER ELEV., LOWER AUGER	170-21	1J8	COIL, STARTER	40-73
4F14	CHAIN,CLEAN GR.LOWER ELEV.,LOWER AUGER	120-111	1E23	COLD WEATHER STARTING AID	30-9
4F6	CHAIN,CONVEYOR,CLEAN GRAIN LOWER ELEV.	120-103	2E16	COLUMN AND WHEEL, STEERING	60-17
5D11	CHAIN,DRIVE,TAILINGS UPPER AUGER	170-25	1J9	COMMUTATOR END FRAME, STARTER	40-74
4E18	CHAIN,SHOE CRANKSHAFT DRIVE TIGHTENER	120-91	2E18	COMMUTATOR, STEERING PUMP	60-19
4G16	CHAIN,UPPER TAILINGS AUG.DRIVE TIGHTENER.....	120-139	3D20	COMPRESSOR CLUTCH AND SERVICE VALVE	90-43
5C17	CHAINS AND SPROCKETS, DRIVE-RH	170-6	3D23	COMPRESSOR HARDWARE KIT	90-47
5C17	CHAINS AND TIGHTENERS, DRIVE-RH	170-6	3D16	COMPRESSOR HARNESS AND RELAY	90-38
5C21	CHAINS, FEEDER HOUSE	170-10	3D21	COMPRESSOR KIT	90-44
3C8	CHANNEL SUPPORTS, OPERATOR'S	90-5	3D18	COMPRESSOR MOUNTING AND SUPPORTS	90-40
3H2	CHANNEL, AUGER DRIVE	100-75	3D19	COMPRESSOR MOUNTING AND SUPPORTS	90-41
4H13	CHANNELS,GRAIN TANK INNER UNLOADING AUG.	130-17	1H10	COMPRESSOR WIRING HARNESS.....	40-23
2D11	CHARGE PUMP MOUNTING, HYDROSTATIC DRIVE	50-55	3D13	COMPRESSOR, AIR CONDITIONING	90-35
2D8	CHARGE PUMP, HYDROSTATIC	50-51	4B22	CONCAVE ADJUSTING CONTROLS	120-15
1F9	CHECK VALVE, FUEL	30-21	4B20	CONCAVE ADJUSTING SHAFT	120-13
4D17	CHOPPER, STRAW	120-63	4B17	CONCAVE, OPEN-BAR	120-9
5D5	CHOPPER, STRAW	170-19	3D25	CONDENSER AND AIR CONDITIONER LINES.....	90-49
4D14	CHOPPER, STRAW, PLATE AND FINS.....	120-60	1H25	CONDENSER NOISE SUPPRESSOR	40-39
4F4	CHUTE, CLEAN GRAIN LOWER ELEVATOR	120-101	4H6	CONDUIT, GRAIN TANK EXTENSION	130-9
1H3	CIRCUIT BOX, HARVESTRAK	40-16	3H4	CONDUIT, SHIELD.....	100-77
1H12	CIRCUIT BREAKER AND RELAY PANEL	40-25	1C3	CONNECTING RODS	20-22
1H23	CIRCUIT BREAKER, ELECTRIC CLUTCH.....	40-37	1C4	CONNECTING RODS	20-23
1H23	CIRCUIT BREAKER, HARVESTRAK.....	40-37	4F6	CONNECTOR, CLEAN GRAIN LOWER ELEVATOR.....	120-103
1F3	CLAMP, AIR INTAKE TUBES	30-14	1J15	CONNECTOR, ELECTRICAL, SERVICE KIT	40-80
1F6	CLAMP, EXHAUST PIPE	30-17	4G20	CONNECTOR, L.H. SIDE LUBE BANK SYSTEM	120-143
4G20	CLAMP, L.H. SIDE LUBE BANK SYSTEM.....	120-143	4G19	CONNECTOR, R.H. SIDE LUBE BANK SYSTEM	120-142
2F1	CLAMP, POWER STEERING CYLINDER.....	60-27	4I6	CONNECTOR,UNLOADING AUG.LUBE BANK SYSTEM ..	130-35
3B16	CLAMP, SEPARATOR R.H. SHIELD.....	80-10	1J19	CONNECTORS, SUPPLEMENTARY TERMINALS.....	40-84
2F8	CLAMP, STEERING TIE RODS	60-35	3C22	CONSOLE COVERS	90-19
1H6	CLAMPS, REAR CAB HARNESS	40-19	3C12	CONSOLE INSULATION, SEAT	90-9
5D7	CLEAN GRAIN ELEVATOR	170-21	3C14	CONSOLE SEALS	90-11
5D9	CLEAN GRAIN ELEVATOR DRIVE.....	170-23	1H3	CONSOLE, GRAIN LOSS (HARVESTRAK)	40-16
4F22	CLEAN GRAIN ELEVATOR DRIVE COUNTERSHAFT	120-120	3C14	CONSOLE, SEAT	90-11
4F23	CLEAN GRAIN ELEVATOR DRIVE COUNTERSHAFT	120-121	2C8	CONTROL CABLE MOUNTING,HYDROSTATIC DRIVE	50-27
4F19	CLEAN GRAIN ELEVATOR DRIVE TIGHTENER.....	120-117	2C6	CONTROL CABLE, HYDROSTATIC DRIVE	50-25
4F21	CLEAN GRAIN ELEVATOR DRIVE TIGHTENER.....	120-119	2D5	CONTROL HANDLE AND ORIFICE	50-48
4F11	CLEAN GRAIN ELEVATOR HOUSING.....	120-108	4H7	CONTROL LEVER, UNLOADING AUGER	130-11
4F16	CLEAN GRAIN ELEVATOR HOUSING BOOT	120-114	2G25	CONTROL LEVER, UNLOADING AUGER SWING	70-39
5D9	CLEAN GRAIN ELEVATOR SHEAVES AND BELTS.....	170-23	1H3	CONTROL PANEL, HARVESTRAK COMBINE	
4F10	CLEAN GRAIN ELEVATOR UPPER HOUSING	120-107		MONITOR	40-16
4F8	CLEAN GRAIN LOWER AUGER AND HOUSING	120-105	2H10	CONTROL VALVE KIT, SECONDARY	70-49
4F2	CLEAN GRAIN LOWER AUGER HOUSING.....	120-99	2H12	CONTROL VALVE KIT, SECONDARY	70-51
4F6	CLEAN GRAIN LOWER ELEV. CONVEYOR CHAIN.....	120-103	2I8	CONTROL VALVE LINKAGE,HYDRO.DR.REEL SPD	70-71
4F6	CLEAN GRAIN LOWER ELEVATOR AUGER	120-103	5B21	CONTROL VALVE SOLENOID KIT.....	150-17
4F4	CLEAN GRAIN LOWER ELEVATOR CHUTE.....	120-101	2D3	CONTROL VALVE, HYDRO. DRIVE DISPLACEMENT	50-46
4F6	CLEAN GRAIN LOWER ELEVATOR GUARD	120-103	2H2	CONTROL VALVE, SECONDARY.....	70-41
4F4	CLEAN GRAIN LOWER ELEVATOR HOUSING	120-101	2H3	CONTROL VALVE, SECONDARY.....	70-42
4F6	CLEAN GRAIN LOWER ELEVATOR PLATE	120-103	2H5	CONTROL VALVE, SECONDARY.....	70-44
4F6	CLEAN GRAIN LOWER ELEVATOR SHAFTS.....	120-103	2D2	CONTROL VALVE,HYDRO.DRIVE DISPLACEMENT.....	50-45
4F6	CLEAN GRAIN LOWER ELEVATOR SPROCKETS.....	120-103	2I23	CONTROL VALVE,HYDRO.DRIVE REEL FLOW	70-86
4F14	CLEAN GRAIN UPPER ELEVATOR SHAFTS	120-111	1G8	CONTROL, FUEL SHUT-OFF	30-46
4F14	CLEAN GRAIN UPPER ELEVATOR SHEAVE	120-111	1G9	CONTROL, FUEL SHUT-OFF	30-47
4F14	CLEAN GRAIN UPPER ELEVATOR SPROCKETS	120-111	3E5	CONTROL, HEATER	90-54
1F4	CLEANER, AIR	30-15	2G24	CONTROL, VARIABLE CYLINDER	70-37
4E22	CLEANING FAN	120-95	4B22	CONTROLS, CONCAVE ADJUSTING	120-15
4E20	CLEANING FAN HSG. AND PROTECTOR SHIELD	120-93	2E12	CONTROLS, PARKING BRAKE	60-13
4E24	CLEANING FAN SPEED CONTROL LINKAGE	120-97	2I5	CONTROLS, PLATFORM LIFT	70-68
1H3	CLEANING SHOE SENSOR	40-16	2I5	CONTROLS, REEL LIFT	70-68

1A12

6622 COMBINE

ALPHABETICAL INDEX - CONTINUED

<i>GRID</i>		<i>PAGE</i>	<i>GRID</i>		<i>PAGE</i>
5D23	DECALS,INSTRUMENT PANEL, CONSOLE COVER	170-37	3J9	DRIVE BRACKET, FEEDER CONVEYOR	110-54
3C6	DECK, LADDER, FRONT.....	90-3	3J10	DRIVE BRACKET, FEEDER CONVEYOR	110-55
4I23	DECLUTCHING IDLER.....	140-15	3F8	DRIVE CASE, KNIFE	100-25
4E20	DEFLECTOR, CLEANING FAN HOUSING	120-93	2C20	DRIVE CENTER SECTION, HYDROSTATIC	50-39
4C23	DEFLECTOR, CYLINDER COVERS	120-43	3J11	DRIVE CHAIN GUIDES, FEEDER CONVEYOR.....	110-56
4G10	DEFLECTOR, LOWER TAILINGS HOUSING	120-133	3J9	DRIVE CHAIN, FEEDER CONVEYOR	110-54
1F20	DELIVERY VALVE, FUEL INJECTION PUMP	30-33	3J10	DRIVE CHAIN, FEEDER CONVEYOR	110-55
5C8	DIAPHRAGM ASSEMBLY, MICRO SWITCH	150-30	5C17	DRIVE CHAINS AND SPROCKETS-RH	170-6
2D8	DIAPHRAGM, HYDROSTATIC CHARGE PUMP	50-51	5C17	DRIVE CHAINS AND TIGHTENERS-RH	170-6
2F17	DIAPHRAGM, MAIN HYDRAULIC PUMP	70-5	2D11	DRIVE CHARGE PUMP MOUNTING, HYDROSTATIC	50-55
2B25	DIFFERENTIAL GEARS AND SHAFTS	50-18	2C8	DRIVE CONTROL CABLE MOUNTING,HYDROSTATIC	50-27
2C1	DIFFERENTIAL GEARS AND SHAFTS	50-19	4G18	DRIVE CONTROLS, SEPARATOR	120-141
1I24	DIODE RING, ALTERNATOR, 72 AMP.....	40-64	3I12	DRIVE COUNTERSHAFT, FEEDER BEATER	110-31
1I25	DIODE RING, ALTERNATOR, 72 AMP.....	40-65	4F22	DRIVE COUNTERSHAFT,CLEAN GRAIN ELEVATOR	120-120
1J1	DIODE TRIO ASSEMBLY, ALTERNATOR, 90 AMP	40-66	4F23	DRIVE COUNTERSHAFT,CLEAN GRAIN ELEVATOR	120-121
1C9	DIPSTICK TUBE.....	20-28	2C2	DRIVE HOUSING, FINAL.....	50-20
1C9	DIPSTICK, ENGINE OIL	20-28	3I9	DRIVE HUB, FEEDER BEATER	110-28
4B22	DISK, COUPLER,CONCAVE ADJUSTING CONTROLS	120-15	3I20	DRIVE IDLER, FEEDER CONVEYOR	110-39
2E6	DISK, DRIVE WHEEL	60-7	3J9	DRIVE IDLER, FEEDER CONVEYOR	110-54
1E7	DISK, ROTARY SCREEN	20-79	3J10	DRIVE IDLER, FEEDER CONVEYOR	110-55
2D6	DISPLACEMENT CONTROL VALVE KIT.....	50-49	4I25	DRIVE IDLER, FEEDER HOUSE	140-17
2D3	DISPLACEMENT CONTROL VALVE, HYDRO. DRIVE	50-46	4I21	DRIVE IDLER, SECONDARY COUNTERSHAFT	140-13
2D2	DISPLACEMENT CONTROL VALVE,HYDRO.DRIVE.....	50-45	4D19	DRIVE IDLER, STRAW CHOPPER.....	120-65
1E9	DISPLACER, ROTARY SCREEN DRIVE BELT	20-81	5C20	DRIVE IDLERS, FEEDER HOUSE	170-9
3G2	DIVIDER POINTS	100-45	3G20	DRIVE LINE, AUGER DRIVE	100-67
3E22	DIVIDER, PLATFORM, EXTENSIONS	100-14	2C22	DRIVE MOTOR, HYDROSTATIC	50-41
3E21	DIVIDER, PLATFORM, LEFT-HAND	100-13	2I18	DRIVE REEL HOSES, HYDRAULIC, BAT REEL	70-81
3E19	DIVIDER, PLATFORM, RIGHT-HAND.....	100-11	2I19	DRIVE REEL HOSES, HYDRAULIC, PICKUP REEL.....	70-82
1I2	DOME LIGHT	40-41	2I16	DRIVE REEL HYDRAULIC HOSES	70-79
3B11	DOOR INSPECTION,SEPARATOR L.H.SIDE SHEET	80-5	2I20	DRIVE REEL HYDRAULIC PUMP MTG.,HYDRO.	70-83
4E13	DOOR, CHAFFER FRAME	120-85	2I18	DRIVE REEL LINES, HYDRAULIC, BAT REEL	70-81
4F16	DOOR, CLEAN GRAIN ELEVATOR HOUSING	120-114	2I6	DRIVE REEL OIL LINES ON PLATFORM,HYDRO.....	70-69
4F2	DOOR, CLEAN GRAIN LOWER AUGER HOUSING	120-99	2I17	DRIVE REEL OIL LINES, HYDRAULIC	70-80
4F4	DOOR, CLEAN GRAIN LOWER ELEVATOR HOUSING	120-101	2C4	DRIVE SHAFT	50-23
4G24	DOOR, ELEVATOR ACCESS, GRAIN TANK.....	130-3	2C4	DRIVE SHAFT AND BEARINGS	50-23
3B23	DOOR, ENGINE COMPARTMENT MIDDLE	80-18	3G21	DRIVE SHAFT, AUGER AND KNIFE	100-69
3I2	DOOR, FEEDER HOUSE.....	110-21	3I17	DRIVE SHAFT, FEEDER CONVEYOR	110-36
4G24	DOOR, GRAIN TANK.....	130-3	3J5	DRIVE SHAFT, FEEDER HOUSE	110-50
4G24	DOOR, INSPECTION, GRAIN TANK.....	130-3	3F14	DRIVE SHAFT, KNIFE AND AUGER	100-31
3D5	DOOR, L.H. LOWER	90-27	2B18	DRIVE SHAFT, TELESCOPING	50-11
4F25	DOOR, LOADING AUGER AND HOUSING	120-123	4D6	DRIVE SHEAVE, STRAW SPREADER	120-51
3B13	DOOR, REAR HOOD.....	80-7	5C20	DRIVE SHEAVES, FEEDER HOUSE	170-9
4G24	DOOR, RESERVOIR, GRAIN TANK	130-3	4D6	DRIVE SHIELD, STRAW SPREADER	120-51
1E2	DOOR, ROTARY SCREEN	20-73	5C16	DRIVE SPROCKETS AND CHAINS, AUGER.....	170-5
4E2	DOOR, SHOE GRAIN SUPPLY AUGERS HOUSING	120-73	5C16	DRIVE SPROCKETS AND CHAINS, KNIFE	170-5
4B11	DOOR, STONE TRAP	120-3	3F17	DRIVE TIGHTENER AND SHIELD, AUGER.....	100-35
4B17	DOOR, STONE TRAP	120-9	4F21	DRIVE TIGHTENER, CLEAN GRAIN ELEVATOR	120-119
3C12	DOOR, TAILINGS ELEVATOR	90-9	3I14	DRIVE TIGHTENER, FEEDER BEATER CHAIN	110-33
4G12	DOOR, TAILINGS ELEVATOR HOUSING	120-135	4G6	DRIVE TIGHTENER, LOADING AUGER	120-129
3B22	DOOR, UPPER, ENGINE COMPARTMENT	80-17	4E18	DRIVE TIGHTENER, SHOE CRANKSHAFT	120-91
4F10	DOOR,CLEAN GRAIN ELEVATOR UPPER HOUSING	120-107	4D7	DRIVE TIGHTENER, STRAW WALKER	120-53
4H25	DOOR,INSPECTION,GR.TANK VERTICAL AUGER.....	130-29	4F19	DRIVE TIGHTENER,CLEAN GRAIN ELEVATOR.....	120-117
4I2	DOOR,INSPECTION,HOR.UNLDG.AUGER SWIVEL	130-31	5C20	DRIVE TIGHTENERS, FEEDER HOUSE	170-9
3B9	DOOR,INSPECTION,SEPARATOR R.H.SIDE SHEET	80-3	4H17	DRIVE TIGHTENERS,GRAIN TANK CROSS AUGER	130-21
3D3	DOORS, CAB	90-25	3F16	DRIVE TUBE, KNIFE AND AUGER	100-33
3B7	DOORS, SEPARATOR FRONT.....	80-1	2C9	DRIVE UNIT, HYDROSTATIC	50-28
3H17	DOORS, TOP, FEEDER HOUSE	110-11	2D17	DRIVE UPPER OIL LINES, HYDROSTATIC.....	50-61
3H19	DOORS, TOP, FEEDER HOUSE	110-13	2B13	DRIVE WHEEL	50-6
2D8	DOWEL, HYDROSTATIC CHARGE PUMP	50-51	2E6	DRIVE WHEEL BRAKES	60-7
3E4	DRAIN TUBES, EVAPORATOR	90-53	3G23	DRIVE, AUGER, PLATFORM	100-71
1E11	DRAINCOCK, RADIATOR	20-83	4C20	DRIVE, BEATER.....	120-39
3F6	DRIVE ARM, CUTTERBAR	100-23	4C21	DRIVE, BEATER, DUAL-RANGE.....	120-41
3F9	DRIVE BELT TIGHTENER, KNIFE	100-26	5D9	DRIVE, CLEAN GRAIN ELEVATOR	170-23
2D13	DRIVE BELT TIGHTENER, PROPULSION.....	50-57	1F18	DRIVE, FUEL INJECTION PUMP	30-30
1E9	DRIVE BELT TIGHTENERS, ROTARY SCREEN.....	20-81	3G25	DRIVE, KNIFE	100-73
5C19	DRIVE BELTS, FEEDER HOUSE	170-8	5D9	DRIVE, LOADING AUGER.....	170-23
5C20	DRIVE BELTS, FEEDER HOUSE	170-9	5D1	DRIVE, PRIMARY COUNTERSHAFT TO CYLINDER	170-15

1A13

6622 COMBINE

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
5D5	DRIVE, STRAW CHOPPER	170-19	4I11	ENGINE POWERSHAFT SEAL PLATE.....	140-3
5D5	DRIVE, STRAW SPREADER.....	170-19	4I11	ENGINE POWERSHAFT SHEAVE	140-3
4G8	DRIVER,SLIP CLUTCH,LOWER TAILINGS AUGER	120-131	5D15	ENGINE R.H. SHEAVES	170-29
4E6	DRIVER,SLIP CLUTCH,SHOE GR.SUPPLY AUGERS	120-77	5D15	ENGINE R.H. SIDE BELT	170-29
3F2	DRIVESHAFTE DECAL	100-19	5D15	ENGINE R.H. TIGHTENERS	170-29
3G4	DRIVESHAFTE DECAL	100-47	1D23	ENGINE RAIL	20-69
5D16	DRIVESHAFTE DECAL	170-30	1D23	ENGINE RAIL EXTENSION	20-69
5D17	DRIVESHAFTE DECAL	170-31	1D20	ENGINE REBUILD GASKET KIT.....	20-66
4C17	DRUM, BEATER.....	120-35	1B16	ENGINE SHORT BLOCK (TH 01).....	20-10
3I3	DRUM, FEEDER BEATER.....	110-22	1B20	ENGINE SHORT BLOCK (TH 01).....	20-14
3I4	DRUM, FEEDER BEATER.....	110-23	1B24	ENGINE SHORT BLOCK (TH 05).....	20-18
3J6	DRUM, FEEDER CONVEYOR IDLER.....	110-51	1D23	ENGINE SUPPORTS	20-69
4C5	DUAL-RANGE CYLINDER DR. (CYLINDER INTERMEDIATE DR. SUPPORT)	120-22	1C17	ENGINE TEMPERATURE SENDER	20-37
4C12	DUAL-RANGE CYLINDER DRIVE ARM	120-30	1C17	ENGINE TEMPERATURE SWITCH	20-37
4C7	DUAL-RANGE CYLINDER DRIVE GEAR CASE	120-24	1B9	ENGINE VALVE STEM LUBRICANT.....	20-2
4C11	DUAL-RANGE CYLINDER DRIVE GEAR CASE SHIELD	120-29	1H21	ETHER STARTING AID SWITCH	40-35
4C10	DUAL-RANGE CYLINDER DRIVE LOCKOUT ARM.....	120-27	3E4	EVAPORATOR AND AIR CONDITIONER LINES.....	90-53
4C9	DUAL-RANGE CYLINDER DRIVE PINION GEARS.....	120-26	3E4	EVAPORATOR CORE	90-53
4C12	DUAL-RANGE CYLINDER DRIVE TIGHTENER	120-30	3E4	EVAPORATOR DRAIN TUBES	90-53
4B14	DUAL-RANGE CYLINDER DRIVE, RASP-BAR CYLINDER	120-6	1D11	EXHAUST MANIFOLD	20-56
4C21	DUAL-RANGE, BEATER DRIVE	120-41	1F6	EXHAUST PIPE	30-17
1E2	DUCT, ROTARY SCREEN.....	20-73	1C11	EXHAUST VALVES	20-30
E					
3F23	ECCENTRIC SPIDER, PICKUP REEL	100-42	3E4	EXPANSION VALVE, AIR CONDITIONER	90-53
3E16	ECCENTRIC, DOUBLE, PICKUP REEL (L.H.).....	100-7	3F24	EXTENSION CYL. ROD, REEL SUPPORT ARMS	100-43
1H11	ELEC.COV.PLATES,ENG.COMPARTMENT FIREWALL	40-24	4D2	EXTENSION PAN, STRAW WALKER.....	120-47
1H23	ELECTRIC CLUTCH CIRCUIT BREAKER	40-37	1D23	EXTENSION, ENGINE RAIL	20-69
1J15	ELECTRICAL CONNECTOR SERVICE KIT	40-80	4H6	EXTENSION, FRONT, GRAIN TANK	130-9
1G21	ELECTROMAGNETIC CLUTCH, HEADER	40-9	4H6	EXTENSION, L.H., GRAIN TANK	130-9
1F4	ELEMENT, PRIMARY, AIR CLEANER	30-15	4H6	EXTENSION, R.H., GRAIN TANK	130-9
1F4	ELEMENT, SAFETY, AIR CLEANER	30-15	4H6	EXTENSION, REAR, GRAIN TANK	130-9
5D7	ELEVATOR, CLEAN GRAIN	170-21	3G19	EXTENSIONS, FLIGHT (CROSS AUGER)	100-65
4F11	ELEVATOR, CLEAN GRAIN HOUSING	120-108	4H6	EXTENSIONS, GRAIN TANK	130-9
2E16	EMBLEM, STEERING WHEEL	60-17	3E22	EXTENSIONS, PLATFORM DIVIDER	100-14
1J9	END FRAME, STARTER COMMUTATOR	40-74	4I23	EYEBOLT, DECLUTCHING IDLER	140-15
2F1	END, POWER STEERING CYLINDER	60-27	3H3	EYEBOLT, KNIFE DRIVE.....	100-76
2F8	END, STEERING TIE RODS	60-35	4C5	EYEBOLTS, CYLINDER INTERMEDIATE DR. SUPPORT BRACES (DUAL-RANGE CYL. DR.)	120-22
4I4	END,AUGER,TUBE,HORIZONTAL UNLDG.AUGER.....	130-33	F		
2H18	END,ROD,UNLOADING AUGER SWING HYD. MTG.	70-57	4E20	FAN HOUSING, CLEANING	120-93
1H11	ENG.COMPARTMENT FIREWALL ELEC.COV.PLATES	40-24	3B20	FAN SHROUD	80-15
3B23	ENGINE COMPARTMENT MIDDLE DOOR AND FRAME..	80-18	1I24	FAN, ALTERNATOR, 72 AMP.....	40-64
3B25	ENGINE COMPARTMENT PANEL, FRONT	80-20	1I25	FAN, ALTERNATOR, 72 AMP.....	40-65
3B20	ENGINE COMPARTMENT REAR SHEET	80-15	1J1	FAN, ALTERNATOR, 90 AMP.....	40-66
3B22	ENGINE COMPARTMENT UPPER DOOR.....	80-17	4E22	FAN, CLEANING	120-95
3C1	ENGINE COMPARTMENT WALKWAY	80-21	4E24	FAN, CLEANING, SPEED CONTROL LINKAGE	120-97
1H10	ENGINE COMPARTMENT WIRING HARNESSSES.....	40-23	1E12	FAN, RADIATOR	20-84
1D24	ENGINE COOLANT HEATER	20-70	3B7	FEED PLATE, SEPARATOR FRONT	80-1
1D25	ENGINE COOLANT HEATER	20-71	3G6	FEED PLATES, MAIN SILL, AND SUPPORTS	100-50
1B8	ENGINE OIL	20-1	3I14	FEEDER BEATER CHAIN DRIVE TIGHTENER.....	110-33
1D3	ENGINE OIL COOLER.....	20-48	3I12	FEEDER BEATER DRIVE COUNTERSHAFT.....	110-31
1C9	ENGINE OIL DIPSTICK	20-28	3I8	FEEDER BEATER DRIVE HUB.....	110-27
1D1	ENGINE OIL FILTER	20-46	3I9	FEEDER BEATER DRIVE HUB AND SLIP CLUTCH	110-28
1E14	ENGINE OIL PRESSURE GAUGE LINE	20-86	3I3	FEEDER BEATER DRUM	110-22
1C18	ENGINE OIL PUMP (TH 01)	20-38	3I4	FEEDER BEATER DRUM	110-23
1C20	ENGINE OIL PUMP (TH 01)	20-40	3I5	FEEDER BEATER FINGERS.....	110-24
1C22	ENGINE OIL PUMP (TH 05)	20-42	3I6	FEEDER BEATER FINGERS.....	110-25
4I11	ENGINE POWERSHAFT	140-3	3I7	FEEDER BEATER FINGERS.....	110-26
4I11	ENGINE POWERSHAFT BELTS.....	140-3	3I5	FEEDER BEATER HEADS	110-24
4I11	ENGINE POWERSHAFT BRUSH	140-3	3I6	FEEDER BEATER HEADS	110-25
5C23	ENGINE POWERSHAFT DRIVE SHEAVE	170-12	3I7	FEEDER BEATER HEADS	110-26
4I11	ENGINE POWERSHAFT HOUSING	140-3	3I5	FEEDER BEATER SHAFTS.....	110-24
			3I6	FEEDER BEATER SHAFTS.....	110-25
			3I7	FEEDER BEATER SHAFTS.....	110-26
			3I5	FEEDER BEATER SHIELDS	110-24

1A14

6622 COMBINE

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
3I6	FEEDER BEATER SHIELDS	110-25	1F7	FILTER, FUEL (TH 01).....	30-18
3I7	FEEDER BEATER SHIELDS	110-26	1F8	FILTER, FUEL (TH 05).....	30-19
3I8	FEEDER BEATER SLIP CLUTCH.....	110-27	1F10	FILTER, FUEL (TH 05).....	30-22
3I7	FEEDER BEATER SPROCKETS	110-26	2F15	FILTER, HYDRAULIC OIL RESERVOIR.....	70-3
3I10	FEEDER CONVEYOR CHAIN	110-29	2D15	FILTER, HYDROSTATIC DRIVE OIL RESERVOIR	50-59
3I11	FEEDER CONVEYOR CHAIN	110-30	5C2	FILTER, LEVELING SYSTEM OIL LINES.....	150-23
3I15	FEEDER CONVEYOR CHAIN SHIELD.....	110-34	2C3	FINAL DRIVE AXLE	50-21
3I16	FEEDER CONVEYOR CHAIN SHIELDS	110-35	2C3	FINAL DRIVE BEARINGS	50-21
3J9	FEEDER CONVEYOR DRIVE BRACKET	110-54	2C4	FINAL DRIVE BEARINGS	50-23
3J10	FEEDER CONVEYOR DRIVE BRACKET.....	110-55	2C3	FINAL DRIVE GEAR	50-21
3J9	FEEDER CONVEYOR DRIVE CHAIN.....	110-54	2C2	FINAL DRIVE HOUSING	50-20
3J10	FEEDER CONVEYOR DRIVE CHAIN.....	110-55	2C4	FINAL DRIVE PINION	50-23
3J11	FEEDER CONVEYOR DRIVE CHAIN GUIDES	110-56	4E13	FINGER BAR	120-85
3I20	FEEDER CONVEYOR DRIVE IDLER	110-39	3F20	FINGER, PICKUP REEL	100-39
3J9	FEEDER CONVEYOR DRIVE IDLER	110-54	3F23	FINGER, PICKUP REEL ECCENTRIC SPIDER.....	100-42
3J10	FEEDER CONVEYOR DRIVE IDLER	110-55	3I5	FINGERS, FEEDER BEATER	110-24
3I17	FEEDER CONVEYOR DRIVE SHAFT	110-36	3I6	FINGERS, FEEDER BEATER	110-25
3I18	FEEDER CONVEYOR IDLER SHAFT.....	110-37	3I7	FINGERS, FEEDER BEATER	110-26
3J6	FEEDER CONVEYOR IDLER SHAFT.....	110-51	3F12	FINGERS, PLATFORM.....	100-29
3J6	FEEDER DRUM, CONVEYOR IDLER.....	110-51	3G16	FINGERS, PLATFORM AUGER	100-61
3H21	FEEDER HOUSE BOTTOM SHEETS.....	110-15	1H3	FINGERS, TRASH (HARVESTRAK)	40-16
3H23	FEEDER HOUSE BOTTOM SHEETS, REVERSER.....	110-17	4D14	FINS, PLATE, STRAW CHOPPER	120-60
3H25	FEEDER HOUSE BOTTOM SHEETS, REVERSER.....	110-19	4D12	FINS, STRAW CHOPPER	120-58
3H13	FEEDER HOUSE BRACES	110-7	3B20	FIREWALL	80-15
5C21	FEEDER HOUSE CHAINS.....	170-10	4G20	FITTING,GREASE,L.H.SIDE LUBE BANK SYSTEM	120-143
5C19	FEEDER HOUSE DRIVE BELTS	170-8	4G19	FITTING,GREASE,R.H.SIDE LUBE BANK SYSTEM	120-142
5C20	FEEDER HOUSE DRIVE BELTS	170-9	2D16	FITTINGS, HYDROSTATIC DRIVE OIL	50-60
4I25	FEEDER HOUSE DRIVE IDLER	140-17	1F3	FLANGE, AIR INTAKE TUBES	30-14
5C19	FEEDER HOUSE DRIVE IDLERS.....	170-8	1F6	FLANGE, EXHAUST PIPE.....	30-17
5C20	FEEDER HOUSE DRIVE IDLERS.....	170-9	1H14	FLASHER, SIGNAL	40-27
3J5	FEEDER HOUSE DRIVE SHAFT	110-50	3G19	FLIGHT EXTENSIONS (CROSS AUGER)	100-65
5C19	FEEDER HOUSE DRIVE SHEAVES.....	170-8	3G5	FLOOR STRIPPER.....	100-49
5C20	FEEDER HOUSE DRIVE SHEAVES.....	170-9	3C10	FLOORBOARD, OPERATOR'S PLATFORM.....	90-7
5C19	FEEDER HOUSE DRIVE TIGHTENERS.....	170-8	3C12	FLOORMAT, L.H. REAR CAB	90-9
5C20	FEEDER HOUSE DRIVE TIGHTENERS.....	170-9	3C10	FLOORMAT, OPERATOR'S PLATFORM	90-7
3I1	FEEDER HOUSE FRAME	110-20	2G14	FLOW CONTROL PLUG	70-27
3I2	FEEDER HOUSE FRAME	110-21	2G15	FLOW CONTROL PLUG KIT.....	70-28
1H14	FEEDER HOUSE HEADER TACHOMETER HARNESS	40-27	2I21	FLOW CONTROL VALVE, HYDRO.DRIVE REEL	70-84
3I19	FEEDER HOUSE LEFT-HAND SHIELD	110-38	1C1	FLYWHEEL.....	20-20
3I21	FEEDER HOUSE LOWER DRIVE TIGHTENER	110-41	3G4	FRAME	100-47
3J4	FEEDER HOUSE LOWER MOUNTING	110-49	3B11	FRAME AND SEPARATOR L.H. SIDE SHEET	80-5
3J4	FEEDER HOUSE LOWER SHAFT	110-49	3B9	FRAME AND SEPARATOR R.H. SIDE SHEET	80-3
1H15	FEEDER HOUSE LOWER SHAFT SPEED SENSOR	40-28	3G4	FRAME SHIELD	100-47
1H16	FEEDER HOUSE LOWER SHAFT SPEED SENSOR	40-29	4E13	FRAME, CHAFFER	120-85
3J4	FEEDER HOUSE LOWER SHEAVE	110-49	3B20	FRAME, CORNER	80-15
3J8	FEEDER HOUSE MIDDLE BELT BRACES	110-53	3B23	FRAME, ENGINE COMPARTMENT	80-18
3J8	FEEDER HOUSE MIDDLE BELT IDLERS	110-53	3I1	FRAME, FEEDER HOUSE.....	110-20
3H13	FEEDER HOUSE PIVOT	110-7	3I2	FRAME, FEEDER HOUSE.....	110-21
3H13	FEEDER HOUSE ROCKER	110-7	3C10	FRAME, OPERATOR'S PLATFORM	90-7
3J13	FEEDER HOUSE SHIELD (L.H.).....	110-58	3C14	FRAME, SEAT	90-11
3J12	FEEDER HOUSE SHIELD (R.H.)	110-57	4E11	FRAME, SIEVE.....	120-83
3I1	FEEDER HOUSE SIDE SHEETS	110-20	5D21	FRONT AND REAR DECALS	170-35
3I2	FEEDER HOUSE SIDE SHEETS	110-21	4H14	FRONT AND REAR GRAIN TANK AUGER COVERS, ADJ.	130-18
3J5	FEEDER HOUSE SLIP CLUTCH	110-50	1F9	FUEL CHECK VALVE	30-21
5C21	FEEDER HOUSE SPROCKETS	170-10	1E22	FUEL FILTER	30-7
3H17	FEEDER HOUSE TOP DOORS	110-11	1F7	FUEL FILTER (TH 01)	30-18
3H19	FEEDER HOUSE TOP DOORS	110-13	1F8	FUEL FILTER (TH 05)	30-19
3H15	FEEDER HOUSE TOP SHEETS.....	110-9	1F10	FUEL FILTER (TH 05)	30-22
3H17	FEEDER HOUSE TOP SHEETS.....	110-11	1H8	FUEL GAUGE SENDING UNIT	40-21
3H19	FEEDER HOUSE TOP SHEETS.....	110-13	1G4	FUEL INJECTION NOZZLE	30-42
3J2	FEEDER HOUSE UPPER SHAFT.....	110-47	1G7	FUEL INJECTION NOZZLE	30-45
3J2	FEEDER HOUSE UPPER SHEAVE	110-47	1F12	FUEL INJECTION NOZZLES (TH 01).....	30-24
3J2	FEEDER HOUSE UPPER SPROCKETS	110-47	1F14	FUEL INJECTION NOZZLES (TH 05).....	30-26
1I4	FIELD LIGHTS	40-43	1F16	FUEL INJECTION PUMP	30-28
1E18	FILLER NECK, FUEL TANK	30-3	1F20	FUEL INJECTION PUMP DELIVERY VALVE.....	30-33
1D1	FILTER, ENGINE OIL.....	20-46	1F18	FUEL INJECTION PUMP DRIVE.....	30-30
1E22	FILTER, FUEL	30-7			

1A16

6622 COMBINE

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
1H14	HARNESSES, WIRING, LIGHTS, L.H.	40-27	3D12	HOUSING AND CAB AIR FILTER	90-34
1H14	HARNESSES, WIRING, OPERATOR'S PLATFORM	40-27	4F25	HOUSING AND LOADING AUGER	120-123
1G16	HARNESSES, WIRING, REAR HOOD, L.H.	40-3	2E14	HOUSING AND PARKING BRAKES (L.H.)	60-15
1G24	HARNESSES, LOW SHAFT SPEED MONITOR'S	40-13	1I24	HOUSING, ALTERNATOR, 72 AMP	40-64
1H10	HARNESSES, WIRING, ENGINE COMPARTMENT	40-23	1I25	HOUSING, ALTERNATOR, 72 AMP	40-65
1H5	HARVESTRAK ADAPTER HARNESSES	40-18	1J1	HOUSING, ALTERNATOR, 90 AMP	40-66
1H23	HARVESTRAK CIRCUIT BREAKER	40-37	3F10	HOUSING, BEARING	100-27
1H3	HARVESTRAK COMBINE MONITOR	40-16	4F11	HOUSING, CLEAN GRAIN ELEVATOR	120-108
1H3	HARVESTRAK CONTROL PANEL	40-16	4F2	HOUSING, CLEAN GRAIN LOWER AUGER	120-99
1H3	HARVESTRAK, PREAMPLIFIER	40-16	4F8	HOUSING, CLEAN GRAIN LOWER AUGER	120-105
1C11	HEAD, CYLINDER	20-30	4F4	HOUSING, CLEAN GRAIN LOWER ELEVATOR	120-101
1G21	HEADER ELECTROMAGNETIC CLUTCH	40-9	4E20	HOUSING, CLEANING FAN	120-93
3D8	HEADLINER, CAB ROOF	90-30	1C7	HOUSING, CRANKSHAFT OIL SEAL	20-26
3I5	HEADS, FEEDER BEATER	110-24	2E6	HOUSING, DRIVE WHEEL	60-7
3I6	HEADS, FEEDER BEATER	110-25	4I11	HOUSING, ENGINE POWERSHAFT	140-3
3I7	HEADS, FEEDER BEATER	110-26	2C2	HOUSING, FINAL DRIVE	50-20
3E5	HEATER CONTROL HOSES	90-54	1F17	HOUSING, FUEL INJECTION PUMP	30-29
3E5	HEATER CONTROL VALVE	90-54	4H25	HOUSING, GRAIN TANK VERTICAL	130-29
3E4	HEATER CORE	90-53	4I4	HOUSING, HORIZONTAL UNLOADING	130-33
3E6	HEATER HOSES	90-55	2C14	HOUSING, HYDROSTATIC DRIVE PUMP	50-33
1D24	HEATER, ENGINE COOLANT	20-70	2C15	HOUSING, HYDROSTATIC DRIVE PUMP	50-34
1D25	HEATER, ENGINE COOLANT	20-71	1F21	HOUSING, INJECTION PUMP GOVERNOR (TH 01)	30-34
1I1	HI PRESSURE SWITCH LIGHT ASSEMBLY	40-40	1F23	HOUSING, INJECTION PUMP GOVERNOR (TH 05)	30-36
3D17	HI PRESSURE SWITCH, AIR CONDITIONER	90-39	3G12	HOUSING, KNIFE DRIVE CASE	100-57
3B7	HINGE ROD, SEPARATOR FRONT	80-1	4G2	HOUSING, LOADING AUGER	120-125
4F2	HINGE, CLEAN GRAIN LOWER AUGER HOUSING	120-99	4G10	HOUSING, LOWER TAILINGS	120-133
3B20	HINGE, ENGINE COMPARTMENT REAR SHEET	80-15	5C8	HOUSING, MICRO SWITCH	150-30
3B22	HINGE, ENGINE COMPARTMENT UPPER DOOR	80-17	3I13	HOUSING, PLATFORM CONVERSION	110-32
4G24	HINGE, GRAIN TANK	130-3	4H20	HOUSING, PUMP, GRAIN TANK	130-24
4H25	HINGE, GRAIN TANK VERTICAL AUGER	130-29	4E2	HOUSING, SHOE GRAIN SUPPLY AUGERS	120-73
3B7	HINGE, SEPARATOR FRONT	80-1	2F6	HOUSING, SPINDLE, REAR WHEELS	60-33
5C5	HOLDER, FUSE, LEVELING	150-27	1J7	HOUSING, STARTER DRIVE	40-72
4F4	HOOD, CLEAN GRAIN LOWER ELEVATOR HOUSING	120-101	4D8	HOUSING, STRAW CHOPPER	120-54
3B13	HOOD, REAR	80-7	4D10	HOUSING, STRAW CHOPPER	120-56
4H4	HORIZONTAL UNLDG. AUGER SWIVEL SHROUD	130-7	1G22	HOUSING, STRAW WALKER PLUGGING	40-11
4I5	HORIZONTAL UNLOADING AUG.DRIVE GEAR CASE	130-34	4H19	HOUSING, SUMP, GRAIN TANK	130-23
4I4	HORIZONTAL UNLOADING AUGER	130-33	4G12	HOUSING, TAILINGS ELEVATOR	120-135
4I2	HORIZONTAL UNLOADING AUGER SWIVEL	130-31	1E25	HOUSING, THROTTLE LINKAGE CONTROL	30-11
4I4	HORIZONTAL UNLOADING HOUSING	130-33	2B19	HOUSING, TRANSM. AND DIFFERENTIAL	50-12
1H14	HORN	40-27	1D12	HOUSING, TURBOCHARGER (AIRESEARCH)	20-57
1F6	HOSE, ASPIRATOR	30-17	1D14	HOUSING, TURBOCHARGER (AIRESEARCH)	20-59
4I23	HOSE, DECLUTCHING IDLER	140-15	1D13	HOUSING, TURBOCHARGER CENTER	20-58
4G20	HOSE, L.H. SIDE LUBE BANK SYSTEM	120-143	1D15	HOUSING, TURBOCHARGER CENTER(AIRESEARCH)	20-60
2I24	HOSE, PLATFORM LIFT OIL LINES	70-87	4I15	HOUSING, CYL. PRIMARY CTR'SHAFT SHEAVES	140-7
4G19	HOSE, R.H. SIDE LUBE BANK SYSTEM	120-142	4F10	HOUSING, UPPER, CLEAN GRAIN ELEVATOR	120-107
2E25	HOSE, STEERING LOWER OIL LINES (REAR)	60-26	4H23	HOUSING, VERTICAL AUGER LOWER GEAR CASE	130-27
4I6	HOSE, UNLOADING AUGER LUBE BANK SYSTEM	130-35	1D16	HOUSINGS, TURBOCHARGER (SCHWITZER)	20-61
2G20	HOSES AND LINES, HYDRAULIC OIL	70-33	3J2	HOUSINGS, FEEDER HOUSE UPPER SHAFT	110-47
2G22	HOSES AND LINES, HYDRAULIC OIL	70-35	4I5	HSG. HORIZONTAL UNLDG. AUGER DR. GEAR CASE	130-34
5B25	HOSES AND LINES, LEVELING	150-21	3G23	HUB, AUGER DRIVE, PLATFORM	100-71
2E24	HOSES AND OIL LINES, STEERING - FRONT	60-25	3I8	HUB, DRIVE, FEEDER BEATER	110-27
1E11	HOSES AND RADIATOR	20-83	3I8	HUB, FEEDER BEATER DRIVE	110-27
2I16	HOSES, DRIVE REEL HYDRAULIC	70-79	4H11	HUB, GRAIN TANK FRONT CROSS AUGER	130-15
3E6	HOSES, HEATER	90-55	3I13	HUB, PLATFORM CONVERSION	110-32
3E5	HOSES, HEATER CONTROL	90-54	1E13	HUB, RADIATOR FAN DRIVE BELT TIGHTENER	20-85
2I18	HOSES, HYDRAULIC DRIVE REEL, BAT REEL	70-81	2F6	HUB, REAR WHEELS	60-33
2I19	HOSES, HYDRAULIC DRIVE REEL, PICKUP REEL	70-82	4G8	HUB, SHEAVE, LOWER TAILINGS AUGER	120-131
2J4	HOSES, HYDRAULIC LIFT REEL	70-93	4D22	HUB, STRAW SPREADER	120-69
2D19	HOSES, HYDROSTATIC DRIVE LOWER OIL	50-63	2G4	HYDRAULIC CONTROL VALVE SPOOLS, MAIN	70-17
2D20	HOSES, HYDROSTATIC DRIVE LOWER OIL	50-64	2G6	HYDRAULIC CONTROL VALVE SPOOLS, MAIN	70-19
2D16	HOSES, HYDROSTATIC DRIVE OIL	50-60	2G8	HYDRAULIC CONTROL VALVE SPOOLS, MAIN	70-21
5C2	HOSES, LEVELING SYSTEM OIL LINE	150-23	2G10	HYDRAULIC CONTROL VALVE SPOOLS, MAIN	70-23
2H15	HOSES, UNLOADING AUGER SWING HYD. OIL	70-54	2G3	HYDRAULIC CONTROL VALVE SPRINGS, MAIN	70-16
1F5	HOSES, AIR INTAKE-AIR CLEANER TO MANIFOLD	30-16	2G5	HYDRAULIC CONTROL VALVE SPRINGS, MAIN	70-18
2H14	HOSES, UNLOADING AUGER SWING HYD. OIL	70-53	2G7	HYDRAULIC CONTROL VALVE SPRINGS, MAIN	70-20
1H21	HOUR METER	40-35	2G9	HYDRAULIC CONTROL VALVE SPRINGS, MAIN	70-22
4G15	HOUSING AND AUGER, UPPER TAILINGS	120-138	2G4	HYDRAULIC CONTROL, MAIN RELIEF VALVE	70-17

1A17

6622 COMBINE

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
2G8	HYDRAULIC CONTROL, MAIN RELIEF VALVE	70-21	2C12	HYDROSTATIC DRIVE PUMP FRONT COVER.....	50-31
4I16	HYDRAULIC CYLINDER BARREL, PRIMARY COUNTERSHAFT SHEAVES (DUAL-RANGE).....	140-8	2C14	HYDROSTATIC DRIVE PUMP HOUSING	50-33
2H20	HYDRAULIC CYLINDER,UNLOADING AUGER SWING	70-59	2C15	HYDROSTATIC DRIVE PUMP HOUSING	50-34
2H21	HYDRAULIC CYLINDER,UNLOADING AUGER SWING	70-60	2C17	HYDROSTATIC DRIVE PUMP HOUSING KIT	50-36
2I18	HYDRAULIC DRIVE REEL HOSES, BAT REEL	70-81	2D6	HYDROSTATIC DRIVE PUMP KIT	50-49
2I19	HYDRAULIC DRIVE REEL HOSES, PICKUP REEL	70-82	2C11	HYDROSTATIC DRIVE PUMP SEALS	50-30
2I18	HYDRAULIC DRIVE REEL LINES, BAT REEL.....	70-81	2C12	HYDROSTATIC DRIVE PUMP SEALS	50-31
2I17	HYDRAULIC DRIVE REEL OIL LINES	70-80	2C19	HYDROSTATIC DRIVE PUMP SERVO PISTON ASSY.....	50-38
2I16	HYDRAULIC HOSES, DRIVE REEL	70-79	2C14	HYDROSTATIC DRIVE PUMP SHAFT	50-33
2J8	HYDRAULIC LIFT REEL MASTER CYLINDER	70-98	2C15	HYDROSTATIC DRIVE PUMP SHAFT	50-34
2J9	HYDRAULIC LIFT REEL MASTER CYLINDER KIT	70-99	2C18	HYDROSTATIC DRIVE PUMP SWASHPLATE.....	50-37
2J10	HYDRAULIC LIFT REEL MASTER CYLINDER-RH	70-100	2C18	HYDROSTATIC DRIVE PUMP TRUNNIONS	50-37
2J2	HYDRAULIC LIFT REEL OIL LINES	70-91	2I10	HYDROSTATIC DRIVE REEL HYDRAULIC PUMP	70-73
2J4	HYDRAULIC LIFT REEL OIL LINES	70-93	2I10	HYDROSTATIC DRIVE REEL HYDRAULIC SHEAVE	70-73
2J5	HYDRAULIC LIFT REEL OIL LINES	70-94	2I14	HYDROSTATIC DRIVE REEL MOTOR SHIELD	70-77
2J13	HYDRAULIC LIFT REEL SLAVE CYLINDER KIT.....	70-103	2I14	HYDROSTATIC DRIVE REEL MOTOR SPROCKETS.....	70-77
2J12	HYDRAULIC LIFT REEL SLAVE CYLINDER-LEFT	70-102	2I14	HYDROSTATIC DRIVE REEL MOTOR SUPPORTS	70-77
2J14	HYDRAULIC LIFT REEL SLAVE CYLINDER-LH	70-104	2C17	HYDROSTATIC DRIVE SHAFT KIT	50-36
2G18	HYDRAULIC MOTOR KIT	70-31	2C9	HYDROSTATIC DRIVE SHEAVES	50-28
2G17	HYDRAULIC MOTOR, DR. REEL	70-30	2C9	HYDROSTATIC DRIVE SUPPORTS	50-28
2H20	HYDRAULIC MOUNTING,UNLOADING AUGER SWING....	70-59	2C9	HYDROSTATIC DRIVE UNIT.....	50-28
2H21	HYDRAULIC MOUNTING,UNLOADING AUGER SWING....	70-60	2D23	HYDROSTATIC DRIVE UNIT LOWER SHIELD	50-67
2G20	HYDRAULIC OIL LINES AND HOSES	70-33	2D23	HYDROSTATIC DRIVE UNIT LOWER SUPPORTS.....	50-67
2G22	HYDRAULIC OIL LINES AND HOSES	70-35	2D22	HYDROSTATIC DRIVE UNIT UPPER LATCH	50-66
2F15	HYDRAULIC OIL RESERVOIR	70-3	2D22	HYDROSTATIC DRIVE UNIT UPPER SHIELD	50-66
2I10	HYDRAULIC PUMP,HYDROSTATIC DRIVE REEL	70-73	2D17	HYDROSTATIC DRIVE UPPER OIL LINES	50-61
2D3	HYDRO. DRIVE DISPLACEMENT CONTROL VALVE.....	50-46	5C22	HYDROSTATIC GROUND DRIVE BELTS	170-11
2I21	HYDRO. DRIVE REEL FLOW CONTROL VALVE	70-84	5C22	HYDROSTATIC GROUND DRIVE SHEAVES	170-11
2I23	HYDRO. DRIVE REEL FLOW CONTROL VALVE	70-86			
2D5	HYDRO.DR.DISPLACEMENT CTL.VALVE GASKET	50-48			
2D2	HYDRO.DRIVE DISPLACEMENT CONTROL VALVE	50-45			
2D15	HYDRO.DRIVE OIL RESERVOIR MOUNTING STRAP	50-59	3I18	IDLER SHAFT, FEEDER CONVEYOR	110-37
2D15	HYDRO.DRIVE OIL RESERVOIR SIGHT GLASS	50-59	3J6	IDLER SHAFT, FEEDER CONVEYOR	110-51
2I12	HYDRO.DRIVE REEL HYDRAULIC PUMP KIT	70-75	4F21	IDLER, CLEAN GRAIN ELEVATOR	120-119
2I20	HYDRO.DRIVE REEL HYDRAULIC PUMP MOUNTING	70-83	4I23	IDLER, DECLUTCHING	140-15
2I12	HYDRO.DRIVE REEL HYDRAULIC SHEAVE KIT	70-75	3I20	IDLER, DRIVE, FEEDER CONVEYOR	110-39
2I6	HYDRO.DRIVE REEL OIL LINES ON PLATFORM	70-69	4I21	IDLER, DRIVE, SECONDARY COUNTERSHAFT	140-13
2I8	HYDRO.DRIVE REEL SPEED CTL.VALVE LINKAGE	70-71	4D19	IDLER, DRIVE, STRAW CHOPPER	120-65
2D8	HYDROSTATIC CHARGE PUMP	50-51	3J9	IDLER, FEEDER CONVEYOR DRIVE	110-54
2D10	HYDROSTATIC CHARGE PUMP KIT.....	50-53	3J10	IDLER, FEEDER CONVEYOR DRIVE	110-55
2C20	HYDROSTATIC DRIVE CENTER SECTION.....	50-39	4I25	IDLER, FEEDER HOUSE DRIVE	140-17
2D11	HYDROSTATIC DRIVE CHARGE PUMP MOUNTING.....	50-55	3H3	IDLER, KNIFE DRIVE	100-76
2C6	HYDROSTATIC DRIVE CONTROL CABLE	50-25	4H17	IDLER,SHEAVE,GR.TANK CROSS AUGER DRIVE.....	130-21
2C8	HYDROSTATIC DRIVE CONTROL CABLE MOUNTING	50-27	4H17	IDLER,SPROCKET,GR.TANK CROSS AUGER DRIVE	130-21
2C6	HYDROSTATIC DRIVE CONTROL LEVER	50-25	5C19	IDLERS, FEEDER HOUSE DRIVE	170-8
2C17	HYDROSTATIC DRIVE CYLINDER BLOCK KIT	50-36	5C20	IDLERS, FEEDER HOUSE DRIVE	170-9
2D19	HYDROSTATIC DRIVE LOWER OIL HOSES	50-63	3J8	IDLERS, FEEDER HOUSE MIDDLE BELT.....	110-53
2D20	HYDROSTATIC DRIVE LOWER OIL HOSES	50-64	3D11	IMPELLER, PRESSURIZER BLOWER	90-33
2D19	HYDROSTATIC DRIVE LOWER OIL LINES	50-63	1I1	INDICATOR LIGHT ASSEMBLY, HI PRESSURE.....	40-40
2D20	HYDROSTATIC DRIVE LOWER OIL LINES.....	50-64	1G4	INJECTION NOZZLE, FUEL	30-42
2C22	HYDROSTATIC DRIVE MOTOR	50-41	1G7	INJECTION NOZZLE, FUEL	30-45
2C23	HYDROSTATIC DRIVE MOTOR	50-42	1C6	INJECTION PUMP GEAR COVER	20-25
2C10	HYDROSTATIC DRIVE MOTOR COUPLER.....	50-29	1F21	INJECTION PUMP GOVERNOR HOUSING (TH 01).....	30-34
2C10	HYDROSTATIC DRIVE MOTOR MOUNTING.....	50-29	1F23	INJECTION PUMP GOVERNOR HOUSING (TH 05).....	30-36
2D16	HYDROSTATIC DRIVE OIL COOLER	50-60	2B22	INPUT SHAFT, TRANSMISSION.....	50-15
2D16	HYDROSTATIC DRIVE OIL FITTINGS	50-60	4I2	INSPECTION DOOR,HOR.UNLDG.AUG.SWIVEL	130-31
2D16	HYDROSTATIC DRIVE OIL HOSES	50-60	1B18	INSTALLATION KIT, SHORT BLOCK (TH 01)	20-12
2D15	HYDROSTATIC DRIVE OIL MOUNTING	50-59	3C22	INSTRUMENT PANEL	90-19
2D15	HYDROSTATIC DRIVE OIL RESERVOIR.....	50-59	1H21	INSTRUMENT PANEL ACCESSORIES	40-35
2D15	HYDROSTATIC DRIVE OIL RESERVOIR FILTER.....	50-59	1H23	INSTRUMENT PANEL GAUGES.....	40-37
2D15	HYDROSTATIC DRIVE OIL RESERVOIR STRAINER.....	50-59	1H19	INSTRUMENT PANEL WIRING HARNESS	40-33
2C11	HYDROSTATIC DRIVE PUMP BEARING	50-30	5D23	INSTRUMENT PANEL, CONSOLE COVER DECALS	170-37
2C12	HYDROSTATIC DRIVE PUMP BEARING.....	50-31	3C22	INSULATION, CONSOLE.....	90-19
2C18	HYDROSTATIC DRIVE PUMP BEARINGS	50-37	3D7	INSULATION, INNER CAB ROOF.....	90-29
2C14	HYDROSTATIC DRIVE PUMP CYLINDER BLOCKS.....	50-33	3C12	INSULATION, SEAT CONSOLE	90-9
2C11	HYDROSTATIC DRIVE PUMP FRONT COVER.....	50-30	1D10	INTAKE MANIFOLD	20-55

1A18

6622 COMBINE

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
1C11	INTAKE VALVES	20-30	1I8	KIT, SPEAKER, AM	40-47
4B24	INTERMEDIATE SHAFT, CYLINDER DRIVE	120-17	1I16	KIT, SPEAKERS, RADIO, TAPE PLAYER	40-55
J					
3G23	JAW, AUGER DRIVE, PLATFORM	100-71	2F2	KIT, STEERING CYLINDER.....	60-28
3J5	JAW, SLIP CLUTCH, FEEDER HOUSE	110-50	2E18	KIT, STEERING PUMP	60-19
K					
2D8	KEY, HYDROSTATIC CHARGE PUMP.....	50-51	2E22	KIT, STEERING PUMP INPUT SHAFT SEAL	60-23
1H21	KEY, IGNITION.....	40-35	2E20	KIT, STEERING PUMP SEAL	60-21
2I22	KIT, ADJUSTING SCREW	70-85	1I10	KIT, STEREOPHONIC RADIO.....	40-49
1I8	KIT, AM RADIO	40-47	3D15	KIT, SUPER HEAT.....	90-37
1I20	KIT, AM-FM RADIO, PUSH BUTTON.....	40-59	1I12	KIT, TAPE PLAYER	40-51
1I14	KIT, AM-FM STEREOPHONIC RADIO	40-53	1I8	KIT, TAPE PLAYER, AM	40-47
3G20	KIT, AUGER DRIVE	100-67	1I14	KIT, TAPE PLAYER, AM-FM STEREOPHONIC	40-53
2F25	KIT, BACK PLATE REPAIR	70-13	1J13	KIT, TERMINAL AND WIRING	40-78
2G1	KIT, BACK PLATE, MAIN HYD. PUMP.....	70-14	2I3	KIT, UNLOADING AUGER SWING HYD. CYL.	70-66
2F17	KIT, BACK PLATE, MAIN HYDRAULIC VALVE	70-5	1G16	KIT, WIRING, L.H. SEPARATOR	40-3
2E10	KIT, BRAKE SLAVE CYLINDER	60-11	2D6	KIT,DISPLACEMENT CONTROL VALVE	50-49
3D21	KIT, COMPRESSOR.....	90-44	2I21	KIT,HYDRO.DRIVE REEL FLOW CONTROL VALVE	70-84
3D23	KIT, COMPRESSOR HARDWARE	90-47	2I12	KIT,HYDRO.DRIVE REEL HYDRAULIC PUMP	70-75
5B21	KIT, CONTROL VALVE SOLENOID	150-17	2I12	KIT,HYDRO.DRIVE REEL HYDRAULIC SHEAVE	70-75
5D25	KIT, DECAL	170-39	2D6	KIT,HYDROSTATIC DRIVE PUMP	50-49
1J15	KIT, ELECTRICAL CONNECTOR SERVICE.....	40-80	2D8	KIT,SEAL REPAIR,HYDROSTATIC CHARGE PUMP.....	50-51
1I8	KIT, EXTERNAL ANTENNA.....	40-47	2H2	KIT,SEAL REPAIR,SECONDARY CONTROL VALVE	70-41
2G15	KIT, FLOW CONTROL PLUG	70-28	2H18	KIT,SEAL REPR.,UNLOADING AUGER SWING HYD.....	70-57
1I16	KIT, HARNESS.....	40-55	2I2	KIT,UNLOADING AUGER SWING HYD. CYLINDER	70-65
2J11	KIT, HYD.LIFT REEL MASTER CYLINDER-RH	70-101	2H24	KIT,UNLOADING AUGER SWING HYD.CYLINDER.....	70-63
2J9	KIT, HYDRAULIC LIFT REEL MASTER CYLINDER	70-99	3F14	KNIFE AND AUGER DRIVE SHAFT.....	100-31
2J13	KIT, HYDRAULIC LIFT REEL SLAVE CYLINDER	70-103	3F14	KNIFE AND AUGER DRIVE SUPPORTS	100-31
2J15	KIT, HYDRAULIC LIFT REEL SLAVE CYLINDER	70-105	3F16	KNIFE AND AUGER DRIVE TUBE AND SUPPORTS	100-33
2G18	KIT, HYDRAULIC MOTOR.....	70-31	3G25	KNIFE DRIVE	100-73
2D10	KIT, HYDROSTATIC CHARGE PUMP	50-53	3G21	KNIFE DRIVE AND AUGER DRIVE SHAFTS	100-69
2C17	KIT, HYDROSTATIC DRIVE CYLINDER BLOCK.....	50-36	3F9	KNIFE DRIVE BELT TIGHTENER.....	100-26
2C17	KIT, HYDROSTATIC DRIVE PUMP HOUSING	50-36	3H2	KNIFE DRIVE BRACKETS.....	100-75
2C17	KIT, HYDROSTATIC DRIVE SHAFT	50-36	3F8	KNIFE DRIVE CASE	100-25
5B10	KIT, LEVELING CYLINDER	150-5	3G12	KNIFE DRIVE CASE	100-57
5B12	KIT, LEVELING CYLINDER	150-7	3G25	KNIFE DRIVE CHAIN.....	100-73
5B14	KIT, LEVELING CYLINDER	150-9	3H3	KNIFE DRIVE IDLER AND TIGHTENER	100-76
5B19	KIT, LEVELING VALVE	150-15	3G25	KNIFE DRIVE SHAFT	100-73
5B20	KIT, LEVELING VALVE SOLENOID	150-16	3G25	KNIFE DRIVE SHEAVE	100-73
2G3	KIT, MAIN HYDRAULIC CONTROL VALVE	70-16	3G25	KNIFE DRIVE SHIELD.....	100-73
2G5	KIT, MAIN HYDRAULIC CONTROL VALVE	70-18	3H2	KNIFE DRIVE SHIELDS.....	100-75
2G6	KIT, MAIN HYDRAULIC CONTROL VALVE	70-19	3G25	KNIFE DRIVE SPROCKET	100-73
2G7	KIT, MAIN HYDRAULIC CONTROL VALVE	70-20	5C16	KNIFE DRIVE SPROCKETS AND CHAINS	170-5
2G9	KIT, MAIN HYDRAULIC CONTROL VALVE	70-22	3F4	KNIFE GUARDS, CUTTERBAR (NON-CLOG)	100-21
2G10	KIT, MAIN HYDRAULIC CONTROL VALVE	70-23	3G9	KNIFE GUARDS, CUTTERBAR (NON-CLOG)	100-53
2G11	KIT, MAIN HYDRAULIC CONTROL VALVE	70-24	4D16	KNIFE, STRAW CHOPPER	120-62
2G12	KIT, MAIN HYDRAULIC CONTROL VALVE	70-25	3F3	KNIVES AND GUARDS	100-20
2G13	KIT, MAIN HYDRAULIC CONTROL VALVE	70-26	3G8	KNIVES AND GUARDS	100-52
2F21	KIT, MAJOR SEAL REPAIR.....	70-9	3D6	KNOB, CAB ROOF.....	90-28
2D6	KIT, MOTOR.....	50-49	4B22	KNOB, CONCAVE ADJUSTING CONTROLS.....	120-15
3E3	KIT, O-RING - AIR CONDITIONING	90-52	1G8	KNOB, FUEL SHUT-OFF	30-46
2J1	KIT, PLATFORM LIFT HYDRAULIC CYLINDER	70-89	1G9	KNOB, FUEL SHUT-OFF CONTROL	30-47
1I22	KIT, RADIO.....	40-61	4G24	KNOB, GRAIN TANK	130-3
1I23	KIT, RADIO ANTENNA.....	40-63	2I8	KNOB, HYDRO.DRIVE REEL SPEED CONTROL	70-71
1I18	KIT, RADIO, AM	40-57	1I22	KNOB, RADIO	40-61
2G1	KIT, RELIEF VALVE, MAIN HYD. PUMP	70-14	1E25	KNOB, THROTTLE LINKAGE CONTROL.....	30-11
3D14	KIT, SEAL	90-36	2G24	KNOB, VARIABLE CYLINDER CONTROL	70-37
2I23	KIT, SEAL REPAIR	70-86	3C16	KNOB, SEAT	90-13
2H8	KIT, SECONDARY CONTROL VALVE	70-47	L		
2H10	KIT, SECONDARY CONTROL VALVE	70-49	3C6	LADDER, FRONT	90-3
2H12	KIT, SECONDARY CONTROL VALVE	70-51	3B15	LADDER, REAR	80-9
			4B19	LAMP, CYLINDER SPEED TACHOMETER	120-11
			3C8	LANDING, OPERATOR'S.....	90-5
			4E13	LATCH, CHAFFER FRAME	120-85
			3B20	LATCH, ENGINE COMPARTMENT REAR SHEET	80-15
			3C1	LATCH, ENGINE COMPARTMENT WALKWAY	80-21

