

HP1497 -UN-01JAN94



JOHN DEERE 7720 COMBINE WITH 224 RIGID PLATFORM

(SPECIFICATIONS AND DESIGN SUBJECT TO CHANGE WITHOUT NOTICE)

NOTE

IN ADDITION TO TITAN COMBINES, PARTS INFORMATION FOR TITAN II COMBINES IS ALSO LOCATED IN THIS CATALOG. SERIAL NUMBER (610501-) INDICATES TITAN II PARTS.

FOR 200 SERIES PLATFORM PARTS INFORMATION, REFER TO JOHN DEERE 200 SERIES PLATFORM PARTS CATALOG - PC-1558.

FOR 900 SERIES PLATFORM PARTS INFORMATION, REFER TO JOHN DEERE 900 SERIES PLATFORM PARTS CATALOG - PC-2104.

FOR 40 SERIES CORN HEAD PARTS INFORMATION, REFER TO JOHN DEERE 40 SERIES CORN HEAD PARTS CATALOG - PC-1223.

FOR 50 SERIES ROW-CROP HEAD PARTS INFORMATION, REFER TO JOHN DEERE 50 SERIES ROW-CROP HEAD PARTS CATALOG - PC-1549.

FOR 50A SERIES ROW-CROP HEAD PARTS INFORMATION, REFER TO JOHN DEERE 50A SERIES ROW-CROP HEAD PARTS CATALOG - PC-1747.

FOR THREE-ROLLER BELT PICKUP PARTS INFORMATION, REFER TO JOHN DEERE THREE-ROLLER BELT PICKUP PARTS CATALOG - PC-1189 (200 SERIES) OR PC-2210 (900 SERIES).

IMPORTANT

THIS PARTS CATALOG CONTAINS PARTS INFORMATION FOR THE 7720 COMBINE. MACHINE VINTAGE IS DETERMINED BY THE COMBINE SERIAL NUMBER OR THE PRODUCT IDENTIFICATION NUMBER (PIN). IT IS IMPORTANT THAT THE CORRECT NUMBERS BE USED WHEN ORDERING PARTS.

SERIAL NUMBER AND PRODUCT IDENTIFICATION NUMBER (PIN) PLATES

USE ALL NUMBERS, LETTERS AND SPACES SHOWN ON THE SERIAL NUMBER PLATE OR THE PRODUCT IDENTIFICATION NUMBER PLATE IN WARRANTY CORRESPONDENCE.

COMBINES (-556300)

ON THESE COMBINES, THE SERIAL NUMBER PLATE IS LOCATED ON THE REAR LEFT-HAND UPRIGHT.

AN EXAMPLE OF THE SERIAL NUMBER ON THIS PLATE IS:

E7720556300H

E - EQUIPMENT
7720 - COMBINE MODEL
556300 - COMBINE SEPARATOR SERIAL NUMBER
H - MANUFACTURING UNIT (HARVESTER WORKS)

COMBINES (556301-)

ON THESE COMBINES, THE PRODUCT IDENTIFICATION PLATE (PIN) IS LOCATED NEAR THE RIGHT-HAND SIDE OF THE TOOL BOX. AN EXAMPLE OF THE TWO-LINES ON THIS PIN PLATE IS:

H07720X556301
COMBINE

(FIRST LINE)

H0 - MANUFACTURING UNIT (HARVESTER WORKS)
7720 - MODEL IDENTIFIER
X - CONFIGURATION CODE/MODEL IDENTIFIER SUFFIX
556301 - SEQUENTIAL NUMBER USED IN SERIAL NO. COLUMN

(SECOND LINE)

COMBINE - TYPE OF PRODUCT

ENGINE SERIAL NUMBER

THE ENGINE SERIAL NUMBER PLATE IS LOCATED ON THE RIGHT-HAND SIDE OF THE ENGINE BLOCK.

ENGINES (-227599)

AN EXAMPLE OF THE ONE-LINE, SIXTEEN-DIGIT NUMBER ON THIS SERIAL NUMBER PLATE IS:

6466TH01227599RG

6 - NUMBER OF CYLINDERS
466 - CUBIC INCH DISPLACEMENT
T - FUEL TYPE (TURBOCHARGED DIESEL)
H - MANUFACTURING UNIT OF MACHINE (HARVESTER WORKS)
01 - ENGINE VERSION
227599 - ENGINE SERIAL NUMBER
RG - MANUFACTURING UNIT OF ENGINE (JOHN DEERE ENGINE WORKS)

ENGINES (227600-)

AN EXAMPLE OF THE TWO-LINE NUMBER ON THIS SERIAL NUMBER PLATE IS:

RG6466227600
6466TH05

(FIRST LINE)

RG - MANUFACTURING UNIT (JOHN DEERE ENGINE WORKS)
6 - NUMBER OF CYLINDERS
466 - CUBIC INCH DISPLACEMENT
A - CONFIGURATION CODE/MODEL IDENTIFIER SUFFIX
227600 - SEQUENTIAL NUMBER USED IN SERIAL NO. COLUMN

(SECOND LINE)

6 - NUMBER OF CYLINDERS
466 - CUBIC INCH DISPLACEMENT
T - FUEL TYPE (TURBOCHARGED DIESEL)
H - MANUFACTURING UNIT OF MACHINE (HARVESTER WORKS)
05 - ENGINE VERSION

PARTS LISTING INFORMATION

SERIAL NUMBER OR PRODUCT IDENTIFICATION NUMBER (PIN) INFORMATION SHOWS ON WHICH MACHINES A PART MAY BE USED. FOR EXAMPLE:

- THE PART CAN BE USED ON ALL MACHINES.

-000000 THE PART CAN BE USED ON ALL MACHINES UP TO AND INCLUDING THE SERIAL NUMBER LISTED.

000000- THE PART CAN BE USED ON ALL MACHINES BEGINNING WITH THE SERIAL NUMBER LISTED.

000000-000000 THE PART CAN BE USED ON ALL MACHINES BETWEEN AND INCLUDING THE SERIAL NUMBERS LISTED.

WHEN XXXXXX'S ARE LISTED IN PLACE OF A SERIAL NUMBER, A SERIAL NUMBER WAS MADE, BUT THE EXACT SERIAL NUMBER WAS NOT AVAILABLE WHEN THE CATALOG WAS PRINTED.

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

DIRECTION ARROW

ARROWS ARE USED WITH ILLUSTRATIONS TO INDICATE THE FRONT OF THE UNIT. "RIGHT-HAND" AND "LEFT-HAND" SIDES ARE DETERMINED BY FACING IN THE DIRECTION OF MACHINE FORWARD TRAVEL.

BOX-ENCLOSED ILLUSTRATIONS

A KEY NUMBER, SHOWN IN THE PARTS LIST, IS ASSIGNED TO A BOX ENCLOSING ALL PARTS SOLD AS A SERVICE ASSEMBLY. A BOX NOT KEYED INCLUDES NON-CURRENT PARTS.

KITS

KIT INFORMATION WILL BE FOUND IMMEDIATELY FOLLOWING THE STORY IN WHICH IT IS USED. THE ILLUSTRATION IS REPEATED WITH ONLY THE KIT PARTS CALLED OUT AND WITH ALL OTHER PARTS SHOWN IN PHANTOM FOR RELATIONSHIP.

JDM REMANUFACTURED COMPONENTS

THE SERVICE PARTS LISTED IN THIS CATALOG ARE INTENDED FOR THE REPAIR OF ORIGINAL EQUIPMENT COMPONENTS. ALTHOUGH MOST SERVICE PARTS MAY BE USED TO REPAIR REMANUFACTURED COMPONENTS, THE REMANUFACTURED DESIGN MAY CHANGE PARTS SUFFICIENTLY SO THAT SERVICE PARTS ARE INADEQUATE OR NOT USABLE.

BOLT AND CAP SCREW STRENGTH IDENTIFICATION

BOLTS AND CAP SCREWS REQUIRED TO HAVE HIGH-STRENGTH QUALITIES EQUIVALENT TO SAE GRADE 8 ARE IDENTIFIED THROUGHOUT THIS CATALOG BY THE DESCRIPTION HS SAE 8. ALL STANDARD BOLTS AND CAP SCREWS ARE SAE GRADE 5 OR LOWER.

COMPLETE GOODS LISTINGS

COMPLETE GOODS ARE LISTED IN BOLD FACE TYPE. ORDER SEPARATELY. DO NOT INCLUDE ON REPLACEMENT PARTS ORDER.

SI UNITS OF MEASURE

METRIC DIMENSIONS ARE GIVEN, WHERE APPLICABLE, THROUGHOUT THIS PARTS CATALOG.

TRADEMARKS

THROUGHOUT THIS PARTS CATALOG, YOU WILL FIND THE FOLLOWING DEERE & COMPANY TRADEMARKS:

DIAL-A-MATIC™
HARVESTRAK™
POSI-TORQ™

TORQ-GARD SUPREME®
QUIK-TATCH™

CHANGE INDICATOR LINE (MICROFICHE CATALOGS ONLY)

CHANGES AFFECTING THE ORDERING OF PARTS ARE IDENTIFIED BY VERTICAL LINES MARKED IN THE LEFT-HAND MARGIN OF REVISED PARTS LISTING IMAGES. A LINE IS ALSO AT THE LEFT-HAND EDGE OF THE SAME PART NUMBER IN THE NUMERICAL INDEX TO SHOW THE LOCATION OF REVISED INFORMATION.

SECTIONAL INDEX

	SECTION
GENERAL INFORMATION	10
BASIC ENGINE	20
FUEL AND AIR	30
ELECTRICAL	40
WHEELS, FRONT AXLE, SHIELDS, FENDERS, TRANSMISSION, FINAL DRIVES, CLUTCH, POSI-TORQ, TRACKS	50
HYDROSTATIC AND 4-WHEEL DRIVE SYSTEMS	55
STEERING AND BRAKES	60
HYDRAULICS	70
SEPARATOR SHELL	80
OPERATOR'S STATION	90
HEADERS - REFER TO INDIVIDUAL HEADER PARTS CATALOGS	100
FEEDER HOUSE	110
SEPARATOR	120
GRAIN TANK AND UNLOADING AUGER	130
MAJOR DRIVES	140
HEADER HEIGHT CONTROL	160
DECALS, BELTS AND CHAINS	170
NUMERICAL INDEX	180

ALPHABETICAL INDEX

GRID		PAGE	GRID		PAGE
	A				
2C21	ACCESSORIES, INSTRUMENT PANEL	40-41	6F2	AUGERS SUPPLY, SHOE GRAIN	120-99
4F13	ACCUMULATOR.....	70-110	6E24	AUGERS, HOUSING, SHOE GRAIN SUPPLY	120-97
2B25	ACCUMULATOR PRESSURE GAUGE	40-20	6F4	AUGERS, SHOE GRAIN SUPPLY, DRIVE SHAFT	120-101
4F15	ACCUMULATOR, REPLACEMENT	70-112	7E4	AUTO.HDR.HEIGHT CONTROL WIRING HARNESS.....	160-13
1D22	ADAPTER, ENGINE COOLANT HEATER.....	20-65	7D19	AUTO.HEADER HEIGHT CONTROL CHECK BLOCK.....	160-1
3G23	ADJUSTABLE REAR AXLE, HEAVY-DUTY	60-27	7D24	AUTOMATIC HDR.HGT.CTL.DROP RATE VALVE	160-7
1F4	AIR CLEANER	30-17	7D24	AUTOMATIC HDR.HGT.CTL.FULL FLOW PLUG.....	160-7
4117	AIR CONDITIONER EVAPORATOR	90-56	7D24	AUTOMATIC HDR.HGT.CTL.HYDRAULIC OIL LINE	160-7
4117	AIR CONDITIONER EXPANSION VALVE.....	90-56	7E4	AUTOMATIC HEADER HEIGHT CONTROL LINKAGE	160-13
416	AIR CONDITIONER HI PRESSURE SWITCH	90-43	7E8	AUTOMATIC HEADER HEIGHT CONTROL SWITCH	160-17
4113	AIR CONDITIONER LINES	90-52	7D19	AUTOMATIC HEADER HEIGHT CONTROL VALVE	160-1
4115	AIR CONDITIONER LINES	90-54	3H7	AXLE FRAME AND SUPPORT, REAR.....	60-37
4117	AIR CONDITIONER LINES	90-56	3H6	AXLE MOUNTING AND T-WEIGHTS, REAR	60-36
411	AIR CONDITIONING COMPRESSOR.....	90-38	2H5	AXLE SHAFT, FINAL DRIVE-PLANETARY	50-53
414	AIR CONDITIONING, O-RING KIT	90-41	2F10	AXLE SPACERS.....	50-7
6F22	AIR DUCTS, CLEANING FAN	120-121	2F11	AXLE SPACERS, WIDE-SPACED DUAL WHEELS, PLANETARY FINAL DRIVE.....	50-8
4H23	AIR FILTER, CAB.....	90-35	3H14	AXLE SPINDLE HOUSINGS,REAR-(HEAVY-DUTY)	60-46
1F3	AIR INTAKE TUBES (PRECLNR.TO AIR CLNR.)	30-16	3H13	AXLE SPINDLES, REAR	60-45
1F5	AIR INTAKE TUBES (6466TH-01 AND 02)	30-18	2F8	AXLE, DRIVE WHEEL	50-5
4H21	AIR LOUVER AND PANEL	90-33	2F9	AXLE, DRIVE WHEEL, PLANETARY FINAL DRIVE	50-6
2E5	ALTERNATOR ADJUSTING STRAP (TH 01, 02).....	40-76	2G22	AXLE, FINAL DRIVE	50-45
2E6	ALTERNATOR ADJUSTING STRAP (TH 05).....	40-77	3H9	AXLE, REAR (ADJUSTABLE)	60-39
2E5	ALTERNATOR BRACKET (TH 01, 02)	40-76	3H8	AXLE, REAR (FIXED)	60-38
2E6	ALTERNATOR BRACKET (TH 05)	40-77	3H11	AXLE, REAR (FOUR-WHEEL DRIVE)	60-43
2E3	ALTERNATOR SHEAVE AND BELT.....	40-74	3H3	AXLE, REAR, TRASH SHIELD	60-33
2E4	ALTERNATOR, COMPLETE, 90 AMP	40-75	3H10	AXLE,REAR-(HEAVY-DUTY AND FOUR-WHEEL DRIVE)	60-41
2D24	ALTERNATOR, 72 AMP.....	40-70			
2E1	ALTERNATOR, 90 AMP.....	40-72		B	
2D21	AM PUSH-BUTTON RADIO.....	40-67	4B24	BACK PLATE, MAIN HYDRAULIC PUMP.....	70-16
2D21	AM-FM PUSH-BUTTON RADIO.....	40-67	7B20	BAFFLE, GRAIN TANK SUMP	130-14
7E7	AMPLIFIER,DIAL-A-MATIC HDR HGT CONT.....	160-16	6F12	BAR, FINGER	120-109
4C1	ARM SUPPORT, MAIN HYDRAULIC PUMP TORQUE	70-18	6D16	BAR, SHEAR, CYLINDER	120-62
6D11	ARM, BEATER DRIVE (DUAL-RANGE CYLINDER DRIVE)(100 PER CENT BEATER SPEED)	120-57	2C5	BATTERY CABLES	40-25
6C1	ARM, CONCAVE ADJUSTING SHAFT	120-19	2C5	BATTERY MOUNTINGS	40-25
6C21	ARM, DUAL-RANGE CYLINDER DRIVE TIGHTENER	120-40	3F6	BEARING AND COVER, QUILL	55-100
6C19	ARM, LOCKOUT, DUAL-RANGE CYLINDER DRIVE.....	120-37	2G21	BEARING CAP, FINAL DRIVE	50-43
2H23	ARM, PROPULSION-DRIVE	50-73	3E24	BEARING, AND SEALS, SHAFT, OUTER COVER	55-92
3H15	ARM, STEERING (FOUR-WHEEL DRIVE)	60-47	3C15	BEARING,SEAL,HYDRO.DR.PUMP FRONT COVER ASSY (EATON)	55-31
2E8	ARMATURE, STARTER	40-79	2H3	BEARINGS AND GEARS, FINAL DRIVE	50-51
4H10	ARMREST (PERSONAL POSTURE SEAT)	90-21	2I8	BEARINGS, CRAWLER	50-85
1C18	ARMS, ROCKER	20-35	2I10	BEARINGS, CRAWLER	50-87
3F11	ARMS, STEERING, CAM LOBE MOTOR.....	55-106	2I13	BEARINGS, CRAWLER DRIVE	50-91
4H13	ASH TRAY	90-24	2G22	BEARINGS, FINAL DRIVE	50-45
1F6	ASPIRATOR	30-19	2G23	BEARINGS, FINAL DRIVE	50-46
7C21	AUGER AND HOUSING, HORIZONTAL UNLOADING	130-41	2H5	BEARINGS, FINAL DRIVE	50-53
7C13	AUGER AND HOUSING, VERTICAL, GRAIN TANK	130-33	1C6	BEARINGS, MAIN.....	20-23
7C19	AUGER DRIVE GEAR CASE,HORIZONTAL UNLDG.	130-39	1C6	BEARINGS, MAIN THRUST.....	20-23
2B12	AUGER LIGHT, UNLOADING	40-5	6H23	BEARINGS, TAILINGS ELEVATOR CONVEYOR.....	120-172
7B17	AUGER SWIVEL SHROUD,HORIZONTAL UNLOADING....	130-11	6H24	BEARINGS, TAILINGS ELEVATOR CONVEYOR.....	120-173
7C15	AUGER SWIVEL, HORIZONTAL UNLOADING	130-35	2I15	BEARINGS,CRAWLER DRIVE,PLANETARY DR-LH	50-93
7C16	AUGER SWIVEL, HORIZONTAL UNLOADING	130-36	3D1	BEARINGS,HYDRO. DRIVE PUMP (EATON)	55-42
7B25	AUGER, CROSS FRONT, GRAIN TANK	130-19	2G7	BEARINGS,TRANSMISSION COUNTERSHAFT,GEARS....	50-29
7C1	AUGER, CROSS, REAR, GRAIN TANK	130-20	2G7	BEARINGS,TRANSMISSION INPUT SHAFT,GEARS.....	50-29
6G16	AUGER, LOADING	120-139	2G9	BEARINGS,TRANSMISSION PINION SHAFT,GEARS.....	50-31
6H14	AUGER, LOWER TAILINGS	120-163	6D4	BEATER AND TACHOMETER DRIVE	120-49
6H15	AUGER, LOWER TAILINGS	120-164	6D5	BEATER AND TACHOMETER DRIVE	120-50
6G2	AUGER, LOWER, CLEAN GRAIN.....	120-125	6D7	BEATER BEARING LUBE BANK SYSTEM-R.H.	120-52
6G21	AUGER, LOWER, DIP AND POUR ELEVATOR	120-145	6D8	BEATER BEARING LUBE BANK,LH (HYDRO)	120-53
7C18	AUGER, UNLOADING, LUBE BANK SYSTEM.....	130-38	6D9	BEATER BEARING LUBE BANK,LH (POSI).....	120-54
2B11	AUGER, UNLOADING, WIRING HARNESS	40-3	6D4	BEATER BELT	120-49
6I2	AUGER, UPPER TAILINGS.....	120-176	6D5	BEATER BELT	120-50
7C11	AUGER, VERTICAL, LOWER GEAR CASE	130-31	6D10	BEATER DRIVE	120-55
7C9	AUGER,CROSS,DRIVE TIGHTENERS,GRAIN TANK	130-29			
6H7	AUGER,LDG.,DIP AND POUR ELEV.GR.TANK.....	120-156			

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
6D12	BEATER DRIVE	120-58	7D8	BELTS, PRIMARY COUNTERSHAFT SHEAVES (DUAL-RANGE CYLINDER DRIVE)	140-12
6D11	BEATER DRIVE, DUAL-RANGE CYLINDER DRIVE (100 PER CENT BEATER SPEED)	120-57	7F15	BELTS,DRIVE,ENGINE TO PRIMARY CTRSHAFT.....	170-28
6D4	BEATER FOR CYLINDER TACHOMETER.....	120-49	7E20	BELTS,DRIVE,FEEDER HOUSE (VARIABLE DR.)	170-7
6D5	BEATER FOR CYLINDER TACHOMETER.....	120-50	7F6	BELTS,DRIVE,SHOE GRAIN SUPPLY AUGERS.....	170-18
6B18	BEATER GRATE	120-9	7E17	BELTS,HYDROSTATIC GROUND DRIVE.....	170-4
1F2	BELL CRANK, THROTTLE LINKAGE	30-15	4H21	BEZEL, AIR LOUVER	90-33
7F2	BELT AND SHEAVES	170-14	6E21	BLADE, STRAW SPREADER	120-93
7F2	BELT AND SHEAVES TORQ-SENSING CTRSHAFT	170-14	6E12	BLADES AND ROTOR, STRAW CHOPPER	120-83
7D16	BELT GUIDES, SEPARATOR DRIVE	140-20	6E13	BLADES AND ROTOR, STRAW CHOPPER	120-84
7D16	BELT GUIDES, UNLOADING AUGER DRIVE	140-20	1B16	BLOCK, CYLINDER	20-8
5C19	BELT IDLERS, FEEDER HOUSE MIDDLE.....	110-38	1B14	BLOCK, CYLINDER (ENGINE SERIAL NO. 161003-228054).....	20-6
3B13	BELT TENSIONING MECHANISM,HYDROSTATIC DR.....	55-3	1B24	BLOCK, CYLINDER (TH 05)	20-16
3B16	BELT TENSIONING SYSTEM,HYD.-HYDRO. DR. (EATON)	55-6	1B12	BLOCK, CYLINDER (TH 01, 02).....	20-4
3B14	BELT TENSIONING SYSTEM,HYD.-HYDRO. DR. (SUNDSTRAND).....	55-4	1B22	BLOCK, ENGINE SHORT	20-14
6H6	BELT TIGHTENER, DIP AND POUR ELEVATOR	120-155	1B18	BLOCK, ENGINE SHORT (TH 01, 02)	20-10
411	BELT, AIR CONDITIONING COMPRESSOR	90-38	1C1	BLOCK, ENGINE SHORT (TH 05)	20-18
2E3	BELT, ALTERNATOR.....	40-74	3E12	BLOCK, MOTOR CYLINDER (FOUR-WHEEL DRIVE).....	55-80
6B14	BELT, BEATER.....	120-5	7D19	BLOCK,CHECK,AUTO.HEADER HEIGHT CONTROL	160-1
6B16	BELT, BEATER.....	120-7	2D2	BLOWER SWITCH	40-47
6D4	BELT, BEATER.....	120-49	4H25	BLOWER, PRESSURIZER.....	90-37
6D5	BELT, BEATER.....	120-50	1C15	BOLTS, HEAD	20-32
7F3	BELT, BEATER.....	170-15	6G9	BOOT, CLEAN GRAIN ELEVATOR HOUSING	120-132
6D11	BELT, BEATER DRIVE (DUAL-RANGE CYLINDER DRIVE)(100 PER CENT BEATER SPEED)	120-57	3F22	BOOT, PARKING BRAKE CONTROL.....	60-1
417	BELT, COMPRESSOR.....	90-44	2C17	BOX, CONTROL, LOW SHAFT SPEED MONITORING.....	40-37
7F3	BELT, CYLINDER TACHOMETER	170-15	2C19	BOX, CONTROL, LOW SHAFT SPEED MONITORING.....	40-39
7E19	BELT, DRIVE, HYDRAULIC REEL LIFT.....	170-6	4G5	BOX, TOOL.....	80-15
7F16	BELT, DRIVE, SECONDARY COUNTERSHAFT	170-29	6G9	BRACE, CLEAN GRAIN ELEVATOR HOUSING	120-132
1D23	BELT, FLAT ROTARY SCREEN	20-66	5C19	BRACE, FEEDER HOUSE MIDDLE BELT	110-38
6G18	BELT, GEAR CASE, LOADING AUGER.....	120-141	4G1	BRACES, SEPARATOR CROSS.....	80-10
4E19	BELT, HYDROSTATIC REEL PUMP.....	70-91	6C14	BRACES, SUPPORT CYLINDER INTERMEDIATE DRIVE.....	120-32
6B14	BELT, RASP-BAR CYLINDER.....	120-5	6C9	BRACES, SUPPORT, CYLINDER DRIVE.....	120-27
6B16	BELT, RASP-BAR CYLINDER.....	120-7	4F13	BRACKET, ACCUMULATOR	70-110
6E17	BELT, REAR, STRAW CHOPPER	120-89	2E5	BRACKET, ALTERNATOR (TH 01, 02).....	40-76
7E14	BELT, ROTARY SCREEN	170-1	2E6	BRACKET, ALTERNATOR (TH 05).....	40-77
6E16	BELT, STRAW CHOPPER DRIVE	120-87	6G7	BRACKET, CLEAN GRAIN ELEVATOR HOUSING	120-130
6D23	BELT, STRAW SPREADER DRIVE	120-69	5B24	BRACKET, FEEDER CONVEYOR DRIVE	110-17
6D4	BELT, TACHOMETER DRIVE	120-49	1E21	BRACKET, FUEL SHUT-OFF	30-10
6D5	BELT, TACHOMETER DRIVE	120-50	2C1	BRACKET, HARNESS, REAR CAB	40-21
6C5	BELT,CYLINDER DRIVE INTERMEDIATE SHAFT.....	120-23	2D21	BRACKET, RADIO	40-67
6C7	BELT,CYLINDER DRIVE INTERMEDIATE SHAFT.....	120-25	4F15	BRACKET, REPLACEMENT ACCUMULATOR.....	70-112
6G12	BELT,DR.,COUNTERSHAFT,CLEAN GR.ELEVATOR	120-135	6F14	BRACKETS, CHAFFER FRAME	120-111
5C12	BELT,FDR.HSE.LOWER SHAFT-VARIABLE DRIVE	110-31	3F22	BRAKE CONTROLS, PARKING	60-1
2H13	BELT,POSI-TORQ DR.WHEEL CLUTCH SHEAVE	50-61	3F24	BRAKE LINES	60-3
3B11	BELT,PROPULSION DR.CTRSHAFT-HYDRO.DR.....	55-1	3G2	BRAKE MASTER CYLINDER	60-5
2H20	BELT,PROPULSION-DRIVE CTRSHAFT-POSI-TORQ.....	50-69	3F23	BRAKE PEDALS AND LINKAGE.....	60-2
6F4	BELT,SHOE GRAIN SUPPLY AUGERS DR. SHAFT	120-101	4G25	BRAKE PLATE	90-9
7F3	BELTS AND SHEAVES	170-15	3E13	BRAKE PLATES (FOUR-WHEEL DRIVE).....	55-81
7F8	BELTS, CLEAN GRAIN ELEVATOR	170-21	3G6	BRAKE SHOES AND DRUM.....	60-9
7F7	BELTS, DRIVE, CLEANING FAN	170-19	3G3	BRAKE SLAVE CYLINDER	60-6
7F1	BELTS, DRIVE, FEEDER HOUSE (REG FIXED LESS REVERSER)	170-13	2C7	BREAKER, CIRCUIT	40-27
7E23	BELTS, DRIVE, FEEDER HOUSE (LONG)	170-10	3C14	BRG.-SEAL-HYDRO.DR.PUMP FRONT COVER ASSY (SUNDSTRAND).....	55-29
7E25	BELTS, DRIVE, FEEDER HOUSE (REG. FIXED)	170-12	3C24	BRGS,TRUNNIONS,HYDRO.DR.PUMP SWASHPLATE (SUNDSTRAND).....	55-40
7C24	BELTS, ENGINE POWERSHAFT	140-3	2C21	BUZZER, WARNING	40-41
7E16	BELTS, ENGINE R.H. SIDE.....	170-3	2C5	BUZZER,WATER TEMPERATURE,SENDING UNIT	40-25
7E24	BELTS, FEEDER HOUSE DRIVE (LONG RICE)	170-11	1D4	BYPASS VALVE, OIL COOLER	20-45
5D4	BELTS, FEEDER HOUSE UPPER	110-50	1C21	BYPASS VALVE, OIL COOLER (TH 01, 02)	20-38
3C5	BELTS, HYDROSTATIC DRIVE UNIT (SUNDSTRAND).....	55-20			
3C6	BELTS, HYDROSTATIC DRIVE UNIT (EATON)	55-21		C	
7F8	BELTS, LOADING AUGER	170-21	4H14	CAB.....	90-25
7E18	BELTS, POSI-TORQ GROUND DRIVE.....	170-5	4H23	CAB AIR FILTER	90-35
7D7	BELTS, PRIMARY COUNTERSHAFT SHEAVES.....	140-11			

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
4H17	CAB COVERS	90 - 29	3C13	CHARGE PUMP MOUNTING, HYDROSTATIC DRIVE (EATON).....	55 - 28
4H17	CAB DOORS	90 - 29	3C12	CHARGE PUMP MOUNTING, HYDROSTATIC DRIVE (SUNDSTRAND).....	55 - 27
4H17	CAB HANDLE	90 - 29	3C8	CHARGE PUMP, HYDROSTATIC DRIVE.....	55 - 23
4H18	CAB ROOF AND SUPPORTS	90 - 30	3C9	CHARGE PUMP, HYDROSTATIC DRIVE.....	55 - 24
4H20	CAB ROOF HEADLINER	90 - 32	7D19	CHECK BLOCK, AUTO.HEADER HEIGHT CONTROL	160 - 1
2D2	CAB ROOF WIRING HARNESS	40 - 47	1F18	CHECK VALVE, FUEL	30 - 31
4H5	CAB SEAL	90 - 14	3F4	CHECK VALVES, CAM LOBE MOTOR	55 - 98
4H17	CAB SHIELDS	90 - 29	6E1	CHOPPER HOUSING, STRAW	120 - 72
4H15	CAB WINDOWS	90 - 27	6E3	CHOPPER HOUSING, STRAW	120 - 74
2C1	CAB, REAR, HARNESS BRACKET	40 - 21	6E11	CHOPPER, STRAW, KNIFE AND SUPPORT	120 - 82
3B21	CABLE AND LEVER, HYDRO. DRIVE CONTROL.....	55 - 11	6E6	CHOPPER, STRAW, PLATE AND FINS.....	120 - 77
5C10	CABLE AND LINKAGE, REVERSER CONTROL	110 - 29	6E8	CHOPPER, STRAW, PLATE AND FINS.....	120 - 79
3B24	CABLE MOUNTING, HYDRO. DRIVE CONTROL (EATON)	55 - 14	2C21	CIGAR LIGHTER	40 - 41
3B22	CABLE MOUNTING, HYDRO. DRIVE CONTROL (SUNDSTRAND).....	55 - 12	7E10	CIRCUIT BOX, DIAL-A-MATIC CONVERSION.....	160 - 20
1F2	CABLE SUPPORTS, THROTTLE LINKAGE	30 - 15	2B20	CIRCUIT BOX, HARVESTRAK	40 - 14
1E19	CABLE, FUEL SHUT-OFF CONTROL	30 - 8	2C7	CIRCUIT BREAKER AND RELAY PANEL	40 - 27
1E20	CABLE, FUEL SHUT-OFF CONTROL	30 - 9	2C24	CIRCUIT BREAKER, ELECTRIC CLUTCH.....	40 - 45
4D6	CABLE, VARIABLE CYLINDER CONTROL	70 - 51	2C24	CIRCUIT BREAKER, HARVESTRAK.....	40 - 45
2E14	CABLE, WIRING.....	40 - 86	3G19	CLAMP, STEERING OIL LINES	60 - 23
2G19	CABLES AND MOUNTINGS, GEARSHIFT.....	50 - 41	2C1	CLAMPS, HARNESS, REAR CAB.....	40 - 21
2C5	CABLES, BATTERY	40 - 25	6G14	CLEAN GR. ELEV. DR. TIGHTENER AND IDLER	120 - 137
3F10	CAM LOBE MOTOR DESTROKE PUMP	55 - 105	7F8	CLEAN GRAIN ELEVATOR DRIVE.....	170 - 21
3F1	CAM, CARRIER, PISTONS AND.....	55 - 94	6G12	CLEAN GRAIN ELEVATOR DRIVE CTRSHAFT.....	120 - 135
2G14	CAM, GEARSHIFT LEVER (POSI-TORQ)	50 - 36	6G6	CLEAN GRAIN ELEVATOR HOUSING.....	120 - 129
2G5	CAM, SHIFTER.....	50 - 27	6G7	CLEAN GRAIN ELEVATOR HOUSING.....	120 - 130
1C9	CAMSHAFT.....	20 - 26	6G9	CLEAN GRAIN ELEVATOR HOUSING BOOT	120 - 132
1C9	CAMSHAFT GEAR.....	20 - 26	7F8	CLEAN GRAIN ELEVATOR SHEAVES AND BELTS.....	170 - 21
1D22	CAP, ENGINE COOLANT HEATER	20 - 65	6G2	CLEAN GRAIN LOWER AUGER AND HOUSING	120 - 125
1F6	CAP, EXHAUST RAIN	30 - 19	6G4	CLEAN GRAIN LOWER AUGER HOUSING.....	120 - 127
4B11	CAP, HYDRAULIC OIL RESERVOIR	70 - 3	6F19	CLEANING FAN	120 - 117
3F8	CAP, YOKE, PIVOTS AND	55 - 102	6F22	CLEANING FAN AIR DUCTS	120 - 121
3E14	CARRIER, FIRST PLANET (FOUR-WHEEL DRIVE)	55 - 82	7F7	CLEANING FAN DRIVE BELTS	170 - 19
3F1	CARRIER, PISTONS AND CAM	55 - 94	7F7	CLEANING FAN DRIVE SHEAVES.....	170 - 19
1F12	CENTER HOUSING, TURBOCHARGER (SCHWITZER)	30 - 25	6F20	CLEANING FAN HOUSING	120 - 118
1F8	CENTER HOUSING, TURBOCHARGER(AIRESEARCH)....	30 - 21	2C3	CLEANING FAN MAGNETIC SENSOR.....	40 - 23
1F10	CENTER HOUSING, TURBOCHARGER(AIRESEARCH)....	30 - 23	6F20	CLEANING FAN PROTECTOR SHIELD.....	120 - 118
3D15	CENTER SECTION, HYDRO, DRIVE (EATON)	55 - 57	6F24	CLEANING FAN SPEED CONTROL.....	120 - 123
3D14	CENTER SECTION, HYDROSTATIC DRIVE	55 - 55	2B20	CLEANING SHOE SENSOR	40 - 14
6F8	CHAFFER	120 - 105	4G25	CLUTCH COVER	90 - 9
6F12	CHAFFER FRAME	120 - 109	2H9	CLUTCH MASTER CYLINDER	50 - 57
6F14	CHAFFER FRAME BRACKETS.....	120 - 111	2H11	CLUTCH OIL LINE	50 - 59
6F12	CHAFFER FRAME COVER	120 - 109	2H7	CLUTCH PEDAL AND LINKAGE.....	50 - 55
6F14	CHAFFER FRAME SWINGERS.....	120 - 111	2H13	CLUTCH SHEAVE, DRIVE WHEEL, POSI-TORQ	50 - 61
6G24	CHAIN TIGHTENERS,LOWER,DIP AND POUR ELEV	120 - 149	2G25	CLUTCH SLAVE CYLINDER	50 - 48
6H2	CHAIN TIGHTENERS,UPPER,DIP-POUR ELEV.	120 - 151	2H10	CLUTCH SLAVE CYLINDER	50 - 58
6C3	CHAIN, CONCAVE ADJUSTING CONTROLS	120 - 21	2H17	CLUTCH, DRIVE WHEEL	50 - 65
6G11	CHAIN, CONVEYOR, CLEAN GRAIN ELEVATOR	120 - 134	2C21	CLUTCH, ELECTRIC, SWITCH.....	40 - 41
6F17	CHAIN, CRANK SHOE.....	120 - 115	2B16	CLUTCH, ELECTROMAGNETIC, HEADER	40 - 9
5B24	CHAIN, DRIVE, FEEDER CONVEYOR.....	110 - 17	2E9	COIL, STARTER.....	40 - 80
5B22	CHAIN, FEEDER CONVEYOR	110 - 15	1E22	COLD WEATHER STARTING AID	30 - 11
5C24	CHAIN, FEEDER HOUSE UPPER SPROCKETS.....	110 - 44	3G8	COLUMN AND WHEEL, STEERING.....	60 - 11
5D6	CHAIN, FEEDER HOUSE, LESS REVERSER, UPPER SPROCKETS	110 - 52	2E10	COMMUTATOR END FRAME, STARTER	40 - 81
6D24	CHAIN, STRAW WALKER	120 - 71	4I9	COMPRESSOR CLUTCH AND SERVICE VALVES.....	90 - 47
6H23	CHAIN, TAILINGS ELEVATOR CONVEYOR	120 - 172	4I12	COMPRESSOR HARDWARE KIT	90 - 51
6H24	CHAIN, TAILINGS ELEVATOR CONVEYOR	120 - 173	4I5	COMPRESSOR HARNESS	90 - 42
6H4	CHAIN,CONVEYOR,DIP AND POUR ELEVATOR	120 - 153	4I10	COMPRESSOR KIT	90 - 48
7F7	CHAINS, DRIVE, STRAW WALKER	170 - 19	4I7	COMPRESSOR MOUNTING AND SUPPORTS	90 - 44
7E22	CHAINS, FEEDER HOUSE (VARIABLE DRIVE)	170 - 9	4I8	COMPRESSOR MOUNTING AND SUPPORTS	90 - 45
7E21	CHAINS, FEEDER HOUSE-LONG	170 - 8	4I10	COMPRESSOR PARTS	90 - 48
4G23	CHANNEL SUPPORT	90 - 7	4I5	COMPRESSOR RELAY	90 - 42
7C2	CHANNELS,AUGER,GRAIN TANK INNER UNLDG.	130 - 21	4I1	COMPRESSOR, AIR CONDITIONING	90 - 38
3D23	CHARGE PRESSURE RELIEF VALVE BLOCK (EATON)	55 - 65	6C3	CONCAVE ADJUSTING CONTROLS	120 - 21
			6C1	CONCAVE ADJUSTING SHAFT	120 - 19
			6B18	CONCAVE, OPEN-BAR	120 - 9
			6B23	CONCAVE, SPIKE-TOOTH	120 - 15

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
4113	CONDENSER, AIR CONDITIONER	90 - 52	7E10	CONVERSION, DIAL-A-MATIC HEADER HEIGHT CONTROL	160 - 20
4115	CONDENSER, AIR CONDITIONER	90 - 54	6G11	CONVEYOR CHAIN, CLEAN GRAIN ELEVATOR	120 - 134
4113	CONDENSER, RECEIVER, AND AIR CONDITIONER LINES	90 - 52	1B10	COOLANT CONDITIONER.....	20 - 2
4115	CONDENSER, RECEIVER, AND AIR CONDITIONER LINES	90 - 54	1D21	COOLANT HEATER, ENGINE.....	20 - 64
1B10	CONDITIONER, COOLANT	20 - 2	7E2	COOLER LINES AND HOSE, OIL.....	160 - 11
1C7	CONNECTING RODS	20 - 24	1D7	COOLER, ENGINE OIL	20 - 48
1C8	CONNECTING RODS	20 - 25	3E1	COOLER, HYDROSTATIC DRIVE OIL	55 - 68
2E16	CONNECTOR, ELECTRICAL, SERVICE KIT	40 - 88	1D22	CORD, ENGINE COOLANT HEATER.....	20 - 65
1G1	CONNECTORS, FUEL INJECTION PUMP HOUSING.....	30 - 40	4I13	CORE, VALVE	90 - 52
2E20	CONNECTORS, SUPPLEMENTARY TERMINALS.....	40 - 92	4G7	CORNER FRAME.....	80 - 17
7F22	CONSOLE COVER DECALS.....	170 - 35	7D13	COUNTERSHAFT DRIVE IDLER, SECONDARY	140 - 17
4H12	CONSOLE COVERS	90 - 23	2H20	COUNTERSHAFT SHEAVE, PROPULSION-DRIVE.....	50 - 69
4H12	CONSOLE PANEL	90 - 23	7D7	COUNTERSHAFT SHEAVES, PRIMARY	140 - 11
2B20	CONSOLE, GRAIN LOSS (HARVESTRAK)	40 - 14	7D8	COUNTERSHAFT SHEAVES, PRIMARY (DUAL-RANGE CYLINDER DRIVE)	140 - 12
2C17	CONTROL BOX, LOW SHAFT SPEED MONITORING	40 - 37	7D2	COUNTERSHAFT, PRIMARY AND MOUNTINGS	140 - 5
2C19	CONTROL BOX, LOW SHAFT SPEED MONITORING	40 - 39	2H23	COUNTERSHAFT, PROPULSION-DRIVE.....	50 - 73
3B21	CONTROL CABLE AND LEVER, HYDRO. DRIVE.....	55 - 11	7D11	COUNTERSHAFT, SECONDARY	140 - 15
5C10	CONTROL CABLE AND LINKAGE, REVERSER	110 - 29	7B23	COUNTERSHAFT, UNLOADING AUGER.....	130 - 17
3B22	CONTROL CABLE MOUNTING HYDRO. DRIVE (SUNDSTRAND).....	55 - 12	6G21	COUNTERSHAFT, UPPER, DIP AND POUR ELEV.	120 - 145
3D13	CONTROL HANDLE, HYDRO. DR. DISPLACEMENT (SUNDSTRAND).....	55 - 54	6G12	COUNTERSHAFT, DRIVE, CLEAN GRAIN ELEVATOR.....	120 - 135
4E15	CONTROL LEVER, HYDRAULIC REEL LIFT.....	70 - 87	6H5	COUNTERSHAFT, DRIVE, DIP AND POUR ELEVATOR.....	120 - 154
4E15	CONTROL LEVER, PLATFORM LIFT.....	70 - 87	2G7	COUNTERSHAFT, GEARS, BEARINGS, TRANSMISSION	50 - 29
7E5	CONTROL LINKAGE	160 - 14	7E19	COUNTERSHAFT, PRIMARY TO HYD. REEL LIFT	170 - 6
2B20	CONTROL PANEL, HARVESTRAK COMBINE MONITOR ..	40 - 14	2H24	COUNTERSHAFT, PROPULSION DRIVE-POSI-TORQ.....	50 - 74
4C24	CONTROL PLUG, FLOW.....	70 - 44	5C21	COUNTERSHAFT, UPPER, FDR. HSE.-VARIABLE DR.	110 - 41
7E8	CONTROL SWITCH, AUTOMATIC HEADER HEIGHT	160 - 17	3C7	COUPLER, HYDROSTATIC DRIVE MOTOR	55 - 22
3E16	CONTROL VALVE (FOUR-WHEEL DRIVE)	55 - 84	5B10	COUPLER, QUIK-TATCH (L.H.)	110 - 3
3F14	CONTROL VALVE (FOUR-WHEEL DRIVE)	55 - 109	5B9	COUPLER, QUIK-TATCH (R.H.)	110 - 1
4D17	CONTROL VALVE KIT, SECONDARY	70 - 63	2C6	COVER PLATES, ELEC., ENGINE COMPT. FIREWALL.....	40 - 26
4D19	CONTROL VALVE KIT, SECONDARY	70 - 65	6F12	COVER, CHAFFER FRAME	120 - 109
4E17	CONTROL VALVE LINKAGE, REEL SPEED	70 - 89	4G25	COVER, CLUTCH.....	90 - 9
3E17	CONTROL VALVE SOLENOID (FOUR-WHEEL DR.)	55 - 85	6C16	COVER, DUAL-RANGE CYLINDER GEAR CASE	120 - 34
3F15	CONTROL VALVE SOLENOID (FOUR-WHEEL DR.)	55 - 110	3E14	COVER, FIRST PLANET (FOUR-WHEEL DRIVE).....	55 - 82
3D11	CONTROL VALVE, HYDRO. DR. DISPLACEMENT (EATON)	55 - 52	3C15	COVER, FRONT, HYDRO. DRIVE PUMP (EATON)	55 - 31
3D5	CONTROL VALVE, HYDRO. DRIVE DISPLACEMENT (SUNDSTRAND).....	55 - 46	3C14	COVER, FRONT, HYDROSTATIC DRIVE PUMP (SUNDSTRAND).....	55 - 29
3D7	CONTROL VALVE, HYDRO. DRIVE DISPLACEMENT (SUNDSTRAND).....	55 - 48	3F4	COVER, INNER	55 - 98
3D9	CONTROL VALVE, HYDRO. DRIVE DISPLACEMENT (SUNDSTRAND).....	55 - 50	3F6	COVER, QUILL, BEARING AND	55 - 100
4F4	CONTROL VALVE, HYDROSTATIC DR. REEL FLOW	70 - 101	1C17	COVER, ROCKER ARM	20 - 34
4D9	CONTROL VALVE, SECONDARY.....	70 - 55	2E13	COVER, STARTER SOLENOID	40 - 84
4D10	CONTROL VALVE, SECONDARY.....	70 - 56	1C12	COVER, TACHOMETER DRIVE GEAR	20 - 29
4D12	CONTROL VALVE, SECONDARY.....	70 - 58	1C10	COVER, TIMING GEAR.....	20 - 27
4C2	CONTROL VALVE, MAIN HYD. POPPETS-HYDRO.	70 - 20	4H19	COVERS AND INNER ROOF	90 - 31
4C4	CONTROL VALVE, MAIN HYD. POPPETS-HYDRO.	70 - 22	4H17	COVERS, CAB	90 - 29
4C2	CONTROL VALVE, MAIN HYD. SPRINGS-HYDRO.....	70 - 20	4H12	COVERS, CONSOLE	90 - 23
4C4	CONTROL VALVE, MAIN HYD. SPRINGS-HYDRO.....	70 - 22	6D15	COVERS, CYLINDER.....	120 - 61
3E19	CONTROL VALVES, FLOW (FOUR-WHEEL DRIVE)	55 - 87	7C3	COVERS, GRAIN TANK FRONT AND REAR, ADJ.	130 - 22
3F17	CONTROL VALVES, FLOW (FOUR-WHEEL DRIVE)	55 - 113	7C4	COVERS, GRASS SEED UNLOADING AUGER	130 - 23
3B24	CONTROL, CABLE, MOUNTING, HYDRO. DRIVE (EATON)	55 - 14	7C2	COVERS, AUGER, GRAIN TANK INNER UNLDG.....	130 - 21
1E19	CONTROL, FUEL SHUT-OFF	30 - 8	1C5	CRANKSHAFT	20 - 22
1E20	CONTROL, FUEL SHUT-OFF	30 - 9	6F17	CRANKSHAFT DRIVE TIGHTENER, SHOE.....	120 - 115
6F24	CONTROL, SPEED, CLEANING FAN.....	120 - 123	1C11	CRANKSHAFT OIL SEAL	20 - 28
4D6	CONTROL, VARIABLE CYLINDER	70 - 51	1C10	CRANKSHAFT OIL SEAL HOUSING	20 - 27
6C3	CONTROLS, CONCAVE ADJUSTING	120 - 21	1C11	CRANKSHAFT OIL SEAL HOUSING	20 - 28
3F22	CONTROLS, PARKING BRAKE	60 - 1	1C5	CRANKSHAFT PULLEY.....	20 - 22
2H18	CONTROLS, POSI-TORQ GROUND SPEED.....	50 - 67	6D21	CRANKSHAFT, STRAW WALKER FRONT	120 - 67
6I5	CONTROLS, SEPARATOR DRIVE	120 - 179	6D23	CRANKSHAFT, STRAW WALKER REAR.....	120 - 69
2H15	CONTROLS, THROW-OUT, DRIVE WHEEL CLUTCH	50 - 63	2I8	CRAWLER BEARINGS.....	50 - 85
4F1	CONVERSION HOSES AND COUPLERS	70 - 98	2I10	CRAWLER BEARINGS.....	50 - 87
			2I13	CRAWLER DRIVE BEARINGS	50 - 91
			2I15	CRAWLER DRIVE BEARINGS, PLANETARY DR-LH	50 - 93
			2I13	CRAWLER DRIVE SHIELD	50 - 91
			2I15	CRAWLER DRIVE SHIELD, PLANETARY DR-LH.....	50 - 93
			2I13	CRAWLER DRIVE SPROCKET.....	50 - 91
			2I15	CRAWLER DRIVE SPROCKET, PLANETARY DR-LH	50 - 93

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
214	CRAWLER FRAME, R.H. AND L.H.	50 - 80	3G24	CYLINDER,STEERING-ADJUSTABLE REAR AXLE.....	60 - 28
218	CRAWLER IDLER.....	50 - 85	3G24	CYLINDER,STEERING-FIXED REAR AXLE	60 - 28
214	CRAWLER ROLLERS	50 - 80	4D25	CYLINDER,UNLOADING AUGER SWING HYDRAULIC	70 - 71
218	CRAWLER SHAFT	50 - 85	4E4	CYLINDER,UNLOADING AUGER SWING HYDRAULIC	70 - 75
2110	CRAWLER SHAFTS.....	50 - 87	4E5	CYLINDER,UNLOADING AUGER SWING HYDRAULIC	70 - 76
212	CRAWLER SHOES	50 - 77	4E7	CYLINDER,UNLOADING AUGER SWING HYDRAULIC	70 - 78
213	CRAWLER SHOES	50 - 79			
2110	CRAWLER TIGHTENER	50 - 87		D	
212	CRAWLER TRACKS.....	50 - 77			
213	CRAWLER TRACKS.....	50 - 79			
7C9	CROSS AUGER DRIVE TIGHTENERS, GRAIN TANK	130 - 29	7F23	DECAL, PANEL	170 - 36
7F14	CROSS AUGER DRIVES.....	170 - 27	7F22	DECALS, CONSOLE COVER	170 - 35
7B25	CROSS AUGER, FRONT, GRAIN TANK	130 - 19	7F20	DECALS, FRONT AND REAR.....	170 - 33
7C1	CROSS AUGER, REAR, GRAIN TANK	130 - 20	7F22	DECALS, INSTRUMENT PANEL.....	170 - 35
4G1	CROSS BRACES, SEPARATOR.....	80 - 10	7F18	DECALS, RIGHT-HAND AND LEFT-HAND.....	170 - 31
6C25	CTRSHAFT CYL.DR.BRG.HSG.LUBE BANK-RH	120 - 44	7F24	DECALS, SEPARATOR	170 - 37
6E10	CURTAIN AND SHIELDS, STRAW CHOPPER	120 - 81	7D15	DECLUTCHING IDLER.....	140 - 19
6D17	CURTAINS, SEPARATOR	120 - 63	6D15	DEFLECTOR, CYLINDER COVER	120 - 61
4H9	CUSHIONS, SEAT (PERSONAL POSTURE SEAT).....	90 - 19	3F10	DESTROKE PUMP, CAM LOBE MOTOR.....	55 - 105
3C18	CYL. BLOCK, HYDRO. DR. PUMP (SUNDSTRAND)	55 - 34	7E7	DIAL-A-MATIC HDR HGT CONT AMPLIFIER	160 - 16
6C25	CYL.DR.CTRSHAFT.BRG.HSG.LUBE BANK-RH	120 - 44	7E9	DIAL-A-MATIC HDR. HEIGHT CONTROL SWITCH.....	160 - 19
6C24	CYL.SHAFT BRG.HSG.LUBE BANK (R.H.)	120 - 43	2C19	DIAL-A-MATIC HEADER HEIGHT CONTROL	40 - 39
1B16	CYLINDER BLOCK.....	20 - 8	7E5	DIAL-A-MATIC HEADER HEIGHT CONTROL	160 - 14
1B14	CYLINDER BLOCK (ENGINE SERIAL NO. 161003-228054).....	20 - 6	7E10	DIAL-A-MATIC HEADER HEIGHT CONTROL CONVERSION	160 - 20
1B12	CYLINDER BLOCK (TH 01, 02)	20 - 4	2G11	DIFFERENTIAL GEARS AND SHAFTS	50 - 33
1B24	CYLINDER BLOCK (TH 05).....	20 - 16	2G3	DIFFERENTIAL HOUSING.....	50 - 25
3C17	CYLINDER BLOCK ASSEMBLY, HYDRO. DR. PUMP (SUNDSTRAND).....	55 - 33	2G5	DIFFERENTIAL HOUSING COVER	50 - 27
3C20	CYLINDER BLOCK ASSEMBLY, HYDROSTATIC DRIVE PUMP (EATON).....	55 - 36	2D24	DIODE RING, ALTERNATOR, 72 AMP.....	40 - 70
3E12	CYLINDER BLOCK, MOTOR (FOUR-WHEEL DRIVE).....	55 - 80	2E1	DIODE TRIO ASSEMBLY, ALTERNATOR, 90 AMP	40 - 72
6D15	CYLINDER COVER DEFLECTOR.....	120 - 61	6G21	DIP AND POUR ELEV. UPPER COUNTERSHAFT	120 - 145
6D15	CYLINDER COVERS	120 - 61	6H7	DIP AND POUR ELEV.GR.TANK LDG. AUGER	120 - 156
6C5	CYLINDER DRIVE INTERMEDIATE SHAFT.....	120 - 23	6G24	DIP AND POUR ELEV.LOWER CHAIN TIGHTENERS	120 - 149
6C7	CYLINDER DRIVE INTERMEDIATE SHAFT.....	120 - 25	6H2	DIP AND POUR ELEV.UPPER CHAIN TIGHTENERS.....	120 - 151
6C9	CYLINDER DRIVE SUPPORT BRACES.....	120 - 27	6H8	DIP AND POUR ELEVATOR AUGER EXTENSION.....	120 - 157
6C11	CYLINDER DRIVE TIGHTENER	120 - 29	6H8	DIP AND POUR ELEVATOR AUGER HOUSING.....	120 - 157
6D13	CYLINDER DRIVE, DUAL-RANGE, BEATER DRIVE.....	120 - 59	6H8	DIP AND POUR ELEVATOR AUGER SHIELD.....	120 - 157
1C15	CYLINDER HEAD.....	20 - 32	6H6	DIP AND POUR ELEVATOR BELT TIGHTENER.....	120 - 155
1C15	CYLINDER HEAD GASKET.....	20 - 32	6H4	DIP AND POUR ELEVATOR CONVEYOR CHAIN	120 - 153
1D16	CYLINDER HEAD GASKET KIT	20 - 58	6H5	DIP AND POUR ELEVATOR DRIVE COUNTERSHAFT	120 - 154
6C14	CYLINDER INTERMEDIATE DRIVE SUPPORT BRACES	120 - 32	6G21	DIP AND POUR ELEVATOR LOWER AUGER	120 - 145
4F12	CYLINDER KIT, HEADER LIFT HYDRAULIC.....	70 - 109	6G23	DIP AND POUR ELEVATOR LOWER HOUSING	120 - 147
1B10	CYLINDER LINER PACKING LUBRICANT.....	20 - 2	6H10	DIP AND POUR ELEVATOR TOP HOOD	120 - 159
1C7	CYLINDER LINERS	20 - 24	6H11	DIP AND POUR ELEVATOR TOP SHIELD	120 - 160
1C8	CYLINDER LINERS	20 - 25	6H2	DIP AND POUR ELEVATOR UPPER CHAIN IDLERS	120 - 151
6C23	CYLINDER SHAFT BRG.HSG.LUBE BANK SYS.-RH	120 - 42	6H4	DIP AND POUR ELEVATOR UPPER SPROCKETS	120 - 153
6D1	CYLINDER SHAFT BRG.LUBE BANK,LH (HYDRO.).....	120 - 45	1C13	DIPSTICK TUBE.....	20 - 30
6D2	CYLINDER SHAFT BRG.LUBE BANK,LH (POSI)	120 - 47	1C13	DIPSTICK, ENGINE OIL	20 - 30
6D16	CYLINDER SHEAR BAR	120 - 62	7E14	DISK, ROTARY SCREEN	170 - 1
6B25	CYLINDER SPEED TACHOMETER	120 - 17	3D11	DISPLACEMENT CONTROL VALVE, HYDRO. DR. (EATON).....	55 - 52
3G2	CYLINDER, BRAKE MASTER	60 - 5	3D5	DISPLACEMENT CONTROL VALVE, HYDRO. DRIVE (SUNDSTRAND).....	55 - 46
3G3	CYLINDER, BRAKE SLAVE.....	60 - 6	3D7	DISPLACEMENT CONTROL VALVE, HYDRO. DRIVE (SUNDSTRAND).....	55 - 48
2H9	CYLINDER, CLUTCH MASTER.....	50 - 57	3D9	DISPLACEMENT CONTROL VALVE, HYDRO. DRIVE (SUNDSTRAND).....	55 - 50
2G25	CYLINDER, CLUTCH SLAVE	50 - 48	1E2	DISPLACER, ROTARY SCREEN DRIVE BELT	20 - 71
2H10	CYLINDER, CLUTCH SLAVE	50 - 58	2D3	DOME LIGHT	40 - 49
4F11	CYLINDER, HYDRAULIC, HEADER LIFT.....	70 - 108	6G6	DOOR, CLEAN GRAIN ELEVATOR	120 - 129
7D8	CYLINDER, PRIMARY COUNTERSHAFT SHEAVES (DUAL-RANGE CYLINDER DRIVE)	140 - 12	6G9	DOOR, CLEAN GRAIN ELEVATOR HOUSING	120 - 132
6B14	CYLINDER, RASP-BAR	120 - 5	6G4	DOOR, CLEAN GRAIN LOWER AUGER	120 - 127
6B16	CYLINDER, RASP-BAR	120 - 7	4G9	DOOR, ENGINE COMPARTMENT	80 - 19
6B20	CYLINDER, SPIKE-TOOTH	120 - 11	4G10	DOOR, ENGINE COMPARTMENT	80 - 20
6B21	CYLINDER, SPIKE-TOOTH (DUAL-RANGE CYLINDER DRIVE)	120 - 13	7B11	DOOR, GRAIN TANK.....	130 - 5
3H1	CYLINDER, STEERING (4-WHEEL DRIVE).....	60 - 30	7B12	DOOR, GRAIN TANK.....	130 - 6
			7B19	DOOR, GRAIN TANK.....	130 - 13

ALPHABETICAL INDEX - CONTINUED

<i>GRID</i>		<i>PAGE</i>	<i>GRID</i>		<i>PAGE</i>
4G25	DOOR, INSPECTION, OPERATOR'S PLATFORM.....	90-9	6D13	DUAL-RANGE CYLINDER DRIVE, BEATER DRIVE	120-59
4H12	DOOR, PANEL	90-23	6D11	DUAL-RANGE CYLINDER DRIVE, BEATER DRIVE (100 PER CENT BEATER SPEED)	120-57
4G15	DOOR, ROTARY SCREEN	80-25	6C16	DUAL-RANGE CYLINDER GEAR CASE	120-34
6B12	DOOR, STONE TRAP	120-3	6F22	DUCTS, AIR, CLEANING FAN	120-121
6B18	DOOR, STONE TRAP	120-9			
4H2	DOOR, TAILINGS ELEVATOR	90-11		E	
6H20	DOOR, TAILINGS ELEVATOR	120-169	3G19	ELBOW, STEERING OIL LINES	60-23
6H21	DOOR, TAILINGS ELEVATOR	120-170	2C24	ELECTRIC CLUTCH CIRCUIT BREAKER	40-45
4H17	DOORS, CAB	90-29	2C21	ELECTRIC CLUTCH SWITCH.....	40-41
4F17	DOORS, CYLINDER, SEPARATOR	80-1	7E5	ELECTRIC HARNESS	160-14
7F16	DR.,PRIMARY CTRSFT TO SECONDARY CTRSFT	170-29	2E16	ELECTRICAL CONNECTOR SERVICE KIT	40-88
4I17	DRAIN TUBES, EVAPORATOR	90-56	2B16	ELECTROMAGNETIC CLUTCH, HEADER.....	40-9
1E8	DRIVE BELT TIGHTENER,RADIATOR FAN.....	20-77	1F4	ELEMENT, AIR CLEANER.....	30-17
1E10	DRIVE BELT TIGHTENER,ROTARY SCREEN.....	20-79	6G7	ELEVATOR HOUSING, CLEAN GRAIN	120-130
7E19	DRIVE BELT, HYDRAULIC REEL LIFT	170-6	6G6	ELEVATOR, HOUSING, CLEAN GRAIN.....	120-129
5B25	DRIVE CHAIN GUIDES, FEEDER CONVEYOR.....	110-18	2E10	END FRAME, STARTER COMMUTATOR	40-81
6G12	DRIVE COUNTERSHAFT,CLEAN GRAIN ELEVATOR	120-135	4G10	ENGINE COMPARTMENT MIDDLE DOOR AND FRAME..	80-20
6D4	DRIVE FOR CYLINDER TACHOMETER	120-49	4G12	ENGINE COMPARTMENT PANEL, FRONT	80-22
6D5	DRIVE FOR CYLINDER TACHOMETER	120-50	4G7	ENGINE COMPARTMENT REAR SHEET	80-17
4E23	DRIVE HOSES, HYDRAULIC REEL	70-95	4G9	ENGINE COMPARTMENT UPPER DOOR.....	80-19
7D17	DRIVE IDLER, FEEDER HOUSE	140-21	4G13	ENGINE COMPARTMENT WALKWAY	80-23
7D13	DRIVE IDLER, SECONDARY COUNTERSHAFT	140-17	2C5	ENGINE COMPARTMENT WIRING HARNESS	40-25
6F4	DRIVE SHAFT, SHOE GRAIN SUPPLY AUGERS.....	120-101	2C6	ENGINE COMPT.FIREWALL ELEC.COVER PLATES	40-26
7E19	DRIVE SHEAVES,HYDRAULIC REEL LIFT	170-6	1D21	ENGINE COOLANT HEATER	20-64
6G14	DRIVE TIGHTENER, CLEAN GRAIN ELEVATOR	120-137	1D22	ENGINE COOLANT HEATER	20-65
6C11	DRIVE TIGHTENER, CYLINDER.....	120-29	1B9	ENGINE OIL	20-1
6F6	DRIVE TIGHTENER,SHOE GR.SUPPLY AUGERS	120-103	1D7	ENGINE OIL COOLER.....	20-48
7C9	DRIVE TIGHTENERS,CROSS AUGER,GRAIN TANK	130-29	1C13	ENGINE OIL DIPSTICK	20-30
2F4	DRIVE WHEEL AND SPACERS	50-1	1D5	ENGINE OIL FILTER	20-46
2F8	DRIVE WHEEL AXLE.....	50-5	1E9	ENGINE OIL PRESSURE GAUGE LINE	20-78
2F9	DRIVE WHEEL AXLE, PLANETARY FINAL DRIVE.....	50-6	1C23	ENGINE OIL PUMP (ENGINE SERIAL NO. 161003-).....	20-40
2H17	DRIVE WHEEL CLUTCH	50-65	1C21	ENGINE OIL PUMP (TH 01, 02).....	20-38
2H15	DRIVE WHEEL CLUTCH HOUSING	50-63	1D1	ENGINE OIL PUMP (TH 05)	20-42
2H15	DRIVE WHEEL CLUTCH THROW-OUT CONTROLS	50-63	1C3	ENGINE OVERHAUL KIT.....	20-20
2H17	DRIVE WHEEL SHAFT	50-65	7C24	ENGINE POWERSHAFT	140-3
2F5	DRIVE WHEELS, DUAL.....	50-2	7E16	ENGINE R.H. SIDE BELT TIGHTENERS	170-3
2F7	DRIVE WHEELS, HIGH FLOATATION	50-4	7E16	ENGINE R.H. SIDE BELTS	170-3
6D10	DRIVE, BEATER.....	120-55	7E16	ENGINE R.H. SIDE SHEAVES	170-3
6D12	DRIVE, BEATER.....	120-58	1D19	ENGINE RAIL EXTENSION	20-62
6D13	DRIVE, BEATER, DUAL-RANGE CYLINDER DRIVE	120-59	1D16	ENGINE REBUILD GASKET KIT.....	20-58
6D11	DRIVE, BEATER, DUAL-RANGE CYLINDER DRIVE (100 PER CENT BEATER SPEED)	120-57	1B22	ENGINE SHORT BLOCK.....	20-14
7F8	DRIVE, CLEAN GRAIN ELEVATOR	170-21	1B18	ENGINE SHORT BLOCK (TH 01, 02).....	20-10
5C14	DRIVE, FIXED	110-33	1C1	ENGINE SHORT BLOCK (TH 05).....	20-18
5C14	DRIVE, FIXED (LONG RICE)	110-33	1B11	ENGINE SHORT BLOCK SERIAL NUMBER PLATE	20-3
3C8	DRIVE, HYDROSTATIC, CHARGE PUMP	55-23	1D19	ENGINE SUPPORTS	20-62
3C9	DRIVE, HYDROSTATIC, CHARGE PUMP	55-24	1C20	ENGINE TEMPERATURE SENDER	20-37
7F8	DRIVE, LOADING AUGER.....	170-21	1C20	ENGINE TEMPERATURE SWITCH	20-37
5C19	DRIVE, LONG FEEDER HOUSE FIXED.....	110-38	7F15	ENGINE TO PRIMARY CTRSHTA.DRIVE BELTS	170-28
6C13	DRIVE, SLOW SPEED CYLINDER	120-31	1B10	ENGINE VALVE STEM LUBRICANT.....	20-2
7F14	DRIVES, CROSS AUGER	170-27	2C21	ETHER START SWITCH	40-41
7F5	DRIVES, STRAW CHOPPER	170-17	1D14	ETHER STARTING AID	20-55
7F5	DRIVES, STRAW SPREADER	170-17	4I17	EVAPORATOR	90-56
7F12	DRIVES, TAILINGS ELEVATOR AND AUGER.....	170-25	4I17	EVAPORATOR DRAIN TUBES	90-56
7F14	DRIVES, UNLOADING AUGER	170-27	1D15	EXHAUST MANIFOLD	20-56
7F14	DRIVES, VERTICAL UNLOADING AUGER	170-27	1D15	EXHAUST MANIFOLD GASKET	20-56
7D24	DROP RATE VALVE,AUTO.HDR.HGT.CONTROL	160-7	1F6	EXHAUST PIPE	30-19
3G6	DRUM, BRAKE SHOES.....	60-9	1C15	EXHAUST VALVES	20-32
5B21	DRUM, FEEDER CONVEYOR.....	110-14	1C18	EXHAUST VALVES	20-35
2F5	DUAL DRIVE WHEELS	50-2	4I17	EXPANSION VALVE, AIR CONDITIONER	90-56
2F6	DUAL WHEELS, WIDE-SPACED (PLANETARY FINAL DRIVE)	50-3	6H8	EXTENSION, DIP AND POUR ELEVATOR	120-157
6C20	DUAL-RANGE CYLINDER DRIVE GEAR CASE SHIELD.....	120-39	1D19	EXTENSION, ENGINE RAIL	20-62
6C19	DUAL-RANGE CYLINDER DRIVE LOCKOUT ARM.....	120-37	7B19	EXTENSIONS, GRAIN TANK	130-13
6C18	DUAL-RANGE CYLINDER DRIVE PINION GEARS.....	120-36			
6C21	DUAL-RANGE CYLINDER DRIVE TIGHTENER.....	120-40			

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
6C14	EYEBOLTS, CYLINDER INTERMEDIATE DRIVE SUPPORT.....	120-32	5C18	FEEDER HOUSE LOWER BELT TIGHTENER-FIXED.....	110-37
F					
5B20	FALSE BOTTOM LONG FEEDER HOUSE	110-13	5C14	FEEDER HOUSE LOWER MOUNTINGS	110-33
5B18	FALSE BOTTOM, REGULAR FEEDER HOUSE	110-11	5C14	FEEDER HOUSE LOWER SHAFT	110-33
6F20	FAN HOUSING, CLEANING	120-118	2C12	FEEDER HOUSE LOWER SHAFT SPD.SENSOR-REG.....	40-32
4G7	FAN SHROUD	80-17	2C14	FEEDER HOUSE LOWER SHAFT SPEED SENSOR	40-34
2D24	FAN, ALTERNATOR, 72 AMP	40-70	5C12	FEEDER HOUSE LOWER SHAFT-VARIABLE DRIVE.....	110-31
2E1	FAN, ALTERNATOR, 90 AMP	40-72	5C14	FEEDER HOUSE LOWER SHEAVE	110-33
6F19	FAN, CLEANING	120-117	5C12	FEEDER HOUSE LOWER SHEAVE-VARIABLE DRIVE	110-31
6F22	FAN, CLEANING, AIR DUCTS	120-121	5C19	FEEDER HOUSE MIDDLE BELT BRACE.....	110-38
6F24	FAN, CLEANING, SPEED CONTROL.....	120-123	5C19	FEEDER HOUSE MIDDLE BELT IDLERS	110-38
1E7	FAN, RADIATOR	20-76	5C8	FEEDER HOUSE REVERSER GEAR BOX	110-27
5D9	FDR.HSE.DRIVE TIGHTENER-FIXED DR.-LONG	110-55	5C4	FEEDER HOUSE SHIELD,L.H.-LONG	110-23
5C18	FDR.HSE.LOWER BELT TIGHTNER-FIXED DR.-LONG.....	110-37	5C3	FEEDER HOUSE SHIELD,L.H.-REGULAR FIXED	110-21
5C18	FDR.HSE.LOWER BELT TIGHTNER-FIXED DR.-REG.	110-37	5C1	FEEDER HOUSE SHIELD,R.H.(VARIABLE DRIVE).....	110-19
5C15	FDR.HSE.LOWER SHAFT-FIXED DR.(REG.-LONG)	110-34	5C6	FEEDER HOUSE SHIELDS,L.H.(FIXED DRIVE)	110-25
5C12	FDR.HSE.LOWER SHEAVE MTGS.-VARIABLE DR.	110-31	5C2	FEEDER HOUSE SHIELDS,L.H.-VARIABLE DRIVE	110-20
5C15	FDR.HSE.LOWER SHEAVE-FIXED DR.-REG.-LONG	110-34	2C9	FEEDER HOUSE SPEED MONITORING HARNESS.....	40-29
5C17	FDR.HSE.MIDDLE BELT IDLER-VAR.DRIVE	110-36	7E22	FEEDER HOUSE SPROCKETS (VARIABLE DRIVE)	170-9
5C17	FDR.HSE.MIDDLE IDLER BRACES-VAR.DRIVE	110-36	7E21	FEEDER HOUSE SPROCKETS-LONG.....	170-8
4F17	FEED PLATE, SEPARATOR	80-1	7E23	FEEDER HOUSE TIGHTENERS (LONG)	170-10
5B23	FEEDER CONV.DRIVE CHAIN (VARIABLE DRIVE)	110-16	7E25	FEEDER HOUSE TIGHTENERS (REG. FIXED)	170-12
5B23	FEEDER CONV.IDLER BRKT.(VARIABLE DRIVE)	110-16	7E20	FEEDER HOUSE TIGHTENERS (VAR. DR.)	170-7
5B22	FEEDER CONVEYOR CHAIN	110-15	7F1	FEEDER HOUSE TIGHTENERS (REG FIXED LESS REVERSER)	170-13
5B24	FEEDER CONVEYOR DRIVE BRACKET	110-17	5B14	FEEDER HOUSE TOP DOOR LEVER	110-7
5B24	FEEDER CONVEYOR DRIVE CHAIN.....	110-17	5B14	FEEDER HOUSE TOP SHEETS	110-7
5B25	FEEDER CONVEYOR DRIVE CHAIN GUIDES	110-18	5C21	FEEDER HOUSE UPPER COUNTERSHAFT-VAR.DR.	110-41
5B24	FEEDER CONVEYOR DRIVE IDLER	110-17	5C21	FEEDER HOUSE UPPER CTRSHAFT SUPTS-VAR.DR	110-41
5B21	FEEDER CONVEYOR DRUM	110-14	5C24	FEEDER HOUSE UPPER SHAFT.....	110-44
5B23	FEEDER CONVEYOR IDLER (VARIABLE DRIVE)	110-16	5D3	FEEDER HOUSE UPPER SHAFT.....	110-49
5B21	FEEDER CONVEYOR IDLER SHAFT.....	110-14	5D4	FEEDER HOUSE UPPER SHAFT.....	110-50
5B16	FEEDER HOUSE BOTTOM SHEETS.....	110-9	5D3	FEEDER HOUSE UPPER SHAFT (LONG RICE).....	110-49
7E22	FEEDER HOUSE CHAINS (VARIABLE DRIVE).....	170-9	5C23	FEEDER HOUSE UPPER SHAFT AND SPROCKETS	110-43
7E21	FEEDER HOUSE CHAINS-LONG	170-8	5D1	FEEDER HOUSE UPPER SHAFT-FIXED DRIVE.....	110-47
7F1	FEEDER HOUSE DRIVE BELTS (REG FIXED LESS REVERSER)	170-13	5D3	FEEDER HOUSE UPPER SHEAVE	110-49
7E24	FEEDER HOUSE DRIVE BELTS (LONG RICE)	170-11	5D3	FEEDER HOUSE UPPER SHEAVE (LONG RICE)	110-49
7E23	FEEDER HOUSE DRIVE BELTS (LONG).....	170-10	5D1	FEEDER HOUSE UPPER SHEAVE-FIXED DRIVE	110-47
7E25	FEEDER HOUSE DRIVE BELTS (REG. FIXED)	170-12	5C24	FEEDER HOUSE UPPER SPROCKETS	110-44
7E20	FEEDER HOUSE DRIVE BELTS (VARIABLE DR.)	170-7	5D4	FEEDER HOUSE UPPER SPROCKETS	110-50
7D17	FEEDER HOUSE DRIVE IDLER	140-21	5B20	FEEDER HOUSE, LONG, SIDE SHEETS.....	110-13
7E24	FEEDER HOUSE DRIVE IDLERS (LONG RICE).....	170-11	5C16	FEEDER HOUSE, LOWER SHAFT, REG FIXED, LESS REVERSER	110-35
7F1	FEEDER HOUSE DRIVE SHEAVES (REG FIXED LESS REVERSER)	170-13	5C16	FEEDER HOUSE, LOWER SHEAVE, REG FIXED, LESS REVERSER	110-35
7E24	FEEDER HOUSE DRIVE SHEAVES (LONG RICE).....	170-11	2C13	FEEDER HSE.LOWER SHAFT SPEED SENSOR-LONG ..	40-33
7E23	FEEDER HOUSE DRIVE SHEAVES (LONG).....	170-10	2G1	FENDERS (EXTRA HEAVY-DUTY FINAL DRIVE).....	50-23
7E25	FEEDER HOUSE DRIVE SHEAVES (REG. FIXED)	170-12	2G2	FENDERS (EXTRA HEAVY-DUTY FINAL DRIVE).....	50-24
7E20	FEEDER HOUSE DRIVE SHEAVES (VAR.DR.)	170-7	2F25	FENDERS (HEAVY-DUTY FINAL DRIVE)	50-22
5D8	FEEDER HOUSE DRIVE TIGHTNER-FIXED DR.-REG.	110-54	2F25	FENDERS (REGULAR FINAL DRIVE)	50-22
7E24	FEEDER HOUSE DRIVE TIGHTENERS-LONG RICE	170-11	2C11	FIELD LIGHTS	40-31
5C19	FEEDER HOUSE FIXED DRIVE, LONG.....	110-38	4H23	FILTER AND HOUSING, CAB AIR	90-35
5B18	FEEDER HOUSE FRAME, REGULAR	110-11	4H23	FILTER, CAB AIR.....	90-35
5B12	FEEDER HOUSE FRONT SHEETS	110-5	1D5	FILTER, ENGINE OIL.....	20-46
4F8	FEEDER HOUSE HYDRAULIC HOSE	70-105	1E16	FILTER, FUEL	30-5
4F7	FEEDER HOUSE HYDRAULIC HOSE,VARIABLE DR.	70-104	1F19	FILTER, FUEL	30-32
7E23	FEEDER HOUSE IDLER (LONG)	170-10	1E18	FILTER, FUEL (EXPORT)	30-7
7F1	FEEDER HOUSE IDLERS (REG FIXED LESS REVERSER)	170-13	4B11	FILTER, HYDRAULIC RESERVOIR	70-3
7E25	FEEDER HOUSE IDLERS (REG. FIXED).....	170-12	3F19	FILTER, OIL RETURN LINES	55-115
7E20	FEEDER HOUSE IDLERS (VARIABLE DRIVE)	170-7	1F15	FILTERS, FUEL (TH 01, 02)	30-28
5D6	FEEDER HOUSE LESS REVERSER UPPER SPROCKET	110-52	1F16	FILTERS, FUEL (TH 05)	30-29
5D6	FEEDER HOUSE LESS REVERSER UPPER SHAFT.....	110-52	2G20	FINAL DRIVE	50-42
			2G22	FINAL DRIVE AXLE	50-45
			2H5	FINAL DRIVE AXLE SHAFT-PLANETARY	50-53
			2G21	FINAL DRIVE BEARING CAP	50-43
			2G22	FINAL DRIVE BEARINGS	50-45
			2G23	FINAL DRIVE BEARINGS	50-46
			2G22	FINAL DRIVE GEAR	50-45

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
2H3	FINAL DRIVE GEARS AND BEARINGS.....	50-51	3H2	FOUR-WHEEL DRIVE	60-31
2G21	FINAL DRIVE HOUSING	50-43	3H5	FOUR-WHEEL DRIVE	60-35
2H3	FINAL DRIVE INNER HOUSING	50-51	3H7	FOUR-WHEEL DRIVE	60-37
2G23	FINAL DRIVE PINION	50-46	3H10	FOUR-WHEEL DRIVE	60-41
2H3	FINAL DRIVE PINION SHAFT.....	50-51	3H11	FOUR-WHEEL DRIVE	60-43
2G23	FINAL DRIVE SHAFTS	50-46	3H15	FOUR-WHEEL DRIVE	60-47
2F5	FINAL DRIVE, PLANETARY	50-2	3H16	FOUR-WHEEL DRIVE	60-48
2H1	FINAL DRIVE, PLANETARY	50-49	3H20	FOUR-WHEEL DRIVE	60-52
6F12	FINGER BAR	120-109	3H21	FOUR-WHEEL DRIVE	60-53
2B20	FINGERS, TRASH (HARVESTRAK)	40-14	4B23	FOUR-WHEEL DRIVE	70-15
6E6	FINS, PLATE, STRAW CHOPPER	120-77	3E20	FOUR-WHEEL DRIVE (SUNDSTRAND).....	55-88
6E8	FINS, STRAW CHOPPER	120-79	2C22	FOUR-WHEEL DRIVE SWITCH	40-43
4G7	FIREWALL	80-17	4F19	FRAME AND SEPARATOR R.H.SIDE SHEETS	80-3
3E14	FIRST PLANET CARRIER (FOUR-WHEEL DRIVE).....	55-82	4F21	FRAME AND SEPARATOR, L.H. SIDE SHEETS.....	80-5
3E14	FIRST PLANET COVER (FOUR-WHEEL DRIVE)	55-82	3H7	FRAME AND SUPPORT,REAR AXLE	60-37
3E14	FIRST PLANET PINION (FOUR-WHEEL DRIVE).....	55-82	2I7	FRAME TRACK ROLLER.....	50-83
6C24	FITTING,CYL.SHAFT BRG.HSG.LUBE BANK-RH	120-43	6F12	FRAME, CHAFFER	120-109
3E1	FITTINGS, HYDROSTATIC DRIVE OIL	55-68	4G7	FRAME, CORNER	80-17
3G17	FIXED AND ADJUSTABLE OIL HOSES-REAR	60-21	2I4	FRAME, CRAWLER, R.H. AND L.H.....	50-80
3G17	FIXED AND ADJUSTABLE OIL LINES-REAR	60-21	5B20	FRAME, LONG FEEDER HOUSE	110-13
5C18	FIXED DR.-FDR.HSE.LOWER BELT TGHTNR-LONG	110-37	4G25	FRAME, OPERATOR'S PLATFORM	90-9
5C18	FIXED DR.-FDR.HSE.LOWER BELT TGHTNR-REG.	110-37	5B18	FRAME, REGULAR FEEDER HOUSE	110-11
5C15	FIXED DR.-FDR.HSE.LOWER SHAFT-REG.-LONG.....	110-34	4H4	FRAME, SEALS, AND SEAT CONSOLE	90-13
5D8	FIXED DRIVE-FDR.HSE.DR.TGHTNR-REG.FDR.HS.....	110-54	6F10	FRAME, SIEVE.....	120-107
5D9	FIXED DRIVE-FDR.HSE.DRIVE TGHTNR.-LONG	110-55	7C3	FRONT AND REAR GRAIN TANK COVERS, ADJ.....	130-22
5C15	FIXED DRIVE-FDR.HSE.LOWER SHV.-REG.-LONG	110-34	3C15	FRONT COVER, HYDRO. DRIVE PUMP (EATON).....	55-31
5D1	FIXED DRIVE-FEEDER HOUSE UPPER SHAFT.....	110-47	3C14	FRONT COVER, HYDROSTATIC DRIVE PUMP (SUNDSTRAND).....	55-29
5D1	FIXED DRIVE-FEEDER HOUSE UPPER SHEAVE	110-47	4G12	FRONT ENGINE COMPARTMENT PANEL	80-22
5C16	FIXED DRIVE, LESS REVERSER, FEEDER HOUSE LOWER SHAFT	110-35	1C10	FRONT OIL SEAL	20-27
5C16	FIXED DRIVE, LESS REVERSER, FEEDER HOUSE LOWER SHEAVE.....	110-35	7B25	FRONT, CROSS AUGER, GRAIN TANK	130-19
5C19	FIXED DRIVE, LONG FEEDER HOUSE.....	110-38	1F18	FUEL CHECK VALVE	30-31
2C9	FLASHER, SIGNAL	40-29	1E16	FUEL FILTER	30-5
1D23	FLAT ROTARY SCREEN.....	20-66	1F19	FUEL FILTER	30-32
7B19	FLIP-UPS, GRAIN TANK	130-13	1E18	FUEL FILTER (EXPORT).....	30-7
4G25	FLOORBOARD, OPERATOR'S PLATFORM.....	90-9	1F17	FUEL FILTER KIT	30-30
4H2	FLOORMAT, L.H. REAR	90-11	1F15	FUEL FILTERS (TH 01, 02).....	30-28
4G25	FLOORMAT, OPERATOR'S PLATFORM	90-9	1F16	FUEL FILTERS (TH 05).....	30-29
4C24	FLOW CONTROL PLUG	70-44	2C24	FUEL GAUGE.....	40-45
4F4	FLOW CONTROL VALVE, HYDROSTATIC DR. REEL	70-101	2C3	FUEL GAUGE SENDING UNIT	40-23
3E19	FLOW CONTROL VALVES (FOUR-WHEEL DRIVE).....	55-87	1G5	FUEL INJECTION NOZZLE	30-44
3F17	FLOW CONTROL VALVES (FOUR-WHEEL DRIVE)	55-113	1G7	FUEL INJECTION NOZZLE (LUCAS CAV) (6466TH 02).....	30-46
1C5	FLYWHEEL	20-22	1F21	FUEL INJECTION NOZZLES (TH 01,02)	30-34
2G3	FORKS, SHIFTER	50-25	1F23	FUEL INJECTION NOZZLES (TH 05).....	30-36
2B11	FOUR-WHEEL DRIVE	40-3	1F21	FUEL INJECTION PIPES (TH 01,02)	30-34
3D25	FOUR-WHEEL DRIVE	55-67	1F21	FUEL INJECTION PUMP (TH 01,02)	30-34
3E9	FOUR-WHEEL DRIVE	55-77	1F25	FUEL INJECTION PUMP (TH 05).....	30-38
3E11	FOUR-WHEEL DRIVE	55-79	1G8	FUEL INJECTION PUMP GOVERNOR LEVERS AND CONTROLS	30-48
3E12	FOUR-WHEEL DRIVE	55-80	1G1	FUEL INJECTION PUMP HOUSING CONNECTORS	30-40
3E13	FOUR-WHEEL DRIVE	55-81	1E16	FUEL LINES	30-5
3E14	FOUR-WHEEL DRIVE	55-82	1E17	FUEL LINES (EXPORT).....	30-6
3E15	FOUR-WHEEL DRIVE	55-83	1F19	FUEL PIPES	30-32
3E16	FOUR-WHEEL DRIVE	55-84	1F23	FUEL PIPES (TH 05)	30-36
3E17	FOUR-WHEEL DRIVE	55-85	1E16	FUEL PUMP	30-5
3E18	FOUR-WHEEL DRIVE	55-86	1E21	FUEL SHUT-OFF BRACKET	30-10
3E19	FOUR-WHEEL DRIVE	55-87	1E19	FUEL SHUT-OFF CONTROL.....	30-8
3E23	FOUR-WHEEL DRIVE	55-91	1E20	FUEL SHUT-OFF CONTROL.....	30-9
3F14	FOUR-WHEEL DRIVE	55-109	1E14	FUEL TANK	30-3
3F15	FOUR-WHEEL DRIVE	55-110	1E14	FUEL TANK SUPPORT	30-3
3F16	FOUR-WHEEL DRIVE	55-111	1G3	FUEL TRANSFER PUMP.....	30-42
3F17	FOUR-WHEEL DRIVE	55-113	1G4	FUEL TRANSFER PUMP (ROBERT BOSCH)	30-43
3F19	FOUR-WHEEL DRIVE	55-115	7D24	FULL FLOW PLUG, AUTOMATIC HDR.HGT.CTL.....	160-7
3G10	FOUR-WHEEL DRIVE	60-13			
3G21	FOUR-WHEEL DRIVE	60-25			
3G23	FOUR-WHEEL DRIVE	60-27			
3H1	FOUR-WHEEL DRIVE	60-30			

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
	G				
1D16	GASKET KIT, CYLINDER HEAD.....	20-58	2D21	GRILLE, RADIO	40-67
1D16	GASKET KIT, ENGINE REBUILD	20-58	4I18	GROMMET, HEATER HOSES.....	90-57
1C15	GASKET, CYLINDER HEAD	20-32	2H14	GROUND DRIVE, POSI-TORQ LOWER UNIT	50-62
1D15	GASKET, EXHAUST MANIFOLD	20-56	2H21	GROUND DRIVE, POSI-TORQ UPPER UNIT	50-71
1D13	GASKET, INTAKE MANIFOLD	20-54	2I1	GROUND SPD.OIL LINES,SELECTIVE-POSI-TORQ.....	50-76
1D8	GASKET, OIL PAN.....	20-49	2H18	GROUND SPEED CONTROLS, POSI-TORQ.....	50-67
1D10	GASKET, OIL PAN.....	20-51	6E19	GUARD, STRAW SPREADER.....	120-91
1C17	GASKET, ROCKER ARM COVER	20-34	5B25	GUIDES, FEEDER CONVEYOR DRIVE CHAIN.....	110-18
1C10	GASKET, TIMING GEAR COVER	20-27		H	
2G5	GASKET, TRANSMISSION AND DIFFERENTIAL	50-27	4H17	HANDLE, CAB	90-29
1D12	GASKET, WATER MANIFOLD	20-53	6E10	HANDLE, STRAW CHOPPER CURTAIN AND SHIELD.....	120-81
1D11	GASKET, WATER PUMP.....	20-52	6E1	HANDLE, STRAW CHOPPER HOUSING	120-72
3D13	GASKET,HYDRO.DR.DISPLACEMENT CTL.VALVE (SUNDSTRAND).....	55-54	6E3	HANDLE, STRAW CHOPPER HOUSING	120-74
2B25	GAUGE, ACCUMULATOR PRESSURE	40-20	6E11	HANDLE, STRAW CHOPPER KNIFE AND SUPPORT	120-82
2C24	GAUGE, FUEL	40-45	7B9	HANDRAIL, GRAIN TANK	130-3
2C24	GAUGE, OIL PRESSURE	40-45	4G19	HANDRAIL, OPERATOR'S PLATFORM	90-3
2C24	GAUGE, WATER TEMPERATURE	40-45	4G21	HANDRAILS, OPERATOR'S PLATFORM (TRACKS).....	90-5
2C5	GAUGE,WATER TEMPERATURE,SENDING UNIT	40-25	4I2	HARDWARE KIT, COMPRESSOR	90-51
2C24	GAUGES, INSTRUMENT PANEL	40-45	7E5	HARNESS ADAPTER, DIAL-A-MATIC	160-14
5C8	GEAR BOX, REVERSER.....	110-27	4I5	HARNESS, COMPRESSOR.....	90-42
6C20	GEAR CASE SHIELD, DUAL-RANGE CYLINDER DRIVE.....	120-39	7E10	HARNESS, DIAL-A-MATIC CONVERSION	160-20
6C16	GEAR CASE, CYLINDER, DUAL-RANGE.....	120-34	7E5	HARNESS, ELECTRIC.....	160-14
6G19	GEAR CASE, GRAIN TANK LOADING AUGER	120-143	2C9	HARNESS, FEEDER HOUSE SPEED MONITORING	40-29
6G18	GEAR CASE, LOADING AUGER	120-141	2B22	HARNESS, HARVESTRAK ADAPTER	40-17
7C11	GEAR CASE, LOWER, VERTICAL AUGER	130-31	2B19	HARNESS, LOW SHAFT SPEED MONITOR'S	40-13
7C19	GEAR CASE,HORIZONTAL UNLDG.AUGER DRIVE.....	130-39	2D23	HARNESS, MAGNETIC PICK-UP (ENGINE)	40-69
1C12	GEAR COVER, TACHOMETER DRIVE	20-29	2C3	HARNESS, SEPARATOR, RIGHT-HAND	40-23
1C9	GEAR, CAMSHAFT	20-26	2D4	HARNESS, WIRING	40-50
2G22	GEAR, FINAL DRIVE	50-45	2D2	HARNESS, WIRING, CAB ROOF	40-47
2H3	GEARS AND BEARINGS, FINAL DRIVE	50-51	2C5	HARNESS, WIRING, ENGINE COMPARTMENT	40-25
2G11	GEARS AND SHAFTS, DIFFERENTIAL	50-33	2C17	HARNESS, WIRING, INSTRUMENT PANEL	40-37
6C18	GEARS, PINION, DUAL-RANGE CYLINDER DRIVE	120-36	2C19	HARNESS, WIRING, INSTRUMENT PANEL	40-39
2G7	GEARS,BEARINGS,TRANSMISSION COUNTERSHAFT....	50-29	2C9	HARNESS, WIRING, LEFT-HAND LIGHTS	40-29
2G7	GEARS,BEARINGS,TRANSMISSION INPUT SHAFT.....	50-29	2C9	HARNESS, WIRING, OPERATOR'S PLATFORM.....	40-29
2G9	GEARS,BEARINGS,TRANSMISSION PINION SHAFT.....	50-31	2B11	HARNESS, WIRING, REAR HOOD.....	40-3
2G19	GEARSHIFT CABLES AND MOUNTINGS	50-41	2B11	HARNESS, WIRING, SEPARATOR (L.H.)	40-3
2G14	GEARSHIFT LEVER AND CAM (POSI-TORQ)	50-36	2B11	HARNESS, WIRING, UNLOADING AUGER	40-3
2G15	GEARSHIFT LEVER ASSEMBLY-HYDROSTATIC DR.	50-37	7E4	HARNESS,WIRING,AUTO.HDR.HEIGHT CONTROL	160-13
2G17	GEARSHIFT RANGE SHIFTER AND SUPPORT	50-39	2B22	HARVESTRAK ADAPTER HARNESS.....	40-17
4B11	GLASS, LEVEL SIGHT, HYDRAULIC RESERVOIR.....	70-3	2C24	HARVESTRAK CIRCUIT BREAKER	40-45
1G8	GOVERNOR LEVERS AND CONTROLS, FUEL INJECTION PUMP	30-48	2B20	HARVESTRAK COMBINE MONITOR	40-14
2B20	GRAIN LOSS CONSOLE, HARVESTRAK	40-14	2B20	HARVESTRAK COMBINE MONITOR PREAMPLIFIER	40-14
7B9	GRAIN TANK	130-3	7E7	HDR HGT CONT,DIAL-A-MATIC,AMPLIFIER	160-16
7B11	GRAIN TANK	130-5	1C15	HEAD BOLTS	20-32
7C9	GRAIN TANK CROSS AUGER DRIVE TIGHTENERS.....	130-29	1C15	HEAD, CYLINDER	20-32
7B19	GRAIN TANK DOOR	130-13	2B16	HEADER ELECTROMAGNETIC CLUTCH	40-9
7B19	GRAIN TANK EXTENSIONS	130-13	7E5	HEADER HEIGHT CONTROL, DIAL-A-MATIC	160-14
7B19	GRAIN TANK FLIP-UPS	130-13	4F11	HEADER LIFT HYDRAULIC CYLINDER.....	70-108
7B25	GRAIN TANK FRONT CROSS AUGER	130-19	4F12	HEADER LIFT HYDRAULIC CYLINDER KIT	70-109
7C2	GRAIN TANK INNER UNLDG. AUGER CHANNELS	130-21	4F10	HEADER LIFT OIL LINES	70-107
7C2	GRAIN TANK INNER UNLOADING AUGER COVERS	130-21	4H20	HEADLINER, CAB ROOF	90-32
2B14	GRAIN TANK LIGHT	40-7	4I18	HEATER CONTROL VALVE	90-57
6G19	GRAIN TANK LOADING AUGER GEAR CASE	120-143	4I17	HEATER CORE	90-56
7C1	GRAIN TANK REAR CROSS AUGER	130-20	4I18	HEATER HOSES	90-57
7B12	GRAIN TANK SKIRTS	130-6	4I20	HEATER HOSES	90-59
7B15	GRAIN TANK SKIRTS	130-9	1D21	HEATER, ENGINE COOLANT.....	20-64
7B20	GRAIN TANK SUMP BAFFLE	130-14	1D22	HEATER, ENGINE COOLANT.....	20-65
7C6	GRAIN TANK SUMP HOUSING AND SHIELD.....	130-25	4I19	HI PRESSURE SWITCH LIGHT ASSEMBLY	90-58
7C7	GRAIN TANK SUMP HOUSING AND SHIELD.....	130-26	4I6	HI PRESSURE SWITCH, AIR CONDITIONER	90-43
7C13	GRAIN TANK VERTICAL AUGER AND HOUSING	130-33	2F7	HIGH FLOATATION DRIVE WHEELS	50-4
7C4	GRASS SEED UNLOADING AUGER COVERS ATT.	130-23	3D22	HIGH PRESSURE RELIEF VALVE (EATON).....	55-64
6B18	GRATE, BEATER	120-9	7B12	HINGE, GRAIN TANK	130-6
			6H10	HOOD, DIP AND POUR ELEVATOR TOP.....	120-159
			4F23	HOOD, REAR	80-7

ALPHABETICAL INDEX - CONTINUED

<i>GRID</i>		<i>PAGE</i>	<i>GRID</i>		<i>PAGE</i>
4F25	HOOD, REAR	80 - 9	3C18	HOUSING, HYDRO. DRIVE PUMP (SUNDSTRAND)	55 - 34
2B11	HOOD, REAR, WIRING HARNESS.....	40 - 3	3C17	HOUSING, HYDROSTATIC DRIVE PUMP (SUNDSTRAND).....	55 - 33
7C19	HORIZONTAL UNLDG. AUGER DRIVE GEAR CASE.....	130 - 39	3C20	HOUSING, HYDROSTATIC DRIVE PUMP (EATON).....	55 - 36
7C21	HORIZONTAL UNLOADING AUGER AND HOUSING	130 - 41	2H3	HOUSING, INNER, FINAL DRIVE	50 - 51
7C15	HORIZONTAL UNLOADING AUGER SWIVEL	130 - 35	3E15	HOUSING, KNEE AND MOTOR (FOUR-WHEEL DR.)	55 - 83
7C16	HORIZONTAL UNLOADING AUGER SWIVEL	130 - 36	6G16	HOUSING, LOADING AUGER.....	120 - 139
7B17	HORIZONTAL UNLOADING AUGER SWIVEL SHROUD ..	130 - 11	6H18	HOUSING, LOWER TAILINGS	120 - 167
2C9	HORN	40 - 29	6G23	HOUSING, LOWER, DIP AND POUR ELEVATOR	120 - 147
2C21	HORN SWITCH	40 - 41	2H5	HOUSING, OUTER, FINAL DRIVE	50 - 53
4F1	HOSE AND COUPLER CONVERSION.....	70 - 98	3E13	HOUSING, PLANETARY (FOUR-WHEEL DRIVE)	55 - 81
7E2	HOSE AND LINES, OIL COOLER.....	160 - 11	6E24	HOUSING, SHOE GRAIN SUPPLY AUGERS	120 - 97
6C24	HOSE,CYL.SHAFT BRG.HSG.LUBE BANK-RH	120 - 43	2E8	HOUSING, STARTER DRIVE	40 - 79
4F7	HOSE,HYDRAULIC,VARIABLE DRIVE FDR.HSE.....	70 - 104	6E1	HOUSING, STRAW CHOPPER	120 - 72
4E24	HOSES AND COUPLERS FOR COMBINES	70 - 96	6E3	HOUSING, STRAW CHOPPER	120 - 74
3E21	HOSES AND LINES, HYD. (FOUR-WHEEL DR.) (EATON).....	55 - 89	6H20	HOUSING, TAILINGS ELEVATOR	120 - 169
3E20	HOSES AND LINES, HYD. (FOUR-WHEEL DR.) (SUNDSTRAND).....	55 - 88	6H21	HOUSING, TAILINGS ELEVATOR	120 - 170
3F19	HOSES AND LINES, HYDRAULIC OIL RETURN	55 - 115	1E24	HOUSING, THROTTLE LINKAGE CONTROL	30 - 13
3G16	HOSES AND LINES,STEERING OIL-FRONT.....	60 - 19	2G3	HOUSING, TRANSMISSION	50 - 25
3G23	HOSES AND OIL LINES, STEERING.....	60 - 27	1F7	HOUSING, TURBOCHARGER (AIRESEARCH)	30 - 20
3G21	HOSES AND OIL LINES, STEERING - REAR.....	60 - 25	1F9	HOUSING, TURBOCHARGER (AIRESEARCH)	30 - 22
1E3	HOSES AND RADIATOR.....	20 - 72	1F8	HOUSING, TURBOCHARGER CENTER(AIRESEARCH)....	30 - 21
1E5	HOSES AND RADIATOR.....	20 - 74	1F10	HOUSING, TURBOCHARGER CENTER(AIRESEARCH)....	30 - 23
4I18	HOSES, HEATER.....	90 - 57	6I2	HOUSING, UPPER TAILINGS.....	120 - 176
4I20	HOSES, HEATER.....	90 - 59	3H15	HOUSING, WHEEL MOTOR (FOUR-WHEEL DRIVE).....	60 - 47
3E19	HOSES, HYDRAULIC (FOUR-WHEEL DRIVE)	55 - 87	3E11	HOUSING,WHL.HUB,AND MOTOR (FOUR-WHEEL DRIVE)	55 - 79
3F17	HOSES, HYDRAULIC (FOUR-WHEEL DRIVE)	55 - 113	1F11	HOUSINGS, TURBOCHARGER (SCHWITZER).....	30 - 24
4D2	HOSES, HYDRAULIC OIL LINES AND.....	70 - 47	3H14	HOUSINGS,REAR AXLE SPINDLE-(HEAVY-DUTY)	60 - 46
4D4	HOSES, HYDRAULIC OIL LINES AND.....	70 - 49	3E11	HUB,MOTOR,AND HSG.,WHEEL (FOUR-WHEEL DRIVE)	55 - 79
3E23	HOSES, HYDRAULIC OIL RETURN LINES AND	55 - 91	3B18	HYD. BELT TENSIONING CYLINDER, SEAL REPAIR KIT	55 - 8
4E23	HOSES, HYDRAULIC REEL DRIVE	70 - 95	3B16	HYD. BELT TENSIONING SYSTEM-HYDRO. DR. (EATON).....	55 - 6
3E6	HOSES, HYDROSTATIC DRIVE LOWER OIL (EATON).....	55 - 74	3B14	HYD. BELT TENSIONING SYSTEM-HYDRO. DR. (SUNDSTRAND).....	55 - 4
3E4	HOSES, HYDROSTATIC DRIVE LOWER OIL (SUNDSTRAND).....	55 - 72	3E21	HYD. LINES AND HOSES (FOUR-WHEEL DR.) (EATON).....	55 - 89
3E1	HOSES, HYDROSTATIC DRIVE OIL	55 - 68	3E20	HYD. LINES AND HOSES (FOUR-WHEEL DR.) (SUNDSTRAND).....	55 - 88
3G19	HOSES, STEERING.....	60 - 23	4D22	HYD. OIL HOSES,UNLOADING AUGER SWING.....	70 - 68
3G17	HOSES, STEERING OIL-REAR.....	60 - 21	4D22	HYD. OIL LINES,UNLOADINGAUGER SWING	70 - 68
4D21	HOSES,UNLOADING AUGER SWING HYD. OIL.....	70 - 67	4C3	HYD.CONTROL MAIN,RELIEF VALVE-HYDRO.	70 - 21
4D22	HOSES,UNLOADING AUGER SWING HYD. OIL.....	70 - 68	4C2	HYD.CONTROL VALVE POPPETS,MAIN-HYDRO.	70 - 20
2C21	HOURLMETER	40 - 41	4C4	HYD.CONTROL VALVE POPPETS,MAIN-HYDRO.	70 - 22
5B16	HOUSE, FEEDER, BOTTOM SHEETS	110 - 9	4C15	HYD.CONTROL VALVE POPPETS,MAIN-POSI-TORQ	70 - 34
5B12	HOUSE, FEEDER, FRONT SHEETS	110 - 5	4C19	HYD.CONTROL VALVE POPPETS,MAIN-POSI-TORQ	70 - 38
7C21	HOUSING AND AUGER, HORIZONTAL UNLOADING	130 - 41	4C16	HYD.CONTROL VALVE SPOOLS-MAIN-POSI-TORQ	70 - 35
7C13	HOUSING AND AUGER, VERTICAL, GRAIN TANK	130 - 33	4C20	HYD.CONTROL VALVE SPOOLS-MAIN-POSI-TORQ	70 - 39
4H23	HOUSING AND FILTER, CAB AIR	90 - 35	4C3	HYD.CONTROL VALVE SPOOLS,MAIN-HYDRO.	70 - 21
7C6	HOUSING AND SHIELD, SUMP, GRAIN TANK.....	130 - 25	4C5	HYD.CONTROL VALVE SPOOLS,MAIN-HYDRO.	70 - 23
7C7	HOUSING AND SHIELD, SUMP, GRAIN TANK.....	130 - 26	4C14	HYD.CONTROL VALVE SPOOLS,MAIN-POSI-TORQ	70 - 33
2D24	HOUSING, ALTERNATOR, 72 AMP	40 - 70	4C18	HYD.CONTROL VALVE SPOOLS,MAIN-POSI-TORQ	70 - 37
2E1	HOUSING, ALTERNATOR, 90 AMP	40 - 72	4C2	HYD.CONTROL VALVE SPRINGS,MAIN-HYDRO.....	70 - 20
6H8	HOUSING, AUGER, DIP AND POUR ELEVATOR.....	120 - 157	4C4	HYD.CONTROL VALVE SPRINGS,MAIN-HYDRO.....	70 - 22
6G6	HOUSING, CLEAN GRAIN ELEVATOR	120 - 129	4C13	HYD.CONTROL VALVE SPRINGS,MAIN-POSI-TORQ	70 - 32
6G7	HOUSING, CLEAN GRAIN ELEVATOR	120 - 130	4C15	HYD.CONTROL VALVE SPRINGS,MAIN-POSI-TORQ	70 - 34
6G2	HOUSING, CLEAN GRAIN LOWER AUGER	120 - 125	4C17	HYD.CONTROL VALVE SPRINGS,MAIN-POSI-TORQ	70 - 36
6G4	HOUSING, CLEAN GRAIN LOWER AUGER	120 - 127	4C19	HYD.CONTROL VALVE SPRINGS,MAIN-POSI-TORQ	70 - 38
6F20	HOUSING, CLEANING FAN	120 - 118	4C13	HYD.CONTROL VALVE,POPPETS,MAIN-POSI-TORQ	70 - 32
1C10	HOUSING, CRANKSHAFT OIL SEAL	20 - 27	4C17	HYD.CONTROL VALVE,POPPETS,MAIN-POSI-TORQ	70 - 36
1C11	HOUSING, CRANKSHAFT OIL SEAL.....	20 - 28	4C5	HYD.CONTROL,MAIN,RELIEF VALVE-HYDRO.....	70 - 23
2G3	HOUSING, DIFFERENTIAL	50 - 25	4C14	HYD.CONTROL,MAIN,RELIEF VALVE-POSI-TORQ	70 - 33
2H15	HOUSING, DRIVE WHEEL CLUTCH	50 - 63	4C16	HYD.CONTROL,MAIN,RELIEF VALVE-POSI-TORQ	70 - 35
7C24	HOUSING, ENGINE POWERSHAFT.....	140 - 3	4C18	HYD.CONTROL,MAIN,RELIEF VALVE-POSI-TORQ	70 - 37
5C24	HOUSING, FEEDER HOUSE UPPER SHAFT	110 - 44	4C20	HYD.CONTROL,MAIN,RELIEF VALVE-POSI-TORQ	70 - 39
5D4	HOUSING, FEEDER HOUSE UPPER SHAFT	110 - 50			
5D6	HOUSING, FEEDER HOUSE, LESS REVERSER, UPPER SHAFT	110 - 52			
2G21	HOUSING, FINAL DRIVE.....	50 - 43			

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
4C7	HYDRAULIC CONTROL VALVE SPOOLS, MAIN	70 - 25	3C23	HYDRO. DRIVE SHAFT KIT (EATON)	55 - 39
4C9	HYDRAULIC CONTROL VALVE SPOOLS, MAIN	70 - 27	3C3	HYDRO. DRIVE UNIT (SUNDSTRAND AND EATON).....	55 - 18
4C6	HYDRAULIC CONTROL VALVE SPRINGS, MAIN.....	70 - 24	3C3	HYDRO. DRIVE UNIT SHEAVES (SUNDSTRAND AND EATON)	55 - 18
4C8	HYDRAULIC CONTROL VALVE SPRINGS, MAIN.....	70 - 26	3C3	HYDRO. DRIVE UNIT SUPPORTS (SUNDSTRAND AND EATON)	55 - 18
4C7	HYDRAULIC CONTROL, MAIN RELIEF VALVE	70 - 25	3D13	HYDRO.DR.DISPLACEMENT CONTROL HANDLE (SUNDSTRAND).....	55 - 54
4F12	HYDRAULIC CYLINDER KIT, HEADER LIFT.....	70 - 109	3D13	HYDRO.DR.DISPLACEMENT CTL.VALVE GASKET (SUNDSTRAND).....	55 - 54
4F11	HYDRAULIC CYLINDER, HEADER LIFT	70 - 108	3D13	HYDRO.DR.DISPLACEMENT CTL.VALVE ORIFICE (SUNDSTRAND).....	55 - 54
4D25	HYDRAULIC CYLINDER,UNLOADING AUGER SWING	70 - 71	3C14	HYDRO.DR.PUMP FRONT COVER-BRG-SEAL ASSY. (SUNDSTRAND).....	55 - 29
4E4	HYDRAULIC CYLINDER,UNLOADING AUGER SWING	70 - 75	3C15	HYDRO.DR.PUMP FRONT COVER,BRG,SEAL ASSY (EATON)	55 - 31
4E5	HYDRAULIC CYLINDER,UNLOADING AUGER SWING	70 - 76	3C24	HYDRO.DR.PUMP SWASHPLATE,BRGS,TRUNNIONS (SUNDSTRAND).....	55 - 40
4E7	HYDRAULIC CYLINDER,UNLOADING AUGER SWING	70 - 78	4F4	HYDROSTATIC DR. REEL FLOW CONTROL VALVE.....	70 - 101
4F8	HYDRAULIC HOSE, FEEDER HOUSE.....	70 - 105	3B13	HYDROSTATIC DR.BELT TENSIONING MECHANISM.....	55 - 3
4F7	HYDRAULIC HOSE,VARIABLE DRIVE FDR.HSE.....	70 - 104	4F3	HYDROSTATIC DR.REEL HYDRAULIC PUMP MTG.	70 - 100
3E19	HYDRAULIC HOSES (FOUR-WHEEL DRIVE)	55 - 87	3D14	HYDROSTATIC DRIVE CENTER SECTION.....	55 - 55
3F17	HYDRAULIC HOSES (FOUR-WHEEL DRIVE)	55 - 113	3C8	HYDROSTATIC DRIVE CHARGE PUMP	55 - 23
4E4	HYDRAULIC MOUNTING,UNLOADING AUGER SWING....	70 - 75	3C9	HYDROSTATIC DRIVE CHARGE PUMP	55 - 24
4E5	HYDRAULIC MOUNTING,UNLOADING AUGER SWING....	70 - 76	3C13	HYDROSTATIC DRIVE CHARGE PUMP MOUNTING (EATON)	55 - 28
4E7	HYDRAULIC MOUNTING,UNLOADING AUGER SWING....	70 - 78	3C12	HYDROSTATIC DRIVE CHARGE PUMP MOUNTING (SUNDSTRAND).....	55 - 27
4D21	HYDRAULIC OIL HOSES,UNLDG.AUGER SWING	70 - 67	3C22	HYDROSTATIC DRIVE CYLINDER BLOCK KIT (SUNDSTRAND).....	55 - 38
7D24	HYDRAULIC OIL LINE AUTO.HDR.HGT.CONTROL	160 - 7	3E4	HYDROSTATIC DRIVE LOWER OIL HOSES (SUNDSTRAND).....	55 - 72
4D2	HYDRAULIC OIL LINES AND HOSES	70 - 47	3E4	HYDROSTATIC DRIVE LOWER OIL LINES (SUNDSTRAND).....	55 - 72
4D4	HYDRAULIC OIL LINES AND HOSES	70 - 49	3E6	HYDROSTATIC DRIVE LOWER OIL LINES AND HOSES (EATON)	55 - 74
4D21	HYDRAULIC OIL LINES,UNLDG.AUGER SWING	70 - 67	3E8	HYDROSTATIC DRIVE LUBE BANK SYSTEM	55 - 76
4B11	HYDRAULIC OIL RESERVOIR	70 - 3	3D20	HYDROSTATIC DRIVE MOTOR (EATON)	55 - 62
3E23	HYDRAULIC OIL RETURN LINES AND HOSES	55 - 91	3D16	HYDROSTATIC DRIVE MOTOR (SUNDSTRAND).....	55 - 58
3F19	HYDRAULIC OIL RETURN LINES AND HOSES	55 - 115	3C7	HYDROSTATIC DRIVE MOTOR COUPLER.....	55 - 22
4F3	HYDRAULIC PUMP MTG.,HYDROSTATIC DR.REEL	70 - 100	3C7	HYDROSTATIC DRIVE MOTOR MOUNTING.....	55 - 22
4C1	HYDRAULIC PUMP TORQUE ARM SUPPORT, MAIN	70 - 18	3E1	HYDROSTATIC DRIVE OIL COOLER	55 - 68
4E19	HYDRAULIC PUMP, HYDROSTATIC DRIVE REEL.....	70 - 91	3E1	HYDROSTATIC DRIVE OIL FITTINGS	55 - 68
4B13	HYDRAULIC PUMP, MAIN	70 - 5	3E1	HYDROSTATIC DRIVE OIL HOSES	55 - 68
4B14	HYDRAULIC PUMP, MAIN	70 - 6	3D25	HYDROSTATIC DRIVE OIL RESERVOIR.....	55 - 67
4E23	HYDRAULIC REEL DRIVE HOSES	70 - 95	3D25	HYDROSTATIC DRIVE OIL RESERVOIR MOUNTING	55 - 67
4E15	HYDRAULIC REEL LIFT CONTROL LEVER	70 - 87	3C20	HYDROSTATIC DRIVE PUMP CYLINDER BLOCK ASSEMBLY (EATON)	55 - 36
7E19	HYDRAULIC REEL LIFT DRIVE SHEAVES	170 - 6	3C14	HYDROSTATIC DRIVE PUMP FRONT COVER (SUNDSTRAND).....	55 - 29
3D15	HYDRO. DR. CENTER SECTION (EATON).....	55 - 57	3C17	HYDROSTATIC DRIVE PUMP HOUSING (SUNDSTRAND).....	55 - 33
3D11	HYDRO. DR. DISPLACEMENT CONTROL VALVE (EATON).....	55 - 52	3C20	HYDROSTATIC DRIVE PUMP HOUSING (EATON)	55 - 36
3C18	HYDRO. DR. PUMP CYL. BLOCK (SUNDSTRAND).....	55 - 34	3C22	HYDROSTATIC DRIVE PUMP HOUSING KIT (SUNDSTRAND).....	55 - 38
3C17	HYDRO. DR. PUMP CYLINDER BLOCK ASSEMBLY (SUNDSTRAND).....	55 - 33	3C24	HYDROSTATIC DRIVE PUMP SWASHPLATE (SUNDSTRAND).....	55 - 40
3D4	HYDRO. DR. PUMP SERVO PISTON ASSEMBLIES (EATON)	55 - 45	4E19	HYDROSTATIC DRIVE REEL HYDRAULIC PUMP	70 - 91
3D2	HYDRO. DR. PUMP SERVO PISTON ASSEMBLIES (SUNDSTRAND).....	55 - 43	3C22	HYDROSTATIC DRIVE SHAFT KIT (SUNDSTRAND).....	55 - 38
3D3	HYDRO. DR. PUMP SERVO PISTON ASSEMBLIES (SUNDSTRAND).....	55 - 44	3C1	HYDROSTATIC DRIVE UNIT (SUNDSTRAND).....	55 - 16
3C17	HYDRO. DR. PUMP SHAFT (SUNDSTRAND).....	55 - 33	3C5	HYDROSTATIC DRIVE UNIT (SUNDSTRAND).....	55 - 20
3B21	HYDRO. DRIVE CONTROL CABLE AND LEVER	55 - 11	3C2	HYDROSTATIC DRIVE UNIT (EATON)	55 - 17
3B24	HYDRO. DRIVE CONTROL CABLE MOUNTING (EATON)	55 - 14	3C6	HYDROSTATIC DRIVE UNIT (EATON)	55 - 21
3B22	HYDRO. DRIVE CONTROL CABLE MOUNTING (SUNDSTRAND).....	55 - 12			
3D5	HYDRO. DRIVE DISPLACEMENT CONTROL VALVE (SUNDSTRAND).....	55 - 46			
3D7	HYDRO. DRIVE DISPLACEMENT CONTROL VALVE (SUNDSTRAND).....	55 - 48			
3D9	HYDRO. DRIVE DISPLACEMENT CONTROL VALVE (SUNDSTRAND).....	55 - 50			
3C23	HYDRO. DRIVE PUMP CYLINDER BLOCK KIT (EATON)	55 - 39			
3C15	HYDRO. DRIVE PUMP FRONT COVER(EATON)	55 - 31			
3C18	HYDRO. DRIVE PUMP HOUSING (SUNDSTRAND).....	55 - 34			
3C23	HYDRO. DRIVE PUMP HOUSING KIT (EATON).....	55 - 39			
3C18	HYDRO. DRIVE PUMP SHAFT (SUNDSTRAND).....	55 - 34			
3D1	HYDRO. DRIVE PUMP SWASHPLATE (EATON)	55 - 42			
3D1	HYDRO. DRIVE PUMP,SWASHPLATE,BEARINGS, AND TRUNNIONS (EATON)	55 - 42			

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
3C2	HYDROSTATIC DRIVE UNIT SHEAVES (EATON)	55 - 17		J	
3C2	HYDROSTATIC DRIVE UNIT SUPPORTS (EATON).....	55 - 17			
3C1	HYDROSTATIC DRIVE UNIT, SHEAVES (SUNDSTRAND).....	55 - 16	1B14	JETS, PISTON COOLING	20 - 6
3C1	HYDROSTATIC DRIVE UNIT, SUPPORTS (SUNDSTRAND).....	55 - 16	1B16	JETS, PISTON COOLING	20 - 8
3E3	HYDROSTATIC DRIVE UPPER OIL LINES (EATON)	55 - 71		K	
3E2	HYDROSTATIC DRIVE UPPER OIL LINES (SUNDSTRAD).....	55 - 69	2C21	KEY, IGNITION SWITCH	40 - 41
7E17	HYDROSTATIC GROUND DRIVE BELTS	170 - 4	4F6	KIT, ADJUSTING SCREW	70 - 103
7E17	HYDROSTATIC GROUND DRIVE SHEAVES	170 - 4	2D11	KIT, ANTENNA WITH CLIPS.....	40 - 57
	I		3G4	KIT, BRAKE SLAVE CYLINDER	60 - 7
2111	IDLER SUPPORT PLATES, FRONT	50 - 89	7D20	KIT, CHECK BLOCK	160 - 2
6D10	IDLER, BEATER	120 - 55	4I10	KIT, COMPRESSOR.....	90 - 48
6D12	IDLER, BEATER	120 - 58	4I2	KIT, COMPRESSOR HARDWARE	90 - 51
6G14	IDLER, CLEAN GRAIN ELEVATOR	120 - 137	3E18	KIT, CONTROL VALVE SOLENOID	55 - 86
218	IDLER, CRAWLER	50 - 85	3F16	KIT, CONTROL VALVE SOLENOID	55 - 111
7D15	IDLER, DECLUTCHING	140 - 19	7D25	KIT, DROP RATE VALVE	160 - 9
6C21	IDLER, DUAL-RANGE CYLINDER DRIVE TIGHTENER	120 - 40	2E16	KIT, ELECTRICAL CONNECTOR SERVICE.....	40 - 88
5B24	IDLER, FEEDER CONVEYOR DRIVE	110 - 17	4C25	KIT, FLOW CONTROL PLUG	70 - 45
7E23	IDLER, FEEDER HOUSE (LONG).....	170 - 10	1F17	KIT, FUEL FILTER	30 - 30
7D17	IDLER, FEEDER HOUSE DRIVE	140 - 21	4F12	KIT, HEADER LIFT HYDRAULIC CYLINDER.....	70 - 109
7F15	IDLER, PRIMARY COUNTERSHAFT	170 - 28	3C23	KIT, HYDRO. DRIVE PUMP CYLINDER BLOCK (EATON)	55 - 39
7F16	IDLER, SECONDARY COUNTERSHAFT	170 - 29	3C23	KIT, HYDRO. DRIVE PUMP HOUSING (EATON)	55 - 39
7D13	IDLER, SECONDARY COUNTERSHAFT DRIVE	140 - 17	3C23	KIT, HYDRO. DRIVE PUMP SHAFT (EATON).....	55 - 39
6F6	IDLER, SHOE GRAIN SUPPLY AUGERS	120 - 103	4F5	KIT, HYDRO.DRIVE REEL FLOW CONTROL VALVE.....	70 - 102
6E16	IDLER, STRAW CHOPPER DRIVE	120 - 87	3C10	KIT, HYDROSTATIC DRIVE CHARGE PUMP	55 - 25
5C17	IDLER,MIDDLE,FDR.HSE.-VARIABLE DRIVE	110 - 36	3C11	KIT, HYDROSTATIC DRIVE CHARGE PUMP	55 - 26
5C19	IDLERS, BELT, FEEDER HOUSE MIDDLE	110 - 38	3C22	KIT, HYDROSTATIC DRIVE CYLINDER BLOCK (SUNDSTRAND).....	55 - 38
7F1	IDLERS, FEEDER HOUSE (REG FIXED LESS REVERSER)	170 - 13	3C22	KIT, HYDROSTATIC DRIVE PUMP HOUSING (SUNDSTRAND).....	55 - 38
7E25	IDLERS, FEEDER HOUSE (REG. FIXED)	170 - 12	4E21	KIT, HYDROSTATIC DRIVE REEL HYD. PUMP	70 - 93
7E20	IDLERS, FEEDER HOUSE (VARIABLE DRIVE)	170 - 7	4E21	KIT, HYDROSTATIC DRIVE REEL HYD. SHEAVE	70 - 93
7E24	IDLERS, FEEDER HOUSE DRIVE (LONG RICE)	170 - 11	3C22	KIT, HYDROSTATIC DRIVE SHAFT (SUNDSTRAND).....	55 - 38
5C19	IDLERS, FEEDER HOUSE MIDDLE BELT.....	110 - 38	4C21	KIT, MAIN HYD. CONTROL VALVE (POSI-TORQ)	70 - 40
7F5	IDLERS, STRAW CHOPPER	170 - 17	4C22	KIT, MAIN HYD. CONTROL VALVE (POSI-TORQ)	70 - 41
6H2	IDLERS,DIP AND POUR ELEVATOR UPPER CHAIN.....	120 - 151	4C23	KIT, MAIN HYD. CONTROL VALVE (POSI-TORQ)	70 - 42
4I19	INDICATOR LIGHT ASSEMBLY, HI PRESSURE.....	90 - 58	4C6	KIT, MAIN HYDRAULIC CONTROL VALVE	70 - 24
1G5	INJECTION NOZZLE, FUEL	30 - 44	4C8	KIT, MAIN HYDRAULIC CONTROL VALVE	70 - 26
1G7	INJECTION NOZZLE, FUEL (LUCAS CAV) (6466TH 02).....	30 - 46	4C9	KIT, MAIN HYDRAULIC CONTROL VALVE	70 - 27
3F4	INNER COVER	55 - 98	4C11	KIT, MAIN HYDRAULIC CONTROL VALVE	70 - 29
4H19	INNER ROOF	90 - 31	4C12	KIT, MAIN HYDRAULIC CONTROL VALVE	70 - 30
4H19	INNER ROOF AND COVERS	90 - 31	4C10	KIT, MAIN HYDRAULIC CONTROL VALVE-HYDRO.	70 - 28
7C2	INNER UNLOADING AUGER COVERS,GRAIN TANK	130 - 21	4B17	KIT, MAIN HYDRAULIC PUMP	70 - 9
2H13	INPUT HOUSING, POSI-TORQ DRIVE.....	50 - 61	4B21	KIT, MAIN HYDRAULIC PUMP	70 - 13
2G7	INPUT SHAFT,GEARS,BEARINGS,TRANSMISSION.....	50 - 29	7D22	KIT, MAIN VALVE BLOCK SOLENOID.....	160 - 5
1B20	INSTALLATION KIT, SHORT BLOCK (TH 01,02)	20 - 12	4I4	KIT, O-RING - AIR CONDITIONING	90 - 41
4H12	INSTRUMENT PANEL	90 - 23	1C7	KIT, PISTON LINER	20 - 24
2C21	INSTRUMENT PANEL ACCESSORIES	40 - 41	1C8	KIT, PISTON LINER	20 - 25
7F22	INSTRUMENT PANEL DECALS	170 - 35	2D22	KIT, RADIO EXTERNAL ANTENNA	40 - 68
2C24	INSTRUMENT PANEL GAUGES.....	40 - 45	4F15	KIT, REPLACEMENT ACCUMULATOR	70 - 112
2C17	INSTRUMENT PANEL WIRING HARNESS	40 - 37	4I2	KIT, SEAL	90 - 39
2C19	INSTRUMENT PANEL WIRING HARNESS	40 - 39	3B18	KIT, SEAL REPAIR-HYD. BELT TENSIONING CYLINDER	55 - 8
4H2	INSULATION, SEAT CONSOLE	90 - 11	4B18	KIT, SEAL, MAIN HYDRAULIC PUMP	70 - 10
1D13	INTAKE MANIFOLD	20 - 54	4D15	KIT, SECONDARY CONTROL VALVE	70 - 61
1D13	INTAKE MANIFOLD GASKET	20 - 54	4D17	KIT, SECONDARY CONTROL VALVE	70 - 63
1C15	INTAKE VALVES	20 - 32	4D19	KIT, SECONDARY CONTROL VALVE	70 - 65
1C18	INTAKE VALVES	20 - 35	2E13	KIT, STARTER SOLENOID COVER	40 - 84
			3G25	KIT, STEERING CYLINDER.....	60 - 29
			3H2	KIT, STEERING CYLINDER.....	60 - 31
			3G14	KIT, STEERING PUMP INPUT SHAFT SEAL	60 - 17
			3G12	KIT, STEERING PUMP SEAL	60 - 15
			4I3	KIT, SUPER HEAT	90 - 40

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
2D13	KIT, TAPE PLAYER	40 - 59	3E20	LINES AND HOSES, HYD. (FOUR-WHEEL DR.) (SUNDSTRAND).....	55 - 88
2E14	KIT, TERMINAL AND WIRING	40 - 86	4D2	LINES AND HOSES, HYDRAULIC OIL.....	70 - 47
4E11	KIT, UNLOADING AUGER SWING HYD. CYLINDER	70 - 82	4D4	LINES AND HOSES, HYDRAULIC OIL.....	70 - 49
4E13	KIT, UNLOADING AUGER SWING HYD. CYLINDER	70 - 84	3E23	LINES AND HOSES, HYDRAULIC OIL RETURN	55 - 91
2D9	KIT,AM RADIO,PUSH BUTTON,TAPE PLAYER	40 - 55	3F19	LINES AND HOSES, HYDRAULIC OIL RETURN	55 - 115
2D19	KIT,AM-FM RADIO,PUSH BUTTON	40 - 65	3G21	LINES AND HOSES, STEERING OIL - REAR.....	60 - 25
2D15	KIT,AM-FM RADIO,PUSH BUTTON,TAPE PLAYER	40 - 61	3G16	LINES AND HOSES,STEERING OIL-FRONT.....	60 - 19
4B23	KIT,MAIN HYDRAULIC PUMP (FOUR-WHEEL DR.).....	70 - 15	4I13	LINES, AIR CONDITIONER	90 - 52
2D17	KIT,SPEAKERS,RADIO,TAPE PLAYER,HARNESS	40 - 63	4I15	LINES, AIR CONDITIONER	90 - 54
4E10	KIT,UNLOADING AUGER SWING HYD. CYLINDER.....	70 - 81	4I17	LINES, AIR CONDITIONER.....	90 - 56
4E2	KIT,UNLOADING AUGER SWING HYD.CYLINDER.....	70 - 73	3F24	LINES, BRAKE	60 - 3
3E15	KNEE AND MOTOR HOUSING (FOUR-WHEEL DR.).....	55 - 83	1E16	LINES, FUEL	30 - 5
6E11	KNIFE AND SUPPORT, STRAW CHOPPER	120 - 82	1E17	LINES, FUEL (EXPORT)	30 - 6
1E19	KNOB, FUEL SHUT-OFF CONTROL	30 - 8	4F10	LINES, HEADER LIFT OIL.....	70 - 107
1E20	KNOB, FUEL SHUT-OFF CONTROL	30 - 9	3E6	LINES, HYDROSTATIC DRIVE LOWER OIL (EATON).....	55 - 74
7B19	KNOB, GRAIN TANK DOOR	130 - 13	3E3	LINES, HYDROSTATIC DRIVE UPPER OIL (EATON).....	55 - 71
4I18	KNOB, HEATER CONTROL	90 - 57	3E2	LINES, HYDROSTATIC DRIVE UPPER OIL (SUNDSTRAND).....	55 - 69
2D21	KNOB, RADIO	40 - 67	3E4	LINES, OIL, HYDROSTATIC DRIVE LOWER (SUNDSTRAND).....	55 - 72
4E17	KNOB, REEL SPEED.....	70 - 89	3G19	LINES, OIL, STEERING	60 - 23
4D6	KNOB, VARIABLE CYLINDER CONTROL	70 - 51	3G17	LINES, STEERING OIL-REAR.....	60 - 21
L			2I1	LINES,SELECTIVE GRD.SPEED OIL-POSI-TORQ	50 - 76
4G19	LADDER, OPERATOR'S PLATFORM.....	90 - 3	4D21	LINES,UNLOADING AUGER SWING HYD. OIL.....	70 - 67
4G21	LADDER, OPERATOR'S PLATFORM (TRACKS).....	90 - 5	4D22	LINES,UNLOADING AUGER SWING HYD. OIL.....	70 - 68
4G2	LADDER, REAR	80 - 11	6C19	LINK, DUAL-RANGE CYLINDER DRIVE LOCKOUT ARM	120 - 37
4G23	LANDING SUPPORT	90 - 7	3F23	LINKAGE AND BRAKE PEDALS.....	60 - 2
4G19	LANDING, OPERATOR'S PLATFORM	90 - 3	7E4	LINKAGE, AUTOMATIC HEADER HEIGHT CONTROL.....	160 - 13
4G21	LANDING, OPERATOR'S PLATFORM (TRACKS)	90 - 5	6F24	LINKAGE, CLEANING FAN SPEED CONTROL.....	120 - 123
6G6	LATCH, CLEAN GRAIN ELEVATOR.....	120 - 129	2H7	LINKAGE, CLUTCH	50 - 55
7B19	LATCH, GRAIN TANK DOOR	130 - 13	7E5	LINKAGE, CONTROL.....	160 - 14
2C9	LEFT-HAND LIGHTS WIRING HARNESS	40 - 29	5C10	LINKAGE, REVERSER CONTROL CABLE	110 - 29
2G14	LEVER AND CAM, GEARSHIFT (POSI-TORQ)	50 - 36	4E17	LINKAGE,REEL SPEED CONTROL VALVE.....	70 - 89
2G15	LEVER ASSEMBLY,GEARSHIFT-HYDROSTATIC DR.	50 - 37	6G16	LOADING AUGER AND HOUSING.....	120 - 139
6G7	LEVER, CLEAN GRAIN ELEVATOR HOUSING.....	120 - 130	7F8	LOADING AUGER BELTS	170 - 21
4E15	LEVER, HYDRAULIC REEL LIFT CONTROL.....	70 - 87	7F8	LOADING AUGER DRIVE	170 - 21
3B21	LEVER, HYDRO. DRIVE CONTROL CABLE	55 - 11	6G18	LOADING AUGER GEAR CASE	120 - 141
4G19	LEVER, OPERATOR'S PLATFORM	90 - 3	6G19	LOADING AUGER GEAR CASE, GRAIN TANK	120 - 143
3F22	LEVER, PARKING BRAKE CONTROL	60 - 1	7F8	LOADING AUGER SHEAVES	170 - 21
4E15	LEVER, PLATFORM LIFT CONTROL.....	70 - 87	6C19	LOCKOUT ARM, DUAL-RANGE CYLINDER DRIVE	120 - 37
6I5	LEVER, SEPARATOR CONTROL	120 - 179	5B20	LONG FEEDER HOUSE SIDE SHEETS	110 - 13
1E24	LEVER, THROTTLE LINKAGE CONTROL	30 - 13	2C13	LONG FEEDER HSE.LOWER SHAFT SPEED SENSOR ..	40 - 33
7B21	LEVER, UNLOADING AUGER CONTROL	130 - 15	2B24	LOW SHAFT SPD.MONITORS MOUNTING BRACKET.....	40 - 19
4D7	LEVER, UNLOADING AUGER SWING CONTROL	70 - 53	2B19	LOW SHAFT SPEED MONITOR'S HARNESS	40 - 13
4D6	LEVER, VARIABLE CYLINDER CONTROL	70 - 51	2C19	LOW SHAFT SPEED MONITORING CONTROL BOX	40 - 39
4E15	LIFT CONTROL LEVER, HYDRAULIC REEL.....	70 - 87	2C17	LOW SHAFT SPEED MONITORING CONTROL BOX.....	40 - 37
4E15	LIFT CONTROL LEVER, PLATFORM.....	70 - 87	2B24	LOW SHAFT SPEED MONITORS.....	40 - 19
1C19	LIFT STRAPS	20 - 36	6G2	LOWER AUGER, CLEAN GRAIN	120 - 125
2C21	LIGHT SWITCH	40 - 41	7C11	LOWER GEAR CASE, VERTICAL AUGER	130 - 31
2D3	LIGHT, DOME.....	40 - 49	3E4	LOWER OIL HOSES, HYDROSTATIC DRIVE (SUNDSTRAND).....	55 - 72
2B14	LIGHT, GRAIN TANK.....	40 - 7	3E6	LOWER OIL LINES, HYDROSTATIC DRIVE (EATON).....	55 - 74
2B12	LIGHT, UNLOADING AUGER	40 - 5	3E4	LOWER OIL LINES, HYDROSTATIC DRIVE (SUNDSTRAND).....	55 - 72
2B14	LIGHT, WARNING	40 - 7	6H14	LOWER TAILINGS AUGER	120 - 163
2C21	LIGHTER, CIGAR.....	40 - 41	6H15	LOWER TAILINGS AUGER	120 - 164
2C11	LIGHTS, FIELD.....	40 - 31	6H25	LOWER TAILINGS AUGER DRIVE TIGHTENER.....	120 - 174
4F13	LINE, ACCUMULATOR	70 - 110	6H15	LOWER TAILINGS AUGER SHAFT	120 - 164
2H11	LINE, CLUTCH OIL	50 - 59	6H15	LOWER TAILINGS AUGER TIGHTENER	120 - 164
1E9	LINE, ENGINE OIL PRESSURE GAUGE	20 - 78	6H18	LOWER TAILINGS HOUSING	120 - 167
7D24	LINE,HYDRAULIC OIL,AUTO.HDR.HGT.CONTROL.....	160 - 7	2H14	LOWER UNIT, POSI-TORQ GROUND DRIVE	50 - 62
1C8	LINER SHIM	20 - 25	6D7	LUBE BANK SYSTEM-R.H.-BEATER BEARING	120 - 52
1C7	LINER SHIMS	20 - 24			
1C7	LINERS, CYLINDER.....	20 - 24			
1C8	LINERS, CYLINDER.....	20 - 25			
7E2	LINES AND HOSE, OIL COOLER.....	160 - 11			
3E21	LINES AND HOSES, HYD. (FOUR-WHEEL DR.) (EATON).....	55 - 89			