

HP1469 -UN-01JAN94



JOHN DEERE 6620 COMBINE WITH 653 ROW-CROP HEAD

(SPECIFICATIONS AND DESIGN SUBJECT TO CHANGE WITHOUT NOTICE)

NOTE

IN ADDITION TO TITAN COMBINES, PARTS INFORMATION FOR TITAN II COMBINES IS ALSO LOCATED IN THIS CATALOG. SERIAL NUMBER (610301-) INDICATES TITAN II PARTS.

FOR 200 SERIES PLATFORM PARTS INFORMATION, REFER TO JOHN DEERE 200 SERIES PLATFORM PARTS CATALOG - PC-1558.

FOR 900 SERIES PLATFORM PARTS INFORMATION, REFER TO JOHN DEERE 900 SERIES PLATFORM PARTS CATALOG - PC-2104

FOR 40 SERIES CORN HEAD PARTS INFORMATION, REFER TO JOHN DEERE 40 SERIES CORN HEAD PARTS CATALOG - PC-1223.

FOR 50 SERIES ROW-CROP HEAD PARTS INFORMATION, REFER TO JOHN DEERE 50 SERIES ROW-CROP HEAD PARTS CATALOG - PC-1549.

FOR 50A SERIES ROW-CROP HEAD PARTS INFORMATION, REFER TO JOHN DEERE 50A SERIES ROW-CROP HEAD PARTS CATALOG - PC-1747.

FOR THREE-ROLLER BELT PICKUP PARTS INFORMATION, REFER TO JOHN DEERE THREE-ROLLER BELT PICKUP PARTS CATALOG - PC-1189 (200 SERIES) OR PC-2210 (900 SERIES)

IMPORTANT

THIS PARTS CATALOG CONTAINS PARTS INFORMATION FOR THE 6620 COMBINE. MACHINE VINTAGE IS DETERMINED BY THE COMBINE SERIAL NUMBER OR THE PRODUCT IDENTIFICATION NUMBER (PIN). IT IS IMPORTANT THAT THE CORRECT NUMBERS BE USED WHEN ORDERING PARTS.

SERIAL NUMBER AND PRODUCT IDENTIFICATION NUMBER (PIN) PLATES

USE ALL NUMBERS, LETTERS AND SPACES SHOWN ON THE SERIAL NUMBER PLATE OR THE PRODUCT IDENTIFICATION NUMBER PLATE IN WARRANTY CORRESPONDENCE.

COMBINES (-551900)

ON THESE COMBINES, THE SERIAL NUMBER PLATE IS LOCATED ON THE REAR LEFT-HAND UPRIGHT.

AN EXAMPLE OF THE SERIAL NUMBER ON THIS PLATE IS:

E6620551900H

E - EQUIPMENT
6620 - COMBINE MODEL
551900 - COMBINE SEPARATOR SERIAL NUMBER
H - MANUFACTURING UNIT (HARVESTER WORKS)

COMBINES (551901-)

ON THESE COMBINES, THE PRODUCT IDENTIFICATION PLATE (PIN) IS LOCATED NEAR THE RIGHT-HAND SIDE OF THE TOOL BOX. AN EXAMPLE OF THE TWO-LINES ON THIS PIN PLATE IS:

H06620X551901
COMBINE

(FIRST LINE)

H0 - MANUFACTURING UNIT (HARVESTER WORKS)
6620 - MODEL IDENTIFIER
X - CONFIGURATION CODE/MODEL IDENTIFIER SUFFIX
551901 - SEQUENTIAL NUMBER USED IN SERIAL NO. COLUMN

(SECOND LINE)

COMBINE - TYPE OF PRODUCT

ENGINE SERIAL NUMBER

THE ENGINE SERIAL NUMBER PLATE IS LOCATED ON THE RIGHT-HAND SIDE OF THE ENGINE BLOCK.

ENGINES (-227599)

AN EXAMPLE OF THE ONE-LINE, SIXTEEN-DIGIT NUMBER ON THIS SERIAL NUMBER PLATE IS:

6466TH01227599RG

6 - NUMBER OF CYLINDERS
466 - CUBIC INCH DISPLACEMENT
T - FUEL TYPE (TURBOCHARGED DIESEL)
H - MANUFACTURING UNIT OF MACHINE (HARVESTER WORKS)
01 - ENGINE VERSION
227599 - ENGINE SERIAL NUMBER
RG - MANUFACTURING UNIT OF ENGINE (JOHN DEERE ENGINE WORKS)

ENGINES (227600-)

AN EXAMPLE OF THE TWO-LINE NUMBER ON THIS SERIAL NUMBER PLATE IS:

RG6466A227600
6466TH05

(FIRST LINE)

RG - MANUFACTURING UNIT (JOHN DEERE ENGINE WORKS)
6 - NUMBER OF CYLINDERS
466 - CUBIC INCH DISPLACEMENT
A - CONFIGURATION CODE/MODEL IDENTIFIER SUFFIX
227600 - SEQUENTIAL NUMBER USED IN SERIAL NO. COLUMN

(SECOND LINE)

6 - NUMBER OF CYLINDERS
466 - CUBIC INCH DISPLACEMENT
T - FUEL TYPE (TURBOCHARGED DIESEL)
H - MANUFACTURING UNIT OF MACHINE (HARVESTER WORKS)
05 - ENGINE VERSION

PARTS LISTING INFORMATION

SERIAL NUMBER OR PRODUCT IDENTIFICATION NUMBER (PIN) INFORMATION SHOWS ON WHICH MACHINES A PART MAY BE USED. FOR EXAMPLE:

- THE PART CAN BE USED ON ALL MACHINES.

-000000 THE PART CAN BE USED ON ALL MACHINES UP TO AND INCLUDING THE SERIAL NUMBER LISTED.

000000- THE PART CAN BE USED ON ALL MACHINES BEGINNING WITH THE SERIAL NUMBER LISTED.

000000-000000 THE PART CAN BE USED ON ALL MACHINES BETWEEN AND INCLUDING THE SERIAL NUMBERS LISTED.

WHEN XXXXXX'S ARE LISTED IN PLACE OF A SERIAL NUMBER, A SERIAL NUMBER WAS MADE, BUT THE EXACT SERIAL NUMBER WAS NOT AVAILABLE WHEN THE CATALOG WAS PRINTED.

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

DIRECTION ARROW

ARROWS ARE USED WITH ILLUSTRATIONS TO INDICATE THE FRONT OF THE UNIT. "RIGHT-HAND" AND "LEFT-HAND" SIDES ARE DETERMINED BY FACING IN THE DIRECTION OF MACHINE FORWARD TRAVEL.

BOX-ENCLOSED ILLUSTRATIONS

A KEY NUMBER, SHOWN IN THE PARTS LIST, IS ASSIGNED TO A BOX ENCLOSING ALL PARTS SOLD AS A SERVICE ASSEMBLY. A BOX NOT KEYED INCLUDES NON-CURRENT PARTS.

KITS

KIT INFORMATION WILL BE FOUND IMMEDIATELY FOLLOWING THE STORY IN WHICH IT IS USED. THE ILLUSTRATION IS REPEATED WITH ONLY THE KIT PARTS CALLED OUT AND WITH ALL OTHER PARTS SHOWN IN PHANTOM FOR RELATIONSHIP.

JDM REMANUFACTURED COMPONENTS

THE SERVICE PARTS LISTED IN THIS CATALOG ARE INTENDED FOR THE REPAIR OF ORIGINAL EQUIPMENT COMPONENTS. ALTHOUGH MOST SERVICE PARTS MAY BE USED TO REPAIR REMANUFACTURED COMPONENTS, THE REMANUFACTURED DESIGN MAY CHANGE PARTS SUFFICIENTLY SO THAT SERVICE PARTS ARE INADEQUATE OR NOT USABLE.

BOLT AND CAP SCREW STRENGTH IDENTIFICATION

BOLTS AND CAP SCREWS REQUIRED TO HAVE HIGH-STRENGTH QUALITIES EQUIVALENT TO SAE GRADE 8 ARE IDENTIFIED THROUGHOUT THIS CATALOG BY THE DESCRIPTION HS SAE 8. ALL STANDARD BOLTS AND CAP SCREWS ARE SAE GRADE 5 OR LOWER.

COMPLETE GOODS LISTINGS

COMPLETE GOODS ARE LISTED IN BOLD FACE TYPE. ORDER SEPARATELY. DO NOT INCLUDE ON REPLACEMENT PARTS ORDER.

SI UNITS OF MEASURE

METRIC DIMENSIONS ARE GIVEN, WHERE APPLICABLE, THROUGHOUT THIS PARTS CATALOG.

TRADEMARKS

THROUGHOUT THIS PARTS CATALOG, YOU WILL FIND THE FOLLOWING DEERE & COMPANY TRADEMARKS:

DIAL-A-MATIC™
HARVESTRAK™
POSI-TORQ™

TORQ-GARD SUPREME®
QUIK-TATCH™

CHANGE INDICATOR LINE (MICROFICHE CATALOGS ONLY)

CHANGES AFFECTING THE ORDERING OF PARTS ARE IDENTIFIED BY VERTICAL LINES MARKED IN THE LEFT-HAND MARGIN OF REVISED PARTS LISTING IMAGES. A LINE IS ALSO AT THE LEFT-HAND EDGE OF THE SAME PART NUMBER IN THE NUMERICAL INDEX TO SHOW THE LOCATION OF REVISED INFORMATION.

SECTIONAL INDEX

	SECTION
GENERAL INFORMATION	10
BASIC ENGINE	20
FUEL AND AIR	30
ELECTRICAL	40
POWER TRAIN	50
STEERING AND BRAKES	60
HYDRAULICS	70
SEPARATOR SHELL	80
OPERATOR'S STATION	90
HEADERS - REFER TO INDIVIDUAL HEADER PARTS CATALOGS	100
FEEDER HOUSE	110
SEPARATOR	120
GRAIN TANK AND UNLOADING AUGER	130
MAJOR DRIVES	140
SIDEHILL SYSTEM	150
HEADER HEIGHT CONTROL	160
DECALS, BELTS AND CHAINS	170
NUMERICAL INDEX	180

ALPHABETICAL INDEX

GRID		PAGE	GRID		PAGE
	A				
2D2	ACCESSORIES, INSTRUMENT PANEL	40-43	8C17	AUGER, SWIVEL, HORIZONTAL UNLOADING	130-33
2C3	ACCUMULATOR PRESSURE GAUGE	40-20	8C20	AUGER, UNLOADING, LUBE BANK SYSTEM.....	130-36
4I7	ACCUMULATOR,PRESSURE CONTROL VALVE	70-121	2B14	AUGER, UNLOADING, WIRING HARNESS	40-3
1F7	ADAPTER, ENGINE COOLANT HEATER.....	20-97	7I6	AUGER, UPPER TAILINGS	120-176
4C11	ADJUSTABLE REAR AXLE, HEAVY-DUTY (FOUR-WHEEL DRIVE).....	60-27	8C13	AUGER, VERTICAL, LOWER GEAR CASE	130-29
1G12	AIR CLEANER	30-19	8C11	AUGER,CROSS,DRIVE TIGHTENERS,GRAIN TANK	130-27
1G13	AIR CLEANER TO MANIFOLD	30-20	7H12	AUGER,LOADING,DIP AND POUR ELEV.GR.TANK	120-156
5E15	AIR CONDITIONER EVAPORATOR	90-59	7F3	AUGERS, HOUSING, SHOE GRAIN SUPPLY	120-95
5E15	AIR CONDITIONER EXPANSION VALVE.....	90-59	7F7	AUGERS, SHOE GRAIN SUPPLY, DRIVE SHAFT	120-99
5E3	AIR CONDITIONER HI PRESSURE SWITCH	90-45	7F5	AUGERS, SUPPLY, SHOE GRAIN	120-97
5E11	AIR CONDITIONER LINES	90-55	8F2	AUTO.HDR.HEIGHT CONTROL WIRING HARNESS.....	160-11
5E12	AIR CONDITIONER LINES	90-56	8E19	AUTO.HEADER HEIGHT CONTROL CHECK BLOCK.....	160-1
5E15	AIR CONDITIONER LINES	90-59	8E24	AUTOMATIC HDR.HGT.CTL.DROP RATE VALVE	160-7
5E1	AIR CONDITIONING - KIT, O-RING	90-43	8E24	AUTOMATIC HDR.HGT.CTL.FULL FLOW PLUG.....	160-7
5D23	AIR CONDITIONING COMPRESSOR.....	90-40	8E24	AUTOMATIC HDR.HGT.CTL.HYDRAULIC OIL LINE	160-7
7G3	AIR DUCTS, CLEANING FAN	120-121	8F2	AUTOMATIC HEADER HEIGHT CONTROL LINKAGE	160-11
5D20	AIR FILTER, CAB.....	90-37	8F6	AUTOMATIC HEADER HEIGHT CONTROL SWITCH	160-15
1G10	AIR INTAKE TUBES (PRECLNR.TO AIR CLNR.)	30-16	8E19	AUTOMATIC HEADER HEIGHT CONTROL VALVE	160-1
1G11	AIR INTAKE TUBES (PRECLNR.TO AIR CLNR.)	30-17	4C19	AXLE MOUNTING AND T-WEIGHTS, REAR	60-36
1G13	AIR INTAKE TUBES (6466DH-01)	30-20	3B25	AXLE SPACERS.....	50-11
1G14	AIR INTAKE TUBES (6466TH-01).....	30-21	4D3	AXLE SPINDLE HOUSINGS,REAR-(HEAVY-DUTY)	60-44
5D18	AIR LOUVER AND PANEL	90-35	4D2	AXLE SPINDLES, REAR	60-43
7F12	AIRFOIL CHAFFER, NON-ADJUSTABLE	120-104	3B23	AXLE, DRIVE WHEEL	50-9
2E6	ALTERNATOR (72 AMP)	40-74	3B24	AXLE, DRIVE WHEEL (SH).....	50-10
2E12	ALTERNATOR ADJUSTING STRAP	40-80	3C17	AXLE, FINAL DRIVE	50-29
2E12	ALTERNATOR BRACKET	40-80	3C21	AXLE, FINAL DRIVE (SH)	50-33
2E10	ALTERNATOR SHEAVE AND BELT.....	40-78	4C22	AXLE, REAR (ADJUSTABLE)	60-39
2E8	ALTERNATOR, 90 AMP.....	40-76	4C21	AXLE, REAR (FIXED)	60-38
2E11	ALTERNATOR, 90 AMP.....	40-79	4C24	AXLE, REAR (HEAVY-DUTY AND FOUR-WHL DR.).....	60-41
2E4	AM PUSH-BUTTON RADIO.....	40-71	4C16	AXLE, REAR, TRASH SHIELD	60-33
2E4	AM-FM PUSH-BUTTON RADIO.....	40-71	4C23	AXLE,REAR (HVY-DUTY AND FOUR-WHL DR.).....	60-40
8F5	AMPLIFIER, DIAL-A-MATIC HDR.HGT.CONTROL.....	160-14		B	
2D12	ANTENNA, PUSH BUTTON RADIO	40-55	8B21	BAFFLE, GRAIN TANK SUMP	130-12
2D12	ANTENNA, TAPE PLAYER	40-55	7D21	BAR, SHEAR, CYLINDER	120-62
7D16	ARM, BEATER DRIVE (DUAL-RANGE CYLINDER DRIVE)(100 PER CENT BEATER SPEED)	120-57	2C7	BATTERY CABLES	40-24
7C5	ARM, CONCAVE ADJUSTING SHAFT	120-19	2C7	BATTERY MOUNTINGS	40-24
7D1	ARM, DUAL-RANGE CYLINDER DRIVE TIGHTENER	120-40	3C16	BEARING CAP, FINAL DRIVE	50-28
7C23	ARM, LOCKOUT, DUAL-RANGE CYLINDER DRIVE.....	120-37	3C20	BEARING CAP, FINAL DRIVE (SH)	50-32
3D16	ARM, PROPULSION-DRIVE	50-55	3H17	BEARING, CAM LOBE MOTOR	50-166
4D4	ARM, STEERING (FOUR-WHEEL DRIVE).....	60-45	3E13	BEARING, HYDRO. DR. PUMP (SUNDSTRAND)	50-79
6E22	ARM,F.H.VAR.DR.MIDDLE BELT TIGHTNR-SH	110-89	3E15	BEARING, HYDRO. DRIVE PUMP (EATON).....	50-81
6E20	ARM,IDLER,FDR.HSE.LOWER BELT TIGHTNR-SH.....	110-87	3E14	BEARING, HYDROSTATIC DRIVE (SUNDSTRAND).....	50-80
2E14	ARMATURE, STARTER (DH)	40-82	3H10	BEARINGS, CAM LOBE MOTOR	50-158
5D6	ARMREST (PERSONAL POSTURE SEAT)	90-22	3G12	BEARINGS, CRAWLER	50-131
1D14	ARMS, ROCKER (DH)	20-53	3G14	BEARINGS, CRAWLER	50-133
3H22	ARMS, STEERING, CAM LOBE MOTOR	50-172	3G16	BEARINGS, CRAWLER DRIVE	50-135
5D10	ASH TRAY	90-26	3C17	BEARINGS, FINAL DRIVE	50-29
1G15	ASPIRATOR	30-22	3C18	BEARINGS, FINAL DRIVE	50-30
1G16	ASPIRATOR	30-23	3C21	BEARINGS, FINAL DRIVE (SH)	50-33
8C15	AUGER AND HOUSING, VERTICAL, GRAIN TANK	130-31	3C22	BEARINGS, FINAL DRIVE (SH)	50-34
8C21	AUGER DRIVE GEAR CASE,HORIZONTAL UNLDG.	130-37	3C23	BEARINGS, FINAL DRIVE (SH)	50-35
2B15	AUGER LIGHT, UNLOADING	40-5	3E23	BEARINGS, HYDRO. DR. PUMP (SUNDSTRAND)	50-89
4G5	AUGER SWING HYDRAULIC HOSES,UNLOADING	70-66	1C20	BEARINGS, MAIN.....	20-33
4G7	AUGER SWING HYDRAULIC HOSES,UNLOADING	70-68	7I3	BEARINGS, TAILINGS ELEVATOR CONVEYOR.....	120-172
8B18	AUGER SWIVEL SHROUD,HORIZONTAL UNLOADING....	130-9	7I4	BEARINGS, TAILINGS ELEVATOR CONVEYOR.....	120-173
8C2	AUGER, CROSS, FRONT, GRAIN TANK.....	130-17	3C8	BEARINGS, TRANSMISSION	50-19
8C3	AUGER, CROSS, REAR, GRAIN TANK	130-18	3C10	BEARINGS, TRANSMISSION	50-21
8C23	AUGER, HORIZONTAL UNLOADING	130-39	3E24	BEARINGS,HYDRO. DRIVE PUMP (EATON)	50-90
7G21	AUGER, LOADING.....	120-139	8G5	BEATER AND CYLINDER TACHOMETER.....	170-18
7H19	AUGER, LOWER TAILINGS	120-163	7D9	BEATER AND TACHOMETER DRIVE	120-49
7H20	AUGER, LOWER TAILINGS	120-164	7D10	BEATER AND TACHOMETER DRIVE	120-50
7G7	AUGER, LOWER, CLEAN GRAIN.....	120-125	7D12	BEATER BEARING LUBE BANK SYSTEM-RH SIDE	120-52
7H2	AUGER, LOWER, DIP AND POUR ELEVATOR	120-145	7D13	BEATER BEARING LUBE BANK, LH-HYDRO.	120-53
			7D14	BEATER BEARING LUBE BANK,LH (POSI).....	120-55

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
7D9	BEATER BELT	120-49	8D11	BELTS, PRIMARY COUNTERSHAFT SHEAVES (DUAL-RANGE CYLINDER DRIVE)	140-12
7D10	BEATER BELT	120-50	8G17	BELTS,DRIVE,ENGINE TO PRIMARY CTRSHAFT.....	170-32
8G5	BEATER BELT	170-18	8F19	BELTS,DRIVE,FEEDER HOUSE (VARIABLE DR.)	170-7
7D15	BEATER DRIVE	120-56	8G8	BELTS,DRIVE,SHOE GRAIN SUPPLY AUGERS.....	170-22
7D17	BEATER DRIVE	120-58	8F16	BELTS,HYDROSTATIC GROUND DRIVE.....	170-4
7D18	BEATER DRIVE (DUAL-RANGE CYLINDER DRIVE)	120-59	5D18	BEZEL, AIR LOUVER	90-35
7D16	BEATER DRIVE, DUAL-RANGE CYLINDER DRIVE (100 PER CENT BEATER SPEED)	120-57	7E25	BLADE, STRAW SPREADER	120-91
7B21	BEATER GRATE	120-9	2D10	BLADE, WINDSHIELD WIPER	40-53
7D17	BEATER IDLER	120-58	7E16	BLADES AND ROTOR, STRAW CHOPPER	120-82
7D17	BEATER IDLER MOUNTINGS.....	120-58	7E17	BLADES AND ROTOR, STRAW CHOPPER	120-83
8G5	BEATER SHEAVE	170-18	8E8	BLOCK SOLENOID, MAIN VALVE - SIDEHILL	150-13
1G9	BELL CRANK AND THROTTLE LINKAGE	30-15	6F19	BLOCK, CABLE, HEADER LEVELING (L.H.)-SH.....	110-112
8G4	BELT AND SHEAVES TORQ-SENSING CTRSHAFT.	170-17	1B16	BLOCK, CYLINDER (DH).....	20-4
8D20	BELT GUIDES, SEPARATOR DRIVE	140-22	1B18	BLOCK, CYLINDER (DH).....	20-6
8D20	BELT GUIDES, UNLOADING AUGER DRIVE	140-22	1C1	BLOCK, CYLINDER (TH 01)	20-14
7D10	BELT TACHOMETER DRIVE	120-50	1C3	BLOCK, CYLINDER (TH 01)	20-16
3D21	BELT TENSIONING MECHANISM,HYDROSTATIC DR.....	50-61	1C11	BLOCK, CYLINDER (TH 05)	20-24
7H11	BELT TIGHTENER, DIP AND POUR ELEVATOR	120-155	1B20	BLOCK, ENGINE SHORT (DH)	20-8
5D23	BELT, AIR CONDITIONING COMPRESSOR	90-40	1B24	BLOCK, ENGINE SHORT (DH)	20-12
2E10	BELT, ALTERNATOR.....	40-78	1C5	BLOCK, ENGINE SHORT (TH 01)	20-18
7B17	BELT, BEATER.....	120-5	1C9	BLOCK, ENGINE SHORT (TH 01)	20-22
7D9	BELT, BEATER.....	120-49	1C13	BLOCK, ENGINE SHORT (TH 05)	20-26
7D10	BELT, BEATER.....	120-50	3G22	BLOCK, MOTOR CYLINDER (FOUR-WHEEL DRIVE).....	50-142
8G5	BELT, BEATER.....	170-18	6F20	BLOCK,CABLE,HEADER LEVELING,L.H.-SH.....	110-113
7D16	BELT, BEATER DRIVE (DUAL-RANGE CYLINDER DRIVE)(100 PER CENT BEATER SPEED)	120-57	8E19	BLOCK,CHECK,AUTO.HEADER HEIGHT CONTROL	160-1
5E4	BELT, COMPRESSOR	90-46	2C7	BLOWER SWITCH	40-24
7C10	BELT, CYLINDER DRIVE INTERMEDIATE SHAFT (DUAL-RANGE CYLINDER DRIVE)	120-24	2D7	BLOWER SWITCH	40-49
8G5	BELT, CYLINDER TACHOMETER	170-18	2D7	BLOWER, CAB ROOF WIRING	40-49
8G18	BELT, DRIVE, SECONDARY COUNTERSHAFT	170-33	5D22	BLOWER, PRESSURIZER	90-39
6E13	BELT, FEEDER HOUSE LOWER SHEAVE-SH	110-79	1D9	BOLTS, HEAD (DH)	20-48
6E15	BELT, FEEDER HOUSE LOWER SHEAVES-SH	110-81	1D11	BOLTS, HEAD (TH)	20-50
1F8	BELT, FLAT ROTARY SCREEN	20-98	7G14	BOOT, CLEAN GRAIN ELEVATOR HOUSING	120-132
7G23	BELT, GEAR CASE, LOADING AUGER.....	120-141	4B11	BOOT, PARKING BRAKE CONTROL	60-2
4H4	BELT, HYDROSTATIC REEL PUMP.....	70-91	4B12	BOOT, PARKING BRAKE CONTROL	60-3
7B17	BELT, RASP-BAR CYLINDER.....	120-5	6E3	BOTTOM SHEETS, FEEDER HOUSE - SIDEHILL	110-69
7E21	BELT, REAR, STRAW CHOPPER	120-87	6E7	BOTTOM, FALSE, FEEDER HOUSE-SH	110-73
8F13	BELT, ROTARY SCREEN	170-1	2C21	BOX, CONTROL, LOW SHAFT SPEED MONITORING (AHC)	40-38
7E19	BELT, STRAW CHOPPER DRIVE	120-85	8E16	BOX, LEVELING CONTROL	150-23
7E4	BELT, STRAW SPREADER DRIVE	120-69	5B23	BOX, TOOL.....	80-15
7D9	BELT, TACHOMETER DRIVE	120-49	7G14	BRACE, CLEAN GRAIN ELEVATOR HOUSING	120-132
7C9	BELT,CYLINDER DRIVE INTERMEDIATE SHAFT.....	120-23	6F14	BRACE, FEEDER HOUSE (R.H.)-SH	110-107
7G17	BELT,DR.,CTRSHAFT.,CLEAN GRAIN ELEVATOR.....	120-135	6C14	BRACE, FEEDER HOUSE MIDDLE BELT	110-27
8F18	BELT,DRIVE,HYDRAULIC REEL LIFT	170-6	5B19	BRACES, CROSS, SEPARATOR	80-10
6C20	BELT,FDR.HSE.LOWER SHAFT (VARIABLE DR)	110-33	7C18	BRACES, SUPPORT CYLINDER INTERMEDIATE DRIVE (DUAL-RANGE CYLINDER DRIVE)	120-32
6E14	BELT,FEEDER HOUSE LOWER COUNTERSHAFT-SH	110-80	7C13	BRACES, SUPPORT, CYLINDER DRIVE	120-27
6E14	BELT,FEEDER HOUSE LOWER SHEAVES-SH	110-80	6C12	BRACES,IDLER,MID.,FDR.HSE.,L.H.(VAR.DR.)	110-25
3D6	BELT,POSI-TORQ DRIVE WHEEL CLUTCH SHEAVE	50-43	6C13	BRACES,IDLER,MID.,FDR.HSE.,L.H.,VAR.DR.- SH.....	110-26
3D19	BELT,PROPULSION DR.CTRSHAFT SHV,HYDRO.DR	50-59	2E12	BRACKET, ALTERNATOR.....	40-80
3D13	BELT,PROPULSION-DRIVE CTRSHAFT-POSI-TORQ.....	50-51	7G12	BRACKET, CLEAN GRAIN ELEVATOR HOUSING	120-130
7F7	BELT,SHOE GRAIN SUPPLY AUGERS DR.SHAFT	120-99	6C4	BRACKET, FEEDER CONVEYOR DRIVE (FIXED)	110-17
8G10	BELTS, CLEAN GRAIN ELEVATOR	170-25	6F17	BRACKET, FEEDER CONVEYOR DRIVE-SH	110-110
8G9	BELTS, DRIVE, CLEANING FAN	170-23	6F14	BRACKET, FEEDER HOUSE (R.H.)-SH	110-107
8F24	BELTS, DRIVE, FEEDER HOUSE (LONG)	170-12	6F1	BRACKET, FEEDER HOUSE LOWER SHAFT-SH	110-93
8G3	BELTS, DRIVE, FEEDER HOUSE (REG FIXED LESS REVERSER)	170-16	1G4	BRACKET, FUEL SHUT-OFF (TH)	30-10
8G1	BELTS, DRIVE, FEEDER HOUSE (REG. FIXED)	170-14	2C4	BRACKET, HARNESS, REAR CAB	40-21
8G2	BELTS, DRIVE, FEEDER HOUSE (SIDEHILL).....	170-15	6F19	BRACKET, HEADER LEVELING (L.H.)-SH	110-112
8F17	BELTS, DRIVE, POSI-TORQ GROUND	170-5	6F20	BRACKET, HEADER LEVELING, L.H.-SH	110-113
8D3	BELTS, ENGINE POWERSHAFT	140-3	8E5	BRACKET, LEVELING CYLINDER PIVOT-SH	150-10
8F15	BELTS, ENGINE R.H. SIDE.....	170-3	4I7	BRACKET, MOUNTING,PRESSURE CONTR. VALVE.....	70-121
8F25	BELTS, FEEDER HOUSE DRIVE (LONG RICE)	170-13	2E4	BRACKET, RADIO	40-71
8G10	BELTS, LOADING AUGER	170-25	6E22	BRACKET,F.H.VAR.DR.MIDDLE BELT TIGHTNR-SH.....	110-89
8D10	BELTS, PRIMARY COUNTERSHAFT SHEAVES.....	140-11	2C19	BRACKET,FDR.HSE.LOWER SHAFT SPD.SENSOR	40-36
			6E7	BRACKET,FDR.HSE.SIDE SHEETS-FRAME-SH	110-73

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
6F4	BRACKET,FEEDER CONVEYOR IDLER SHAFT-SH.....	110-96	1D2	CAMSHAFT GEAR (DH)	20-40
6E5	BRACKET,FEEDER HOUSE BOTTOM SHEETS-SH.....	110-71	1D3	CAMSHAFT GEAR (TH)	20-41
6E15	BRACKET,FEEDER HOUSE LOWER SHEAVES-SH.....	110-81	3H17	CAP, CAM LOBE MOTOR	50-166
6F10	BRACKET,FEEDER HOUSE R.H. SHIELD-SH.....	110-102	1F7	CAP, ENGINE COOLANT HEATER	20-97
6E2	BRACKET,FEEDER HOUSE TOP SHEETS-SH.....	110-67	1G15	CAP, EXHAUST RAIN	30-22
7F19	BRACKETS, CHAFFER FRAME	120-111	1G16	CAP, EXHAUST RAIN	30-23
4B11	BRAKE CONTROLS, PARKING	60-2	4D15	CAP, HYDRAULIC OIL RESERVOIR	70-2
4B12	BRAKE CONTROLS, PARKING	60-3	3G24	CARRIER, FIRST PLANET (FOUR-WHEEL DR.).....	50-144
4B14	BRAKE LINES	60-5	1H7	CENTER HOUSING, TURBOCHARGER (SCHWITZER)	30-43
4B16	BRAKE MASTER CYLINDER	60-7	1H3	CENTER HOUSING, TURBOCHARGER(AIRESEARCH)....	30-38
4B13	BRAKE PEDALS AND LINKAGE.....	60-4	1H5	CENTER HOUSING, TURBOCHARGER(AIRESEARCH)....	30-40
5C21	BRAKE PLATE	90-11	3F15	CENTER SECTION, HYDRO, DRIVE (EATON)	50-106
3G23	BRAKE PLATES (FOUR-WHEEL DRIVE).....	50-143	3F14	CENTER SECTION, HYDROSTATIC DRIVE (SUNDSTRAND).....	50-105
4B20	BRAKE SHOES AND DRUM.....	60-11	7F10	CHAFFER	120-102
4B17	BRAKE SLAVE CYLINDER	60-8	7F12	CHAFFER	120-104
2C10	BREAKER, CIRCUIT	40-27	7F17	CHAFFER FRAME	120-109
3E22	BRGS,TRUNNIONS,HYDRO.DR.PUMP SWASHPLATE ...	50-88	7F19	CHAFFER FRAME BRACKETS.....	120-111
2D2	BUZZER, WARNING	40-43	7F19	CHAFFER FRAME BRACKETS AND SWINGERS.....	120-111
2C7	BUZZER, WATER TEMPERATURE, SENDING UNIT	40-24	7F17	CHAFFER FRAME COVER	120-109
1D22	BYPASS VALVE, OIL COOLER (DH)	20-61	7F19	CHAFFER FRAME SWINGERS.....	120-111
1D23	BYPASS VALVE, OIL COOLER (TH 01)	20-62	7H5	CHAIN TIGHTENERS,DIP AND POUR ELEV.LOWER	120-149
1E4	BYPASS VALVE, OIL COOLER (TH 01)	20-67	7H7	CHAIN TIGHTENERS,DIP AND POUR UPPER ELEV.....	120-151
1E7	BYPASS VALVE, OIL COOLER (TH 05)	20-71	7C7	CHAIN, CONCAVE ADJUSTING CONTROLS	120-21
C			7G16	CHAIN, CONVEYOR, CLEAN GRAIN ELEVATOR	120-134
5D11	CAB.....	90-27	6F6	CHAIN, CONVEYOR, FEEDER-SH.....	110-98
5D20	CAB AIR FILTER	90-37	7F22	CHAIN, CRANK SHOE.....	120-115
5D14	CAB COVERS	90-31	6C4	CHAIN, DRIVE, FEEDER CONVEYOR (FIXED)	110-17
5D14	CAB DOORS	90-31	6F17	CHAIN, DRIVE, FEEDER CONVEYOR-SH.....	110-110
5D14	CAB HANDLE	90-31	6C2	CHAIN, FEEDER CONVEYOR	110-15
5D15	CAB ROOF AND SUPPORTS.....	90-32	6D14	CHAIN, FEEDER HOUSE LESS REVERSER UPPER SPROCKETS	110-52
5D17	CAB ROOF HEADLINER	90-34	6F1	CHAIN, FEEDER HOUSE LOWER SHAFT-SH	110-93
2D7	CAB ROOF WIRING BLOWER	40-49	6E13	CHAIN, FEEDER HOUSE LOWER SPROCKET-SH	110-79
2D7	CAB ROOF WIRING HARNESS	40-49	6F8	CHAIN, FEEDER HOUSE UPPER SHAFT-SH.....	110-100
5D1	CAB SEAL	90-17	6D3	CHAIN, FEEDER HOUSE UPPER SPROCKETS.....	110-40
5D14	CAB SHIELDS	90-31	6D12	CHAIN, FEEDER HOUSE UPPER SPROCKETS (WIT H REVERSER).....	110-50
5D12	CAB WINDOWS	90-29	7E5	CHAIN, STRAW WALKER	120-71
2C4	CAB, REAR, HARNESS BRACKET	40-21	7I3	CHAIN, TAILINGS ELEVATOR CONVEYOR	120-172
3D24	CABLE AND LEVER, HYDRO. DRIVE CONTROL.....	50-65	7I4	CHAIN, TAILINGS ELEVATOR CONVEYOR	120-173
6C18	CABLE AND LINKAGE, REVERSER CONTROL	110-31	7H9	CHAIN,CONVEYOR,DIP AND POUR ELEVATOR	120-153
3E3	CABLE MOUNTING, HYDRO. DR. CONTROL (SUNDSTRAND AND EATON)	50-68	8G9	CHAINS, DRIVE, STRAW WALKER	170-23
3E2	CABLE MOUNTING, HYDRO. DRIVE CONTROL	50-67	8F20	CHAINS, FEEDER HOUSE (LONG)	170-8
1G9	CABLE SUPPORTS AND THROTTLE LINKAGE	30-15	6F14	CHAINS, FEEDER HOUSE (R.H.)-SH	110-107
1G2	CABLE, FUEL SHUT-OFF CONTROL	30-8	8F22	CHAINS, FEEDER HOUSE (SIDEHILL)	170-10
1G3	CABLE, FUEL SHUT-OFF CONTROL	30-9	8F21	CHAINS, FEEDER HOUSE (VARIABLE DRIVE)	170-9
4F15	CABLE, VARIABLE CYLINDER CONTROL	70-51	8F23	CHAINS, FEEDER HOUSE-SH	170-11
2E21	CABLE, WIRING.....	40-90	5C19	CHANNEL SUPPORTS	90-9
3B21	CABLES AND MOUNTINGS, GEARSHIFT.....	50-7	8C4	CHANNELS, GRAIN TANK	130-19
2C7	CABLES, BATTERY.....	40-24	3F17	CHARGE PRESSURE RELIEF VALVE BLOCK (EATON).....	50-109
6F19	CABLES, HEADER LEVELING (L.H.)-SH	110-112	3E11	CHARGE PUMP MOUNTING, HYDROSTATIC DRIVE	50-77
6F18	CABLES, HEADER LEVELING - SIDEHILL	110-111	3E12	CHARGE PUMP MOUNTING, HYDROSTATIC DRIVE (EATON).....	50-78
6F20	CABLES, HEADER LEVELING, L.H.-SH.....	110-113	3E9	CHARGE PUMP, HYDROSTATIC DRIVE.....	50-75
3H10	CAM LOBE MOTOR AND SEALS.....	50-158	8E19	CHECK BLOCK, AUTO.HEADER HEIGHT CONTROL	160-1
3H17	CAM LOBE MOTOR BEARING.....	50-166	1H14	CHECK VALVE, FUEL (TH).....	30-50
3H10	CAM LOBE MOTOR BEARINGS.....	50-158	3H15	CHECK VALVES, CAM LOBE MOTOR	50-164
3H21	CAM LOBE MOTOR DESTROKE PUMP	50-171	7E7	CHOPPER HOUSING, STRAW	120-73
3H10	CAM LOBE MOTOR OUTER COVER	50-158	7E8	CHOPPER HOUSING, STRAW	120-74
3H17	CAM LOBE MOTOR QUILL.....	50-166	7E20	CHOPPER, STRAW, KNIFE AND SUPPORT	120-86
3H10	CAM LOBE MOTOR SHAFT	50-158	7E11	CHOPPER, STRAW, PLATE AND FINS.....	120-77
3H19	CAM LOBE MOTOR YOKE, PIVOTS AND CAPS	50-168	7E12	CHOPPER, STRAW, PLATE AND FINS.....	120-78
3B16	CAM, GEARSHIFT LEVER (POSI-TORQ)	50-2	8F8	CIRCUIT BOX, DIAL-A-MATIC CONVERSION.....	160-18
3C6	CAM, SHIFTER.....	50-17	2C23	CIRCUIT BOX, DIAL-A-MATIC HEADER HEIGHT CONTROL	40-40
1D2	CAMSHAFT (DH)	20-40			
1D3	CAMSHAFT (TH)	20-41			

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
2C1	CIRCUIT BOX, HARVESTRAK	40 - 18	1H22	CONNECTORS, FUEL INJECTION PUMP HOUSING (TH).....	30 - 60
2C10	CIRCUIT BREAKER AND RELAY PANEL	40 - 27	2F5	CONNECTORS, SUPPLEMENTARY TERMINALS.....	40 - 96
2D5	CIRCUIT BREAKER, ELECTRIC CLUTCH.....	40 - 47	8G24	CONSOLE COVER DECALS.....	170 - 39
2D5	CIRCUIT BREAKER, HARVESTRAK.....	40 - 47	5D9	CONSOLE COVERS	90 - 25
6F1	CLAMP, FEEDER HOUSE LOWER SHAFT-SH.....	110 - 93	5D9	CONSOLE PANEL	90 - 25
2C4	CLAMPS, HARNESS, REAR CAB.....	40 - 21	5C25	CONSOLE, SEAT, FRAME, AND SEALS.....	90 - 15
8G10	CLEAN GRAIN ELEVATOR DRIVE.....	170 - 25	2C1	CONSOLE, GRAIN LOSS (HARVESTRAK).....	40 - 18
7G17	CLEAN GRAIN ELEVATOR DRIVE COUNTERSHAFT	120 - 135	8E16	CONTROL BOX, LEVELING	150 - 23
7G19	CLEAN GRAIN ELEVATOR DRIVE TIGHTENER.....	120 - 137	2C21	CONTROL BOX, LOW SHAFT SPEED MONITORING (AHHC).....	40 - 38
7G11	CLEAN GRAIN ELEVATOR HOUSING.....	120 - 129	2C23	CONTROL BOX, LOW SHAFT SPD. MONITORING (DIAL-A-MATIC).....	40 - 40
7G12	CLEAN GRAIN ELEVATOR HOUSING.....	120 - 130	3D24	CONTROL CABLE AND LEVER, HYDRO. DRIVE.....	50 - 65
7G14	CLEAN GRAIN ELEVATOR HOUSING BOOT	120 - 132	6C18	CONTROL CABLE AND LINKAGE, REVERSER	110 - 31
8G10	CLEAN GRAIN ELEVATOR SHEAVES AND BELTS.....	170 - 25	3E2	CONTROL CABLE MOUNTING, HYDRO. DRIVE.....	50 - 67
7G7	CLEAN GRAIN LOWER AUGER AND HOUSING	120 - 125	3E3	CONTROL CABLE MOUNTING, HYDRO. DR. (SUNDSTRAND AND EATON).....	50 - 68
7G9	CLEAN GRAIN LOWER AUGER HOUSING.....	120 - 127	3F13	CONTROL HANDLE, HYDRO. DR. DISPLACEMENT (SUNDSTRAND).....	50 - 104
7F24	CLEANING FAN	120 - 117	1G7	CONTROL HOUSING, THROTTLE LINKAGE	30 - 13
7G3	CLEANING FAN AIR DUCTS	120 - 121	4G25	CONTROL LEVER, HYDRAULIC REEL LIFT	70 - 87
8G9	CLEANING FAN DRIVE BELTS	170 - 23	4G25	CONTROL LEVER, PLATFORM LIFT.....	70 - 87
8G9	CLEANING FAN DRIVE SHEAVES.....	170 - 23	1G7	CONTROL LEVER, THROTTLE LINKAGE	30 - 13
7G2	CLEANING FAN HOUSING	120 - 119	8F3	CONTROL LINKAGE	160 - 12
2C6	CLEANING FAN MAGNETIC SENSOR.....	40 - 23	2C1	CONTROL PANEL, HARVESTRAK COMBINE MONITOR.....	40 - 18
7G5	CLEANING FAN SPEED CONTROL.....	120 - 123	4F6	CONTROL PLUG, FLOW.....	70 - 42
2C1	CLEANING SHOE SENSOR	40 - 18	8F6	CONTROL SWITCH, AUTOMATIC HEADER HEIGHT	160 - 15
6E24	CLEVIS, F.H. VAR. DRIVE SHEAVE CONTROL-SH.....	110 - 91	3H1	CONTROL VALVE (FOUR-WHEEL DRIVE)	50 - 146
6E20	CLEVIS, FDR. HSE. LOWER BELT TIGHTENER-SH	110 - 87	3H24	CONTROL VALVE (FOUR-WHEEL DRIVE)	50 - 174
6E5	CLIP, FEEDER HOUSE BOTTOM SHEETS-SH	110 - 71	4G2	CONTROL VALVE KIT, SECONDARY	70 - 63
6F12	CLIP, FEEDER HOUSE LEFT-HAND SHIELD-SH.....	110 - 104	4G4	CONTROL VALVE KIT, SECONDARY	70 - 65
6E2	CLIP, FEEDER HOUSE TOP SHEETS-SH.....	110 - 67	4H2	CONTROL VALVE LINKAGE, REEL SPEED	70 - 89
6E7	CLIP, FEEDER HOUSE SIDE SHEETS-FRAME-SH.....	110 - 73	3H2	CONTROL VALVE SOLENOID (FOUR-WHEEL DR.)	50 - 147
6D24	CLOSURE, INNER, FEEDER HOUSE-SH	110 - 63	3H25	CONTROL VALVE SOLENOID (FOUR-WHEEL DR.)	50 - 176
6D24	CLOSURE, OUTER, FEEDER HOUSE-SH.....	110 - 63	3F11	CONTROL VALVE, HYDRO. DR. DISPLACEMENT (EATON).....	50 - 102
5C21	CLUTCH COVER	90 - 11	3F6	CONTROL VALVE, HYDRO. DRIVE DISPLACEMENT (SUNDSTRAND).....	50 - 97
3D2	CLUTCH MASTER CYLINDER	50 - 39	3F7	CONTROL VALVE, HYDRO. DRIVE DISPLACEMENT (SUNDSTRAND).....	50 - 98
3D4	CLUTCH OIL LINE	50 - 41	3F9	CONTROL VALVE, HYDRO. DRIVE DISPLACEMENT (SUNDSTRAND).....	50 - 100
3C25	CLUTCH PEDAL AND LINKAGE.....	50 - 37	4H15	CONTROL VALVE, HYDROSTATIC DR. REEL FLOW	70 - 103
3D6	CLUTCH SHEAVE, DRIVE WHEEL, POSI-TORQ	50 - 43	4E8	CONTROL VALVE, MAIN HYD. POPPETS-HYDRO.....	70 - 19
3D3	CLUTCH SLAVE CYLINDER	50 - 40	4E11	CONTROL VALVE, MAIN HYD. POPPETS-HYDRO.....	70 - 22
3D10	CLUTCH, DRIVE WHEEL	50 - 47	4E8	CONTROL VALVE, MAIN HYD. SPRINGS-HYDRO.	70 - 19
2B19	CLUTCH, HEADER ELECTROMAGNETIC.....	40 - 9	4E11	CONTROL VALVE, MAIN HYD. SPRINGS-HYDRO.	70 - 22
2E16	COIL, STARTER (DH)	40 - 84	4E9	CONTROL VALVE, MAIN POPPETS (HYDRO-SH).....	70 - 20
1G5	COLD WEATHER STARTING AID	30 - 11	4E9	CONTROL VALVE, MAIN SPRINGS (HYDRO-SH)	70 - 20
4B22	COLUMN AND WHEEL, STEERING.....	60 - 13	4I7	CONTROL VALVE, PRESSURE	70 - 121
2E15	COMMUTATOR END FRAME, STARTER	40 - 83	4F18	CONTROL VALVE, SECONDARY.....	70 - 55
5C3	COMPARTMENT MIDDLE DOOR, ENGINE.....	80 - 20	4F19	CONTROL VALVE, SECONDARY.....	70 - 56
5E6	COMPRESSOR CLUTCH AND SERVICE VALVE.....	90 - 49	4F21	CONTROL VALVE, SECONDARY.....	70 - 58
5E9	COMPRESSOR HARDWARE KIT	90 - 53	3H4	CONTROL VALVES, FLOW (FOUR-WHEEL DRIVE)	50 - 149
5E2	COMPRESSOR HARNESS	90 - 44	3I2	CONTROL VALVES, FLOW (FOUR-WHEEL DRIVE)	50 - 179
5E7	COMPRESSOR KIT	90 - 50	1G2	CONTROL, FUEL SHUT-OFF	30 - 8
5E4	COMPRESSOR MOUNTING AND SUPPORTS	90 - 46	1G3	CONTROL, FUEL SHUT-OFF	30 - 9
5E5	COMPRESSOR MOUNTING AND SUPPORTS	90 - 47	7G5	CONTROL, SPEED, CLEANING FAN.....	120 - 123
5E7	COMPRESSOR PARTS.....	90 - 50	4F15	CONTROL, VARIABLE CYLINDER	70 - 51
5E2	COMPRESSOR RELAY	90 - 44	7C7	CONTROLS, CONCAVE ADJUSTING	120 - 21
2C7	COMPRESSOR WIRING HARNESS.....	40 - 24	4B11	CONTROLS, PARKING BRAKE	60 - 2
5D23	COMPRESSOR, AIR CONDITIONING	90 - 40	4B12	CONTROLS, PARKING BRAKE	60 - 3
7C7	CONCAVE ADJUSTING CONTROLS	120 - 21	3D11	CONTROLS, POSI-TORQ GROUND SPEED.....	50 - 49
7C5	CONCAVE ADJUSTING SHAFT	120 - 19	7I10	CONTROLS, SEPARATOR DRIVE	120 - 181
7B21	CONCAVE, OPEN-BAR	120 - 9	4H12	CONVERSION HOSES AND COUPLERS	70 - 100
7C2	CONCAVE, SPIKE-TOOTH	120 - 15			
5E12	CONDENSER, RECEIVER, AIR CONDITIONER LINES	90 - 56			
5E11	CONDENSER, RECEIVER, AIR CONDITIONER LINES.....	90 - 55			
1B14	CONDITIONER, COOLANT	20 - 2			
1C22	CONNECTING RODS (DH)	20 - 35			
1C23	CONNECTING RODS (DH)	20 - 36			
1C21	CONNECTING RODS (TH)	20 - 34			
1C24	CONNECTING RODS (TH)	20 - 37			
2F1	CONNECTOR, ELECTRICAL, SERVICE KIT	40 - 92			

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
8F8	CONVERSION, DIAL-A-MATIC HEADER HEIGHT CONTROL	160 - 18	1D1	CRANKSHAFT OIL SEAL HOUSING	20 - 39
7G16	CONVEYOR CHAIN, CLEAN GRAIN ELEVATOR	120 - 134	1C19	CRANKSHAFT PULLEY	20 - 32
6F6	CONVEYOR CHAIN, FEEDER-SH	110 - 98	7E2	CRANKSHAFT, STRAW WALKER FRONT	120 - 67
1B14	COOLANT CONDITIONER	20 - 2	7E4	CRANKSHAFT, STRAW WALKER REAR	120 - 69
1F6	COOLANT HEATER, ENGINE	20 - 96	1C18	CRANKSHAFT, UNDERSIZE MAIN BEARING (DH)	20 - 31
1E10	COOLER, ENGINE OIL	20 - 74	3G12	CRAWLER BEARINGS	50 - 131
1F7	CORD, ENGINE COOLANT HEATER	20 - 97	3G14	CRAWLER BEARINGS	50 - 133
5E11	CORE, VALVE	90 - 55	3G16	CRAWLER DRIVE BEARINGS	50 - 135
5B25	CORNER FRAME	80 - 17	3G16	CRAWLER DRIVE SHIELD	50 - 135
8G18	COUNTERSHAFT DRIVE	170 - 33	3G16	CRAWLER DRIVE SPROCKET	50 - 135
8D16	COUNTERSHAFT DRIVE IDLER, SECONDARY	140 - 17	3G11	CRAWLER FRAME, R.H. AND L.H.	50 - 129
3D13	COUNTERSHAFT SHEAVE, PROPULSION-DRIVE	50 - 51	3G12	CRAWLER IDLER	50 - 131
8D10	COUNTERSHAFT SHEAVES, PRIMARY	140 - 11	3G11	CRAWLER ROLLERS	50 - 129
8D11	COUNTERSHAFT SHEAVES, PRIMARY (DUAL-RANGE CYLINDER DRIVE)	140 - 12	3G12	CRAWLER SHAFT	50 - 131
6E15	COUNTERSHAFT, LOWER, FEEDER HOUSE-SH	110 - 81	3G14	CRAWLER SHAFTS	50 - 133
8D5	COUNTERSHAFT, PRIMARY AND MOUNTINGS	140 - 5	3G10	CRAWLER SHOES	50 - 128
3D16	COUNTERSHAFT, PROPULSION-DRIVE	50 - 55	3G14	CRAWLER TIGHTENER	50 - 133
8D14	COUNTERSHAFT, SECONDARY	140 - 15	3G10	CRAWLER TRACKS	50 - 128
3C8	COUNTERSHAFT, TRANSMISSION	50 - 19	3G10	CRAWLER TRACKS AND SHOES	50 - 128
8B24	COUNTERSHAFT, UNLOADING AUGER	130 - 15	8C11	CROSS AUGER DRIVE TIGHTENERS, GRAIN TANK	130 - 27
7G17	COUNTERSHAFT, DRIVE, CLEAN GRAIN ELEVATOR	120 - 135	8G16	CROSS AUGER DRIVES	170 - 31
7H10	COUNTERSHAFT, DRIVE, DIP AND POUR ELEVATOR	120 - 154	8C2	CROSS AUGER, FRONT, GRAIN TANK	130 - 17
6E14	COUNTERSHAFT, FEEDER HOUSE LOWER-SH	110 - 80	8C3	CROSS AUGER, REAR, GRAIN TANK	130 - 18
6E16	COUNTERSHAFT, FEEDER HOUSE UPPER-SH	110 - 82	5B19	CROSS BRACES, SEPARATOR	80 - 10
8F18	COUNTERSHAFT, PRIMARY TO HYD. REEL LIFT	170 - 6	7D5	CTRSHAFT, CYL. DRIVE BRG. HSG. LUBE BANK-RH	120 - 44
3D17	COUNTERSHAFT, PROPULSION DRIVE-POSI-TORQ	50 - 56	7E15	CURTAIN AND SHIELDS, STRAW CHOPPER	120 - 81
7H2	COUNTERSHAFT, UPPER, DIP AND POUR ELEVATOR	120 - 145	7D22	CURTAINS, SEPARATOR	120 - 63
6C24	COUNTERSHAFT, UPPER, FDR. HSE.-VARIABLE DR.	110 - 37	5D5	CUSHIONS, SEAT (PERSONAL POSTURE)	90 - 21
3E8	COUPLER, HYDROSTATIC DRIVE MOTOR	50 - 74	3E17	CYL. BLOCK, HYDRO. DR. PUMP(SUNDSTRAND)	50 - 83
6B14	COUPLER, QUIK-TATCH (L.H.)	110 - 2	3E18	CYL. BLOCK, HYDRO. DR. PUMP(SUNDSTRAND)	50 - 84
6B15	COUPLER, QUIK-TATCH (R.H.)	110 - 3	3E20	CYL. BLOCK, HYDRO. DRIVE PUMP (EATON)	50 - 86
4H10	COUPLERS AND HOSES FOR COMBINES	70 - 98	7D5	CYL. DR. CTRSHAFT. BRG. HSG. LUBE BANK-RH	120 - 44
2C9	COVER PLATES, ELEC., ENGINE COMPT. FIREWALL	40 - 26	7D4	CYL. SHAFT BRG. HSG. LUBE BANK (R.H.)	120 - 43
7F17	COVER, CHAFFER FRAME	120 - 109	7D7	CYL. SHAFT BRG. LUBE BANK SYS., L.H. (POSI)	120 - 47
5C21	COVER, CLUTCH	90 - 11	1B16	CYLINDER BLOCK (DH)	20 - 4
7C20	COVER, DUAL-RANGE AND CYLINDER GEAR CASE	120 - 34	1B18	CYLINDER BLOCK (DH)	20 - 6
3G24	COVER, FIRST PLANET (FOUR-WHEEL DR.)	50 - 144	1C1	CYLINDER BLOCK (TH 01)	20 - 14
3E15	COVER, FRONT, HYDRO. DRIVE PUMP (EATON)	50 - 81	1C3	CYLINDER BLOCK (TH 01)	20 - 16
3E14	COVER, FRONT, HYDROSTATIC DRIVE (SUNDSTRAND)	50 - 80	1C11	CYLINDER BLOCK (TH 05)	20 - 24
3E13	COVER, FRONT, HYDROSTATIC DRIVE PUMP (SUNDSTRAND)	50 - 79	3G22	CYLINDER BLOCK, MOTOR (FOUR-WHEEL DRIVE)	50 - 142
3H15	COVER, INNER	50 - 164	7D20	CYLINDER COVER DEFLECTOR	120 - 61
3H10	COVER, OUTER, CAM LOBE MOTOR	50 - 158	7D20	CYLINDER COVERS	120 - 61
1D13	COVER, ROCKER ARM (DH)	20 - 52	5B10	CYLINDER DOOR SEALS	80 - 1
2E19	COVER, STARTER SOLENOID (DH)	40 - 87	7C9	CYLINDER DRIVE INTERMEDIATE SHAFT	120 - 23
1D4	COVER, TACHOMETER DRIVE GEAR	20 - 42	7C10	CYLINDER DRIVE INTERMEDIATE SHAFT (DUAL-RANGE CYLINDER DRIVE)	120 - 24
1C25	COVER, TIMING GEAR	20 - 38	7C13	CYLINDER DRIVE SUPPORT BRACES	120 - 27
5D16	COVERS AND INNER ROOF	90 - 33	7C15	CYLINDER DRIVE TIGHTENER	120 - 29
5D14	COVERS, CAB	90 - 31	1D9	CYLINDER HEAD (DH)	20 - 48
5D9	COVERS, CONSOLE	90 - 25	1D11	CYLINDER HEAD (TH)	20 - 50
7D20	COVERS, CYLINDER	120 - 61	1D9	CYLINDER HEAD GASKET (DH)	20 - 48
8C5	COVERS, GRAIN TANK FRONT AND REAR, ADJUSTABLE	130 - 20	1D11	CYLINDER HEAD GASKET (TH)	20 - 50
8C6	COVERS, GRASS SEED UNLOADING AUGER	130 - 21	1F1	CYLINDER HEAD GASKET KIT (TH)	20 - 90
8C4	COVERS, GRAIN TANK INNER UNLOADING AUGER	130 - 19	1E23	CYLINDER HEAD GASKET SET (DH)	20 - 88
1G9	CRANK, BELL	30 - 15	4I4	CYLINDER KIT, HEADER LIFT HYDRAULIC	70 - 118
1G13	CRANKCASE VENT TUBE	30 - 20	4I5	CYLINDER KIT, HEADER LIFT HYDRAULIC-SH	70 - 119
1D13	CRANKCASE VENTILATOR TUBE (DH)	20 - 52	1B14	CYLINDER LINER PACKING LUBRICANT	20 - 2
1C19	CRANKSHAFT	20 - 32	1C22	CYLINDER LINERS (DH)	20 - 35
7F22	CRANKSHAFT DRIVE TIGHTENER, SHOE	120 - 115	1C23	CYLINDER LINERS (DH)	20 - 36
1C17	CRANKSHAFT KIT, UNDERSIZE CONNECTING ROD JOURNAL (DH)	20 - 30	1C21	CYLINDER LINERS (TH)	20 - 34
1D1	CRANKSHAFT OIL SEAL	20 - 39	1C24	CYLINDER LINERS (TH)	20 - 37
			8E5	CYLINDER PIVOT BRACKET, LEVELING-SH	150 - 10
			7D3	CYLINDER SHAFT BRG. HSG. LUBE BANK-RH SIDE	120 - 42
			7D6	CYLINDER SHAFT BRG. LUBE BANK, LH (HYDRO)	120 - 45
			7D21	CYLINDER SHEAR BAR	120 - 62
			7C4	CYLINDER SPEED TACHOMETER	120 - 17
			8G5	CYLINDER TACHOMETER AND BEATER	170 - 18

ALPHABETICAL INDEX - CONTINUED

<i>GRID</i>		<i>PAGE</i>	<i>GRID</i>		<i>PAGE</i>
8G5	CYLINDER TACHOMETER BELT	170 - 18	7H11	DIP AND POUR ELEVATOR BELT TIGHTENER.....	120 - 155
8G5	CYLINDER TACHOMETER SHEAVE	170 - 18	7H9	DIP AND POUR ELEVATOR CONVEYOR CHAIN	120 - 153
4B16	CYLINDER, BRAKE MASTER	60 - 7	7H10	DIP AND POUR ELEVATOR DRIVE COUNTERSHAFT	120 - 154
4B17	CYLINDER, BRAKE SLAVE.....	60 - 8	8G12	DIP AND POUR ELEVATOR DRIVE SHEAVES	170 - 27
3D2	CYLINDER, CLUTCH MASTER.....	50 - 39	8G12	DIP AND POUR ELEVATOR DRIVE SPROCKETS	170 - 27
3D3	CYLINDER, CLUTCH SLAVE	50 - 40	7H2	DIP AND POUR ELEVATOR LOWER AUGER	120 - 145
4I3	CYLINDER, HEADER LIFT HYDRAULIC-SH	70 - 117	7H4	DIP AND POUR ELEVATOR LOWER HOUSING	120 - 147
4I2	CYLINDER, HYDRAULIC, HEADER LIFT	70 - 116	8G12	DIP AND POUR ELEVATOR TIGHTENERS.....	170 - 27
7C18	CYLINDER, INTERMEDIATE DRIVE SUPPORT BRACES (DUAL-RANGE CYLINDER DRIVE)	120 - 32	7H15	DIP AND POUR ELEVATOR TOP HOOD	120 - 159
8D25	CYLINDER, LEVELING (SH)	150 - 5	7H16	DIP AND POUR ELEVATOR TOP SHIELD	120 - 160
8D23	CYLINDER, LEVELING-SH	150 - 3	7H7	DIP AND POUR ELEVATOR UPPER CHAIN IDLERS	120 - 151
8D11	CYLINDER, PRIMARY COUNTERSHAFT SHEAVES (DUAL-RANGE CYLINDER DRIVE)	140 - 12	7H2	DIP AND POUR ELEVATOR UPPER COUNTERSHAFT ..	120 - 145
7B17	CYLINDER, RASP-BAR	120 - 5	1D5	DIPSTICK TUBE (DH)	20 - 44
7B18	CYLINDER, RASP-BAR (DUAL-RANGE CYLINDER DRIVE)	120 - 6	1D7	DIPSTICK TUBE (TH)	20 - 46
7B23	CYLINDER, SPIKE-TOOTH	120 - 11	1D5	DIPSTICK, ENGINE OIL (DH)	20 - 44
7B24	CYLINDER, SPIKE-TOOTH (DUAL-RANGE CYLINDER DRIVE)	120 - 13	1D7	DIPSTICK, ENGINE OIL (TH)	20 - 46
4H24	CYLINDER, HYD., VARIABLE DRIVE FDR.HSE-SH	70 - 112	8F13	DISK, ROTARY SCREEN	170 - 1
4G10	CYLINDER, HYDRAULIC, UNLOADING AUGER SWING	70 - 71	3F11	DISPLACEMENT CONTROL VALVE, HYDRO. DR. (EATON).....	50 - 102
4C14	CYLINDER, STEERING (FOUR-WHEEL DRIVE).....	60 - 30	3F7	DISPLACEMENT CONTROL VALVE, HYDRO. DRIVE (SUNDSTRAND).....	50 - 98
4C12	CYLINDER, STEERING-ADJUSTABLE REAR AXLE.....	60 - 28	3F9	DISPLACEMENT CONTROL VALVE, HYDRO. DRIVE (SUNDSTRAND).....	50 - 100
4C12	CYLINDER, STEERING-FIXED REAR AXLE	60 - 28	3F6	DISPLACEMENT CONTROL VALVE, HYDRO. DRIVE (SUNSTRAND).....	50 - 97
4C14	CYLINDER, STEERING-HVY.DUTY REAR AXLE (FOUR-WHEEL DRIVE).....	60 - 30	1F11	DISPLACER, ROTARY SCREEN DRIVE BELT	20 - 101
4G11	CYLINDER, UNLOADING AUGER SWING HYDRAULIC	70 - 72	8E10	DIVIDER MOUNTING, FLOW - SIDEHILL	150 - 16
4G13	CYLINDER, UNLOADING AUGER SWING HYDRAULIC	70 - 74	8E11	DIVIDER MOUNTING, FLOW - SIDEHILL	150 - 17
4G15	CYLINDER, UNLOADING AUGER SWING HYDRAULIC	70 - 76	8E10	DIVIDER VALVE, FLOW - SIDEHILL	150 - 16
			8E11	DIVIDER VALVE, FLOW - SIDEHILL	150 - 17
			2D8	DOME LIGHT	40 - 51
	D		7G11	DOOR, CLEAN GRAIN ELEVATOR	120 - 129
8G25	DECAL, PANEL	170 - 40	7G14	DOOR, CLEAN GRAIN ELEVATOR HOUSING	120 - 132
8G24	DECALS, CONSOLE COVER	170 - 39	7G9	DOOR, CLEAN GRAIN LOWER AUGER	120 - 127
8G22	DECALS, FRONT AND REAR.....	170 - 37	5C2	DOOR, ENGINE COMPARTMENT	80 - 19
8G24	DECALS, INSTRUMENT PANEL.....	170 - 39	5C3	DOOR, ENGINE COMPARTMENT MIDDLE.....	80 - 20
8G19	DECALS, RIGHT-HAND AND LEFT-HAND.....	170 - 34	6E2	DOOR, FRONT, FEEDER HOUSE TOP SHEETS-SH.....	110 - 67
8H1	DECALS, SEPARATOR	170 - 41	8B12	DOOR, GRAIN TANK.....	130 - 3
8D18	DECLUTCHING IDLER.....	140 - 19	8B14	DOOR, GRAIN TANK.....	130 - 5
7D20	DEFLECTOR, CYLINDER COVER	120 - 61	8B20	DOOR, GRAIN TANK.....	130 - 11
6D24	DEFLECTOR, FEEDER HOUSE-SH	110 - 63	5C21	DOOR, INSPECTION, OPERATOR'S PLATFORM.....	90 - 11
3H21	DESTROKE PUMP, CAM LOBE MOTOR.....	50 - 171	5D9	DOOR, PANEL	90 - 25
8F7	DIAL-A-MATIC HDR.HGT.CONTROL SWITCH.....	160 - 17	5C8	DOOR, ROTARY SCREEN	80 - 25
8F5	DIAL-A-MATIC HDR.HGT.CONTROL,AMPLIFIER	160 - 14	7B15	DOOR, STONE TRAP	120 - 3
2C23	DIAL-A-MATIC HEADER HEIGHT CONTROL	40 - 40	7B21	DOOR, STONE TRAP	120 - 9
8F3	DIAL-A-MATIC HEADER HEIGHT CONTROL	160 - 12	5C23	DOOR, TAILINGS ELEVATOR	90 - 13
8F8	DIAL-A-MATIC HEADER HEIGHT CONTROL CONVERSION	160 - 18	7H25	DOOR, TAILINGS ELEVATOR	120 - 169
2C23	DIAL-A-MATIC HEADER HEIGHT CONTROL, CIRCUIT BOX	40 - 40	7I1	DOOR, TAILINGS ELEVATOR	120 - 170
3C6	DIFFERENTIAL GASKET	50 - 17	6E2	DOOR,CENTER,FEEDER HOUSE TOP SHEETS-SH	110 - 67
3C11	DIFFERENTIAL GEARS AND SHAFTS	50 - 22	6E2	DOOR,REAR,FEEDER HOUSE TOP SHEETS-SH	110 - 67
3C13	DIFFERENTIAL GEARS AND SHAFTS	50 - 24	5D14	DOORS, CAB	90 - 31
3C5	DIFFERENTIAL HOUSING.....	50 - 16	5B10	DOORS, CYLINDER, SEPARATOR	80 - 1
3C6	DIFFERENTIAL HOUSING COVER	50 - 17	6D25	DOORS, FEEDER HOUSE - SIDEHILL	110 - 65
3C5	DIFFERENTIAL SHIFTER FORKS	50 - 16	8G18	DR.,PRIMARY CTRSHFT TO SECONDARY CTRSHFT	170 - 33
2E6	DIODE RING, ALTERNATOR, 72 AMP.....	40 - 74	5E15	DRAIN TUBES, EVAPORATOR	90 - 59
2E8	DIODE TRIO ASSEMBLY,ALTERNATOR,90 AMP.....	40 - 76	1F17	DRIVE BELT TIGHTENER,RADIATOR FAN.....	20 - 107
7H9	DIP AND POUR ELEV.CONV. UPPER SPROCKETS	120 - 153	1F13	DRIVE BELT TIGHTENER,ROTARY SCREEN.....	20 - 103
7H12	DIP AND POUR ELEV.GR.TANK LOADING AUGER	120 - 156	8F18	DRIVE BELT,HYDRAULIC REEL LIFT	170 - 6
7H5	DIP AND POUR ELEV.LOWER CHAIN TIGHTENERS	120 - 149	6C5	DRIVE CHAIN GUIDES, FEEDER CONVEYOR.....	110 - 18
7H7	DIP AND POUR ELEV.UPPER CHAIN TIGHTENERS.....	120 - 151	6C4	DRIVE CHAIN, FEEDER CONVEYOR (FIXED)	110 - 17
7H13	DIP AND POUR ELEVATOR AUGER EXTENSION.....	120 - 157	6F17	DRIVE CHAIN, FEEDER CONVEYOR-SH	110 - 110
7H13	DIP AND POUR ELEVATOR AUGER HOUSING.....	120 - 157	7G17	DRIVE COUNTERSHAFT,CLEAN GRAIN ELEVATOR	120 - 135
7H13	DIP AND POUR ELEVATOR AUGER SHIELD.....	120 - 157	8D19	DRIVE IDLER, FEEDER HOUSE	140 - 21
			8D16	DRIVE IDLER, SECONDARY COUNTERSHAFT	140 - 17
			3E8	DRIVE MOTOR COUPLER, HYDROSTATIC	50 - 74
			3E8	DRIVE MOTOR MOUNTING, HYDROSTATIC	50 - 74
			4H7	DRIVE REEL HYDRAULIC HOSES	70 - 94

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE
6D19	DRIVE SHAFT, HEADER - SIDEHILL.....	110 - 57
6D20	DRIVE SHAFT, HEADER-SIDEHILL	110 - 59
7F7	DRIVE SHAFT, SHOE GRAIN SUPPLY AUGERS.....	120 - 99
8F18	DRIVE SHEAVES,HYDRAULIC REEL LIFT	170 - 6
7F9	DRIVE TIGHTNR.,SHOE GR.SUPPLY AUGERS	120 - 101
7G19	DRIVE TIGHTENER, CLEAN GRAIN ELEVATOR	120 - 137
7C15	DRIVE TIGHTENER, CYLINDER.....	120 - 29
8C11	DRIVE TIGHTENERS,CROSS AUGER,GRAIN TANK	130 - 27
3B22	DRIVE WHEEL AND SPACERS	50 - 8
3B23	DRIVE WHEEL AXLE.....	50 - 9
3B24	DRIVE WHEEL AXLE (SH)	50 - 10
3D10	DRIVE WHEEL CLUTCH	50 - 47
3D8	DRIVE WHEEL CLUTCH HOUSING	50 - 45
3D8	DRIVE WHEEL CLUTCH THROW-OUT CONTROLS	50 - 45
3D10	DRIVE WHEEL SHAFT	50 - 47
7D15	DRIVE, BEATER.....	120 - 56
7D17	DRIVE, BEATER.....	120 - 58
7D18	DRIVE, BEATER (DUAL-RANGE CYLINDER DRIVE)	120 - 59
7D16	DRIVE, BEATER, DUAL-RANGE CYLINDER DRIVE (100 PER CENT BEATER SPEED)	120 - 57
8G10	DRIVE, CLEAN GRAIN ELEVATOR	170 - 25
6D8	DRIVE, FIXED	110 - 45
8G10	DRIVE, LOADING AUGER.....	170 - 25
7C17	DRIVE, SLOW SPEED CYLINDER	120 - 31
8G16	DRIVES, CROSS AUGER	170 - 31
8G7	DRIVES, STRAW CHOPPER	170 - 21
8G7	DRIVES, STRAW SPREADER	170 - 21
8G14	DRIVES, TAILINGS ELEVATOR AND AUGER.....	170 - 29
8G16	DRIVES, UNLOADING AUGER.....	170 - 31
8G16	DRIVES, VERTICAL UNLOADING AUGER	170 - 31
8E24	DROP RATE VALVE,AUTO.HDR.HGT.CONTROL	160 - 7
4B20	DRUM, BRAKE SHOES.....	60 - 11
6C1	DRUM, FEEDER CONVEYOR.....	110 - 14
6F4	DRUM, FEEDER-SH.....	110 - 96
7D18	DUAL-RANGE CYLINDER DRIVE (BEATER DRIVE)	120 - 59
7C24	DUAL-RANGE CYLINDER DRIVE GEAR CASE SHIELD	120 - 39
7C23	DUAL-RANGE CYLINDER DRIVE LOCKOUT ARM.....	120 - 37
7C22	DUAL-RANGE CYLINDER DRIVE PINION GEARS	120 - 36
7D1	DUAL-RANGE CYLINDER DRIVE TIGHTENER.....	120 - 40
7D16	DUAL-RANGE CYLINDER DRIVE, BEATER DRIVE (100 PER CENT BEATER SPEED)	120 - 57
7C20	DUAL-RANGE CYLINDER GEAR CASE	120 - 34
7G3	DUCTS, AIR, CLEANING FAN	120 - 121

E

2D5	ELECTRIC CLUTCH CIRCUIT BREAKER	40 - 47
2D2	ELECTRIC CLUTCH SWITCH.....	40 - 43
8F3	ELECTRIC HARNESS	160 - 12
2F1	ELECTRICAL CONNECTOR SERVICE KIT	40 - 92
2B19	ELECTROMAGNETIC CLUTCH, HEADER	40 - 9
1G12	ELEMENT, AIR CLEANER.....	30 - 19
7G12	ELEVATOR, CLEAN GRAIN HOUSING	120 - 130
7G11	ELEVATOR, HOUSING, CLEAN GRAIN.....	120 - 129
7H25	ELEVATOR, HOUSING, TAILINGS	120 - 169
2E15	END FRAME, STARTER COMMUTATOR	40 - 83
5C3	ENGINE COMPARTMENT MIDDLE DOOR	80 - 20
5C5	ENGINE COMPARTMENT PANEL, FRONT.....	80 - 22
5B25	ENGINE COMPARTMENT REAR SHEET	80 - 17
5C2	ENGINE COMPARTMENT UPPER DOOR	80 - 19
5C6	ENGINE COMPARTMENT WALKWAY	80 - 23
2C7	ENGINE COMPARTMENT WIRING HARNESS	40 - 24
2C9	ENGINE COMPT.FIREWALL ELEC.COVER PLATES	40 - 26
1F6	ENGINE COOLANT HEATER	20 - 96

GRID		PAGE
1F7	ENGINE COOLANT HEATER	20 - 97
1B13	ENGINE OIL	20 - 1
1E10	ENGINE OIL COOLER.....	20 - 74
1D5	ENGINE OIL DIPSTICK (DH)	20 - 44
1D7	ENGINE OIL DIPSTICK (TH).....	20 - 46
1E8	ENGINE OIL FILTER (DH).....	20 - 72
1F18	ENGINE OIL PRESSURE GAUGE LINE	20 - 108
1D17	ENGINE OIL PUMP (DH).....	20 - 56
1D19	ENGINE OIL PUMP (DH).....	20 - 58
1D23	ENGINE OIL PUMP (TH 01)	20 - 62
1E1	ENGINE OIL PUMP (TH 01)	20 - 64
1E5	ENGINE OIL PUMP (TH 05)	20 - 68
1C15	ENGINE OVERHAUL KIT.....	20 - 28
8D3	ENGINE POWERSHAFT	140 - 3
8F15	ENGINE R.H. SIDE BELT TIGHTENERS	170 - 3
8F15	ENGINE R.H. SIDE BELTS	170 - 3
8F15	ENGINE R.H. SIDE SHEAVES	170 - 3
1F4	ENGINE RAIL EXTENSION.....	20 - 94
1F1	ENGINE REBUILD GASKET KIT (TH)	20 - 90
1E23	ENGINE REBUILD GASKET SET (DH)	20 - 88
1B20	ENGINE SHORT BLOCK (DH)	20 - 8
1B24	ENGINE SHORT BLOCK (DH)	20 - 12
1C5	ENGINE SHORT BLOCK (TH 01).....	20 - 18
1C9	ENGINE SHORT BLOCK (TH 01).....	20 - 22
1C13	ENGINE SHORT BLOCK (TH 05).....	20 - 26
1B15	ENGINE SHORT BLOCK SERIAL NUMBER PLATE	20 - 3
1F4	ENGINE SUPPORTS	20 - 94
1D15	ENGINE TEMPERATURE SENDER (DH).....	20 - 54
1D15	ENGINE TEMPERATURE SWITCH (DH)	20 - 54
8G17	ENGINE TO PRIMARY CTRSHAFT.DRIVE BELTS	170 - 32
1B14	ENGINE VALVE STEM LUBRICANT.....	20 - 2
2D2	ETHER START SWITCH	40 - 43
5E15	EVAPORATOR	90 - 59
5E15	EVAPORATOR DRAIN TUBES	90 - 59
1E22	EXHAUST MANIFOLD (TH).....	20 - 87
1E21	EXHAUST MANIFOLD GASKETS (DH)	20 - 86
1E22	EXHAUST MANIFOLD GASKETS (TH).....	20 - 87
1E21	EXHAUST MANIFOLDS (DH)	20 - 86
1G15	EXHAUST PIPE	30 - 22
1G16	EXHAUST PIPE	30 - 23
1D9	EXHAUST VALVES (DH).....	20 - 48
1D11	EXHAUST VALVES (TH)	20 - 50
5E15	EXPANSION VALVE, AIR CONDITIONER	90 - 59
7H13	EXTENSION, DIP AND POUR ELEVATOR	120 - 157
1F4	EXTENSION, ENGINE RAIL	20 - 94
8B20	EXTENSIONS, GRAIN TANK	130 - 11
6F1	EYEBOLT, FEEDER HOUSE LOWER SHAFT-SH.....	110 - 93
6E2	EYEBOLT, FEEDER HOUSE TOP SHEETS-SH	110 - 67
6F4	EYEBOLT,FEEDER CONVEYOR IDLER SHAFT-SH.....	110 - 96
7C18	EYEBOLTS, CYLINDER INTERMEDIATE DRIVE SUPPORT (DUAL-RANGE CYLINDER DRIVE)	120 - 32

F

6B24	FALSE BOTTOM,FEEDER HOUSE,LONG	110 - 12
6B22	FALSE BOTTOM,FEEDER HOUSE,REGULAR	110 - 10
7G2	FAN PROTECTOR SHIELD.....	120 - 119
1E17	FAN PULLEY (DH).....	20 - 81
5B25	FAN SHROUD	80 - 17
2E6	FAN, ALTERNATOR, 72 AMP.....	40 - 74
2E8	FAN, ALTERNATOR, 90 AMP.....	40 - 76
7F24	FAN, CLEANING	120 - 117
7G5	FAN, CLEANING, SPEED CONTROL.....	120 - 123
7G2	FAN, HOUSING, CLEANING	120 - 119
1F16	FAN, RADIATOR	20 - 106

ALPHABETICAL INDEX - CONTINUED

GRID	PAGE	GRID	PAGE
6C13	FDR.HSE.,MID.BELT IDLER BRACES,L.H.,VAR. DR.-SH	8F19	FEEDER HOUSE DRIVE SHEAVES (VAR.DR.)
	110-26	8F25	FEEDER HOUSE DRIVE TIGHTENERS-LONG RICE
6D16	FDR.HSE.DRIVE TGHTNR.-FIXED DR.-REG.	5B10	FEEDER HOUSE FEED PLATE
6D17	FDR.HSE.DRIVE TGHTNR-FIXED DR.(LONG)	6E10	FEEDER HOUSE FRAME - SIDEHILL
6C21	FDR.HSE.GEARBOX MOUNTING ASSEMBLY-SH	6B24	FEEDER HOUSE FRAME, LONG
6D18	FDR.HSE.LOWER BELT TGHTNR-FIXED DR.-LONG	6B22	FEEDER HOUSE FRAME, REGULAR
6D18	FDR.HSE.LOWER BELT TGHTNR-FIXED DR.-REG.	6B17	FEEDER HOUSE FRONT SHEETS
6F2	FDR.HSE.LOWER CENTER SHAFT-SIDEHILL	6D22	FEEDER HOUSE FRONT SHEETS - SIDEHILL
6D5	FDR.HSE.LOWER SHAFT-FIXED DR.(REG-LONG)	6D24	FEEDER HOUSE FRONT SHEETS-SH
6C20	FDR.HSE.LOWER SHEAVE MOUNTINGS-VAR.DR.	4H19	FEEDER HOUSE HYDRAULIC HOSE
6D5	FDR.HSE.LOWER SHEAVE-FIXED DR.(REG-LONG)	8F24	FEEDER HOUSE IDLER (LONG)
6C13	FDR.HSE.MID.BELT IDLER,L.H.,VAR.DR.-SH	8G3	FEEDER HOUSE IDLERS (REG FIXED LESS REVERSER).....
6C12	FDR.HSE.MID.IDLER BRACES,L.H.(VAR.DR.).....		170-16
6C12	FDR.HSE.MIDDLE BELT IDLER,L.H.(VAR.DR.).....	8G1	FEEDER HOUSE IDLERS (REG. FIXED).....
6E23	FDR.HSE.SHEAVE CONTROL LINKAGE-SH	8G2	FEEDER HOUSE IDLERS (SIDEHILL)
6E23	FDR.HSE.SHEAVE CONTROL SUPPORT-SH	8F19	FEEDER HOUSE IDLERS (VARIABLE DRIVE)
6C24	FDR.HSE.UPPER COUNTERSHAFT SUPTS-VAR.DR.	6C11	FEEDER HOUSE L.H. FRONT SHIELDS-SH.....
6C24	FDR.HSE.UPPER COUNTERSHAFT-VARIABLE DR.	6C11	FEEDER HOUSE L.H. REAR SHIELDS-SH
6E21	FDR.HSE.VAR.DR.MIDDLE BELT TGHTENER-SH	6F12	FEEDER HOUSE LEFT-HAND SHIELD-SH
6E22	FDR.HSE.VAR.DR.MIDDLE BELT TGHTNR-SH.....	6D14	FEEDER HOUSE LESS REVERSER UPPER SPROCKET
4H24	FDR.HSE.VARIABLE DRIVE HYD.CYLINDER - SH.....		110-52
4H18	FDR.HSE.VARIABLE DRIVE HYDRAULIC HOSE	6D14	FEEDER HOUSE LESS REVERSER UPPER SHAFT.....
5B10	FEED PLATE, FEEDER HOUSE.....	6E18	FEEDER HOUSE LOWER BELT TIGHTENER - SH
6C3	FEEDER CONV. DRIVE CHAIN (VARIABLE DR.).....	6E20	FEEDER HOUSE LOWER BELT TIGHTENER-SH
6C3	FEEDER CONV.IDLER BRKT. (VARIABLE DRIVE).....	6F2	FEEDER HOUSE LOWER CENTER PADDLES - SH
6C2	FEEDER CONVEYOR CHAIN	6E14	FEEDER HOUSE LOWER COUNTERSHAFT-SH
6F6	FEEDER CONVEYOR CHAIN-SH	6E15	FEEDER HOUSE LOWER COUNTERSHAFT-SH
6C4	FEEDER CONVEYOR DRIVE BRACKET (FIXED).....	6D8	FEEDER HOUSE LOWER MOUNTINGS
6F17	FEEDER CONVEYOR DRIVE BRACKET-SH.....	6E25	FEEDER HOUSE LOWER PADDLES - SIDEHILL.....
6C4	FEEDER CONVEYOR DRIVE CHAIN (FIXED).....	6F1	FEEDER HOUSE LOWER PADDLES-SH.....
6C5	FEEDER CONVEYOR DRIVE CHAIN GUIDES	6D8	FEEDER HOUSE LOWER SHAFT
6F17	FEEDER CONVEYOR DRIVE CHAIN-SH.....	6D6	FEEDER HOUSE LOWER SHAFT (REG FIXED LESS REVERSER).....
6C4	FEEDER CONVEYOR DRIVE IDLER (FIXED)		110-43
6F17	FEEDER CONVEYOR DRIVE IDLER-SH	6E11	FEEDER HOUSE LOWER SHAFT - SIDEHILL
6C1	FEEDER CONVEYOR DRUM	2C17	FEEDER HOUSE LOWER SHAFT SPEED SENSOR
6C3	FEEDER CONVEYOR IDLER (VARIABLE DRIVE)	2C18	FEEDER HOUSE LOWER SHAFT SPEED SENSOR-SH ..
6C1	FEEDER CONVEYOR IDLER SHAFT.....	2C19	FEEDER HOUSE LOWER SHAFT SPEED SENSOR-SH ..
6F4	FEEDER CONVEYOR IDLER SHAFT-SH.....	6C20	FEEDER HOUSE LOWER SHAFT(VARIABLE DRIVE)
6F4	FEEDER DRUM-SH	6E13	FEEDER HOUSE LOWER SHAFT-SH
6B20	FEEDER HOUSE BOTTOM SHEETS.....	6E25	FEEDER HOUSE LOWER SHAFT-SH
6E3	FEEDER HOUSE BOTTOM SHEETS - SIDEHILL	6F1	FEEDER HOUSE LOWER SHAFT-SH
6E5	FEEDER HOUSE BOTTOM SHEETS-SH.....	6D8	FEEDER HOUSE LOWER SHEAVE
6F14	FEEDER HOUSE BRACE (R.H.)-SH.....	6D6	FEEDER HOUSE LOWER SHEAVE (REG FIXED LESS REVERSER)
6F14	FEEDER HOUSE BRACKET (R.H.)-SH		110-43
6F3	FEEDER HOUSE CENTER PADDLES - SIDEHILL	6E13	FEEDER HOUSE LOWER SHEAVE-SH.....
6F3	FEEDER HOUSE CENTER SHAFTS-SIDEHILL.....	6C20	FEEDER HOUSE LOWER SHEAVE-VARIABLE DRIVE
8F20	FEEDER HOUSE CHAINS (LONG).....	6E14	FEEDER HOUSE LOWER SHEAVES-SH.....
6F14	FEEDER HOUSE CHAINS (R.H.)-SH	6E15	FEEDER HOUSE LOWER SHEAVES-SH.....
8F22	FEEDER HOUSE CHAINS (SIDEHILL).....	6F1	FEEDER HOUSE LOWER SPROCKET-SH
8F21	FEEDER HOUSE CHAINS (VARIABLE DRIVE).....	6E25	FEEDER HOUSE LOWER SPROCKET-SIDEHILL.....
8F23	FEEDER HOUSE CHAINS-SH	6C14	FEEDER HOUSE MIDDLE BELT BRACE
6D25	FEEDER HOUSE DOORS - SIDEHILL.....	6C14	FEEDER HOUSE MIDDLE BELT IDLERS
8F25	FEEDER HOUSE DRIVE BELTS (LONG RICE)	6F9	FEEDER HOUSE R.H. SHIELD - SIDEHILL.....
8F24	FEEDER HOUSE DRIVE BELTS (LONG).....	6E10	FEEDER HOUSE REAR TOP SHEETS - SIDEHILL
8G3	FEEDER HOUSE DRIVE BELTS (REG FIXED LESS REVERSER).....	6C16	FEEDER HOUSE REVERSER GEAR BOX
	170-16	6F10	FEEDER HOUSE RIGHT-HAND SHIELD-SH.....
8G1	FEEDER HOUSE DRIVE BELTS (REG. FIXED)	6F14	FEEDER HOUSE SHAFT (R.H.)-SH
8G2	FEEDER HOUSE DRIVE BELTS (SIDEHILL).....	6C9	FEEDER HOUSE SHIELD, L.H. (LONG)
8F19	FEEDER HOUSE DRIVE BELTS (VARIABLE DR.)	6C8	FEEDER HOUSE SHIELD,L.H. (REGULAR FIXED).....
8D19	FEEDER HOUSE DRIVE IDLER	6C6	FEEDER HOUSE SHIELD,R.H.(VARIABLE DRIVE).....
8F25	FEEDER HOUSE DRIVE IDLERS (LONG RICE).....	6C10	FEEDER HOUSE SHIELDS (L.H.)
8F25	FEEDER HOUSE DRIVE SHEAVES (LONG RICE).....	6E3	FEEDER HOUSE SIDE SHEETS - SIDEHILL
8F24	FEEDER HOUSE DRIVE SHEAVES (LONG).....	6E7	FEEDER HOUSE SIDE SHEETS AND FRAME-SH.....
8G3	FEEDER HOUSE DRIVE SHEAVES (REG FIXED LESS REVERSER)	6E9	FEEDER HOUSE SIDE SHEETS AND FRAME-SH.....
	170-16	6B24	FEEDER HOUSE SIDE SHEETS, LONG
8G1	FEEDER HOUSE DRIVE SHEAVES (REG. FIXED)	6B22	FEEDER HOUSE SIDE SHEETS,REGULAR
8G2	FEEDER HOUSE DRIVE SHEAVES (SIDEHILL).....	2C12	FEEDER HOUSE SPEED MONITORING HARNESS.....
	170-14		40-29
	170-15		

ALPHABETICAL INDEX - CONTINUED

<i>GRID</i>		<i>PAGE</i>	<i>GRID</i>		<i>PAGE</i>
6F13	FEEDER HOUSE SPROCKET (RH) - SIDEHILL	110-105	3C17	FINAL DRIVE BEARINGS	50-29
8F20	FEEDER HOUSE SPROCKETS (LONG)	170-8	3C18	FINAL DRIVE BEARINGS	50-30
6F14	FEEDER HOUSE SPROCKETS (R.H.)-SH.....	110-107	3C21	FINAL DRIVE BEARINGS (SH).....	50-33
8F22	FEEDER HOUSE SPROCKETS (SIDEHILL)	170-10	3C22	FINAL DRIVE BEARINGS (SH).....	50-34
8F21	FEEDER HOUSE SPROCKETS (VARIABLE DRIVE)	170-9	3C23	FINAL DRIVE BEARINGS (SH).....	50-35
8F23	FEEDER HOUSE SPROCKETS-SH	170-11	3C17	FINAL DRIVE GEAR	50-29
8F24	FEEDER HOUSE TIGHTENERS (LONG).....	170-12	3C21	FINAL DRIVE GEAR (SH)	50-33
6F14	FEEDER HOUSE TIGHTENERS (R.H.)-SH	110-107	3C16	FINAL DRIVE HOUSING	50-28
8G3	FEEDER HOUSE TIGHTENERS (REG FIXED LESS REFERSER).....	170-16	3C20	FINAL DRIVE HOUSING (SH).....	50-32
8G1	FEEDER HOUSE TIGHTENERS (REG. FIXED)	170-14	3C18	FINAL DRIVE PINION	50-30
6F13	FEEDER HOUSE TIGHTENERS (RH) - SIDEHILL	110-105	3C22	FINAL DRIVE PINION (SH).....	50-34
8G2	FEEDER HOUSE TIGHTENERS (SIDEHILL).....	170-15	3C23	FINAL DRIVE PIVOT (SH).....	50-35
8F19	FEEDER HOUSE TIGHTENERS (VAR. DR.).....	170-7	3C18	FINAL DRIVE SHAFT.....	50-30
6B19	FEEDER HOUSE TOP DOOR LEVER	110-7	3C22	FINAL DRIVE SHAFT (SH)	50-34
6D25	FEEDER HOUSE TOP SHEET - SIDEHILL	110-65	3C23	FINAL DRIVE SHAFT (SH)	50-35
6B19	FEEDER HOUSE TOP SHEETS.....	110-7	2C1	FINGERS, TRASH (HARVESTRAK)	40-18
6E2	FEEDER HOUSE TOP SHEETS-SH.....	110-67	7E12	FINS AND PLATE, STRAW CHOPPER	120-78
6E16	FEEDER HOUSE UPPER COUNTERSHAFT-SH.....	110-82	7E11	FINS, PLATE, STRAW CHOPPER	120-77
6F7	FEEDER HOUSE UPPER PADDLES - SIDEHILL	110-99	5B25	FIREWALL	80-17
6D3	FEEDER HOUSE UPPER SHAFT.....	110-40	3G24	FIRST PLANET CARRIER (FOUR-WHEEL DR.)	50-144
6D9	FEEDER HOUSE UPPER SHAFT (FIXED DRIVE)	110-47	3G24	FIRST PLANET COVER (FOUR-WHEEL DR.).....	50-144
6D11	FEEDER HOUSE UPPER SHAFT (LONG RICE).....	110-49	3G24	FIRST PLANET PINION (FOUR-WHEEL DR.).....	50-144
6D12	FEEDER HOUSE UPPER SHAFT (WITH REVERSER).....	110-50	7D4	FITTING,CYL.SHAFT BRG.HSG.LUBE BANK-RH	120-43
6D2	FEEDER HOUSE UPPER SHAFT AND SPROCKETS	110-39	6E24	FITTING,F.H.VAR.DRIVE SHEAVE CONTROL-SH	110-91
6F8	FEEDER HOUSE UPPER SHAFT-SH	110-100	6E15	FITTING,FEEDER HOUSE LOWER SHEAVES-SH	110-81
6F7	FEEDER HOUSE UPPER SHAFT-SIDEHILL	110-99	6E20	FITTING,GREASE,FDR.HSE.LOWER BELT TGHTNR.....	110-87
6D11	FEEDER HOUSE UPPER SHEAVE (LONG RICE)	110-49	3G1	FITTINGS AND HOSES, HYDROSTATIC DRIVE.....	50-118
6D9	FEEDER HOUSE UPPER SHEAVES (FIXED DRIVE).....	110-47	6D18	FIXED DR.-FDR.HSE.LOWER BELT TGHTNR.-REG	110-56
6E16	FEEDER HOUSE UPPER SHEAVES-SH	110-82	6D18	FIXED DR.-FDR.HSE.LOWER BELT TGHTNR-LONG.....	110-56
6F8	FEEDER HOUSE UPPER SPROCKET-SH	110-100	6D5	FIXED DR.-FDR.HSE.LOWER SHAFT-REG-LONG	110-42
6D3	FEEDER HOUSE UPPER SPROCKETS	110-40	6D6	FIXED DRIVE LESS REVERSER, FEEDER HOUSE, LOWER SHAFT	110-43
6D12	FEEDER HOUSE UPPER SPROCKETS (WITH REVER SER).....	110-50	6D6	FIXED DRIVE LESS REVERSER, FEEDER HOUSE, LOWER SHEAVE.....	110-43
6E24	FEEDER HOUSE VAR.DR.SHEAVE CONTROL-SH	110-91	6D17	FIXED DRIVE-FDR.HSE.DRIVE TGHTNR.(LONG).....	110-55
4H21	FEEDER HOUSE VARIABLE DRIVE HYD.HOSES-SH	70-109	6D16	FIXED DRIVE-FDR.HSE.DRIVE TGHTNR.(REG.)	110-54
2C15	FEEDER HSE.LOWER SHAFT SPD.SENSOR-REG.....	40-32	6D5	FIXED DRIVE-FDR.HSE.LOWER SHV.(REG-LONG).....	110-42
2C16	FEEDER HSE.LOWER SHAFT SPEED SENSOR-LONG ..	40-33	6D9	FIXED DRIVE-FEEDER HOUSE UPPER SHAFT.....	110-47
6C10	FEEDER HSE.SHIELDS-L.H.-FIXED DR.LG.RICE	110-23	6D9	FIXED DRIVE-FEEDER HOUSE UPPER SHEAVES	110-47
6C7	FEEDER HSE.SHIELDS,L.H. (VARIABLE DRIVE)	110-20	2C12	FLASHER, SIGNAL	40-29
3C3	FENDERS (DUAL-RANGE CYLINDER DRIVE) (HEAVY-DUTY FINAL DRIVE)	50-14	1F8	FLAT ROTARY SCREEN.....	20-98
3C3	FENDERS (DUAL-RANGE CYLINDER DRIVE) (REGULAR FINAL DRIVE)	50-14	8B20	FLIP-UPS, GRAIN TANK	130-11
3C2	FENDERS (EXTRA HEAVY-DUTY FINAL DRIVE).....	50-13	5C21	FLOORBOARD, OPERATOR'S PLATFORM.....	90-11
3C4	FENDERS (EXTRA HEAVY-DUTY FINAL DRIVE) (DUAL-RANGE CYLINDER DRIVE)	50-15	5C23	FLOORMAT, L.H. REAR	90-13
3C1	FENDERS (HEAVY-DUTY FINAL DRIVE)	50-12	5C21	FLOORMAT, OPERATOR'S PLATFORM	90-11
3C1	FENDERS (REGULAR FINAL DRIVE)	50-12	4F6	FLOW CONTROL PLUG	70-42
2C14	FIELD LIGHTS	40-31	4H15	FLOW CONTROL VALVE, HYDROSTATIC DR. REEL	70-103
5D20	FILTER AND HOUSING, CAB AIR	90-37	3H4	FLOW CONTROL VALVES (FOUR-WHEEL DRIVE)	50-149
5D20	FILTER, CAB AIR.....	90-37	3I2	FLOW CONTROL VALVES (FOUR-WHEEL DRIVE)	50-179
1E8	FILTER, ENGINE OIL (DH)	20-72	8E10	FLOW DIVIDER MOUNTING - SIDEHILL	150-16
1F24	FILTER, FUEL	30-5	8E11	FLOW DIVIDER MOUNTING - SIDEHILL	150-17
1H12	FILTER, FUEL	30-48	8E10	FLOW DIVIDER VALVE - SIDEHILL	150-16
1G17	FILTER, FUEL (DH)	30-25	8E11	FLOW DIVIDER VALVE - SIDEHILL	150-17
1G1	FILTER, FUEL (EXPORT)	30-7	1C19	FLYWHEEL	20-32
1H10	FILTER, FUEL (TH 01).....	30-46	3C5	FORKS, SHIFTER, DIFFERENTIAL	50-16
1H11	FILTER, FUEL (TH 05).....	30-47	3H5	FOUR-WHEEL DRIVE (SUNDSTRAND).....	50-151
1H15	FILTER, FUEL (TH 05).....	30-52	2D3	FOUR-WHEEL DRIVE SWITCH	40-45
4D15	FILTER, HYDRAULIC RESERVOIR	70-2	5C3	FRAME AND DOOR,ENGINE COMPT.MIDDLE.....	80-20
3I4	FILTER, OIL RETURN LINES	50-181	5B14	FRAME AND SEPARATOR L.H. SIDE SHEETS	80-5
3C15	FINAL DRIVE	50-27	6E7	FRAME AND SIDE SHEETS, FEEDER HOUSE-SH	110-73
3C17	FINAL DRIVE AXLE.....	50-29	7F17	FRAME, CHAFFER	120-109
3C21	FINAL DRIVE AXLE (SH).....	50-33	5B25	FRAME, CORNER	80-17
3C16	FINAL DRIVE BEARING CAP	50-28	3G11	FRAME, CRAWLER, R.H. AND L.H.....	50-129
3C20	FINAL DRIVE BEARING CAP (SH).....	50-32	6E10	FRAME, FEEDER HOUSE - SIDEHILL.....	110-76
			6E9	FRAME, FEEDER HOUSE-SH	110-75
			6B24	FRAME, FEEDER HOUSE, LONG	110-12
			6B22	FRAME, FEEDER HOUSE, REGULAR.....	110-10

ALPHABETICAL INDEX - CONTINUED

<i>GRID</i>		<i>PAGE</i>	<i>GRID</i>		<i>PAGE</i>
5C21	FRAME, OPERATOR'S PLATFORM.....	90 - 11	1E23	GASKET SET, CYLINDER HEAD (DH).....	20 - 88
4C20	FRAME, REAR AXLE (FOUR-WHEEL DR.)	60 - 37	1E23	GASKET SET, ENGINE REBUILD (DH)	20 - 88
5B11	FRAME, SEPARATOR RIGHT-HAND	80 - 2	1D9	GASKET, CYLINDER HEAD (DH).....	20 - 48
7F15	FRAME, SIEVE.....	120 - 107	1D11	GASKET, CYLINDER HEAD (TH)	20 - 50
8C5	FRONT AND REAR GRAIN TANK AUGER COVERS, ADJUSTABLE.....	130 - 20	3C6	GASKET, DIFFERENTIAL	50 - 17
3E15	FRONT COVER, HYDRO. DRIVE PUMP (EATON).....	50 - 81	1E19	GASKET, INTAKE MANIFOLD (DH)	20 - 83
3E14	FRONT COVER, HYDROSTATIC DRIVE (SUNDSTRAND).....	50 - 80	1E20	GASKET, INTAKE MANIFOLD (TH)	20 - 84
3E13	FRONT COVER, HYDROSTATIC DRIVE PUMP (SUNDSTRAND).....	50 - 79	1E13	GASKET, OIL PAN.....	20 - 77
8C2	FRONT CROSS AUGER, GRAIN TANK.....	130 - 17	1E14	GASKET, OIL PAN.....	20 - 78
5C5	FRONT ENGINE COMPARTMENT PANEL	80 - 22	1E16	GASKET, OIL PAN.....	20 - 80
1C25	FRONT OIL SEAL	20 - 38	1E11	GASKET, OIL PAN (DH)	20 - 75
6D22	FRONT SHEETS, FEEDER HOUSE - SIDEHILL	110 - 61	1D13	GASKET, ROCKER ARM COVER (DH)	20 - 52
5B10	FRONT SHEETS, SEPARATOR	80 - 1	1C25	GASKET, TIMING GEAR COVER.....	20 - 38
1H14	FUEL CHECK VALVE (TH)	30 - 50	3C6	GASKET, TRANSMISSION	50 - 17
1F24	FUEL FILTER	30 - 5	1E17	GASKET, WATER PUMP (DH)	20 - 81
1H12	FUEL FILTER	30 - 48	3F13	GASKET, HYDRO. DR. DISPLACEMENT CTL. VALVE (SUNDSTRAND).....	50 - 104
1G17	FUEL FILTER (DH)	30 - 25	1E21	GASKETS, EXHAUST MANIFOLD (DH)	20 - 86
1G1	FUEL FILTER (EXPORT).....	30 - 7	1E22	GASKETS, EXHAUST MANIFOLD (TH)	20 - 87
1H10	FUEL FILTER (TH 01)	30 - 46	2C3	GAUGE, ACCUMULATOR PRESSURE	40 - 20
1H11	FUEL FILTER (TH 05)	30 - 47	2D5	GAUGE, FUEL	40 - 47
1H15	FUEL FILTER (TH 05)	30 - 52	2D5	GAUGE, OIL PRESSURE	40 - 47
1H13	FUEL FILTER KIT	30 - 49	2D5	GAUGE, WATER TEMPERATURE	40 - 47
2D5	FUEL GAUGE.....	40 - 47	2C7	GAUGE, WATER TEMPERATURE, SENDING UNIT.....	40 - 24
2C6	FUEL GAUGE SENDING UNIT	40 - 23	2D5	GAUGES, INSTRUMENT PANEL	40 - 47
1G24	FUEL INJECTION NOZZLE (DH)	30 - 34	6C16	GEAR BOX, REVERSER.....	110 - 29
1I1	FUEL INJECTION NOZZLE (TH).....	30 - 64	7C24	GEAR CASE SHIELD, DUAL-RANGE CYLINDER DRIVE.....	120 - 39
1G18	FUEL INJECTION NOZZLES (DH)	30 - 26	7C20	GEAR CASE, CYLINDER, DUAL-RANGE.....	120 - 34
1H17	FUEL INJECTION NOZZLES (TH 01).....	30 - 54	7G23	GEAR CASE, LOADING AUGER	120 - 141
1H19	FUEL INJECTION NOZZLES (TH 05).....	30 - 56	8C13	GEAR CASE, LOWER, VERTICAL AUGER	130 - 29
1G18	FUEL INJECTION PIPES (DH)	30 - 26	8C21	GEAR CASE, DRIVE, HORIZONTAL UNLDG. AUGER	130 - 37
1H17	FUEL INJECTION PIPES (TH 01).....	30 - 54	8C21	GEAR CASE, HORIZONTAL UNLDG. AUGER DRIVE.....	130 - 37
1G20	FUEL INJECTION PUMP (DH)	30 - 28	1D4	GEAR COVER, TACHOMETER DRIVE	20 - 42
1H17	FUEL INJECTION PUMP (TH 01).....	30 - 54	1D2	GEAR, CAMSHAFT (DH)	20 - 40
1H21	FUEL INJECTION PUMP (TH 05).....	30 - 59	1D3	GEAR, CAMSHAFT (TH)	20 - 41
1G21	FUEL INJECTION PUMP FITTINGS AND LINKAGE (DH)	30 - 30	3C17	GEAR, FINAL DRIVE	50 - 29
1H24	FUEL INJECTION PUMP GOVERNOR LEVERS AND CONTROLS (TH)	30 - 62	3C21	GEAR, FINAL DRIVE (SH)	50 - 33
1H22	FUEL INJECTION PUMP HOUSING CONNECTORS (TH).....	30 - 60	1C19	GEAR, STARTER	20 - 32
1F24	FUEL LINES	30 - 5	6C21	GEARBOX MOUNTING ASSEMBLY, FDR.HSE.-SH	110 - 34
1F25	FUEL LINES (EXPORT).....	30 - 6	3C11	GEARS, DIFFERENTIAL	50 - 22
1H15	FUEL PIPES (TH 05)	30 - 52	3C13	GEARS, DIFFERENTIAL	50 - 24
1H19	FUEL PIPES (TH 05)	30 - 56	7C22	GEARS, PINION, DUAL-RANGE CYLINDER DRIVE	120 - 36
1F24	FUEL PUMP	30 - 5	3C8	GEARS, TRANSMISSION	50 - 19
1H1	FUEL PUMP (DH).....	30 - 36	3C10	GEARS, TRANSMISSION	50 - 21
1G4	FUEL SHUT-OFF BRACKET (TH).....	30 - 10	3B21	GEARSHIFT CABLES AND MOUNTINGS	50 - 7
1G2	FUEL SHUT-OFF CONTROL.....	30 - 8	3B16	GEARSHIFT LEVER AND CAM (POSI-TORQ)	50 - 2
1G3	FUEL SHUT-OFF CONTROL.....	30 - 9	3B17	GEARSHIFT LEVER ASSEMBLY-HYDROSTATIC DR.	50 - 3
1F22	FUEL TANK	30 - 3	3B19	GEARSHIFT RANGE SHIFTER AND SUPPORT	50 - 5
1F22	FUEL TANK SUPPORT	30 - 3	4D15	GLASS, LEVEL SIGHT, HYDRAULIC RESERVOIR.....	70 - 2
1G23	FUEL TRANSFER PUMP (DH)	30 - 32	1H24	GOVERNOR LEVERS AND CONTROLS, FUEL INJECTION PUMP (TH).....	30 - 62
1I4	FUEL TRANSFER PUMP (ROBERT BOSCH)	30 - 67	2C1	GRAIN LOSS CONSOLE, HARVESTRAK	40 - 18
1H17	FUEL TRANSFER PUMP (TH 01).....	30 - 54	8B12	GRAIN TANK	130 - 3
1H21	FUEL TRANSFER PUMP (TH 05).....	30 - 59	8B14	GRAIN TANK	130 - 5
1I3	FUEL TRANSFER PUMP (TH)	30 - 66	8C11	GRAIN TANK CROSS AUGER DRIVE TIGHTENERS.....	130 - 27
8E24	FULL FLOW PLUG, AUTOMATIC HDR.HGT.CTL.....	160 - 7	8B20	GRAIN TANK DOOR	130 - 11
8E17	FUSE AND SWITCHES, SIDEHILL LEVELING	150 - 24	8B20	GRAIN TANK EXTENSIONS	130 - 11
			8B20	GRAIN TANK FLIP-UPS	130 - 11
			8C2	GRAIN TANK FRONT CROSS AUGER	130 - 17
			8C4	GRAIN TANK INNER UNLOADING AUGER COVERS	130 - 19
			2B17	GRAIN TANK LIGHT	40 - 7
			8C3	GRAIN TANK REAR CROSS AUGER	130 - 18
			8B16	GRAIN TANK SKIRTS	130 - 7
			8B21	GRAIN TANK SUMP BAFFLE	130 - 12
			8C8	GRAIN TANK SUMP HOUSING AND SHIELD.....	130 - 23
			8C9	GRAIN TANK SUMP HOUSING AND SHIELD.....	130 - 24

G

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
8C15	GRAIN TANK VERTICAL AUGER AND HOUSING	130-31	4I4	HEADER LIFT HYDRAULIC CYLINDER KIT	70-118
8C6	GRASS SEED UNLDG.AUG.COVERS ATTACHMENT	130-21	4I5	HEADER LIFT HYDRAULIC CYLINDER KIT-SH	70-119
7B21	GRATE, BEATER	120-9	4I3	HEADER LIFT HYDRAULIC CYLINDER-SH.....	70-117
2D12	GRILLE, PUSH BUTTON	40-55	4I1	HEADER LIFT OIL LINES	70-115
2E4	GRILLE, RADIO	40-71	5D17	HEADLINER, CAB ROOF	90-34
2D12	GRILLE, TAPE PLAYER	40-55	5E16	HEATER CONTROL VALVE	90-60
5E16	GROMMET, HEATER HOSES.....	90-60	5E15	HEATER CORE	90-59
3D14	GROUND DRIVE POSI-TORQ UPPER UNIT	50-53	5E16	HEATER HOSES	90-60
3D7	GROUND DRIVE, POSI-TORQ, LOWER UNIT	50-44	5E17	HEATER HOSES	90-61
3D11	GROUND SPEED CONTROLS, POSI-TORQ.....	50-49	1F6	HEATER, ENGINE COOLANT.....	20-96
7E23	GUARD, STRAW SPREADER.....	120-89	1F7	HEATER, ENGINE COOLANT.....	20-97
6C5	GUIDES, FEEDER CONVEYOR DRIVE CHAIN.....	110-18	5E14	HI PRESSURE SWITCH LIGHT ASSEMBLY	90-58
H			5E3	HI PRESSURE SWITCH, AIR CONDITIONER	90-45
5D14	HANDLE, CAB	90-31	3F16	HIGH PRESSURE RELIEF VALVE (EATON).....	50-107
7E15	HANDLE, STRAW CHOPPER CURTAIN	120-81	6E2	HINGE,FEEDER HOUSE TOP SHEETS-SH.....	110-67
7E7	HANDLE, STRAW CHOPPER HOUSING	120-73	7H15	HOOD, DIP AND POUR ELEVATOR TOP	120-159
7E8	HANDLE, STRAW CHOPPER HOUSING	120-74	5B16	HOOD, REAR	80-7
7E20	HANDLE, STRAW CHOPPER KNIFE AND SUPPORT	120-86	5B18	HOOD, REAR	80-9
7E15	HANDLE, STRAW CHOPPER SHIELDS	120-81	2B14	HOOD, REAR, WIRING HARNESS.....	40-3
5C13	HANDRAIL, OPERATOR'S PLATFORM	90-3	8C21	HORIZONTAL UNLDG.AUGER DRIVE GEAR CASE	130-37
5C17	HANDRAIL, OPERATOR'S PLATFORM (EXPORT).....	90-7	8C23	HORIZONTAL UNLOADING AUGER	130-39
5C15	HANDRAILS, OPERATOR'S PLATFORM (TRACKS).....	90-5	8C17	HORIZONTAL UNLOADING AUGER SWIVEL	130-33
5E9	HARDWARE KIT, COMPRESSOR	90-53	8B18	HORIZONTAL UNLOADING AUGER SWIVEL SHROUD ..	130-9
8F3	HARNESS ADAPTER, DIAL-A-MATIC	160-12	2C12	HORN	40-29
5E2	HARNESS, COMPRESSOR.....	90-44	2D2	HORN SWITCH	40-43
8F8	HARNESS, DIAL-A-MATIC CONVERSION.....	160-18	4H12	HOSE AND COUPLER CONVERSION.....	70-100
8F3	HARNESS, ELECTRIC.....	160-12	4H18	HOSE, HYDRAULIC, VARIABLE DRIVE FDR.HSE.....	70-106
2C12	HARNESS, FEEDER HOUSE SPEED MONITORING	40-29	1E13	HOSE, OIL PAN DRAIN.....	20-77
2B25	HARNESS, HARVESTRAK ADAPTER	40-17	1E14	HOSE, OIL PAN DRAIN.....	20-78
2B22	HARNESS, LOW SHAFT SPEED MONITOR'S	40-13	7D4	HOSE,CYL.SHAFT BRG.HSG.LUBE BANK (R.H.).....	120-43
2E20	HARNESS, MAGNETIC PICK-UP (DH).....	40-89	4H10	HOSES AND COUPLER FOR COMBINES	70-98
2C6	HARNESS, SEPARATOR, RIGHT-HAND	40-23	3G1	HOSES AND FITTINGS, HYDROSTATIC DRIVE.....	50-118
8E16	HARNESS, SIDEHILL LEVELING	150-23	3H6	HOSES AND LINES, HYD. (FOUR-WHEEL DR.) (EATON).....	50-153
2D10	HARNESS, WIRING	40-53	4F8	HOSES AND LINES, HYDRAULIC OIL.....	70-44
2D7	HARNESS, WIRING, CAB ROOF	40-49	3I4	HOSES AND LINES, HYDRAULIC OIL RETURN	50-181
2C7	HARNESS, WIRING, ENGINE COMPARTMENT	40-24	3H5	HOSES AND LINES,HYD. (FOUR-WHEEL DRIVE) (SUNDSTRAND).....	50-151
2C21	HARNESS, WIRING, INSTRUMENT PANEL (AHHC)	40-38	4C11	HOSES AND LINES,STEERING OIL (FOUR-WHEEL DRIVE).....	60-27
2C12	HARNESS, WIRING, LEFT-HAND LIGHTS	40-29	4C6	HOSES AND OIL LINES-FRONT, STEERING	60-21
2C12	HARNESS, WIRING, OPERATOR'S PLATFORM.....	40-29	1F14	HOSES AND RADIATOR.....	20-104
2B14	HARNESS, WIRING, REAR HOOD.....	40-3	4C9	HOSES-REAR, STEERING OIL LINES.....	60-25
2B14	HARNESS, WIRING, SEPARATOR (L.H.)	40-3	4H7	HOSES, DRIVE REEL HYDRAULIC	70-94
2B14	HARNESS, WIRING, UNLOADING AUGER	40-3	5E16	HOSES, HEATER.....	90-60
8F2	HARNESS,WIRING,AUTO.HDR.HEIGHT CONTROL	160-11	5E17	HOSES, HEATER.....	90-61
2B25	HARVESTRAK ADAPTER HARNESS.....	40-17	3H4	HOSES, HYDRAULIC (FOUR-WHEEL DRIVE)	50-149
2D5	HARVESTRAK CIRCUIT BREAKER	40-47	3I2	HOSES, HYDRAULIC (FOUR-WHEEL DRIVE)	50-179
2C1	HARVESTRAK COMBINE MONITOR	40-18	8E14	HOSES, HYDRAULIC LOWER - SIDEHILL	150-21
2C1	HARVESTRAK COMBINE MONITOR CONTROL PANEL ..	40-18	4F11	HOSES, HYDRAULIC OIL LINES AND.....	70-47
2C1	HARVESTRAK COMBINE MONITOR PREAMPLIFIER	40-18	4F13	HOSES, HYDRAULIC OIL LINES AND.....	70-49
1D9	HEAD BOLTS (DH)	20-48	3H8	HOSES, HYDRAULIC OIL RETURN LINES AND	50-155
1D11	HEAD BOLTS (TH).....	20-50	8E13	HOSES, HYDRAULIC UPPER - SIDEHILL.....	150-19
1D9	HEAD, CYLINDER (DH).....	20-48	3G4	HOSES, LOWER OIL, HYDROSTATIC DRIVE (SUNDSTRAND).....	50-122
1D11	HEAD, CYLINDER (TH).....	20-50	3G6	HOSES, LOWER, HYDRO. DR.	50-124
6D19	HEADER DRIVE SHAFT - SIDEHILL	110-57	4H9	HOSES, REEL LIFT, SIDEHILL.....	70-97
6D20	HEADER DRIVE SHAFT-SIDEHILL	110-59	4C7	HOSES,-REAR, STEERING OIL LINE	60-23
2B19	HEADER ELECTROMAGNETIC CLUTCH	40-9	4H21	HOSES,REAR,FDR.HSE. VARIABLE DRIVE-SH.....	70-109
2C23	HEADER HEIGHT CONTROL, DIAL-A-MATIC	40-40	4G5	HOSES,UNLOADING AUGER SWING HYDRAULIC	70-66
8F3	HEADER HEIGHT CONTROL, DIAL-A-MATIC	160-12	4G7	HOSES,UNLOADING AUGER SWING HYDRAULIC	70-68
8F5	HEADER HGT.CTL.,DIAL-A-MATIC,AMPLIFIER.....	160-14	2D2	HOUSING AND FILTER, CAB AIR	90-37
6F19	HEADER LEVELING CABLES (L.H.)-SH	110-112	8C8	HOUSING AND SHIELD, GRAIN TANK SUMP	130-23
6F18	HEADER LEVELING CABLES-SIDEHILL	110-111	8C9	HOUSING AND SHIELD, GRAIN TANK SUMP	130-24
6F20	HEADER LEVELING CABLES, L.H.-SH	110-113			
6F19	HEADER LEVELING MOUNTING (L.H.)-SH.....	110-112			
6F20	HEADER LEVELING MOUNTING, L.H.-SH	110-113			
4I2	HEADER LIFT HYDRAULIC CYLINDER.....	70-116			

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
8C15	HOUSING AND VERTICAL AUGER, GRAIN TANK.....	130-31	4G5	HYD. OIL LINES,UNLOADING AUGER SWING.....	70-66
3E20	HOUSING HYDRO. DRIVE PUMP (EATON)	50-86	4G7	HYD. OIL LINES,UNLOADING AUGER SWING.....	70-68
2E6	HOUSING, ALTERNATOR, 72 AMP	40-74	4E20	HYD.CONTROL VALVE POPPETS,MAIN-POSI-TORQ	70-31
2E8	HOUSING, ALTERNATOR, 90 AMP	40-76	4E22	HYD.CONTROL VALVE POPPETS,MAIN-POSI-TORQ	70-33
7H13	HOUSING, AUGER, DIP AND POUR ELEVATOR.....	120-157	4F1	HYD.CONTROL VALVE POPPETS,MAIN-POSI-TORQ	70-37
7G11	HOUSING, CLEAN GRAIN ELEVATOR	120-129	4F2	HYD.CONTROL VALVE SPOOLS-MAIN-POSI-TORQ	70-38
7G12	HOUSING, CLEAN GRAIN ELEVATOR	120-130	4E12	HYD.CONTROL VALVE SPOOLS,MAIN-HYDRO.	70-23
7G7	HOUSING, CLEAN GRAIN LOWER AUGER	120-125	4E10	HYD.CONTROL VALVE SPOOLS,MAIN-HYDRO.-SH	70-21
7G9	HOUSING, CLEAN GRAIN LOWER AUGER	120-127	4E21	HYD.CONTROL VALVE SPOOLS,MAIN-POSI-TORQ	70-32
7G2	HOUSING, CLEANING FAN	120-119	4E23	HYD.CONTROL VALVE SPOOLS,MAIN-POSI-TORQ	70-34
1D1	HOUSING, CRANKSHAFT OIL SEAL.....	20-39	4E25	HYD.CONTROL VALVE SPOOLS,MAIN-POSI-TORQ	70-36
3C5	HOUSING, DIFFERENTIAL	50-16	4E20	HYD.CONTROL VALVE SPRINGS,MAIN-POSI-TORQ	70-31
3C13	HOUSING, DIFFERENTIAL GEARS AND SHAFTS.....	50-24	4E22	HYD.CONTROL VALVE SPRINGS,MAIN-POSI-TORQ	70-33
3D8	HOUSING, DRIVE WHEEL CLUTCH	50-45	4E24	HYD.CONTROL VALVE SPRINGS,MAIN-POSI-TORQ	70-35
8D3	HOUSING, ENGINE POWERSHAFT.....	140-3	4F1	HYD.CONTROL VALVE SPRINGS,MAIN-POSI-TORQ	70-37
6D14	HOUSING, FEEDER HOUSE LESS REVERSER UPPER SHAFT	110-52	4E24	HYD.CONTROL VALVE,POPPETS,MAIN-POSI-TORQ	70-35
6D3	HOUSING, FEEDER HOUSE UPPER SHAFT	110-40	4E12	HYD.CONTROL,MAIN,RELIEF VALVE-HYDRO.....	70-23
6D12	HOUSING, FEEDER HOUSE UPPER SHAFT (WITH REVERSER).....	110-50	4E10	HYD.CONTROL,MAIN,RELIEF VALVE-HYDRO.-SH	70-21
6F8	HOUSING, FEEDER HOUSE UPPER SHAFT-SH	110-100	4E21	HYD.CONTROL,MAIN,RELIEF VALVE-POSI-TORQ	70-32
3C16	HOUSING, FINAL DRIVE.....	50-28	4E23	HYD.CONTROL,MAIN,RELIEF VALVE-POSI-TORQ	70-34
3C20	HOUSING, FINAL DRIVE (SH)	50-32	4E25	HYD.CONTROL,MAIN,RELIEF VALVE-POSI-TORQ	70-36
8C23	HOUSING, HORIZONTAL UNLOADING AUGER	130-39	4F2	HYD.CONTROL,MAIN,RELIEF VALVE-POSI-TORQ	70-38
3E18	HOUSING, HYDRO. DRIVE PUMP (SUNDSTRAND)	50-84	4H21	HYD.HOSES,VARIABLE DRIVE FEEDER HOUSE-SH	70-109
3E17	HOUSING, HYDROSTATIC DRIVE PUMP (SUNDSTRAND).....	50-83	4E14	HYDRAULIC CONTROL VALVE SPOOLS, MAIN	70-25
3G25	HOUSING, KNEE AND MOTOR (FOUR-WHEEL DR.)	50-145	4E16	HYDRAULIC CONTROL VALVE SPOOLS, MAIN	70-27
7G21	HOUSING, LOADING AUGER.....	120-139	4E13	HYDRAULIC CONTROL VALVE SPRINGS, MAIN.....	70-24
7H23	HOUSING, LOWER TAILINGS	120-167	4E15	HYDRAULIC CONTROL VALVE SPRINGS, MAIN.....	70-26
7H4	HOUSING, LOWER, DIP AND POUR ELEVATOR	120-147	4E14	HYDRAULIC CONTROL, MAIN RELIEF VALVE	70-25
4D18	HOUSING, MAIN HYD. PUMP	70-5	4H24	HYDRAULIC CYL.,VARIABLE DR.FDR.HSE.-SH	70-112
4D19	HOUSING, MAIN HYDRAULIC PUMP	70-6	4I4	HYDRAULIC CYLINDER KIT, HEADER LIFT.....	70-118
3G23	HOUSING, PLANETARY (FOUR-WHEEL DRIVE)	50-143	4I5	HYDRAULIC CYLINDER KIT, HEADER LIFT-SH.....	70-119
7B18	HOUSING, RASP-BAR CYLINDER (DUAL-RANGE CYLINDER DRIVE)	120-6	4I2	HYDRAULIC CYLINDER, HEADER LIFT	70-116
7F3	HOUSING, SHOE GRAIN SUPPLY AUGERS	120-95	4G10	HYDRAULIC CYLINDER,UNLOADING AUGER SWING	70-71
2E14	HOUSING, STARTER DRIVE (DH).....	40-82	4G11	HYDRAULIC CYLINDER,UNLOADING AUGER SWING	70-72
7E7	HOUSING, STRAW CHOPPER	120-73	4G13	HYDRAULIC CYLINDER,UNLOADING AUGER SWING	70-74
7E8	HOUSING, STRAW CHOPPER	120-74	4G15	HYDRAULIC CYLINDER,UNLOADING AUGER SWING	70-76
7H25	HOUSING, TAILINGS ELEVATOR	120-169	4H19	HYDRAULIC HOSE, FEEDER HOUSE.....	70-107
7I1	HOUSING, TAILINGS ELEVATOR	120-170	4H18	HYDRAULIC HOSE,VARIABLE DRIVE FDR.HSE.....	70-106
1G7	HOUSING, THROTTLE LINKAGE CONTROL	30-13	3H4	HYDRAULIC HOSES (FOUR-WHEEL DRIVE)	50-149
1G7	HOUSING, THROTTLE LINKAGE CONTROL LEVER.....	30-13	3I2	HYDRAULIC HOSES (FOUR-WHEEL DRIVE)	50-179
3C5	HOUSING, TRANSMISSION	50-16	4H7	HYDRAULIC HOSES, DRIVE REEL	70-94
1H2	HOUSING, TURBOCHARGER (AIRESEARCH)	30-37	4G5	HYDRAULIC HOSES,UNLOADING AUGER SWING	70-66
1H4	HOUSING, TURBOCHARGER (AIRESEARCH)	30-39	4G7	HYDRAULIC HOSES,UNLOADING AUGER SWING	70-68
1H3	HOUSING, TURBOCHARGER CENTER(AIRESEARCH)....	30-38	8E14	HYDRAULIC LOWER HOSES - SIDEHILL.....	150-21
1H5	HOUSING, TURBOCHARGER CENTER(AIRESEARCH)....	30-40	8E14	HYDRAULIC LOWER LINES - SIDEHILL	150-21
7I6	HOUSING, UPPER TAILINGS.....	120-176	4G11	HYDRAULIC MOUNTING,UNLOADING AUGER SWING....	70-72
4D4	HOUSING, WHEEL MOTOR (FOUR-WHEEL DR.)	60-45	4G13	HYDRAULIC MOUNTING,UNLOADING AUGER SWING....	70-74
3G21	HOUSING,WHEEL HUB,AND MOTOR (FOUR-WHEEL DR.).....	50-141	4G15	HYDRAULIC MOUNTING,UNLOADING AUGER SWING....	70-76
1H6	HOUSINGS, TURBOCHARGER (SCHWITZER).....	30-41	8E24	HYDRAULIC OIL LINE AUTO.HDR.HGT.CONTROL	160-7
4D3	HOUSINGS,REAR AXLE SPINDLE-(HEAVY-DUTY)	60-44	4F8	HYDRAULIC OIL LINES AND HOSES	70-44
6E13	HUB, FEEDER HOUSE LOWER SHAFT-SH	110-79	4F11	HYDRAULIC OIL LINES AND HOSES	70-47
6E15	HUB,FEEDER HOUSE LOWER SHEAVES-SH	110-81	4F13	HYDRAULIC OIL LINES AND HOSES	70-49
3G21	HUB,MOTOR,AND HOUSING,WHEEL (FOUR-WHEEL DR.).....	50-141	4D15	HYDRAULIC OIL RESERVOIR	70-2
4E8	HYD. CONTROL VALVE POPPETS, MAIN-HYDRO.....	70-19	3H8	HYDRAULIC OIL RETURN LINES AND HOSES	50-155
4E11	HYD. CONTROL VALVE POPPETS, MAIN-HYDRO.....	70-22	3I4	HYDRAULIC OIL RETURN LINES AND HOSES	50-181
4E8	HYD. CONTROL VALVE SPRINGS, MAIN-HYDRO.	70-19	4H14	HYDRAULIC PUMP MTG.,HYDROSTATIC DR.REEL	70-102
4E11	HYD. CONTROL VALVE SPRINGS, MAIN-HYDRO.	70-22	4H4	HYDRAULIC PUMP, HYDROSTATIC DRIVE REEL.....	70-91
3H6	HYD. LINES AND HOSES (FOUR-WHEEL DR.) (EATON).....	50-153	4D19	HYDRAULIC PUMP, MAIN	70-6
3H5	HYD. LINES AND HOSES (FOUR-WHEEL DRIVE) (SUNDSTRAND).....	50-151	4G25	HYDRAULIC REEL LIFT CONTROL LEVER	70-87
			8F18	HYDRAULIC REEL LIFT DRIVE SHEAVES	170-6
			8E13	HYDRAULIC UPPER HOSES - SIDEHILL	150-19
			8E13	HYDRAULIC UPPER LINES - SIDEHILL	150-19
			3F15	HYDRO. DR. CENTER SECTION (EATON).....	50-106
			3E3	HYDRO. DR. CONTROL CABLE MOUNTING (SUNDSTRAND AND EATON)	50-68
			3F11	HYDRO. DR. DISPLACEMENT CONTROL VALVE (EATON).....	50-102

ALPHABETICAL INDEX - CONTINUED

<i>GRID</i>		<i>PAGE</i>	<i>GRID</i>		<i>PAGE</i>
3G6	HYDRO. DR. LOWER OIL LINES AND HOSES	50-124	3F25	HYDROSTATIC DRIVE OIL RESERVOIR MOUNTING	50-117
3E13	HYDRO. DR. PUMP BEARING (SUNDSTRAND).....	50-79	3E13	HYDROSTATIC DRIVE PUMP FRONT COVER (SUNDSTRAND).....	50-79
3E23	HYDRO. DR. PUMP BEARINGS (SUNDSTRAND)	50-89	3E14	HYDROSTATIC DRIVE PUMP FRONT COVER (SUNDSTRAND).....	50-80
3E17	HYDRO. DR. PUMP CYL. BLOCK (SUNDSTRAND)	50-83	3E17	HYDROSTATIC DRIVE PUMP HOUSING (SUNDSTRAND).....	50-83
3E18	HYDRO. DR. PUMP CYL. BLOCK (SUNDSTRAND)	50-84	3E25	HYDROSTATIC DRIVE PUMP HOUSING KIT	50-91
3E13	HYDRO. DR. PUMP SEAL (SUNDSTRAND)	50-79	3E22	HYDROSTATIC DRIVE PUMP SWASHPLATE.....	50-88
3F4	HYDRO. DR. PUMP SERVO PISTON ASSEMBLIES (EATON)	50-95	4H4	HYDROSTATIC DRIVE REEL HYDRAULIC PUMP	70-91
3F2	HYDRO. DR. PUMP SERVO PISTON ASSEMBLIES (SUNDSTRAND).....	50-93	3E25	HYDROSTATIC DRIVE SHAFT KIT	50-91
3F3	HYDRO. DR. PUMP SERVO PISTON ASSEMBLIES (SUNDSTRAND).....	50-94	3E5	HYDROSTATIC DRIVE UNIT.....	50-71
3E17	HYDRO. DR. PUMP SHAFT (SUNDSTRAND).....	50-83	3E6	HYDROSTATIC DRIVE UNIT.....	50-72
3E23	HYDRO. DR. PUMP SWASHPLATE (SUNDSTRAND)	50-89	3E5	HYDROSTATIC DRIVE UNIT, SHEAVES	50-71
3E23	HYDRO. DR. PUMP TRUNNIONS (SUNDSTRAND)	50-89	3E6	HYDROSTATIC DRIVE UNIT, SHEAVES	50-72
3D24	HYDRO. DRIVE CONTROL CABLE AND LEVER	50-65	3E5	HYDROSTATIC DRIVE UNIT, SUPPORTS	50-71
3E2	HYDRO. DRIVE CONTROL CABLE MOUNTING.....	50-67	3E6	HYDROSTATIC DRIVE UNIT, SUPPORTS	50-72
3F6	HYDRO. DRIVE DISPLACEMENT CONTROL VALVE (SUNDSTRAND).....	50-97	3G2	HYDROSTATIC DRIVE UPPER OIL LINES	50-120
3F7	HYDRO. DRIVE DISPLACEMENT CONTROL VALVE (SUNDSTRAND).....	50-98	3G3	HYDROSTATIC DRIVE UPPER OIL LINES	50-121
3F9	HYDRO. DRIVE DISPLACEMENT CONTROL VALVE (SUNDSTRAND).....	50-100	8F16	HYDROSTATIC GROUND DRIVE BELTS	170-4
3E20	HYDRO. DRIVE PUMP CYL. BLOCK (EATON).....	50-86	8F16	HYDROSTATIC GROUND DRIVE SHEAVES	170-4
3F1	HYDRO. DRIVE PUMP CYLINDER BLOCK KIT (EATON)	50-92	I		
3E15	HYDRO. DRIVE PUMP FRONT COVER(EATON)	50-81	6E20	IDLER ARM,FDR.HSE.LOWER BELT TGHTNR-SH.....	110-87
3E20	HYDRO. DRIVE PUMP HOUSING (EATON)	50-86	7D15	IDLER, BEATER	120-56
3E18	HYDRO. DRIVE PUMP HOUSING (SUNDSTRAND)	50-84	7D17	IDLER, BEATER	120-58
3F1	HYDRO. DRIVE PUMP HOUSING KIT (EATON).....	50-92	7G19	IDLER, CLEAN GRAIN ELEVATOR	120-137
3E20	HYDRO. DRIVE PUMP SHAFT (EATON).....	50-86	3G12	IDLER, CRAWLER	50-131
3E18	HYDRO. DRIVE PUMP SHAFT (SUNDSTRAND)	50-84	8D18	IDLER, DECLUTCHING	140-19
3E24	HYDRO. DRIVE PUMP SWASHPLATE (EATON).....	50-90	6F17	IDLER, DRIVE, FEEDER CONVEYOR-SH	110-110
3E24	HYDRO. DRIVE PUMP,SWASHPLATE,BEARINGS, AND TRUNNIONS (EATON)	50-90	7D1	IDLER, DUAL-RANGE CYLINDER DRIVE TIGHTENER	120-40
3F1	HYDRO. DRIVE SHAFT KIT (EATON)	50-92	6C4	IDLER, FEEDER CONVEYOR DRIVE (FIXED)	110-17
3D19	HYDRO.DR.-PROPULSION DR.CTRSHAFT SHEAVE.....	50-59	8F24	IDLER, FEEDER HOUSE (LONG).....	170-12
3F13	HYDRO.DR.DISPLACEMENT CONTROL HANDLE (SUNDSTRAND).....	50-104	8D19	IDLER, FEEDER HOUSE DRIVE	140-21
3F13	HYDRO.DR.DISPLACEMENT CTL.VALVE GASKET (SUNDSTRAND).....	50-104	8G17	IDLER, PRIMARY COUNTERSHAFT	170-32
3F13	HYDRO.DR.DISPLACEMENT CTL.VALVE ORIFICE (SUNDSTRAND).....	50-104	8G18	IDLER, SECONDARY COUNTERSHAFT	170-33
3E22	HYDRO.DR.PUMP SWASHPLATE,BRGS,TRUNNIONS	50-88	8D16	IDLER, SECONDARY COUNTERSHAFT DRIVE	140-17
4H15	HYDROSTATIC DR. REEL FLOW CONTROL VALVE.....	70-103	7F9	IDLER, SHOE GRAIN SUPPLY AUGERS	120-101
3D21	HYDROSTATIC DR.BELT TENSIONING MECHANISM.....	50-61	7E19	IDLER, STRAW CHOPPER DRIVE.....	120-85
4H14	HYDROSTATIC DR.REEL HYDRAULIC PUMP MTG.	70-102	6C13	IDLER,MID.,FDR.HSE.,L.H.,VAR.DR.-SH	110-26
3F14	HYDROSTATIC DRIVE CENTER SECTION (SUNDSTRAND).....	50-105	6C12	IDLER,MIDDLE,FDR.HSE.,L.H.(VARIABLE DR.)	110-25
3E9	HYDROSTATIC DRIVE CHARGE PUMP	50-75	8G1	IDLERS, FEEDER HOUSE (REG. FIXED)	170-14
3E11	HYDROSTATIC DRIVE CHARGE PUMP MOUNTING.....	50-77	8G2	IDLERS, FEEDER HOUSE (SIDEHILL).....	170-15
3E12	HYDROSTATIC DRIVE CHARGE PUMP MOUNTING (EATON)	50-78	8F19	IDLERS, FEEDER HOUSE (VARIABLE DRIVE)	170-7
3E25	HYDROSTATIC DRIVE CYLINDER BLOCK KIT	50-91	8F25	IDLERS, FEEDER HOUSE DRIVE (LONG RICE)	170-13
3G1	HYDROSTATIC DRIVE HOSES AND FITTINGS	50-118	6C14	IDLERS, FEEDER HOUSE MIDDLE BELT.....	110-27
3G4	HYDROSTATIC DRIVE LOWER OIL HOSES (SUNDSTRAND).....	50-122	8G3	IDLERS, FEEDERHOUSE (REG FIXED LESS REVERSER).....	170-16
3G4	HYDROSTATIC DRIVE LOWER OIL LINES (SUNDSTRAND).....	50-122	8G7	IDLERS, STRAW CHOPPER.....	170-21
3G9	HYDROSTATIC DRIVE LUBE BANK SYSTEM	50-127	7H7	IDLERS,DIP AND POUR ELEVATOR UPPER CHAIN.....	120-151
3F22	HYDROSTATIC DRIVE MOTOR (EATON)	50-114	2D2	IGNITION SWITCH KEY	40-43
3F18	HYDROSTATIC DRIVE MOTOR (SUNDSTRAND).....	50-110	5E14	INDICATOR LIGHT ASSEMBLY, HI PRESSURE.....	90-58
3F20	HYDROSTATIC DRIVE MOTOR (SUNDSTRAND).....	50-112	1G24	INJECTION NOZZLE, FUEL (DH)	30-34
3E8	HYDROSTATIC DRIVE MOTOR COUPLER.....	50-74	111	INJECTION NOZZLE, FUEL (TH)	30-64
3E8	HYDROSTATIC DRIVE MOTOR MOUNTING.....	50-74	3H15	INNER COVER	50-164
3G1	HYDROSTATIC DRIVE OIL COOLER	50-118	5D16	INNER ROOF	90-33
3F25	HYDROSTATIC DRIVE OIL RESERVOIR.....	50-117	5D16	INNER ROOF AND COVERS	90-33
			8C4	INNER UNLOADING AUGER COVERS	130-19
			3D6	INPUT HOUSING, POSI-TORQ DRIVE.....	50-43
			3C8	INPUT SHAFT, TRANSMISSION.....	50-19
			1B22	INSTALLATION KIT, SHORT BLOCK (DH)	20-10
			1C7	INSTALLATION KIT, SHORT BLOCK (TH 01)	20-20
			5D9	INSTRUMENT PANEL	90-25
			2D2	INSTRUMENT PANEL ACCESSORIES	40-43