

HP4872 -UN-01JAN94



JOHN DEERE 9400 MAXIMIZER™ COMBINE

(1989- )

(SPECIFICATIONS AND DESIGN SUBJECT TO CHANGE WITHOUT NOTICE)

## NOTE

FOR 900 SERIES PLATFORM PARTS INFORMATION, REFER TO JOHN DEERE 900 SERIES PLATFORM PARTS CATALOG - PC-2104.

FOR 40 SERIES CORN HEAD PARTS INFORMATION, REFER TO JOHN DEERE 40 SERIES CORN HEAD PARTS CATALOG - PC-1223.

FOR 50A SERIES ROW-CROP HEAD PARTS INFORMATION, REFER TO JOHN DEERE 50A SERIES ROW-CROP HEAD PARTS CATALOG - PC-1747.

FOR THREE-ROLLER BELT PICKUP PARTS INFORMATION, REFER TO JOHN DEERE THREE-ROLLER BELT PICKUP PARTS CATALOG - PC-2210.

FOR 918 AND 920 DRAPER PARTS INFORMATION, REFER TO JOHN DEERE 918 AND 920 DRAPER PLATFORMS PARTS CATALOG - PC-2212.

FOR 90 SERIES CORN HEAD PARTS INFORMATION, REFER TO JOHN DEERE 90 SERIES CORN HEAD PARTS CATALOG - PC-2404.

## IMPORTANT

THIS PARTS CATALOG CONTAINS PARTS INFORMATION FOR THE 9400 MAXIMIZER™ COMBINE. VINTAGE IS DETERMINED BY THE COMBINE SERIAL NUMBER OR THE PRODUCT IDENTIFICATION NUMBER (PIN). IT IS IMPORTANT THAT THE CORRECT NUMBERS BE USED WHEN ORDERING PARTS.

## PRODUCT INFORMATION NUMBER (PIN) PLATE

THE PRODUCT IDENTIFICATION PLATE (PIN) IS LOCATED NEAR RIGHT-HAND SIDE OF THE TOOL BOX.  
AN EXAMPLE OF THE TWO-LINES ON THIS PIN PLATE IS:

HO9400X630101  
COMBINE

(FIRST LINE)

HO - MANUFACTURING UNIT (HARVESTER WORKS)

9400 - MODEL IDENTIFIER

X - CONFIGURATION CODE/MODEL IDENTIFIER SUFFIX

630101 - SEQUENTIAL NUMBER USED IN SERIAL NO. COLUMN

(SECOND LINE)


COMBINE - TYPE OF PRODUCT

*COPYRIGHT (C) 2000. DEERE & COMPANY. MOLINE, ILLINOIS. ALL RIGHTS RESERVED.*

THE ENGINE SERIAL NUMBER IS LOCATED ON THE RIGHT-HAND SIDE OF THE ENGINE BLOCK.

## 9400 ENGINE SERIAL NUMBER

 HP4063 -UN-01JAN94



1. NUMBER OF CYLINDERS    -6-
2. CUBIC INCH DISPLACEMENT -359
3. TYPE OF AIR INTAKE    -T- TURBOCHARGED
4. FACTORY USER        -H- HARVESTER
5. ENGINE VERSION (FIRST) -
6. ENGINE SERIAL NUMBER -
7. ENGINE MANUFACTURER -T- DUBUQUE

**Thanks very much for your reading,  
Want to get more information,  
Please click here, Then get the complete  
manual**

**JustClickHere** 

**NOTE:**

**If there is no response to click on the link above,  
please download the PDF document first, and then  
click on it.**

**Have any questions please write to me:  
[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**

## PARTS LISTING INFORMATION

SERIAL NUMBER OR PRODUCT IDENTIFICATION NUMBER (PIN) INFORMATION SHOWS ON WHICH MACHINES PART MAY BE USED: FOR EXAMPLE:

- THE PART CAN BE USED ON ALL MACHINES.
- 000000 THE PART CAN BE USED ON ALL MACHINES UP TO AND INCLUDING SERIAL NUMBER LISTED.
- 000000- THE PART CAN BE USED ON ALL MACHINES BEGINNING WITH THE SERIAL NUMBER LISTED..
- 000000-000000 THE PART CAN BE USED ON ALL MACHINES BETWEEN AND INCLUDING SERIAL NUMBERS LISTED.

WHEN XXXXXX'S ARE LISTED IN PLACE OF A SERIAL NUMBER, A SERIAL NUMBER CHANGE WAS MADE, BUT THE EXACT SERIAL NUMBER IS NOT AVAILABLE WHEN THE CATALOG WAS PRINTED.

### **FOR INDIVIDUAL HEADER PARTS CATALOGS REFER TO:**

PC-2104 - PARTS CATALOG FOR JOHN DEERE 900 SERIES PLATFORMS

PC-2210 - PARTS CATALOG FOR JOHN DEERE THREE ROLLER BELT PICK-UP

PC-2212 - PARTS CATALOG FOR JOHN DEERE 918 DRAPER PLATFORMS

PC-1747 - PARTS CATALOG FOR JOHN DEERE 50A SERIES ROW-CROP HEADS


PC-1223 - PARTS CATALOG FOR JOHN DEERE 40 SERIES CORN HEADS

PC-2404 - PARTS CATALOG FOR JOHN DEERE 90 SERIES CORN HEADS

## ENGINE SERIAL NUMBER PLATE

TP8011

-UN-01JAN94

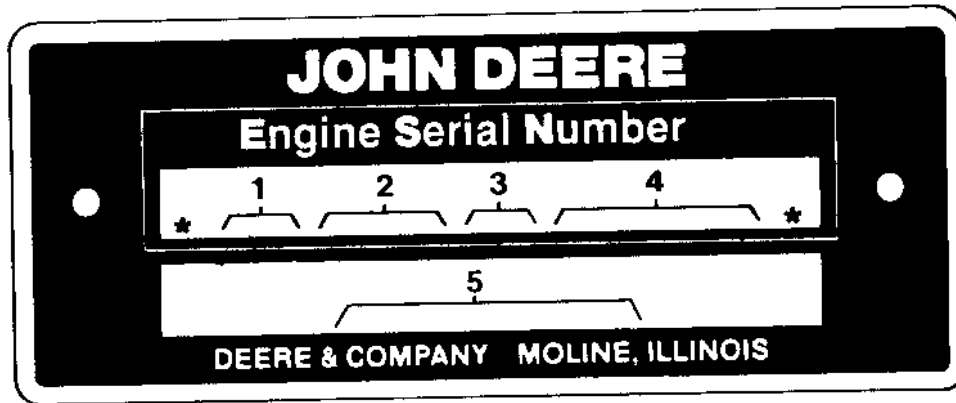

- |  |   |
|--|---|
| 1. DESIGNATES ENGINE MANUFACTURER                      | T-JOHN DEERE DUBUQUE WORKS  |
| 2. DESIGNATES NUMBER OF CYLINDERS AND LITERS           | 5059 (5.9 LITER)<br>6068 (6.8 LITER)  |
| 3. DESIGNATES FUEL TYPE OR SPECIAL CONDITION           | DF NON-TURBOCHARGED DIESEL ENGINE<br>TF TURBOCHARGED DIESEL ENGINE                      |
| 4. DESIGNATES ENGINE SERIAL NUMBER                     | 123456  |
| 5. DESIGNATES THE ENGINE APPLICATION AND FACTORY USER. | 6059AH001 (        -337245)<br>6068HH001 (337246-701275)<br>6068HH050 (701276-        ) |

## **DIRECTION ARROW**

ARROWS ARE USED WITH ILLUSTRATIONS TO INDICATE THE FRONT OF THE UNIT. "RIGHT-HAND" AND "LEFT-HAND" SIDES ARE DETERMINED BY FACING IN THE DIRECTION OF MACHINE FORWARD TRAVEL.

## **BOX-ENCLOSED ILLUSTRATIONS**

A KEY NUMBER, SHOWN IN THE PARTS LIST, IS ASSIGNED TO A BOX ENCLOSING ALL PARTS SOLD AS A SERVICE ASSEMBLY. A BOX NOT KEYED INCLUDES NON-CURRENT PARTS.

## **KITS**

KIT INFORMATION WILL BE FOUND IMMEDIATELY FOLLOWING THE STORY IN WHICH IT IS USED. THE ILLUSTRATION IS REPEATED WITH ONLY THE KIT PARTS CALLED OUT AND WITH ALL OTHER PARTS SHOWN IN PHANTOM.

## **JDM REMANUFACTURED COMPONENTS**

THE SERVICE PARTS LISTED IN THIS CATALOG ARE INTENDED FOR THE REPAIR OF ORIGINAL EQUIPMENT COMPONENTS. ALTHOUGH MOST SERVICE PARTS MAY BE USED TO REPAIR REMANUFACTURED COMPONENTS, THE REMANUFACTURED DESIGN MAY CHANGE PARTS SUFFICIENTLY SO THAT SERVICE PARTS ARE INADEQUATE OR NOT USABLE.

## **BOLT AND CAP SCREW STRENGTH IDENTIFICATION**

BOLTS AND CAP SCREWS REQUIRED TO HAVE HIGH-STRENGTH QUALITIES EQUIVALENT TO SAE GRADE 8 ARE IDENTIFIED THROUGHOUT THIS CATALOG BY THE DESCRIPTION HS SAE 8. ALL STANDARD BOLTS AND CAP SCREWS ARE SAE GRADE 5 OR LOWER. BOLTS AND CAP SCREWS REQUIRED TO HAVE HIGH-STRENGTH QUALITIES EQUIVALENT TO PROPERTY CLASS 10.9 ARE IDENTIFIED THROUGHOUT THIS CATALOG BY THE DESCRIPTION HS 10.9. ALL STANDARD BOLTS AND CAP SCREWS ARE PROPERTY CLASS 8.8 OR LOWER.

## **SI UNITS OF MEASURE**

METRIC DIMENSIONS ARE GIVEN, WHERE APPLICABLE, THROUGHOUT THIS PARTS CATALOG.



## TRADEMARKS

THROUGHOUT THIS PARTS CATALOG, YOU WILL FIND THE FOLLOWING DEERE & COMPANY TRADEMARKS:

DIAL-A-SPEED™  
DIAL-A-MATIC™  
HARVESTRAK™  
CONTOUR MASTER™

POSI-TORQ™  
TORQ-GARD SUPREME®  
QUIK-TATCH™

## CHANGE INDICATOR LINE

CHANGES AFFECTING THE ORDERING OF PARTS ARE IDENTIFIED BY VERTICAL LINES MARKED IN THE LEFT-HAND MARGIN OF REVISED PARTS LISTING IMAGES. A LINE IS ALSO AT THE LEFT-HAND EDGE OF THE SAME PART NUMBER IN THE NUMERICAL INDEX TO SHOW THE LOCATION OF REVISED INFORMATION.

## FUNCTION CODE

**(EXAMPLE - FC: 5000)**

FUNCTION CODES ARE LOCATED ON EACH PAGE IN THE UPPER RIGHT-HAND CORNER IN THE BOX. THE CODE LISTED IS A GROUPING CODE THAT CAN BE USED FOR WARRANTIES AND FOR DTAC TO IDENTIFY CERTAIN AREAS.

## COMPLETE GOODS LISTINGS

COMPLETE GOODS ARE IN BOLD FACE TYPE. ORDER SEPARATELY. DO NOT INCLUDE ON REPLACEMENT PARTS ORDER.

SECTION INDEX

SECTION 10 - GENERAL INFORMATION

SECTION 20 - ENGINE FAN, INTERCOOLER AND SCREENS

SECTION 24 - 6359 AND 6068 ENGINES

SECTION 30 - FUEL AND AIR

SECTION 40 - ELECTRICAL

SECTION 50 - POWER TRAIN

SECTION 60 - STEERING AND BRAKES

SECTION 70 - HYDRAULICS

SECTION 80 - SEPARATOR SHELL

SECTION 90 - OPERATOR'S STATION

SECTION 110 - FEEDER HOUSE

SECTION 120 - THRESHING AND SEPARATION

SECTION 121 - DRIVES

SECTION 125 - RESIDUE DISPOSAL

SECTION 130 - CLEAN GRAIN ELEVATOR, GRAIN TANK AND UNLOADING AUGER

SECTION 160 - DIAL-A-MATIC HEADER HEIGHT CONTROL

SECTION 170 - DECALS, BELTS AND CHAINS

SECTION 180 - NUMERICAL INDEX

**ALPHABETICAL INDEX**

GRID	A	PAGE	GRID	PAGE	
5F4	A/C COMPRESSOR (650101- ) R134A .....	90 - 92	2D9	AIR CONDITIONER WIRING HARNESS ( -660100) .....	40 - 22
5F5	A/C COMPRESSOR COVER (650101- ) R134A .....	90 - 93	2D11	AIR CONDITIONER WIRING HARNESS (660101- ) .....	40 - 24
5F4	A/C COMPRESSOR DIODE (650101- ) R134A .....	90 - 92	5C22	AIR CONDITIONING AND HEATER DUCTS .....	90 - 33
5F4	A/C COMPRESSOR MANIFOLD (650101- ) R134A .....	90 - 92	4F3	AIR CONDITIONING CONDENSER AND OIL COOLER .....	70 - 90
5F5	A/C COMPRESSOR PULLEY (650101- ) R134A .....	90 - 93	5E18	AIR CONDITIONING SYSTEM .....	90 - 80
5F4	A/C COMPRESSOR SEAL (650101- ) R134A .....	90 - 92	5E20	AIR CONDITIONING SYSTEM ( -650100) R-12 REFRIGERANT .....	90 - 82
5F7	A/C COMPRESSOR SEAL KIT (650101- ) .....	90 - 95	5E22	AIR CONDITIONING SYSTEM (650101- ) R134A REFRIGERANT .....	90 - 84
1C7	A/C CONDENSER, AIR INTER COOLER AND RADIATOR WITH OIL COOLER .....	20 - 20	5E16	AIR CONDITIONING/HEATER AND PRESSURIZING FAN .....	90 - 78
2E17	A/C HIGH PRESSURE SWITCH, 6068 UPPER PARTS .....	40 - 56	5E14	AIR CONDITIONING/HEATER HOUSING AND FILTERS .....	90 - 76
2E17	A/C HIGH PRESSURE SWITCH, 6359 UPPER PARTS .....	40 - 56	1G4	AIR INTAKE .....	24 - 95
1D6	ACCESS COVER, INJECTION PUMP GEAR .....	24 - 18	1G5	AIR INTAKE .....	24 - 96
4C23	ACCUMULATOR AND MOUNTING, ONE GALLON (655101- ) .....	70 - 34	1G6	AIR INTAKE SYSTEM .....	24 - 97
4C21	ACCUMULATOR HOSES AND LINES ( -655100) (ONE-HALF GALLON) .....	70 - 32	1C7	AIR INTER COOLER, RADIATOR WITH OIL COOLER AND A/C CONDENSER .....	20 - 20
4C23	ACCUMULATOR HOSES AND LINES (655101- )(ONE GALLON) .....	70 - 34	5D16	AIR SEAT SUSPENSION (660101- ) .....	90 - 52
4B15	ACCUMULATOR PRESSURE GAUGE .....	70 - 2	5D18	AIR SEAT SUSPENSION KITS (665101- ) .....	90 - 54
4B15	ACCUMULATOR PRESSURE GAUGE WIRING HARNESS .....	70 - 2	5D20	AIR SEAT SUSPENSION KITS (665101- ) .....	90 - 56
4C21	ACCUMULATOR, DUAL AND MOUNTING ( -655100) (ONE-HALF GALLON) .....	70 - 32	5D22	AIR SEAT SUSPENSION KITS (665101- ) .....	90 - 58
4C19	ACCUMULATOR, ONE-HALF GALLON (SINGLE) .....	70 - 30	5D24	AIR SEAT SUSPENSION KITS (665101- ) .....	90 - 60
3F8	ACTUATOR, PARK BRAKE ( -640100) .....	60 - 2	2D11	AIR SEAT WIRING HARNESS (660101- ) .....	40 - 24
1F11	ADAPTER, EXHAUST .....	24 - 76	5D18	AIR SUSPENSION KITS, SEAT (665101- ) .....	90 - 54
2E3	ADAPTER, WIRING HARNESS (CONTOUR MASTER) .....	40 - 42	5D20	AIR SUSPENSION KITS, SEAT (665101- ) .....	90 - 56
1H9	ADAPTER,ENGINE COOLANT .....	24 - 126	5D22	AIR SUSPENSION KITS, SEAT (665101- ) .....	90 - 58
1E15	ADAPTER,ENGINE OIL FILTER .....	24 - 52	5D24	AIR SUSPENSION KITS, SEAT (665101- ) .....	90 - 60
3G19	ADJUSTABLE REAR AXLE .....	60 - 38	5D16	AIR SUSPENSION, SEAT (660101- ) .....	90 - 52
3G23	ADJUSTABLE REAR AXLE STEERING TIE RODS .....	60 - 42	112	ALTERNATOR ADJUSTING STRAP .....	24 - 156
5D12	ADJUSTER, OPERATOR'S SEAT LEVER .....	90 - 48	2F5	ALTERNATOR AND SHEAVE ( -650100) .....	40 - 68
6G19	ADJUSTING BRACKET, CYLINDER DRIVE, INTERMEDIATE .....	121 - 42	2F3	ALTERNATOR AND VOLTAGE REGULATOR(90 AMP) MOTOROLA-PRESTOLITE ( -650100) .....	40 - 66
5E5	ADJUSTING MECHANISM, ARMREST (R.H.) (640101- ) .....	90 - 66	111	ALTERNATOR MOUNTING BRACKETS .....	24 - 154
5E3	ADJUSTING MECHANISM, ARMREST, R.H. ( -640100) .....	90 - 64	112	ALTERNATOR MOUNTING BRACKETS .....	24 - 156
2F9	ADJUSTING MOTOR, CONCAVE .....	40 - 72	2F6	ALTERNATOR, SHEAVE AND BELT BOSCH (650101- ) .....	40 - 69
2F1	ADJUSTING MOTOR, SEPARATOR FAN DRIVE .....	40 - 64	2F7	ALTERNATOR, VOLTAGE REGULATOR (95 AMP) BOSCH (650101- ) .....	40 - 70
112	ADJUSTING STRAP, ALTERNATOR .....	24 - 156	2D3	ANTENNA, SPEAKERS AND RADIO .....	40 - 16
2D13	AIR CINDITIONER THERMOSTAT KIT (630101-640100) .....	40 - 26	6G11	ARM, LOCKOUT, DUAL-RANGE .....	121 - 34
2B22	AIR CLEANER AND INTAKE TUBES - GRAIN .....	30 - 12	1H25	ARMATURE .....	24 - 143
2B24	AIR CLEANER AND INTAKE TUBES - GRAIN .....	30 - 14	117	ARMATURE, STARTING MOTOR DRIVE .....	24 - 150
2E17	AIR CLEANER PLUGGED SWITCH, 6068 UPPER PARTS .....	40 - 56	5E7	ARMREST (L.H.) .....	90 - 68
2E17	AIR CLEANER PLUGGED SWITCH, 6359 UPPER PARTS .....	40 - 56	5E3	ARMREST ADJUSTING MECHANISM (R.H.) ( -640100) .....	90 - 64
1J8	AIR CONDITIOING COMPRESSOR BRACKET .....	24 - 178	5E5	ARMREST ADJUSTING MECHANISM (R.H.) (640101- ) .....	90 - 66
2D9	AIR CONDITIONER AND HEATER (WIRING HARNESS)( -660100) .....	40 - 22	2D1	ARMREST PANEL, OPERATOR'S .....	40 - 14
2D17	AIR CONDITIONER AND HEATER SWITCH .....	40 - 30	2D1	ARMREST ROCKER SWITCHES .....	40 - 14
2D15	AIR CONDITIONER PRESSURIZER FAN KIT (640101-650100) .....	40 - 28	2C23	ARMREST WIRING HARNESS .....	40 - 12
			5E1	ARMREST WITH GLOVE BOX (R.H.) .....	90 - 62

## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
6D19	ARMS, FRAME, PRECLEANER CHAFFER .....	120 - 58	6E15	BEARING KIT, STRAW WALKER (650101-665100) .....	120 - 78
1C25	ARMS, ROCKER .....	24 - 12	6E17	BEARING KIT, STRAW WALKERS (665101- ) .....	120 - 80
1D1	ARMS, ROCKER .....	24 - 13	3D10	BEARING, COVER AND QUILL (STEERABLE MOTOR).....	50 - 49
3D15	ARMS, STEERING, CAM LOBE MOTOR (STEERABLE MOTOR).....	50 - 54	1C19	BEARING, CRANKSHAFT THRUST .....	24 - 6
2D1	ASHTRAY.....	40 - 14	1C20	BEARINGS - CRANKSHAFT.....	24 - 7
4E1	ASSEMBLY, SIX STACK SOLENOID CONTROL VALVE (660101- ) .....	70 - 62	1D8	BEARINGS, CONNECTING ROD .....	24 - 20
7H16	AUGER BELTS .....	170 - 2	1D9	BEARINGS, CONNECTING ROD (6068) .....	24 - 21
7G14	AUGER COVERS AND CHANNEL, CROSS .....	130 - 43	3C11	BEARINGS, FINAL DRIVE (RING AND PINION) .....	50 - 23
4G17	AUGER DRIVE MUD SHIELDS (R-H SIDE) .....	80 - 28	3C12	BEARINGS, FINAL DRIVE (RING AND PINION) .....	50 - 25
7E11	AUGER DRIVE SHIELD, UPPER TAILINGS .....	125 - 72	3C13	BEARINGS, FINAL DRIVE (RING AND PINION) .....	50 - 26
7E13	AUGER DRIVE SHIELD, UPPER TAILINGS .....	125 - 74	1C16	BEARINGS, MAIN .....	24 - 3
7E11	AUGER DRIVE, UPPER TAILINGS .....	125 - 72	1C17	BEARINGS, MAIN .....	24 - 4
7E13	AUGER DRIVE, UPPER TAILINGS .....	125 - 74	1C19	BEARINGS, MAIN .....	24 - 6
7F7	AUGER HOUSING, LOADING, UPPER CLEAN GRAIN .....	130 - 12	6E13	BEARINGS, STRAW WALKER ( -650100) .....	120 - 76
7F9	AUGER HOUSING, LOADING, UPPER CLEAN GRAIN (660101- ).....	130 - 14	7E3	BEARINGS, TAILINGS ELEVATOR CONVEYOR .....	125 - 64
2E11	AUGER SENSOR AND WIRING HARNESS, UNLOADING (660101- ).....	40 - 50	3C4	BEARINGS, TRANSMISSION .....	50 - 16
4D17	AUGER SWING CONTROL VALVE (650100- ).....	70 - 52	3C6	BEARINGS, TRANSMISSION PINION SHAFT.....	50 - 18
4D15	AUGER SWING, SOLENOID CONTROL VALVE DOUBLE PILOTED ( -650100) .....	70 - 50	1D11	BEARINGS, CONNECTING ROD .....	24 - 23
7G9	AUGER SWIVEL SUPPORT AND BRACES .....	130 - 38	7H19	BEATER BELTS SHEAVES .....	170 - 5
7F7	AUGER TRANSITION HOUSING .....	130 - 12	6C22	BEATER COVER .....	120 - 36
7D23	AUGER TROUGH, LOWER TAILINGS.....	125 - 60	6H5	BEATER DRIVE SHEAVES AND TIGHTENER .....	121 - 52
2E11	AUGER WIRING HARNESS, UNLOADING (660101- ).....	40 - 50	6C8	BEATER GRATE AND 13-BAR CONCAVE ASSEMBLY .....	120 - 22
7G5	AUGER, GRAIN TANK, VERTICAL UNLOADING .....	130 - 34	6C3	BEATER GRATE CURTAIN (650437- ).....	120 - 16
7G17	AUGER, HORIZONTAL UNLOADING (14- AND 17-FT.).....	130 - 46	6C20	BEATER SHAFT AND DRIVE BELT.....	120 - 34
7G19	AUGER, HORIZONTAL UNLOADING (17-FT.).....	130 - 48	7H3	BELT GUIDE, UNLOADING AUGER DRIVE .....	130 - 56
7G13	AUGER, HORIZONTAL UNLOADING, DRIVE GEARCASE .....	130 - 42	1114	BELT IDLER TENSIONER.....	24 - 158
7F11	AUGER, LOADING, CLEAN GRAIN .....	130 - 16	6H19	BELT PICKUP / REEL DRIVE, PUMP MOUNTING SHEAVE.....	121 - 66
7F10	AUGER, LOADING, CLEAN GRAIN FOLD (660101- ) .....	130 - 15	2F6	BELT, ALTERNATOR AND SHEAVE BOSCH (650101- ).....	40 - 69
7D21	AUGER, LOWER TAILINGS .....	125 - 58	6C20	BELT, DRIVE, SHAFT AND BEATER.....	120 - 34
7H17	AUGER, LOWER TAILINGS, BELTS .....	170 - 3	5H21	BELT, FAN, DUST, LH SIDE FEEDER HOUSE-RETROFIT INSTALLATION.....	110 - 60
7H3	AUGER, UNLOADING, DRIVE BELT GUIDE.....	130 - 56	5D9	BELT, OPERATOR'S SEAT (665101- ).....	90 - 44
7E11	AUGER, UPPER TAILINGS.....	125 - 72	5D11	BELT, SEAT - RETROFIT KIT (MACHINES PRIOR TO 1996 MODEL YEAR) .....	90 - 46
7E13	AUGER, UPPER TAILINGS.....	125 - 74	5D10	BELT, SEAT - TRAINING SEAT (665101- ).....	90 - 45
7G23	AUGERS, GRAIN TANK CROSS .....	130 - 52	7H17	BELTS, AIR CONDITIONER COMPRESSOR .....	170 - 3
6C24	AUGERS, SHOE GRAIN SUPPLY AND HOUSING.....	120 - 38	7H16	BELTS, AUGER .....	170 - 2
6D1	AUGERS, SHOE GRAIN SUPPLY AND HOUSING.....	120 - 40	7H19	BELTS, BEATER .....	170 - 5
2C15	AUX FIELD LIGHTS SWITCH, OPTIONAL .....	40 - 4	7H17	BELTS, CLEAN GRAIN ELEVATOR.....	170 - 3
2C21	AUXILIARY FIELD LIGHTING .....	40 - 10	7H16	BELTS, CONVEYOR FEEDER .....	170 - 2
3B23	AXLE SPACERS (RING AND PINION FINAL DRIVE).....	50 - 10	7H17	BELTS, COOLING FAN.....	170 - 3
3C12	AXLE, FINAL DRIVE (RING AND PINION) .....	50 - 25	7H17	BELTS, CYLINDER DRIVE .....	170 - 3
3B22	AXLE, FRONT .....	50 - 9	7H17	BELTS, DRIVE, CYLINDER INTERMEDIATE .....	170 - 3
3G19	AXLE, REAR, ADJUSTABLE.....	60 - 38	7H16	BELTS, ENGINE DRIVE .....	170 - 2
3H5	AXLE, REAR, SPINDLES .....	60 - 48	7H18	BELTS, FAN, CLEANING .....	170 - 4
3H3	AXLE, REAR, SUPPORT.....	60 - 46	7H16	BELTS, FEEDER CONVEYOR .....	170 - 2
			7H18	BELTS, FEEDER HOUSE .....	170 - 4
			7H18	BELTS, HEADER AND REEL .....	170 - 4
			7H19	BELTS, LOWER TAILINGS AUGER.....	170 - 5
			7H17	BELTS, LOWER TAILINGS AUGER .....	170 - 3
			7H17	BELTS, ROTARY SCREEN .....	170 - 3
			7H18	BELTS, STRAW CHOPPER .....	170 - 4
			7H18	BELTS, STRAW SPREADER .....	170 - 4
			7H18	BELTS, UNLOADING AUGERS .....	170 - 4
			7H19	BELTS, UNLOADING SYSTEM.....	170 - 5
<b>B</b>					
2G22	BACKSHAFT SPEED SENSOR, FEEDER HOUSE (645123- ).....	40 - 110			
7F23	BASE, GRAIN TANK .....	130 - 28			
2F13	BATTERIES, CABLE AND HOLDDOWN .....	40 - 76			

**ALPHABETICAL INDEX - CONTINUED**

<i>GRID</i>		<i>PAGE</i>	<i>GRID</i>		<i>PAGE</i>
7H19	BELTS, UPPER TAILINGS AUGER .....	170 - 5	5C3	CAB FRAME AND SUPPORT .....	90 - 14
7H16	BELTS, WALKER .....	170 - 2	5F10	CAB HARDWARE KIT .....	90 - 98
4D13	BI-DIRECTIONAL MODULE, SOLENOID CONTROL VALVE, REEL LIFT AND CYLINDER SPEED .....	70 - 48	5B21	CAB INTERIOR TRIM PANELS .....	90 - 8
1D16	BLOCK, CYLINDER .....	24 - 28	5C17	CAB L.H. LANDING AND MIRROR (650201- ) .....	90 - 28
1D17	BLOCK, CYLINDER .....	24 - 30	5C15	CAB LANDING AND MIRROR ( -650100) .....	90 - 26
1D18	BLOCK, CYLINDER .....	24 - 31	5C19	CAB LANDING AND MIRROR (R.H.) .....	90 - 30
1D19	BLOCK, CYLINDER .....	24 - 32	2C12	CAB LIGHT, DOME .....	40 - 1
1D20	BLOCK, CYLINDER .....	24 - 33	5D7	CAB OPERATOR'S SEAT AND BACKREST .....	90 - 42
1D21	BLOCK, CYLINDER .....	24 - 34	5B15	CAB PANELS AND FLOOR MAT .....	90 - 2
1E3	BLOCK, CYLINDER .....	24 - 40	2C17	CAB POST INSTRUMENT PANEL .....	40 - 6
1C3	BLOCK, ENGINE COOLANT HEATER .....	20 - 16	5C23	CAB POST INSTRUMENT PANEL .....	90 - 34
1D23	BLOCK, SHORT ENGINE .....	24 - 36	5B19	CAB REAR AND SIDE SEALS .....	90 - 6
1E1	BLOCK, SHORT ENGINE .....	24 - 38	5C5	CAB ROOF AND SUPPORTS .....	90 - 16
3D3	BLOCK, VALVE .....	50 - 42	2C19	CAB ROOF LIGHTS .....	40 - 8
2F21	BOARDS, ELECTRONIC .....	40 - 84	5D14	CAB SEAT HEIGHT ADJUSTER (VERTICAL CONTROL) .....	90 - 50
2F7	BOSCH ALTERNATOR AND VOLTAGE REGULATOR (95 AMP) (650101- ) .....	40 - 70	5B17	CAB SOUND DEADENING, FOAM AND SEALS .....	90 - 4
5C13	BOX, TOOL (660101- ) .....	90 - 24	2C13	CAB WIRING HARNESS .....	40 - 2
3F25	BRACKET, BRAKE CABLE SUPPORT (645101- ) .....	60 - 19	5C1	CAB, COMPLETE .....	90 - 12
5G24	BRACKET, FEEDER CONVEYOR .....	110 - 38	6C18	CABLE, CONCAVE INDICATOR, AND BRACKETS .....	120 - 32
4C19	BRACKET, SINGLE ACCUMULATOR MOUNTING .....	70 - 30	2G5	CABLE, WIRING .....	40 - 92
2E5	BRACKET, STRAW CHOPPER SENSOR .....	40 - 44	2F13	CABLES, BATTERY .....	40 - 76
1114	BRACKET, TENSIONER .....	24 - 158	3B17	CABLES, CONTROL, HYDROSTATIC DRIVE ( -645100) .....	50 - 4
1J8	BRACKET, AIR CONDITIONING COMPRESSOR .....	24 - 178	3B19	CABLES, HYDROSTATIC DRIVE CONTROL (645101- ) .....	50 - 6
1112	BRACKETS, ALTERNATOR MOUNTING .....	24 - 156	3D4	CAM LOBE MOTOR (STEERABLE MOTOR) .....	50 - 43
6C18	BRACKETS, CONCAVE INDICATOR AND CABLE .....	120 - 32	3D11	CAM, CARRIER, AND PISTON (STEERABLE MOTOR) .....	50 - 50
2E13	BRACKETS, LOW SHAFT SPEED SENSORS .....	40 - 52	1C23	CAMSHAFT .....	24 - 10
4E3	BRACKETS, SOLENOID CONTROL VALVE .....	70 - 64	1C24	CAMSHAFT .....	24 - 11
3F25	BRAKE CABLE SUPPORT BRACKET (645101- ) .....	60 - 19	1C23	CAMSHAFT GEAR .....	24 - 10
3F20	BRAKE CYLINDER, MASTER .....	60 - 14	1C24	CAMSHAFT GEAR .....	24 - 11
3F16	BRAKE CYLINDERS, MASTER AND BRAKE PEDALS .....	60 - 10	7G3	CAP, GRAIN TANK CLEAN OUT CHUTE .....	130 - 32
3F12	BRAKE LINES AND HOSES, PARKING, UPPER ( -640100) .....	60 - 6	1D17	CAP, MAIN BEARING .....	24 - 30
3F18	BRAKE LINES, MASTER CYLINDER AND RESERVOIR .....	60 - 12	1D19	CAP, MAIN BEARING .....	24 - 32
3F14	BRAKE PEDAL AND SEAL, PARKING .....	60 - 8	1D20	CAP, MAIN BEARING .....	24 - 33
3F16	BRAKE PEDALS AND CYLINDERS, MASTER .....	60 - 10	1D21	CAP, MAIN BEARING .....	24 - 34
3F22	BRAKE SHOES AND DRUM (LEFT-HAND ILLUSTRATED) .....	60 - 16	1D3	CAP, OIL FILLER .....	24 - 15
3F24	BRAKE SLAVE CYLINDER .....	60 - 18	1E10	CAP, ENGINE OIL FILL .....	24 - 47
3F8	BRAKE, PARK, ACTUATOR ( -640100) .....	60 - 2	1E3	CAP, MAIN BEARING .....	24 - 40
3F10	BRAKE, PARKING, LINES ( -640100) .....	60 - 4	3D13	CAPS, YOKE AND PIVOTS (STEERABLE MOTOR) ....	50 - 52
3F7	BRAKE, PARKING, VALVE ( -640100) .....	60 - 1	3D11	CARRIER, PISTON, AND CAM (STEERABLE MOTOR) .....	50 - 50
2F17	BREAKERS, CIRCUIT, ENGINE COMPARTMENT .....	40 - 80	3E19	CASE DRAIN, 4-WHEEL DRIVE, HYDRAULIC LINES .....	50 - 84
2F14	BREAKERS, CIRCUIT, ENGINE COMPARTMENT ( -660100) .....	40 - 77	7G3	CASE, VERTICAL AUGER LOWER GEAR .....	130 - 32
2F15	BREAKERS, CIRCUIT, ENGINE COMPARTMENT (660101- ) .....	40 - 78	2C17	CDC (COMBINE DATA CENTER) .....	40 - 6
112	BRUSHES, STARTING MOTOR .....	24 - 145	5C23	CDC (COMBINE DATA CENTER) .....	90 - 34
115	BYPASS START KIT (ESN 709446- ) .....	24 - 148	7D13	CHAFF SPREADER (DUAL MOTOR) HOSES AND LINES (650101- ) .....	125 - 50
1E11	BYPASS VALVE, ENGINE OIL .....	24 - 48	7D1	CHAFF SPREADER (DUAL MOTOR) PAN, WINGS AND SEALS (650101- ) .....	125 - 38
	<b>C</b>		7C21	CHAFF SPREADER (DUAL MOTOR) SHIELDS AND HANDLES (650101- ) .....	125 - 34
5C21	CAB AIR FILTER AND HOUSING .....	90 - 32	7D5	CHAFF SPREADER CONTROL, CHECK VALVE, ROD AND KNOB .....	125 - 42
2C12	CAB DOME LIGHT .....	40 - 1	7C17	CHAFF SPREADER DISC (DUAL MOTOR) (650101- ) .....	125 - 30
5C1	CAB DOOR AND GLASS .....	90 - 12	7C15	CHAFF SPREADER DISC AND DRIVE BELT ( -650100) .....	125 - 28
5B23	CAB DOOR LATCH .....	90 - 10	7C19	CHAFF SPREADER FRAME, SHIELDS AND HANDLES ( -650100) .....	125 - 32
5B15	CAB FLOOR MAT .....	90 - 2	7D7	CHAFF SPREADER LINES AND FITTINGS .....	125 - 44

## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
4B21	CHAFF SPREADER MOTOR (EATON) (655929- ) .....	70 - 8	7F3	CLEAN GRAIN ELEVATOR, UPPER .....	130 - 8
7D3	CHAFF SPREADER MOUNTING SUPPORT .....	125 - 40	7F11	CLEAN GRAIN LOADING AUGER .....	130 - 16
7C23	CHAFF SPREADER PAN AND SEALS ( -650100) .....	125 - 36	7F7	CLEAN GRAIN LOADING AUGER HOUSING, UPPER .....	130 - 12
7D11	CHAFF SPREADER, HOSES, LINES AND MOTOR ( -650100) .....	125 - 48	7F9	CLEAN GRAIN LOADING AUGER HOUSING, UPPER (660101- ) .....	130 - 14
7D9	CHAFF SPREADER, LINES, HOSES, VALVE AND PUMP .....	125 - 46	7F10	CLEAN GRAIN LOADING AUGER, FOLD (660101- ) .....	130 - 15
7D15	CHAFF SPREADER, PUMP .....	125 - 52	7E22	CLEAN GRAIN LOWER AUGER .....	130 - 2
6D21	CHAFFER ELEMENT .....	120 - 60	7E22	CLEAN GRAIN LOWER AUGER AND HINGED DOOR .....	130 - 2
6D23	CHAFFER ELEMENT .....	120 - 62	7E24	CLEAN GRAIN LOWER ELEVATOR .....	130 - 4
6E1	CHAFFER EXTENSION ELEMENT .....	120 - 64	7F1	CLEAN GRAIN LOWER ELEVATOR .....	130 - 6
6E3	CHAFFER FRAME .....	120 - 66	7E24	CLEAN GRAIN LOWER ELEVATOR AND CONVEYOR CHAIN .....	130 - 4
6D19	CHAFFER FRAME ARMS, PRECLEANER .....	120 - 58	7F1	CLEAN GRAIN LOWER ELEVATOR AND CONVEYOR CHAIN .....	130 - 6
6D15	CHAFFER FRAME, PRE-CLEANER .....	120 - 54	7G3	CLEAN OUT CHUTE, GRAIN TANK .....	130 - 32
6D13	CHAFFER, PRE-CLEANING .....	120 - 52	2B22	CLEANER, AIR AND INTAKE TUBES - GRAIN .....	30 - 12
7E6	CHAIN TIGHTENER, UPPER TAILINGS DRIVE .....	125 - 67	2B24	CLEANER, AIR AND INTAKE TUBES - GRAIN .....	30 - 14
7E24	CHAIN, CONVEYOR, CLEAN GRAIN LOWER ELEVATOR .....	130 - 4	6H7	CLEANING FAN DRIVE, SEPARATOR .....	121 - 54
7F1	CHAIN, CONVEYOR, CLEAN GRAIN LOWER ELEVATOR .....	130 - 6	6D5	CLEANING FAN INTAKE SHIELDS .....	120 - 44
5G24	CHAIN, FEEDER CONVEYOR DRIVE .....	110 - 38	6D7	CLEANING FAN INTAKE SHIELDS .....	120 - 46
7E3	CHAIN, TAILINGS ELEVATOR CONVEYOR .....	125 - 64	6D9	CLEANING FAN INTAKE SHIELDS ( -645100) .....	120 - 48
7G14	CHANNEL, CROSS AUGER .....	130 - 43	6D11	CLEANING FAN INTAKE SHIELDS (645101- ) .....	120 - 50
7G5	CHARGE HOUSING, VERTICAL UNLOADING AUGER .....	130 - 34	6D3	CLEANING FAN LEAF SCREENS (CORN) (660193- ) .....	120 - 42
4F10	CHARGE PRESSURE HOSE (640101- ) .....	70 - 98	6D5	CLEANING FANS AND SHROUDS .....	120 - 44
7D5	CHECK VALVE, ROD AND KNOB, CHAFF SPREADER CONTROL .....	125 - 42	6D7	CLEANING FANS AND SHROUDS .....	120 - 46
7C1	CHOPPER, STRAW, HOUSING ( -655100) .....	125 - 14	6C23	CLEANOUT DOOR, CONVEYOR AUGER, HANDLE AND LATCHES .....	120 - 37
7C1	CHOPPER, STRAW, KNIFEBACK ( -655100) .....	125 - 14	5G7	CLEANOUT DOORS, FEEDER HOUSE .....	110 - 20
7G3	CHUTE, GRAIN TANK CLEAN OUT .....	130 - 32	5G11	CLOSURE PLATES, FEEDER HOUSE - CONTOUR MASTER (660101- ) .....	110 - 24
2D1	CIGARETTE LIGHTER .....	40 - 14	6G1	CLUTCH, HEADER ELECTROMAGNETIC .....	121 - 24
2C17	CIRCUIT BOARD, COMBINE DATA CENTER .....	40 - 6	5G18	CLUTCH, SLIP, FEEDER HOUSE .....	110 - 32
5C23	CIRCUIT BOARD, COMBINE DATA CENTER .....	90 - 34	1I5	CLUTCH, STARING MOTOR (ESN 709446- ) .....	24 - 148
2F19	CIRCUIT BREAKER AND RELAY, THROTTLE CONTROL PANEL .....	40 - 82	1I9	CLUTCH, STARTING MOTOR .....	24 - 152
2F17	CIRCUIT BREAKER RELAYS .....	40 - 80	1I1	COIL, STARTING MOTOR .....	24 - 144
2F14	CIRCUIT BREAKER RELAYS ( -660100) .....	40 - 77	3G5	COLD WEATHER START BUTTON .....	60 - 24
2F15	CIRCUIT BREAKER RELAYS (660101- ) .....	40 - 78	5E10	COLD WEATHER START BUTTON .....	90 - 72
2F17	CIRCUIT BREAKERS, ENGINE COMPARTMENT .....	40 - 80	2B18	COLD WEATHER STARTING AID ( -655415) .....	30 - 8
2F14	CIRCUIT BREAKERS, ENGINE COMPARTMENT ( -660100) .....	40 - 77	2B20	COLD WEATHER STARTING AID (655416- ) .....	30 - 10
2F15	CIRCUIT BREAKERS, ENGINE COMPARTMENT (660101- ) .....	40 - 78	2C17	COMBINE DATA CENTER .....	40 - 6
2E23	CLAMPS, UNLOADING AUGER LIGHT .....	40 - 62	5C23	COMBINE DATA CENTER .....	90 - 34
7E24	CLEAN GRAIN CONVEYOR CHAIN .....	130 - 4	4F24	COMPARTMENT, ENGINE ( -640100) .....	80 - 10
7F1	CLEAN GRAIN CONVEYOR CHAIN .....	130 - 6	4G3	COMPARTMENT, ENGINE ( -640100) .....	80 - 14
7F15	CLEAN GRAIN ELEVATOR DRIVE IDLER .....	130 - 20	4G1	COMPARTMENT, ENGINE (640100- ) .....	80 - 12
7F15	CLEAN GRAIN ELEVATOR DRIVE TIGHTENER .....	130 - 20	4G5	COMPARTMENT, ENGINE (640101- ) .....	80 - 16
7F15	CLEAN GRAIN ELEVATOR DRIVE TIGHTENER AND IDLER .....	130 - 20	5E20	COMPRESSOR AIR CONDITIONER ( -650100) R-12 REFRIGERANT .....	90 - 82
7F13	CLEAN GRAIN ELEVATOR GEARCASE .....	130 - 18	5E22	COMPRESSOR AIR CONDITIONER (650101- ) R134A REFRIGERANT .....	90 - 84
7F17	CLEAN GRAIN ELEVATOR SHIELDS, UPPER ( -640100) .....	130 - 22	5E25	COMPRESSOR CLUTCH ( -650100) R-12 REFRIGERANT .....	90 - 87
7F19	CLEAN GRAIN ELEVATOR SHIELDS, UPPER (640101- ) .....	130 - 24	5E24	COMPRESSOR CLUTCH AND SERVICE VALVES ( -650100) R-12 REFRIGERANT .....	90 - 86
7F5	CLEAN GRAIN ELEVATOR UPPER SHAFT .....	130 - 10	5F1	COMPRESSOR HARDWARE KIT ( -650100) R-12 .....	90 - 88
7F5	CLEAN GRAIN ELEVATOR UPPER SHAFT, SPROCKET AND SHEAVE .....	130 - 10	5F6	COMPRESSOR HARDWARE KIT (650101- ) R134A .....	90 - 94
7F5	CLEAN GRAIN ELEVATOR UPPER SHEAVE .....	130 - 10			
7F5	CLEAN GRAIN ELEVATOR UPPER SPROCKET .....	130 - 10			

## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
5F2	COMPRESSOR PARTS ( -650100) R-12 .....	90 - 90	3D18	CONTROL VALVE (655101- ) .....	50 - 57
5E25	COMPRESSOR SERVICE VALVES ( -650100) R-12 REFRIGERANT .....	90 - 87	4E1	CONTROL VALVE MODULE, SIX STACK SOLENOID ASSEMBLY & MOUNTINGS (660101- ) .....	70 - 62
7H17	COMPRESSOR, AIR CONDITIONING BELTS.....	170 - 3	3D19	CONTROL VALVE SOLENOID (FOUR-WHEEL DR.) ....	50 - 58
2F9	CONCAVE ADJUSTING MOTOR .....	40 - 72	5F8	CONTROL VALVE, HEATER .....	90 - 96
6C8	CONCAVE ASSEMBLY AND BEATER GRATE,13-BAR NARROW .....	120 - 22	3C24	CONTROL VALVE, HYDRO. DR. DISPLACEMENT .....	50 - 38
6C18	CONCAVE INDICATOR, CABLE AND BRACKETS.....	120 - 32	4D22	CONTROL VALVE, SOLENOID - CONTOUR MASTER (660101- ) .....	70 - 58
6C4	CONCAVE, RASP BAR AND GRATE .....	120 - 18	4D20	CONTROL VALVE, SOLENOID, REEL FORE/AFT (650201- ) .....	70 - 56
6C6	CONCAVE, RASP BAR AND GRATE .....	120 - 20	5E3	CONTROL, ARMREST ADJUSTING MECHANISM, R.H. ( -640100).....	90 - 64
6C14	CONCAVE, SPIKE TOOTH .....	120 - 28	2G15	CONVENIENCE OUTLET (660101- ) .....	40 - 102
6C12	CONCAVE, SPIKE-TOOTH .....	120 - 26	4B24	CONVERSION PARTS, HUDRAULIC, 200 SERIES CUTTING PLATFORM.....	70 - 11
5E20	CONDENSER, AIR CONDITIONER ( -650100) R-12 REFRIGERANT .....	90 - 82	7H16	CONVEYOR AUGER BELTS, .....	170 - 2
5E22	CONDENSER, AIR CONDITIONER (650101- ) R134A REFRIGERANT .....	90 - 84	6C23	CONVEYOR AUGER CLEANOUT DOOR, HANDLE AND LATCHES.....	120 - 37
4F3	CONDENSER, AIR CONDITIONING AND OIL COOLER .....	70 - 90	6H3	CONVEYOR AUGERS, STRAW WALKER, SIEVE AND CHAFFER DRIVE .....	121 - 50
1C15	CONDITIONER, COOLANT.....	24 - 2	7E24	CONVEYOR CHAIN, CLEAN GRAIN .....	130 - 4
1D8	CONNECTING ROD .....	24 - 20	7F1	CONVEYOR CHAIN, CLEAN GRAIN .....	130 - 6
1D11	CONNECTING ROD .....	24 - 23	1C15	COOLANT CONDITIONER .....	24 - 2
1D9	CONNECTING ROD (6068).....	24 - 21	1J10	COOLANT HEATER, ENGINE .....	24 - 180
1D8	CONNECTING ROD BEARINGS .....	24 - 20	1C3	COOLANT HEATER, ENGINE BLOCK.....	20 - 16
1D11	CONNECTING ROD BEARINGS .....	24 - 23	2C5	COOLANT RECOVERY TANK .....	30 - 20
1D9	CONNECTING ROD BEARINGS (6068).....	24 - 21	1H3	COOLER, ENGINE OIL .....	24 - 120
2F23	CONNECTORS, ELECTRICAL, WEATHERPACK .....	40 - 86	1H5	COOLER, ENGINE OIL (6068) .....	24 - 122
2G9	CONNECTORS, HARNESS, LOWER, FOR 6359 ENGINE .....	40 - 96	7H17	COOLING FAN BELTS .....	170 - 3
2G11	CONNECTORS, HARNESS, UPPER FOR 6359 ENGINE .....	40 - 98	7C7	CORN CURTAIN AND DEFLECTORS .....	125 - 20
1J4	CONNECTORS, STARTING AID .....	24 - 174	6B22	CORN CYLINDER DOOR (ARGENTINA ONLY).....	120 - 10
1J5	CONNECTORS, STARTING AID .....	24 - 175	4H3	CORNER SHEET, R H FRONT .....	80 - 38
1J6	CONNECTORS, STARTING AID .....	24 - 176	4H5	CORNER SHEET, REAR, L H .....	80 - 40
2G7	CONNECTORS, SUPPLEMENTARY TERMINALS .....	40 - 94	6G21	COUNTERSHAFT DRIVE, SECONDARY.....	121 - 44
5E1	CONSOLE GLOVE BOX AND ARM REST, R.H.....	90 - 62	7H1	COUNTERSHAFT DRIVE, UNLOADING AUGER .....	130 - 54
2C15	CONSOLE PANEL, OVERHEAD.....	40 - 4	6F24	COUNTERSHAFT GEARCASE, PRIMARY (640101- ) .....	121 - 22
5G11	CONTOUR MASTER - FEEDER HOUSE FRAME, TILT BEAM & CLOSURE PLATES (660101- ).....	110 - 24	6F20	COUNTERSHAFT GEARCASE, PRIMARY (640101- ).....	121 - 18
5H17	CONTOUR MASTER DRIVESHAFT .....	110 - 56	6F22	COUNTERSHAFT, PRIMARY, GEARCASE ( -640100).....	121 - 20
5H15	CONTOUR MASTER DRIVESHAFT (660101- ) .....	110 - 54	6F18	COUNTERSHAFT, PRIMARY, GEARCASE ( -640100).....	121 - 16
4C13	CONTOUR MASTER HYDRAULIC HOSES, L.H SIDE (OPTIONAL) (660101- ) .....	70 - 24	1B24	COUPLING WITH HUB, ENGINE-TRANSMISSION.....	20 - 13
5G15	CONTOUR MASTER LOCKOUT ADAPTER KIT (BELT PU & 4R CORN HEADS) (660101- ) .....	110 - 28	1D6	COVER, ACCESS, INJECTION PUMP GEAR .....	24 - 18
4D10	CONTOUR MASTER SOLENOID CONTROL RELIF VALVE .....	70 - 45	6C22	COVER, BEATER .....	120 - 36
4D22	CONTOUR MASTER SOLENOID CONTROL VALVE (660101- ) .....	70 - 58	5F5	COVER, COMPRESSOR A/C (650101- ) R134A .....	90 - 93
4E20	CONTOUR MASTER TILT CYLINDER.....	70 - 82	4F24	COVER, ENGINE ( -640100).....	80 - 10
4E21	CONTOUR MASTER TILT CYLINDER HOSES AND FITTINGS.....	70 - 83	4G3	COVER, ENGINE ( -640100).....	80 - 14
2E3	CONTOUR MASTER WIRING HARNESS ADAPTER ....	40 - 42	4G1	COVER, ENGINE (640100- ) .....	80 - 12
5G9	CONTOUR MASTER, FEEDER HOUSE SHELL, WEAR PLATES AND SEALS (660101- ) .....	110 - 22	4G5	COVER, ENGINE (640101- ) .....	80 - 16
5G13	CONTOUR MASTER, LOCKOUT ASSEMBLY (OPTIONAL) (660101- ) .....	110 - 26	1E9	COVER, ENGINE OIL FILLER OPENING .....	24 - 46
3B17	CONTROL CABLES, HYDROSTATIC DRIVE ( -645100) .....	50 - 4	3C18	COVER, HYDROSTATIC DRIVE PUMP.....	50 - 31
3B19	CONTROL CABLES, HYDROSTATIC DRIVE (645101- ) .....	50 - 6	3C15	COVER, HYDROSTATIC PUMP (RING AND PINION) .....	50 - 28
2D1	CONTROL PANEL, OPERATOR'S ARMREST .....	40 - 14	3D7	COVER, INNER .....	50 - 46
2F19	CONTROL PANEL, THROTTLE, RELAY AND CIRCUIT BREAKER .....	40 - 82	1E10	COVER, OIL FILLER OPENING .....	24 - 47
3D17	CONTROL VALVE ( -655100) .....	50 - 56	3D10	COVER, QUILL AND BEARING (STEERABLE MOTOR).....	50 - 49

## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
1D2	COVER, ROCKER ARM .....	24 - 14	6G17	CYLINDER DRIVE INTERMEDIATE SHEAVE, DUAL-RANGE .....	121 - 40
1D3	COVER, ROCKER ARM .....	24 - 15	6G13	CYLINDER DRIVE TIGHTENER, DUAL-RANGE .....	121 - 36
1D4	COVER, ROCKER ARM .....	24 - 16	6G5	CYLINDER DRIVE, SINGLE RANGE .....	121 - 28
1I2	COVER, STARTING MOTOR END .....	24 - 145	6G7	CYLINDER DRIVE, SLOW SPEED .....	121 - 30
1H1	COVER, THERMOSTAT .....	24 - 118	1F3	CYLINDER HEAD .....	24 - 68
6B13	COVER, THRESHING CYLINDER .....	120 - 1	1F5	CYLINDER HEAD .....	24 - 70
1D5	COVER, TIMING GEAR .....	24 - 17	1F7	CYLINDER HEAD .....	24 - 72
1D6	COVER, TIMING GEAR .....	24 - 18	1F9	CYLINDER HEAD .....	24 - 74
7G14	COVERS AND CHANNEL, CROSS AUGER .....	130 - 43	1F3	CYLINDER HEAD GASKET .....	24 - 68
1C5	CRANKCASE, ENGINE, OIL DRAIN .....	20 - 18	1F5	CYLINDER HEAD GASKET .....	24 - 70
6E19	CRANKS, STRAW WALKER, STRAW SPREADER DRIVE AND SHIELD .....	120 - 82	1F7	CYLINDER HEAD GASKET .....	24 - 72
1C16	CRANKSHAFT .....	24 - 3	1F9	CYLINDER HEAD GASKET .....	24 - 74
1C17	CRANKSHAFT .....	24 - 4	1I20	CYLINDER HEAD REMOVAL GASKET SET .....	24 - 165
1C19	CRANKSHAFT .....	24 - 6	1J3	CYLINDER HEAD REMOVAL GASKET SET .....	24 - 172
1C20	CRANKSHAFT - BEARINGS .....	24 - 7	1D8	CYLINDER LINER .....	24 - 20
1116	CRANKSHAFT DAMPER .....	24 - 161	1D11	CYLINDER LINER .....	24 - 23
1117	CRANKSHAFT DAMPER .....	24 - 162	1D10	CYLINDER LINER KIT .....	24 - 22
1C19	CRANKSHAFT GEAR .....	24 - 6	1D8	CYLINDER LINER O-RING KIT .....	24 - 20
1C17	CRANKSHAFT IDLER GEARS .....	24 - 4	1D11	CYLINDER LINER O-RING KIT .....	24 - 23
1C21	CRANKSHAFT KIT, UNDERSIZE .....	24 - 8	1C15	CYLINDER LINER PACKING LUBRICANT .....	24 - 2
1116	CRANKSHAFT PULLEY .....	24 - 161	6B24	CYLINDER SHEAR BAR .....	120 - 12
1117	CRANKSHAFT PULLEY .....	24 - 162	4D13	CYLINDER SPEED AND REEL LIFT, SOLENOID CONTROL VALVE .....	70 - 48
1C19	CRANKSHAFT THRUST BEARING .....	24 - 6	4D7	CYLINDER SPEED HYDRAULIC LINES AND HOSES ..	70 - 42
1C22	CRANKSHAFT, REPLACEMENT (6359) .....	24 - 9	3F24	CYLINDER, BRAKE SLAVE .....	60 - 18
7G21	CROSS AUGER BEARING PLATE, L.H. ....	130 - 50	3F20	CYLINDER, BRAKE, MASTER .....	60 - 14
7G14	CROSS AUGER COVERS AND CHANNEL .....	130 - 43	4E10	CYLINDER, DRIVE, GRAIN TANK UNLOADING .....	70 - 72
7G23	CROSS AUGERS, GRAIN TANK .....	130 - 52	4C15	CYLINDER, HEADER LIFT, HYDRAULIC .....	70 - 26
4F16	CROSS BRACES, SEPARATOR .....	80 - 2	4E8	CYLINDER, HYDRAULIC, UNLOADING AUGER SWING, LINES AND HOSES .....	70 - 70
5E9	CUP HOLDER (660101- ) .....	90 - 70	3G17	CYLINDER, STEERING (4-WHEEL DRIVE) .....	60 - 36
6C3	CURTAIN, BEATER GRATE (650437- ) .....	120 - 16	6C1	CYLINDER, THRESHING, RASP BAR .....	120 - 14
6E21	CURTAIN, SEPARATOR .....	120 - 84	6C10	CYLINDER, THRESHING, SPIKE TOOTH (OPTIONAL) .....	120 - 24
7D17	CURTAIN, SEPARATOR ( -640194) .....	125 - 54	4E20	CYLINDER, TILT - CONTOUR MASTER .....	70 - 82
6E23	CURTAIN, SEPARATOR (SPIKE-TOOTH CYLINDER) .....	120 - 86	4E21	CYLINDER, TILT, HOSES AND FITTINGS - CONTOUR MASTER .....	70 - 83
7D19	CURTAIN, SPREADER (640195- ) .....	125 - 56	4E12	CYLINDER, UNLOADING AUGER SWING HYDRAULIC ( -650100) .....	70 - 74
7G1	CURTAINS, GRAIN TANK .....	130 - 30	4E14	CYLINDER, UNLOADING AUGER SWING HYDRAULIC (650101-655355) .....	70 - 76
4B24	CUTTING PLATFORM , 200 SERIES CONVERSION PARTS .....	70 - 11	4E16	CYLINDER, UNLOADING AUGER SWING HYDRAULIC (655356- ) .....	70 - 78
1D16	CYLINDER BLOCK .....	24 - 28	3F16	CYLINDERS, MASTER BRAKE AND BRAKE PEDALS	60 - 10
1D17	CYLINDER BLOCK .....	24 - 30			
1D18	CYLINDER BLOCK .....	24 - 31		<b>D</b>	
1D19	CYLINDER BLOCK .....	24 - 32	1C22	DAMPENER, REPLACEMENT CRANKSHAFT (6359)....	24 - 9
1D20	CYLINDER BLOCK .....	24 - 33	1116	DAMPER, CRANKSHAFT .....	24 - 161
1D21	CYLINDER BLOCK .....	24 - 34	1117	DAMPER, CRANKSHAFT .....	24 - 162
1E3	CYLINDER BLOCK .....	24 - 40	2C17	DATA CENTER, COMBINE .....	40 - 6
6B13	CYLINDER COVER, THRESHING .....	120 - 1	5C23	DATA CENTER, COMBINE .....	90 - 34
6B18	CYLINDER DOOR (CORN & GRAIN) (650101-655208) .....	120 - 6	7I22	DECALS, FRONT .....	170 - 34
6B16	CYLINDER DOOR (FOR CORN) ( -650100) .....	120 - 4	7I19	DECALS, LEFT-HAND .....	170 - 30
6B20	CYLINDER DOOR (CORN AND GRAIN) (655208- ) .....	120 - 8	7I22	DECALS, REAR .....	170 - 34
6B22	CYLINDER DOOR, CORN (ARGENTINA ONLY) .....	120 - 10	7H20	DECALS, SAFETY AND LOCATIONS .....	170 - 6
6G19	CYLINDER DRIVE ADJUSTING BRACKET, INTERMEDIATE .....	121 - 42	7H22	DECALS, SAFETY AND LOCATIONS .....	170 - 8
6G17	CYLINDER DRIVE BELT .....	121 - 40	7H24	DECALS, SAFETY AND LOCATIONS .....	170 - 10
6G9	CYLINDER DRIVE BELT, EXTENDED RANGE .....	121 - 32	7I1	DECALS, SAFETY AND LOCATIONS .....	170 - 12
6G9	CYLINDER DRIVE GEAR CASE, DUAL-RANGE .....	121 - 32	7I3	DECALS, SAFETY AND LOCATIONS .....	170 - 14
6G15	CYLINDER DRIVE INTERMEDIATE SHAFT MOUNTING, DUAL-RANGE .....	121 - 38	7I5	DECALS, SAFETY AND LOCATIONS - FRENCH .....	170 - 16
			7I7	DECALS, SAFETY AND LOCATIONS - FRENCH .....	170 - 18
			7I9	DECALS, SAFETY AND LOCATIONS - FRENCH .....	170 - 20
			7I11	DECALS, SAFETY AND LOCATIONS - FRENCH .....	170 - 22
			7I13	DECALS, SAFETY AND LOCATIONS - FRENCH .....	170 - 24



## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
7I24	DECALS, TOP .....	170 - 36	6F16	DRIVE SHAFT, GEARCASE AND PRIMARY COUNTERSHAFT .....	121 - 14
7B14	DECK, SUPPORTS AND FINS, STRAW CHOPPER.....	125 - 2	3B23	DRIVE SHAFTS .....	50 - 10
7C7	DEFLECTORS AND CORN CURTAIN .....	125 - 20	4G21	DRIVE SHIELD, R.H. REAR .....	80 - 32
7H11	DIAL-A-MATIC ELECTRICAL HARNESS .....	160 - 2	5G3	DRIVE SHIELDS, CONTOUR MASTER FEEDER HOUSE (660101-660245) .....	110 - 16
7H10	DIAL-A-MATIC HEADER HEIGHT CONTROL HYDRAULIC LINE AND VALVE BLOCK .....	160 - 1	5G5	DRIVE SHIELDS, CONTOUR MASTER FEEDER HOUSE (660246- ) .....	110 - 18
7H13	DIAL-A-MATIC HEADER HEIGHT CONTROL VALVE BLOCK SOLENOID .....	160 - 4	5G1	DRIVE SHIELDS, SAFETY STOP, FEEDER HOUSE ....	110 - 14
4C18	DIAL-A-MATIC HEADER HEIGHT CONTROL VALVE....	70 - 29	6I7	DRIVE SHIELDS, STRAW CHOPPER (640101- ) .....	121 - 78
3C8	DIFFERENTIAL GEARS .....	50 - 20	7C5	DRIVE SPROCKETS, STRAW CHOPPER (655101- ) .....	125 - 18
3C8	DIFFERENTIAL SHAFTS .....	50 - 20	7F15	DRIVE TIGHTENER, CLEAN GRAIN ELEVATOR .....	130 - 20
2C13	DIGITAL TACH CONN. (WIRING HARNESS) .....	40 - 2	6H17	DRIVE TIGHTENER, FEEDER HOUSE .....	121 - 64
5F4	DIODE, A/C COMPRESSOR (650101- ) R134A .....	90 - 92	5F24	DRIVE TIGHTENER, FIXED SPEED FEEDER HOUSE .....	110 - 12
1E11	DIPSTICK, ENGINE OIL .....	24 - 48	5F22	DRIVE TIGHTENER, VARIABLE SPEED .....	110 - 10
1E12	DIPSTICK, ENGINE OIL .....	24 - 49	3B21	DRIVE WHEELS .....	50 - 8
7C15	DISC AND DRIVE BELT, CHAFF SPREADER ( -650100) .....	125 - 28	6H19	DRIVE, BELT PICKUP / REEL PUMP MOUNTING SHEAVE .....	121 - 66
7C17	DISC, CHAFF SPREADER (DUAL MOTOR) (650101- ) .....	125 - 30	6H7	DRIVE, CLEANING FAN, SEPARATOR .....	121 - 54
3C24	DISPLACEMENT CONTROL VALVE, HYDRO. DR. ....	50 - 38	7H1	DRIVE, COUNTERSHAFT, UNLOADING AUGER .....	130 - 54
2C13	DOMELIGHT (WIRING HARNESS) .....	40 - 2	7H17	DRIVE, CYLINDER INTERMEDIATE, BELTS .....	170 - 3
5B23	DOOR LATCH, CAB .....	90 - 10	7H17	DRIVE, CYLINDER, BELTS .....	170 - 3
5C1	DOOR, CAB AND GLASS .....	90 - 12	1B23	DRIVE, ENGINE, 6359 .....	20 - 12
7C9	DOOR, CHOPPER, STRAW .....	125 - 22	1I14	DRIVE, FAN .....	24 - 158
7E22	DOOR, CLEAN GRAIN LOWER AUGER .....	130 - 2	6H15	DRIVE, FAN, SPEED CONTROL SHEAVE LINKAGE....	121 - 62
4H7	DOOR, CORNER SHEET, LEFT - HAND FRONT.....	80 - 42	6G23	DRIVE, GEARCASE, STRAW WALKER.....	121 - 46
6B18	DOOR, CYLINDER (CORN & GRAIN) (650101-655208) .....	120 - 6	3D1	DRIVE, HYDROSTATIC MOTOR, FIXED (RING AND PINION) .....	50 - 40
6B16	DOOR, CYLINDER (FOR CORN) ( -650100) .....	120 - 4	3E5	DRIVE, HYDROSTATIC OIL HOSES, UPPER (FOUR WHEEL DRIVE) ( -655100) .....	50 - 70
6B20	DOOR, CYLINDER (CORN AND GRAIN) (655208- ) .....	120 - 8	3E1	DRIVE, HYDROSTATIC, LOWER OIL LINES (FOUR WHEEL DRIVE) (655101- ) .....	50 - 66
6B22	DOOR, CYLINDER DOOR (ARGENTINA ONLY) .....	120 - 10	3D24	DRIVE, HYDROSTATIC, LOWER OIL LINES (FOUR WHEEL DRIVE)( -655100) .....	50 - 64
4F20	DOOR, ENGINE ACCESS .....	80 - 6	3E3	DRIVE, HYDROSTATIC, LOWER OIL LINES (TWO WHEEL DRIVE) (655101- ) .....	50 - 68
4F20	DOOR, RADIATOR .....	80 - 6	3D20	DRIVE, HYDROSTATIC, LOWER OIL LINES (2&4 WHEEL DRIVE)( -655100) .....	50 - 60
1B17	DOOR, ROTARY SCREEN .....	20 - 6	4C1	DRIVE, REEL, HYD., FRONT LINES AND HOSES.....	70 - 12
1B15	DOOR, ROTARY SCREEN ( -640100) .....	20 - 4	4B17	DRIVE, REEL, HYDRAULIC LINES AND HOSES, L.H. SIDE .....	70 - 4
7C9	DOOR, STRAW CHOPPER.....	125 - 22	1B12	DRIVE, ROTARY SCREEN ( -645100) .....	20 - 1
4D15	DOUBLE PILOTED, AUGER SWING, SOLENOID CONTROL VALVE ( -650100) .....	70 - 50	6G21	DRIVE, SECONDARY COUNTERSHAFT .....	121 - 44
4D19	DOUBLE PILOTED, REEL FORE/AFT, SOLENOID CONTROL VALVE .....	70 - 55	6I5	DRIVE, STRAW CHOPPER, SHIELDS.....	121 - 76
4D18	DOUBLE PILOTED, REEL FORE/AFT, SOLENOID CONTROL VALVE ( -650100) .....	70 - 54	6H21	DRIVES, STRAW CHOPPER (FRONT) .....	121 - 68
1E22	DRAIN HOSE, ENGINE OIL .....	24 - 61	6I1	DRIVES, STRAW CHOPPER (REAR) ( -640100) .....	121 - 72
1E23	DRAIN HOSE, ENGINE OIL .....	24 - 62	6H23	DRIVES, STRAW CHOPPER, FINE CUT (FRONT) .....	121 - 70
1E21	DRAIN HOSE, ENGINE OIL (6359T) .....	24 - 60	6I3	DRIVES, STRAW CHOPPER, FINE CUT (REAR).....	121 - 74
1H16	DRAIN HOSE, FUEL FILTER .....	24 - 134	5H17	DRIVESHAFT, CONTOUR MASTER .....	110 - 56
7C15	DRIVE BELT AND DISC, CHAFF SPREADER ( -650100) .....	125 - 28	5H15	DRIVESHAFT, CONTOUR MASTER (660101- ) .....	110 - 54
6G9	DRIVE BELT, EXTENDED RANGE CYLINDER.....	121 - 32	3F22	DRUM, BRAKE.....	60 - 16
6G17	DRIVE BELT, EXTENDED RANGE CYLINDER.....	121 - 40	4C21	DUAL ACCUMULATOR AND MOUNTING ( -655100) (ONE-HALF GALLON) .....	70 - 32
7E4	DRIVE BRACKET, TAILINGS .....	125 - 65	2E23	DUAL LEVEL MONITOR .....	40 - 62
7E6	DRIVE CHAIN TIGHTENER, UPPER TAILINGS .....	125 - 67	2E23	DUAL LEVEL MONITOR WIRING HARNESS .....	40 - 62
3B17	DRIVE CONTROL CABLES, HYDROSTATIC ( -645100) .....	50 - 4	6G9	DUAL-RANGE CYLINDER DRIVE GEAR CASE .....	121 - 32
3B19	DRIVE CONTROL CABLES, HYDROSTATIC (645101- ) .....	50 - 6	6G15	DUAL-RANGE CYLINDER DRIVE INTERMEDIATE SHAFT MOUNTING.....	121 - 38
7F15	DRIVE IDLER, CLEAN GRAIN ELEVATOR .....	130 - 20	6G17	DUAL-RANGE CYLINDER DRIVE INTERMEDIATE SHEAVE .....	121 - 40
3E23	DRIVE MOTOR, HYDROSTATIC .....	50 - 90	6G13	DUAL-RANGE CYLINDER DRIVE TIGHTENER .....	121 - 36
1E19	DRIVE SHAFT, ENGINE OIL PUMP (6068).....	24 - 58			

## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
6G11	DUAL-RANGE LOCKOUT ARM .....	121 - 34	1B19	ENGINE FAN DRIVES, 6359 .....	20 - 8
5C22	DUCTS, HEATER AND AIR CONDITIONING .....	90 - 33	1B19	ENGINE FAN, 6359 .....	20 - 8
5H21	DUST FAN BELT, LH SIDE FEEDER HOUSE-RETROFIT INSTALLATION.....	110 - 60	1D12	ENGINE FRONT PLATE .....	24 - 24
5H23	DUST FAN, LH SIDE FEEDER HOUSE-RETROFIT INSTALLATION.....	110 - 62	1D13	ENGINE FRONT PLATE .....	24 - 25
			1D14	ENGINE FRONT PLATE .....	24 - 26
			1D15	ENGINE FRONT PLATE .....	24 - 27
			6F12	ENGINE GEARCASE (SEPARATOR AND PUMP DRIVE) .....	121 - 10
	<b>E</b>		4F5	ENGINE GEARCASE OIL FILTER ASSEMBLY .....	70 - 92
2E19	EITHER START SOLENIOD, 6068 LOWER PARTS .....	40 - 58	4F7	ENGINE GEARCASE PRESSURE REGULATOR .....	70 - 94
2E19	EITHER START SOLENOID, 6359 LOWER PARTS .....	40 - 58	6F8	ENGINE GEARCASE- SEPARATOR DRIVE WET- CLUTCH AND PUMP DRIVE SHAFT .....	121 - 6
1F1	ELBOW, ENGINE VENTILATING .....	24 - 66	6F4	ENGINE GEARCASE- STRAW CHOPPER, UNLOADING DRIVE AND SEPARATOR DRIVE GEAR .....	121 - 2
1F11	ELBOW, EXHAUST .....	24 - 76	6F14	ENGINE GEARCASE, SEPARATOR AND PUMP DRIVE .....	121 - 12
2G1	ELECTRICAL CONNECTOR SERVICE KIT .....	40 - 88	6F10	ENGINE GEARCASE, SEPARATOR DRIVE WET- CLUTCH AND PUMP DRIVE SHAFT .....	121 - 8
2G3	ELECTRICAL CONNECTOR SERVICE KIT .....	40 - 90	6F6	ENGINE GEARCASE, STRAW CHOPPER, UNLOAD- ING DRIVE AND SEPARATOR DRIVE GEAR .....	121 - 4
7H11	ELECTRICAL HARNESS, DIAL-A-MATIC.....	160 - 2	1G9	ENGINE INTERCOOLER .....	24 - 101
2G8	ELECTRICAL SERVICE OUTLET .....	40 - 95	1G10	ENGINE INTERCOOLER HOSE .....	24 - 102
2F23	ELECTRICAL TERMINALS AND CONNECTORS, WEATHERPACK .....	40 - 86	1J1	ENGINE MAJOR OVERHAUL GASKET SET.....	24 - 170
6G1	ELECTROMAGNETIC HEADER CLUTCH .....	121 - 24	1C14	ENGINE OIL .....	24 - 1
2F21	ELECTRONIC BOARDS .....	40 - 84	1E3	ENGINE OIL BY-PASS VALVE .....	24 - 40
2F21	ELECTRONIC HOUSING ASSEMBLY AND ELECTRONIC BOARDS .....	40 - 84	1H3	ENGINE OIL COOLER .....	24 - 120
6D21	ELEMENT, CHAFFER .....	120 - 60	1H7	ENGINE OIL COOLER .....	24 - 124
6D23	ELEMENT, CHAFFER .....	120 - 62	1H9	ENGINE OIL COOLER .....	24 - 126
6E1	ELEMENT, CHAFFER EXTENSION .....	120 - 64	1H5	ENGINE OIL COOLER (6068).....	24 - 122
1H13	ELEMENT, FUEL FILTER .....	24 - 131	1H7	ENGINE OIL COOLER HOSE.....	24 - 124
6E5	ELEMENT, SIEVE .....	120 - 68	1E11	ENGINE OIL DIPSTICK.....	24 - 48
1H16	ELEMENT, FUEL FILTER .....	24 - 134	1E12	ENGINE OIL DIPSTICK.....	24 - 49
7F15	ELEVATOR DRIVE IDLER, CLEAN GRAIN .....	130 - 20	1E12	ENGINE OIL DIPSTICK TUBE .....	24 - 49
7F15	ELEVATOR DRIVE TIGHTENER, CLEAN GRAIN.....	130 - 20	1E22	ENGINE OIL DRAIN HOSE.....	24 - 61
7F17	ELEVATOR SHIELDS, UPPER CLEAN GRAIN ( -640100) .....	130 - 22	1E23	ENGINE OIL DRAIN HOSE.....	24 - 62
7F19	ELEVATOR SHIELDS, UPPER CLEAN GRAIN (640101- ) .....	130 - 24	1E21	ENGINE OIL DRAIN HOSE (6359T).....	24 - 60
7H17	ELEVATOR, CLEAN GRAIN BELTS.....	170 - 3	1E10	ENGINE OIL FILL CAP .....	24 - 47
7E24	ELEVATOR, LOWER, CLEAN GRAIN .....	130 - 4	1D4	ENGINE OIL FILL PLUG .....	24 - 16
7F1	ELEVATOR, LOWER, CLEAN GRAIN .....	130 - 6	1E11	ENGINE OIL FILTER .....	24 - 48
7F3	ELEVATOR, UPPER CLEAN GRAIN .....	130 - 8	1E13	ENGINE OIL FILTER .....	24 - 50
1I2	END FRAME, STARTING MOTOR COMMUTATOR .....	24 - 145	1E14	ENGINE OIL FILTER .....	24 - 51
1C1	ENGINE MOUNTS, 6359 AND REAR SUPPORT .....	20 - 14	1E15	ENGINE OIL FILTER .....	24 - 52
4F20	ENGINE ACCESS DOOR, HANDRAILS, AND RADIATOR DOOR.....	80 - 6	1E16	ENGINE OIL FILTER .....	24 - 54
4G7	ENGINE ACCESS PLATFORM AND STEP .....	80 - 18	1H11	ENGINE OIL FILTER .....	24 - 129
2E14	ENGINE AIR FILTER WARNING SWITCH.....	40 - 53	1H12	ENGINE OIL FILTER .....	24 - 130
1E7	ENGINE BASIC OVERHAUL KIT .....	24 - 44	1E15	ENGINE OIL FILTER ADAPTER.....	24 - 52
2F14	ENGINE CIRCUIT BREAKER ( -660100) .....	40 - 77	1E22	ENGINE OIL PAN .....	24 - 61
2F17	ENGINE CIRCUIT BREAKERS .....	40 - 80	1E23	ENGINE OIL PAN .....	24 - 62
2F15	ENGINE CIRCUIT BREAKERS (660101- ) .....	40 - 78	1E18	ENGINE OIL PUMP .....	24 - 56
4F24	ENGINE COMPARTMENT ( -640100) .....	80 - 10	1E20	ENGINE OIL PUMP .....	24 - 59
4G3	ENGINE COMPARTMENT ( -640100) .....	80 - 14	1E19	ENGINE OIL PUMP (6068) .....	24 - 58
4G1	ENGINE COMPARTMENT (640100- ) .....	80 - 12	1E19	ENGINE OIL PUMP DRIVE SHAFT (6068) .....	24 - 58
4G5	ENGINE COMPARTMENT (640101- ) .....	80 - 16	1E20	ENGINE OIL PUMP GEAR .....	24 - 59
1H9	ENGINE COOLANT ADAPTER.....	24 - 126	1E20	ENGINE OIL PUMP HOUSING .....	24 - 59
1J10	ENGINE COOLANT HEATER .....	24 - 180	1E20	ENGINE OIL PUMP INTAKE.....	24 - 59
7H16	ENGINE DRIVE BELTS.....	170 - 2	1I21	ENGINE OVERHAUL GASKET SET.....	24 - 166
7H16	ENGINE DRIVE SHEAVES .....	170 - 2	1I23	ENGINE OVERHAUL GASKET SET (624E) .....	24 - 168
1B23	ENGINE DRIVE, 6359 .....	20 - 12	1D8	ENGINE PISTON .....	24 - 20
			1D11	ENGINE PISTON .....	24 - 23
			2E14	ENGINE PLUGGED AIR FILTER WARNING SWITCH ..	40 - 53
			4F24	ENGINE RAILS ( -640100) .....	80 - 10
			4G3	ENGINE RAILS ( -640100) .....	80 - 14
			4G1	ENGINE RAILS (640100- ) .....	80 - 12

**ALPHABETICAL INDEX - CONTINUED**

GRID		PAGE	GRID		PAGE
4G5	ENGINE RAILS (640101- ) .....	80 - 16		<b>F</b>	
1D23	ENGINE SHORT BLOCK .....	24 - 36	1114	FAN DRIVE .....	24 - 158
1E1	ENGINE SHORT BLOCK .....	24 - 38	1114	FAN DRIVE HOUSING .....	24 - 158
1E5	ENGINE SHORT BLOCK .....	24 - 42	1114	FAN DRIVE HUB .....	24 - 158
2E17	ENGINE TACH SENSOR, 6068 UPPER PARTS .....	40 - 56	1114	FAN DRIVE PULLEY .....	24 - 158
2E17	ENGINE TACH SENSOR, 6359 UPPER PARTS .....	40 - 56	4G19	FAN DRIVE SHIELD (L-H SIDE) .....	80 - 30
2C17	ENGINE TEMPERATURE GAUGE .....	40 - 6	6H9	FAN DRIVE SPEED CONTROL LINKAGE ( -640100) .....	121 - 56
5C23	ENGINE TEMPERATURE GAUGE .....	90 - 34	6H11	FAN DRIVE SPEED CONTROL LINKAGE (640101-655100) .....	121 - 58
2E17	ENGINE TEMPERATURE SENDER, 6068 UPPER PARTS .....	40 - 56	6H13	FAN DRIVE SPEED CONTROL LINKAGE (655101- ) .....	121 - 60
2E17	ENGINE TEMPERATURE SENDER, 6359 UPPER PARTS .....	40 - 56	6H15	FAN DRIVE SPEED CONTROL SHEAVE LINKAGE .....	121 - 62
2E19	ENGINE TEMPERATURE SENDING SWITCH LOWER PARTS .....	40 - 58	1B19	FAN DRIVES, 6359 ENGINE .....	20 - 8
2E19	ENGINE TEMPERATURE SENDING SWITCH 6068, LOWER PARTS .....	40 - 58	2D15	FAN, AIR CONDITIONER PRESSURIZER KIT (640101-650100) .....	40 - 28
1G23	ENGINE THERMOSTAT .....	24 - 115	5E16	FAN, AIR CONDITIONING/HEATER AND PRESSURIZING .....	90 - 78
1G24	ENGINE THERMOSTAT .....	24 - 117	7H18	FAN, CLEANING, BELTS .....	170 - 4
1G23	ENGINE THERMOSTAT HOUSING .....	24 - 115	6H7	FAN, DRIVE, CLEANING, SEPARATOR .....	121 - 54
1G24	ENGINE THERMOSTAT HOUSING .....	24 - 117	5H23	FAN, DUST, LH SIDE FEEDER HOUSE-RETROFIT INSTALLATION .....	110 - 62
2E17	ENGINE UPPER HARNESS, 6068 UPPER PARTS .....	40 - 56	1B19	FAN, 6359 ENGINE .....	20 - 8
2E17	ENGINE UPPER HARNESS, 6359 UPPER PARTS .....	40 - 56	6D5	FANS, CLEANING .....	120 - 44
1C15	ENGINE VALVE STEM LUBRICANT .....	24 - 2	6D7	FANS, CLEANING .....	120 - 46
1F1	ENGINE VENTILATING SYSTEM .....	24 - 66	5H3	FEED PLATE LATCH HANDLE .....	110 - 42
1E25	ENGINE VENTILATOR TUBE .....	24 - 64	7H16	FEEDER CONVEYOR BELTS .....	170 - 2
1B24	ENGINE-TRANSMISSION COUPLING WITH HUB .....	20 - 13	5G24	FEEDER CONVEYOR BRACKET .....	110 - 38
2E19	ENGINE, LOWER, HARNESS, 6068 LOWER PARTS .....	40 - 58	5G24	FEEDER CONVEYOR DRIVE CHAIN .....	110 - 38
2E19	ENGINE, LOWER, HARNESS, 6359 LOWER PARTS .....	40 - 58	5H1	FEEDER CONVEYOR DRIVE CHAIN, TIGHTENER AND GUIDES .....	110 - 40
1E21	ENIGNE OIL PAN (6359T) .....	24 - 60	5H19	FEEDER CONVEYOR DRIVE CHAIN, TIGHTENER AND GUIDES-RETROFIT INSTALLATION .....	110 - 58
3G5	ETHER START BUTTON .....	60 - 24	5G24	FEEDER CONVEYOR IDLER .....	110 - 38
5E10	ETHER START BUTTON .....	90 - 72	4B22	FEEDER HOUSE , HYD. HOSE, VARIABLE DRIVE .....	70 - 9
2B18	ETHER STARTING AID ( -655415) .....	30 - 8	2G22	FEEDER HOUSE BACKSHAFT SPEED SENSOR (645123- ) .....	40 - 110
2B20	ETHER STARTING AID (655416- ) .....	30 - 10	7H18	FEEDER HOUSE BELTS .....	170 - 4
5F8	EVAPORATOR/HEATER UNIT .....	90 - 96	5G3	FEEDER HOUSE DRIVE SHIELDS - CONTOUR MASTER (660101-660245) .....	110 - 16
5E20	EVAPORATOR, AIR CONDITIONER ( -650100)R-12 REFRIGERANT .....	90 - 82	5G5	FEEDER HOUSE DRIVE SHIELDS - CONTOUR MASTER (660246- ) .....	110 - 18
5E22	EVAPORATOR, AIR CONDITIONER (650101- ) R134A REFRIGERANT .....	90 - 84	5G1	FEEDER HOUSE DRIVE SHIELDS AND SAFETY STOP .....	110 - 14
1F11	EXHAUST ADAPTER .....	24 - 76	6H17	FEEDER HOUSE DRIVE TIGHTENER .....	121 - 64
1F11	EXHAUST ELBOW .....	24 - 76	5F24	FEEDER HOUSE DRIVE TIGHTENER (FIXED SPEED) .....	110 - 12
1F11	EXHAUST MANIFOLD .....	24 - 76	5H21	FEEDER HOUSE DUST FAN BELT, LH SIDE - RETROFIT INSTALLATION .....	110 - 60
1F12	EXHAUST MANIFOLD .....	24 - 77	5H23	FEEDER HOUSE DUST FAN, LH SIDE - RETROFIT INSTALLATION .....	110 - 62
1F12	EXHAUST MANIFOLD GASKET .....	24 - 77	5G22	FEEDER HOUSE FLOOR .....	110 - 36
2C1	EXHAUST PIPE AND MUFFLER .....	30 - 16	5G7	FEEDER HOUSE FRAME AND FRONT SHAFT .....	110 - 20
1F9	EXHAUST VALVE .....	24 - 74	5G11	FEEDER HOUSE FRAME, TILT BEAM & CLOSURE PLATES, CONTOUR MASTER (660101- ) .....	110 - 24
1F3	EXHAUST VALVE INSERT .....	24 - 68	5H13	FEEDER HOUSE FRONT DRIVE SHAFT, SHEAVE AND MOUNTINGS (FIXED SPEED WITH .....	110 - 52
1F5	EXHAUST VALVE INSERT .....	24 - 70	5D3	FEEDER HOUSE REVERSER FOOT CONTROL .....	90 - 38
1F7	EXHAUST VALVE INSERT .....	24 - 72	5F18	FEEDER HOUSE REVERSER FOOT CONTROL .....	110 - 6
1F3	EXHAUST VALVE ROTATOR .....	24 - 68	5G9	FEEDER HOUSE SHELL - CONTOUR MASTER (660101- ) .....	110 - 22
1F3	EXHAUST VALVES .....	24 - 68	5G18	FEEDER HOUSE SLIP CLUTCH .....	110 - 32
1F5	EXHAUST VALVES .....	24 - 70	5H11	FEEDER HOUSE UPPER DRIVE SHAFT, SHEAVE AND MOUNTING (FIXED SPEED WITH .....	110 - 50
1F7	EXHAUST VALVES .....	24 - 72	5G16	FEEDER HOUSE UPPER SHAFT ( -641500) .....	110 - 30
3B25	EXPORT, TRANSMISSION ( -655399) .....	50 - 12			
6G9	EXTENDED RANGE CYLINDER DRIVE BELT .....	121 - 32			
6G17	EXTENDED RANGE CYLINDER DRIVE BELT .....	121 - 40			
6E1	EXTENSION ELEMENT, CHAFFER .....	120 - 64			

## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
5G20	FEEDER HOUSE UPPER SHAFT (641501- ).....	110 - 34	5C3	FRAME, CAB AND SUPPORT .....	90 - 14
5G9	FEEDER HOUSE WEAR PLATES - CONTOUR MASTER (660101- ).....	110 - 22	6E3	FRAME, CHAFFER .....	120 - 66
6B14	FEEDER HOUSE/SEPARATOR SEAL, STONE TRAP AND DOOR.....	120 - 2	5G7	FRAME, FEEDER HOUSE AND FRONT SHAFT .....	110 - 20
5H5	FEEDER HOUSE, UPPER COUNTERSHAFT VARIABLE DRIVE .....	110 - 44	5G11	FRAME, FEEDER HOUSE, CONTOUR MASTER (660101- ).....	110 - 24
2C21	FIELD LIGHTING, AUXILIARY .....	40 - 10	4F16	FRAME, SEPARATOR.....	80 - 2
2G19	FIELD LIGHTS (660101- ).....	40 - 106	7C19	FRAME, SHIELDS AND HANDLES, CHAFF SPREADER ( -650100).....	125 - 32
2C15	FIELD LIGHTS SWITCH, AUX, OPTIONAL .....	40 - 4	6E7	FRAME, SIEVE .....	120 - 70
2B22	FILTER, AIR AND INTAKE TUBES - GRAIN.....	30 - 12	2C20	FRONT AND REAR TURN AND TAIL LIGHTS .....	40 - 9
2B24	FILTER, AIR AND INTAKE TUBES - GRAIN.....	30 - 14	3B22	FRONT AXLE.....	50 - 9
5C21	FILTER, CAB AIR .....	90 - 32	4H3	FRONT CORNER SHEET, R H .....	80 - 38
1E11	FILTER, ENGINE OIL .....	24 - 48	1D12	FRONT PLATE, ENGINE.....	24 - 24
1E13	FILTER, ENGINE OIL .....	24 - 50	1D13	FRONT PLATE, ENGINE.....	24 - 25
1H11	FILTER, ENGINE OIL .....	24 - 129	1D14	FRONT PLATE, ENGINE.....	24 - 26
1H13	FILTER, FUEL .....	24 - 131	1D15	FRONT PLATE, ENGINE.....	24 - 27
1H14	FILTER, FUEL .....	24 - 132	5F20	FRONT SHAFT WITH REVERSER (VARIABLE).....	110 - 8
1H16	FILTER, FUEL .....	24 - 134	4H11	FRONT SHIELD ASSEMBLY, LEFT SIDE .....	80 - 46
1H20	FILTER, FUEL .....	24 - 138	4H17	FRONT SHIELD ASSEMBLY, RIGHT SIDE.....	80 - 52
4B23	FILTER, MAIN HYDRAULIC .....	70 - 10	3G9	FRONT STEERING HOSES AND LINES.....	60 - 28
5E14	FILTERS, AIR CONDITIONER AND HEATER AND HOUSING.....	90 - 76	5F14	FRONT VARIABLE DRIVE SHEAVE AND MOUNTINGS .....	110 - 2
5E14	FILTERS, HEATER AND AIR CONDITIONING AND HOUSING.....	90 - 76	1H13	FUEL FILTER.....	24 - 131
3C10	FINAL DRIVE (RING AND PINION) .....	50 - 22	1H14	FUEL FILTER.....	24 - 132
3C12	FINAL DRIVE AXLE, GEAR AND BEARINGS (RING AND PINION) .....	50 - 25	1H16	FUEL FILTER.....	24 - 134
3C11	FINAL DRIVE BEARINGS (RING AND PINION) .....	50 - 23	1H20	FUEL FILTER.....	24 - 138
3C11	FINAL DRIVE HOUSING AND BRG. CAP (RING AND PINION) .....	50 - 23	1H13	FUEL FILTER ELEMENT.....	24 - 131
3C13	FINAL DRIVE PINION, SHAFTS AND BEARINGS (RING AND PINION) .....	50 - 26	1H16	FUEL FILTER ELEMENT.....	24 - 134
6H23	FINE CUT STRAW CHOPPER DRIVES (FRONT) .....	121 - 70	1H13	FUEL FILTER FUEL LINES.....	24 - 131
6I3	FINE CUT STRAW CHOPPER DRIVES (REAR).....	121 - 74	1H16	FUEL FILTER FUEL LINES.....	24 - 134
6C16	FINGER GRATE, SPIKE-TOOTH .....	120 - 30	1H14	FUEL FILTER LINES .....	24 - 132
7B14	FINS, SUPPORTS AND DECK, STRAW CHOPPER.....	125 - 2	1H20	FUEL FILTER LINES .....	24 - 138
2B12	FITTINGS, FUEL TANK.....	30 - 2	2C17	FUEL GAUGE .....	40 - 6
7H5	FITTINGS, LOWER LUBE HOSE, UNLOADING AUGER.....	130 - 58	5C23	FUEL GAUGE .....	90 - 34
2B16	FITTINGS, TANK FUEL LINES.....	30 - 6	1F15	FUEL INJECTION LINES.....	24 - 80
4E21	FITTINGS, TILT CYLINDER - CONTOUR MASTER .....	70 - 83	1F17	FUEL INJECTION LINES.....	24 - 82
7H7	FITTINGS, UPPER LUBE HOSE, UNLOADING AUGER.....	130 - 60	1F19	FUEL INJECTION LINES.....	24 - 84
3G18	FIXED REAR AXLE .....	60 - 37	1F22	FUEL INJECTION LINES.....	24 - 88
3G21	FIXED REAR AXLE STEERING TIE RODS.....	60 - 40	1F24	FUEL INJECTION LINES.....	24 - 90
3G22	FIXED REAR AXLE, 4-WHEEL DRIVE, STEERING TIE RODS .....	60 - 41	1F13	FUEL INJECTION NOZZLE.....	24 - 78
5F24	FIXED SPEED FEEDER HOUSE DRIVE TIGHTENER..	110 - 12	1F14	FUEL INJECTION NOZZLE.....	24 - 79
5B15	FLOOR MAT, CAB.....	90 - 2	1F21	FUEL INJECTION NOZZLE.....	24 - 87
5G22	FLOOR, FEEDER HOUSE .....	110 - 36	1F15	FUEL INJECTION PUMP.....	24 - 80
4B19	FLOW CONTROL VALVE, REEL DRIVE .....	70 - 6	1F17	FUEL INJECTION PUMP.....	24 - 82
1118	FLYWHEEL.....	24 - 163	1F19	FUEL INJECTION PUMP.....	24 - 84
1118	FLYWHEEL HOUSING .....	24 - 163	1F22	FUEL INJECTION PUMP.....	24 - 88
1119	FLYWHEEL HOUSING .....	24 - 164	1F24	FUEL INJECTION PUMP.....	24 - 90
5B17	FOAM, SEALS AND SOUND DEADENING, CAB .....	90 - 4	1F22	FUEL INJECTION PUMP DRIVE GEAR.....	24 - 88
5D3	FOOT PEDAL, FEEDER HOUSE REVERSER .....	90 - 38	1F24	FUEL INJECTION PUMP DRIVE GEAR.....	24 - 90
5F18	FOOT PEDAL, FEEDER HOUSE REVERSER .....	110 - 6	1G3	FUEL INJECTION PUMP ELECTRIC SHUT-OFF KIT .....	24 - 94
3E17	FOUR WHEEL DRIVE HYDRAULIC LINES AND HOS ES, L.H. (655101- ).....	50 - 82	1F15	FUEL INJECTION SYSTEM .....	24 - 80
3G17	FOUR-WHEEL DRIVE .....	60 - 36	1F17	FUEL INJECTION SYSTEM .....	24 - 82
3D17	FOUR-WHEEL DRIVE ( -655100).....	50 - 56	1F19	FUEL INJECTION SYSTEM .....	24 - 84
6D19	FRAME ARMS, PRECLEANER CHAFFER .....	120 - 58	1F22	FUEL INJECTION SYSTEM .....	24 - 88
			1F24	FUEL INJECTION SYSTEM .....	24 - 90
			1H18	FUEL LINE, FUEL TRANSFER PUMP .....	24 - 136
			1H13	FUEL LINES, FUEL FILTER .....	24 - 131
			1H16	FUEL LINES,FUEL FILTER.....	24 - 134
			2B14	FUEL PUMP, WATER SEPARATOR, AND FUEL SENDER .....	30 - 4
			2B14	FUEL SENDER .....	30 - 4
			2B12	FUEL TANK, SUPPORTS, AND FITTINGS .....	30 - 2
			1H18	FUEL TRANSFER PUMP .....	24 - 136
			1H19	FUEL TRANSFER PUMP .....	24 - 137
			1H22	FUEL TRANSFER PUMP .....	24 - 140
			1H18	FUEL TRANSFER PUMP FUEL LINE .....	24 - 136