

410G BACKHOE LOADER



JOHN DEERE

PARTS CATALOG

410G BACKHOE LOADER


PC2756 (Jan-07) English

Worldwide Construction and Forestry Division

Worldwide Edition
Litho In U.S.A. (Revised)
COPYRIGHT © 2007
DEERE & COMPANY
Moline, Illinois
All rights reserved

INTRODUCTION AND CUSTOMER INFORMATION

T134142 -UN-10OCT00

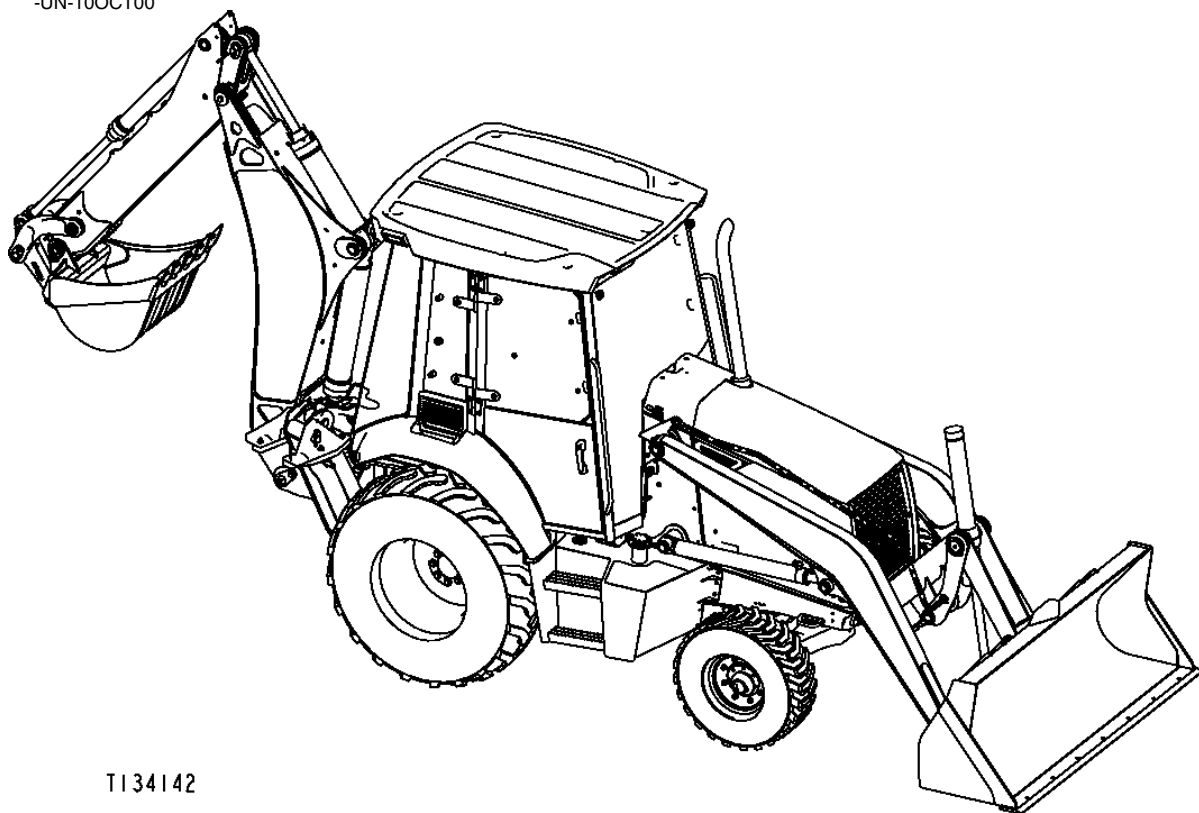

T134142

*SIDE VIEW OF JOHN DEERE BACKHOE LOADER
(MANUFACTURED 2000-)*

TO THE CUSTOMER

THE PART NUMBERS IN THIS PARTS CATALOG WERE CORRECT AT THE TIME YOUR CATALOG WAS PUBLISHED. IT IS OUR POLICY TO CONSTANTLY IMPROVE OUR MACHINES AND, THEREFORE, PART NUMBERS MAY CHANGE. WHEN ORDERING PARTS, VERIFY PART NUMBERS THROUGH YOUR DEALER.

(SPECIFICATIONS AND DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.)

SERIAL NUMBER LOCATIONS

EACH 410G BACKHOE LOADER HAS SIX SERIAL NUMBERS, A PRODUCT IDENTIFICATION NUMBER PLATE, AN ENGINE SERIAL NUMBER PLATE, A HYDRAULIC PUMP SERIAL NUMBER PLATE, A MFWD AXLE SERIAL NUMBER PLATE, A TRANSMISSION SERIAL NUMBER PLATE, AND A REAR AXLE SERIAL NUMBER PLATE.

THE PRODUCT IDENTIFICATION NUMBER IS ON THE LEFT-HAND SIDE OF THE LOADER FRAME JUST ABOVE THE LIFT CYLINDER PIVOT BOSS.

THE ENGINE SERIAL NUMBER PLATE IS LOCATED ON THE RIGHT-HAND SIDE OF THE CYLINDER BLOCK NEAR THE FUEL PUMP.

THE MFWD AXLE SERIAL NUMBER PLATE IS LOCATED ON THE RIGHT-HAND (REAR) SIDE OF THE MFWD AXLE HOUSING.

THE REAR AXLE SERIAL NUMBER PLATE IS LOCATED ON THE RIGHT-HAND (FRONT) SIDE OF THE AXLE HOUSING.

THE TRANSMISSION SERIAL NUMBER PLATE IS LOCATED ON THE BOTTOM-REAR FACE OF THE HOUSING.

THE HYDRAULIC PUMP SERIAL NUMBER IS LOCATED ON THE BOTTOM FACE OF THE PUMP.

LEFT-HAND SIDE, RIGHT-HAND SIDE, FRONT AND REAR OF THE BACKHOE LOADER ARE VIEWED BY FACING IN THE DIRECTION OF THE BACKHOE LOADER FORWARD TRAVEL.

LEFT-HAND SIDE, RIGHT-HAND SIDE, FRONT AND REAR OF THE BACKHOE COMPONENTS ARE DETERMINED WHEN SEATED IN THE BACKHOE OPERATING POSITION.

IF PRODUCT IDENTIFICATION NUMBERS OR SERIAL NUMBERS ARE REQUIRED FOR WARRANTY CLAIMS OR CORRESPONDENCE PERTAINING TO THIS PRODUCT. IT IS EXTREMELY IMPORTANT THAT ALL CHARACTERS BE FURNISHED. THIS POINT CANNOT BE OVEREMPHASIZED.

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

ENGINE SERIAL NUMBER PLATE

T134833 -UN-23OCT00



T134833

- | | |
|--|--|
| 1. DESIGNATES ENGINE MANUFACTURER | T-JOHN DEERE DUBUQUE WORKS
P-JOHN DEERE MOTORES |
| 2. DESIGNATES NUMBER OF CYL. AND LITERS | 4045 (4.5 LITER) |
| 3. DESIGNATES FUEL TYPE OR SPECIAL CONDITIONS. | TF TURBOCHARGED DIESEL ENGINE |
| 4. DESIGNATES ENGINE SERIAL NUMBER | 123456 |
| 5. DESIGNATES THE ENGINE APPLICATION AND FACTORY USER. | TO4045TT082 - PE4045TT082 - PE4045TT093 |

MFWD AXLE SERIAL NUMBER PLATE

TP19438

-UN-01JAN94

The diagram shows a rectangular serial number plate with four mounting holes at the corners. At the top center, it reads "Zahnradfabrik Passau GmbH". Below this, there are two main sections: "Type" and "Serial No.". The "Type" field is a single line with a bracket underneath labeled "4". The "Serial No." field is a single line with a bracket underneath labeled "5". Below these are two columns: "Parts List No." and "Total Ratio/Version". The "Parts List No." field has a bracket underneath labeled "3". The "Total Ratio/Version" field is split into two sub-fields: "Total Ratio" with a bracket labeled "6" and "Version" with a bracket labeled "7". Below these are three rows for lubricant information. Each row has three columns: "Oil", "Ltri.", and "List of Lubricants". The "Oil" column has a bracket labeled "2" under each row. The "Ltri." column has a bracket labeled "9" under each row. The "List of Lubricants" column has a bracket labeled "8" under each row, and each row contains the text "TE-ML". At the bottom left, there is a field for "Customer's Code No." with a bracket underneath labeled "1".

TP19438

- 1. DESIGNATES CUSTOMER'S CODE NUMBER
- 2. DESIGNATES TYPE OF LUBRICANT
- 3. DESIGNATES ZF-PARTS-LIST NUMBER
- 4. DESIGNATES AXLE TYPE
- 5. DESIGNATES AXLE SERIAL NUMBER
- 6. DESIGNATES TOTAL - RATIO OF THE AXLE
- 7. DESIGNATES VERSION
- 8. DESIGNATES LUBRICANT SPECIFICATION
- 9. DESIGNATES CAPACITY

JOHN DEERE PART NUMBER
M1L-L-2105B, SAE90
4464 006 101
AP-11H
12345
20.28
SP. DIFF. (WITH OR WITHOUT SELF-LOCKING
DIFFERENTIAL)
05
LTR (DIFFERENTIAL CARRIER AND PLANETARY GEAR
ASSEMBLY

SERIAL NUMBER LISTING INFORMATION

SERIAL NUMBER INFORMATION IS LISTED TO SHOW ON WHICH MACHINES EACH PART CAN BE USED; FOR EXAMPLE:

- THE PART CAN BE USED ON ALL MACHINES.
- 000000- THE PART CAN BE USED ON ALL MACHINES BEGINNING WITH THE SERIAL NUMBER LISTED.
- 000000 THE PART CAN BE USED ON ALL MACHINES UP TO AND INCLUDING THE SERIAL NUMBER LISTED.
- 000000-000000 THE PART CAN BE USED ON ALL MACHINES BETWEEN AND INCLUDING THE SERIAL NUMBERS LISTED.

WHEN XXXXXX'S ARE LISTED IN PLACE OF A SERIAL NUMBER, A SERIAL NUMBER CHANGE WAS MADE BUT THE EXACT SERIAL NUMBER WAS NOT AVAILABLE WHEN THE CATALOG WAS PRODUCED.

DIRECTION ARROW

ARROWS ARE USED WITH ILLUSTRATIONS TO INDICATE THE FRONT OF THE UNIT. "RIGHT-HAND" AND "LEFT-HAND" SIDES OF THE LOADER OR TRACTOR PARTS ARE DETERMINED BY FACING IN THE DIRECTION OF MACHINE FORWARD TRAVEL

EXCEPTION: FOR ALL BACKHOE PARTS, "RIGHT-HAND" AND "LEFT-HAND" SIDES, "FRONT" AND "REAR" ARE DETERMINED WHEN SEATED FOR BACKHOE OPERATION.

BOX-ENCLOSED ILLUSTRATIONS

A KEY NUMBER, SHOWN IN THE PARTS LIST, IS ASSIGNED TO A BOX ENCLOSING ALL PARTS SOLD AS A SERVICE ASSEMBLY.

COMPLETE GOODS LISTINGS

COMPLETE GOODS ARE LISTED IN THE REMARKS COLUMN. ORDER SEPARATELY. DO NOT INCLUDE ON REPLACEMENT PARTS ORDER.

SI UNITS OF MEASURE

METRIC DIMENSIONS ARE GIVEN, WHERE APPLICABLE, THROUGHOUT THIS PARTS CATALOG.

CHANGE INDICATOR LINE

CHANGES AFFECTING THE ORDERING OF PARTS ARE IDENTIFIED BY VERTICAL LINES MARKED IN THE LEFT-HAND MARGIN OF REVISED PARTS LISTING IMAGES. A LINE IS ALSO AT THE LEFT-HAND EDGE OF THE SAME PART NUMBER IN THE NUMERICAL INDEX TO SHOW THE LOCATION OF REVISED INFORMATION.

REMARKS AND ABBREVIATIONS

THE FOLLOWING REMARKS AND ABBREVIATIONS MAY APPEAR THROUGHOUT THE PARTS CATALOG. REFER TO THE FOLLOWING CHART FOR TRANSLATIONS TO LANGUAGES OTHER THAN ENGLISH.

REMARKS AND ABBREVIATIONS

TX1007193

-UN-04MAY06

PHRASE	ENGLISH	FRANCAIS	DEUTSCH	ITALIANO	ESPAÑOL	SVENSKA
ALSO ORDER, ORD W/	Also order	Commander aussi	Ebenso bestellen	Ordinare anche	Pedir también	Beställ även
AMP	Ampere	Ampère	Ampere	Ampere	Amperio	Ampere
APPL, APPL ONLY	This application only	Uniquement pour cette utilisation	Nur für diese Anwendung	Solo per questa applicazione	Solo para este propósito	Endast för denna användning
AR	As required	Selon le besoin	Nach Bedarf	Secondo necessità	Según necesidad	Vid behov
ASSY	Complete assembly	Ensemble complet	Kompl.-Zusammenbau	Gruppo completo	Montaje completo	Komplett montering
CA, CONVENIENCE ASSY	Convenience assembly	Ensemble convenance	Komfort-Zusammenbau	Montaggio pratico	Montaje de conveniencia	Lämplig montering
CCW	Counter-clockwise	Sens anti-horaire	Gegen Uhrzeigersinn	Senso antiorario	A la izquierda	Moturs
COMPLETE	Complete	Complet	Vollständig	Completo	Completo	Fullständig
COMPLETE GOODS	Complete goods	Compléter marchandises	Vollst. Waren	Merci complete	Mercancías completas	Kompleta varor
CTL CUT TO LENGTH	Cut to length	Couper à la longueur	Auf Länge zurechtschneiden	Tagliare alla lunghezza	Corte a la longitud	Skära till längd
CW	Clockwise	Sens horaire	Im Uhrzeigersinn	In senso orario	A la derecha	Medurs
FOR	For	Pour	Für	Per	Para	För
FRONT	Front	Avant	Vorn	Anteriore	Frente	Fram
GAS	Gasoline	Essence	Benzin	Benzina	Gasolina	Bensin
HP	Horsepower	Puissance en cv	Leistung	Potenza	Potencia	Hästkraft
HFWD	Hydraulic Front-wheel Drive	Traction Avant Hydraulique	Hydraulischer Vorderradantrieb	Trazione Anteriore Idraulica	Tracción Delantera Hidraulica	Hydraulisk Framhjulsdrift
HS, HEAD MARKED	High strength, head marked	Haute résistance, tête marquée	Hochfest, vorn gekennzeichnet	Contrassegnato in testa, ad alta resistenza	Alta fuerza, marca en cabeza	Hög styrka, huvudmärkt
ID	Inside diameter	Diamètre intérieur	Innendurchmesser	Diametro interno	Diá. interior	Innerdiameter
INCH	Inch	Pouce	In.	Pollice	Pulg.	Tum
INCL KEYS	Includes keys...	Comprend les positions...	Einschließlich Schlüssel...	Include le chiavette...	Incluye posiciones...	Inklusive nycklar...
INCL, INCLUDES	Includes...	Comprend...	Enthält...	Include...	Incluye...	Inkluderar...
INCLUDES PARTS/ ITEMS MARKED	Includes parts/items marked...	Comprend les pièces/articles marqués...	Enthält gekennzeichnete Teile/Pos. ...	Include i pezzi e gli elementi contrassegnati...	Incluye piezas marcadas...	Inkluderar markerade delar/artiklar...
INNER	Inner	Intérieur	Innerer	Interno	Interno	Inre, invändig
KIT	Kit	Kit	Kit	Kit	Juego	Sats
L	Number of links	Nombre de maillons	Anzahl der Glieder	Numero di maglie	Nº de eslabones	Antal länkar
LGTH	Length	Longueur	Länge	Lunghezza	Longitud	Längd
LGP	Low Ground Pressure	Faible Pression Au Sol	Niederer Bodendruck	Bassa Pressione Sul Suolo	Baja Presion Sobre El Suelo	Laagt Marktryck
LH	Left-hand	Gauche	Links	Sinistra	Izquierda	Vänster
LT	Long Track	Chenille Longue	Mit Langem Laufwerk	Cingolo Lungo	Cadena Largo	Laangt Larvband
LOW, LOWER	Lower	Inférieur	Unterer	Inferiore	Inferior	Nedre
MAKE FROM, MF MARKED	Make from Marked	Faireavec Marqué	Herstellen von Markiert	Fabbricare da Contrassegnato	Hacer de Marcado	Tillverka av Märkt

TX1007193

REMARKS AND ABBREVIATIONS

TX1007195

-UN-04MAY06

PHRASE	ENGLISH	FRANCAIS	DEUTSCH	ITALIANO	ESPAÑOL	SVENSKA
MATCHED SET	Matched set	Ensemble assorti	Passender Satz	Set abbinato	Sistema emparejado	Anpassad sats
MFWD	Mechanical Front-Wheel Drive	Pont Avant	Allradantrieb	Ruota Motrice Meccanica Anteriore	Traccion Delantera Mecanica	Mekanisk Framhjulsdrift
NA, NOT USED THIS APPL	Not used this application	Ne sert pas pour cette application	In dieser Anwendung nicht benutzt	Non usato in questa applicazione	No se usa en esta aplicación	Ej använd i detta sammanhang
NLA	No longer available	Epuisé	Nicht mehr lieferbar	Non più disponibile	Descontinuado	Ej längre tillgänglig
NSEP	Not supplied separately	Non livré séparément	Nicht einzeln lieferbar	Non fornito separatamente	No se suministra por separado	Kan ej erhållas separat
OD	Outside diameter	Diamètre extérieur	Außendurchmesser	Diametro esterno	Diá. exterior	Ytterdiameter
OPTIONAL	Optional	En option	Wahlweise	Opzionale	Opcional	Valfri
OR	Or	Ou	Oder	Oppure	O	Eller
ORD, ORDER	Order	Commander	Bestellen	Ordinare	Pídase	Order
OS	Oversize	Sur-dimension	Übergröße	Maggiorato	Sobretamaño	Överdimension
OUTER	Outer	Externe	Äußerer	Esterno	Externo	Yttre, utvändig
PKG, PACKG	Package, Packet of	Emballage, paquet de	Verpackung, verpackt mit	In confezione da	Paquete de	I sats; paket
PTO	Power Take Off	Prise De Force	Zapfwelle	Presa Di Forza	Toma De Fuerza	Kraftuttag
RATIO	Ratio	Rapport	Übersetzungs-verhältnis	Rapporto	Índice	Förhållande
REAR	Rear	Arrière	Hinten	Posteriore	Trasero	Bak; bakre
REMAN	Remanufactured	Echange Standard	Generalveberholt	Refatto	Refabricador por	Renoverad
REPL	Replaces	Remplace	Ersetzt	Sostituisce	Sustituye	Ersätter
RH	Right-hand	Droit	Rechts	Destra	Derecha	Höger
SN	Serial number	Numéro de série	Seriennummer	Numero di serie	Nº de serie	Seriennummer
STD	Standard	Standard	Standard	Standard	Normal	Standard
SUB	Replaced by	Remplacé par	Ersetzt durch	Sostituito da	Sustituido por	Ersatt med
SUB COMPONENTS	Substitute components (of the kit or assy)	Substituer les composants (du kit ou de l'ensemble)	Komponenten ersetzen (des Kits oder der Baugruppe)	Sostituire i componenti (del kito del gruppo)	Sustituir los componentes	Ersätta komponenterna (i satsen eller monteringen)
SUB FOR	Substitutes for	Remplace	Ersatz für	Sostituisce	Sustitución para	Ersätter
TEETH, Z	Number of gear teeth	Nombre de dents d'engrenages	Zahl der Zahnradzähne	Numero di denti dell'ingranaggio	Nº de dientes de engranaje	Antal redskapständer
TK	Thickness	Épaisseur	Stärke	Spessore	Espesor	Tjocklek
UP, UPPER	Upper	Supérieur	Oberer	Superiore	Superior	Övre
US	Undersize	Sous-dimension	Untergröße	Minorato	Subtamaño	Underdimension
USE WITH	Use with	À utiliser avec	Verwenden mit	Usare con	Usar con	Använd med
USE UNTIL EXHAUSTED	Use until exhausted	Utilisation jusqu'à épuisé	Verwenden, bis erschöpft	Usare fino all'esaurimento	Usar hasta agotar	Använda till uttömd
W/	With	Avec	Mit	Con	Con	Med; inklusive
W/O	Without	Sans	Ohne	Senza	Sin	Utan; exklusive
WHOLE GOODS	Whole goods	Marchandises entières	Vollständige Waren	Merci intere	Mercancías enteras	Hela varor
XLT	Extra Long Track	Chenille Extra Longue	Mit Extra Langem Laufwerk	Cingolo Extra Lungo	Cadena Extra Larga	Extra Laangt Larvband
VEC	Vehicle Electronic Controller	Controlleur Electronique Du Vehicule	Elektronisches Steuergeraet Des Fahrzeugs	Unità Di Comando Elettronica Del Veicolo	Unidad de Control Electronico del Vehiculo	Elektronisk Fordonsstyrenhet
VLC	Vehicle Load Center	Coffret De Repartition Du Vehicule	Verteilerstation Des Fahrzeugs	Centro Di Carico Del Veicolo	Centro De Cargas Del Vehiculo	Fordonets Elcentral

TX1007195

ALPHABETICAL INDEX

PAGE

PAGE

A

A/C PRESSURE SWITCH HARNESS.....	1674-4
A/C SWITCH.....	1674-6
ACCESS COVER, INJECTION PUMP GEAR (TO4045TT082 ESN -900932)	0402-6
ACCU-SWING VALVE KIT	3362-29A
ACCUMULATOR SEAL KIT	2160-26
ACCUMULATOR SEAL KIT	2160-28
ACCUMULATOR VALVE	2160-26
ACCUMULATOR VALVE	2160-28
ACCUMULATOR, MANIFOLD (PILOT CONTROL)	3362-30
ACCUMULATOR, RIDE CONTROL	2160-26
ACCUMULATOR, RIDE CONTROL	2160-28
ACTUATOR DOOR RELAY	1674-4
ADAPTER KIT, STARTER MOTOR (TO4045TT082 ESN 894288-)	0422-4
ADAPTER STC (SERIAL NO. -911131).....	0960-8
ADAPTER,ENGINE OIL COOLER	0419-2
ADAPTER,EXHAUST	0410-2
ADAPTERS STC	0960-12
ADAPTERS STC	0960-14
ADAPTERS STC (SERIAL NO. 911132-).....	0960-10
ADJUSTING STRAP, ALTERNATOR	0423-2
AIR CLEANER (SERIAL NO. -926658).....	0520-2
AIR CLEANER (SERIAL NO. 926659-).....	0520-4
AIR CLEANER ELEMENT (SERIAL NO. -926658).....	0520-2
AIR CLEANER ELEMENT (SERIAL NO. 926659-).....	0520-4
AIR CLEANER HOSE (SERIAL NO. -926658).....	0520-2
AIR CLEANER HOSE (SERIAL NO. 926659-).....	0520-4
AIR CLEANER RESTRICTION INDICATOR SWITCH (SERIAL NO. -926658).....	0520-2
AIR CLEANER RESTRICTION INDICATOR SWITCH (SERIAL NO. 926659-).....	0520-4
AIR CONDITIONING	1830-6
AIR CONDITIONING	1830-7A
AIR CONDITIONING (FREEZE/COMPRESSOR) SWI TCH.....	1830-7A
AIR CONDITIONING COMPRESSOR	1830-12
AIR CONDITIONING COMPRESSOR	1830-14
AIR CONDITIONING COMPRESSOR MOUNTING BRACKETS	1830-12
AIR CONDITIONING COMPRESSOR MOUNTING BRACKETS	1830-14
AIR CONDITIONING COMPRESSOR DIODE	1674-8
AIR CONDITIONING COMPRESSOR DRIVE BELT	1830-12
AIR CONDITIONING COMPRESSOR DRIVE BELT	1830-14
AIR CONDITIONING COMPRESSOR HOSES.....	1830-12
AIR CONDITIONING COMPRESSOR HOSES.....	1830-14
AIR CONDITIONING CONDENSER	1830-12
AIR CONDITIONING CONDENSER	1830-14
AIR CONDITIONING DOOR ACTUATOR RELAY	1674-4
AIR CONDITIONING DUCTS	1830-2
AIR CONDITIONING DUCTS	1830-4
AIR CONDITIONING RECEIVER DRYER.....	1830-12
AIR CONDITIONING RECEIVER DRYER.....	1830-14
AIR HEATER SPACER (PE4045TT082 XXXXXX-)	0414-2

AIR INTAKE (PE4045TT082 XXXXXX-)	0414-2
AIR INTAKE (W/TURBO) (PE4045TT093).....	0414-3
AIR INTAKE SYSTEM (TO4045TT082) (PE4045TT082 ESN -XXXXXX)	0414-1
AIR INTAKE TEMPERATURE SENSOR (W/TURBO) (PE4045TT093)	0414-3
AIR SUSPENSION SEAT COMPRESSOR.....	1821-16
AIR SUSPENSION SEAT SWITCH	1674-6
ALARM, TRAVEL WARNING	2004-2
ALARM,BACK UP	2004-2
ALTERNATOR	1672-2
ALTERNATOR (SN XXXXXX-).....	1672-4
ALTERNATOR ADJUSTING STRAP.....	0423-2
ALTERNATOR FAN	1672-2
ALTERNATOR FAN (SN XXXXXX-).....	1672-4
ALTERNATOR MOUNTING BRACKETS	0423-2
ALTERNATOR PULLEY	1672-2
ALTERNATOR PULLEY (SN XXXXXX-).....	1672-4
ANCHOR, TIE BAND MOUNT, HARNESS SERIAL NO. -XXXXXX	1673-4
ANCHOR, TIE BAND MOUNT, HARNESS SERIAL NO. XXXXXX-	1673-6
ANGLE,BACKREST ADJUSTMENT.....	1821-2
ANTENNA, RADIO	2001-2
ANTI-CAVITATION, BOOM SECTION	3162-10
ANTI-CAVITATION, BUCKET SECTION.....	3162-14
ANTI-STALL CONTROL (SERIAL NO.XXXXXX-)	1675-2
ARM (FRAME), SUSPENSION SEAT SCISSOR	1821-10
ARM GRIP REPAIR KIT, EXT. DIPPER	3346-6
ARM RESTS	1821-2
ARM, LOADER LIFT	3140-2
ARM, PILOT CONTROLLER (LEFT SIDE)	1816-14
ARM, PILOT CONTROLLER (RIGHT SIDE).....	1816-16
ARM, STANDARD	3346-2
ARM,STABILIZER	3348-2
ARMS, ROCKER.....	0402-3
ATTACHMENT PLUMBING KIT	3363-42
ATTENUATOR, CAB HYDRAULIC (SN. -951254)	2160-8
ATTENUATOR, CAB HYDRAULIC (SN. 951255-)	2160-9A
ATTENUATOR, CANOPY HYDRAULIC (SN XXXXXX-).....	2160-11A
ATTENUATOR, CANOPY HYDRAULIC (SN. -XXXXXX)	2160-10
AUDIBLE ALARM, QUICK COUPLER PIN ENGAGEM ENT	1674-5C
AUGER COUPLERS	3363-24
AUGER COUPLERS	3363-26
AUGER HYDRAULICS.....	3363-26
AUXILIARY CUTTING EDGE,MULTI-PURPOSE BUCKET	3102-8
AUXILIARY EQUIPMENT HYDRAULICS, EXTENDAB LE DIPPERSTICK	3363-18
AUXILIARY EQUIPMENT HYDRAULICS, STANDARD DIPPERSTICK.....	3363-16
AUXILIARY FUNCTION PEDAL (PILOT CONTROL)	3315-13A
AUXILIARY LOADER VALVE (SERIAL NO. 913480-)	3162-4

ALPHABETICAL INDEX - CONTINUED

	PAGE		PAGE
AUXILIARY SECTION RELIEF VALVE	3162-16	BACKHOE LINKAGE, FIFTH FN LEVER FOR	
AUXILIARY SECTION RELIEF VALVE	3162-20	THREE LEVER CONTROLS.....	3315-14
AUXILIARY SECTION RELIEF VALVE	3362-20	BACKHOE STABILIZER CYLINDER HYDRAULICS	3363-2
AUXILIARY SECTION, BACKHOE VALVE	3362-20	BACKHOE STABILIZER CYLINDER HYDRAULICS	3363-3A
AUXILIARY SECTION, BACKHOE VALVE	3362-22	BACKHOE THREE LEVER CONTROL VALVE	
AUXILIARY SECTION, LOADER VALVE	3162-16	CONVERSION KIT.....	3315-6
AUXILIARY SECTION, LOADER VALVE	3162-20	BACKHOE VALVE AUXILIARY SECTION	3362-20
AUXILIARY VALVE KIT, LOADER.....	3162-18	BACKHOE VALVE AUXILIARY SECTION	3362-22
AUXILIARY, LOW PRESSURE RETURN KIT		BACKHOE VALVE BOOM SECTION.....	3362-10
(SERIAL NO. -905457).....	3363-28	BACKHOE VALVE BOOM,PILOT SECTION.....	3362-40
AUXILIARY, LOW PRESSURE RETURN KIT		BACKHOE VALVE BUCKET SECTION	3362-12
(SERIAL NO. 905458-).....	3363-30	BACKHOE VALVE BUCKET, PILOT SECTION	3362-42
AXLE ASSEMBLY,REAR	0201-2	BACKHOE VALVE CROWD SECTION	3362-14
AXLE HOUSING ASSEMBLY (MFWD).....	0250-4	BACKHOE VALVE CROWD, PILOT SECTION	3362-44
AXLE HOUSING, FRONT (WITHOUT MFWD)		BACKHOE VALVE EXTENDIBLE SECTION	3362-18
(SERIAL NO. 911132-).....	0230-6	BACKHOE VALVE INLET SECTION.....	3362-8
AXLE PIVOT PIN (WITHOUT MFWD)		BACKHOE VALVE MOUNTING PLATE	3315-2
(SERIAL NO. -911131).....	0230-2	BACKHOE VALVE MOUNTING PLATE	
AXLE SWIVEL HOUSING, FRONT		(PILOT CONTROL)	3315-3A
(WITHOUT MFWD)(SERIAL NO. 911132-)	0230-7	BACKHOE VALVE OUTLET SECTION.....	3362-24
AXLE, FRONT (MFWD).....	0250-2	BACKHOE VALVE SWING SECTION.....	3362-16
AXLE, FRONT (WITHOUT MFWD)		BACKHOE VALVE SWING, PILOT SECTION	3362-46
(SERIAL NO. -911131).....	0230-2	BACKHOE VALVE TWO LEVER CONVERSION KIT	3315-4
AXLE, FRONT (WITHOUT MFWD)		BACKHOE, FOUR-LEVER CONTROLS, STANDARD	3315-8
(SERIAL NO. 911132-).....	0230-5	BACKHOE, THREE LEVER CONTROL VALVE	
		LINKAGE.....	3315-6
B		BACKREST ADJUSTMENT ANGLE.....	1821-2
BACK-UP ALARM.....	2004-2	BALANCER SHAFT, ENGINE.....	0415-2
BACKHOE BOOM.....	3344-2	BANK, FRONT AXLE GREASE.....	1370-2
BACKHOE BOOM CYLINDER	3365-2	BAR, CYLINDER SERVICE LOCK	1313-2
BACKHOE BOOM CYLINDER	3365-3	BARRIER, HEAT AND NOISE	1834-2
BACKHOE BOOM CYLINDER REPAIR KIT	3365-2	BASE, NON-SUSPENDED SEAT	1821-12
BACKHOE BOOM CYLINDER REPAIR KIT	3365-3	BASE, SEAT FOR NON-SUSPENDED SEAT.....	1821-14
BACKHOE BOOM LOCK.....	3315-18	BATTERIES,DUAL	1671-4
BACKHOE BOOM LOCK CONTROL LEVER	3315-16	BATTERY BOX	1913-2
BACKHOE BOOM PIN.....	3344-2	BATTERY CABLE, SINGLE	1671-2
BACKHOE BOOM PROTECTION KIT.....	3344-3	BATTERY COVER.....	1913-2
BACKHOE BOOM STOP/CLAMP.....	3344-2	BATTERY DISCONNECT SWITCH,MASTER	1671-6
BACKHOE BUCKET	3302-8	BATTERY INSTALLATION, SINGLE	1671-2
BACKHOE BUCKET CUTTING EDGE.....	3302-8	BEACON, ROTATING.....	1673-2
BACKHOE BUCKET CYLINDER		BEACON, STROBE	1673-2
(SERIAL NO. -926799).....	3365-4	BEARING,FRONT AXLE HOUSING	
BACKHOE BUCKET CYLINDER		(WITHOUT MFWD)(SERIAL NO. 911132-).....	0230-6
(SERIAL NO. 926800-).....	3365-5	BEARINGS, MAIN.....	0401-2
BACKHOE BUCKET CYLINDER HYDRAULICS	3363-6	BEARINGS,CONNECTING ROD	0403-2
BACKHOE BUCKET CYLINDER REPAIR KIT		BEARINGS,FRONT WHEEL(WITHOUT MFWD)	
(SERIAL NO. -926799).....	3365-4	(SERIAL NO. -911131).....	0230-4
BACKHOE BUCKET CYLINDER REPAIR KIT		BELL HOUSING.....	0341-2
(SERIAL NO. 926800-).....	3365-5	BELLVILLEWASHER, FIRST GEAR, POWER SHIFT	0350-4
BACKHOE BUCKET PINS.....	3302-8	BELLVILLEWASHER, FORWARD, POWER SHIFT	0350-12
BACKHOE CONSOLE, BOOM LOCK LEVER		BELLVILLEWASHER, REVERSE, POWER SHIFT	0350-14
(PILOT CONTROL)	1816-5A	BELLVILLEWASHER, 2ND GEAR, POWER SHIFT	0350-6
BACKHOE CONTROL LEVER CONVERSION LINKAGE		BELLVILLEWASHER, 3RD GEAR, POWER SHIFT	0350-8
(SAE PATTERN).....	3315-22	BELLVILLEWASHER, 4TH GEAR, POWER SHIFT.....	0350-10
BACKHOE CONTROL VALVE	3362-6	BELT, DRIVE	0429-2
BACKHOE CONTROL VALVE	3362-7A	BELT, TETHER.....	1821-16
BACKHOE CONTROL VALVE LINKAGE, TWO LEVER.....	3315-4	BELT,AIR CONDITIONING COMPRESSOR DRIVE	1830-12
BACKHOE CONTROLS COVER	1816-2	BELT,AIR CONDITIONING COMPRESSOR DRIVE	1830-14
BACKHOE CONTROLS, PILOT CONTROLLER ARM		BELT,FAN DRIVE	0510-2
(LEFT SIDE).....	1816-14	BELTS, SEAT	1821-2
BACKHOE CONTROLS, PILOT CONTROLLER ARM		BELTS, TETHER WITH NON-SUSPENDED SEAT	1821-12
(RIGHT SIDE)	1816-16	BEVEL DRIVE GEAR (MFWD).....	0250-10
BACKHOE LEVER COVER	1816-4	BLOCK, CYLINDER.....	0404-2
BACKHOE LEVERS COVER.....	1816-2	BLOCK,TRUNNION SWING CYLINDER.....	1740-2
		BLOWER MOTOR PRESSURIZER	1830-6
		BLOWER MOTOR PRESSURIZER	1830-7A
		BOLT, STRIKER, HOOD	1910-2

ALPHABETICAL INDEX - CONTINUED

	PAGE		PAGE
BOLT, STRIKER, HOOD.....	1910-4	BRAKE PISTON.....	1011-2
BOOM CYL.KIT, LOWERING DEVICE,CONTOLLED	3363-20	BRAKE SERVICE, HYDRAULICS	1060-6
BOOM CYL.KIT, LOWERING DEVICE,CONTOLLED	3363-21A	BRAKE VALVE	1060-2
BOOM CYL.KIT,CONTROLLED LOWERING DEVICE	3363-20	BRAKE VALVE	1060-4
BOOM CYL.KIT,CONTROLLED LOWERING DEVICE	3363-21A	BRAKE VALVE BOOST PLUMBING	
BOOM CYLINDER		(CAB).....	1060-8
(SERIAL NO. 910495-926300).....	3165-3	BRAKE VALVE BOOST PLUMBING	
BOOM CYLINDER HYDRAULIC HOSES.....	3363-4	(ROPS).....	1060-10
BOOM CYLINDER HYDRAULIC OIL LINES.....	3363-4	BRAKE VALVE HOUSING	1060-2
BOOM CYLINDER HYDRAULICS, LOADER	3163-2	BRAKE VALVE HOUSING	1060-4
BOOM CYLINDER HYDRAULICS, LOADER	3163-8	BRAKE VALVE KIT	1060-4
BOOM CYLINDER REPAIR KIT		BRAKE VALVE MOUNTING PLATE.....	1060-2
(SERIAL NO. 910495-926300).....	3165-3	BRAKE VALVE PUSH ROD	1060-4
BOOM CYLINDER REPAIR KIT, BACKHOE	3365-2	BRAKE, PARK	
BOOM CYLINDER REPAIR KIT, BACKHOE	3365-3	(AXLE SERIAL NO. -217496).....	1111-2
BOOM CYLINDER, BACKHOE	3365-2	BRAKE, PARK	
BOOM CYLINDER, BACKHOE	3365-3	(AXLE SERIAL NO. 217497-).....	1111-4
BOOM LEVER LOCK COVER.....	1816-10	BRAKES, SERVICE	1011-2
BOOM LOCK CONTROL LEVER.....	3315-16	BREATHER FILTER, HYDRAULIC RESERVOIR.....	2160-18
BOOM LOCK LEVER COVER		BREATHER, TRANSMISSION.....	0341-2
(PILOT CONTROL).....	1816-5A	BUCKET CYLINDER HYDRAULICS, BACKHOE	3363-6
BOOM LOCK LEVER COVER (MANUAL).....	1816-2	BUCKET CYLINDER LINES, BACKHOE.....	3363-6
BOOM LOCK, BACKHOE.....	3315-18	BUCKET CYLINDER, BACKHOE	
BOOM PIN, BACKHOE.....	3344-2	(SERIAL NO. -926799).....	3365-4
BOOM PROTECTION PLATE KIT, BACKHOE	3344-3	BUCKET CYLINDER, BACKHOE	
BOOM SECTION RELIEF VALVE.....	3162-8	(SERIAL NO. 926800-).....	3365-5
BOOM SECTION RELIEF VALVE.....	3162-10	BUCKET CYLINDER, LOADER	
BOOM SECTION RELIEF VALVE.....	3362-10	(SERIAL NO. -941225).....	3165-6
BOOM SECTION, ANTI-CAVITATION RELIEF.....	3162-10	BUCKET CYLINDER, LOADER	
BOOM SECTION, BACKHOE VALVE.....	3362-10	(SERIAL NO. 941226-).....	3165-8
BOOM SECTION, LOADER VALVE	3162-8	BUCKET CYLINDER, LOADER	
BOOM SECTION, LOADER VALVE	3162-10	(SN 941226-) REPLACEMENT	3165-10
BOOM SERVICE LOCK BAR	1313-2	BUCKET CYLINDER, MULTI-PURPOSE	
BOOM STOP/CLAMP,BACKHOE	3344-2	(SERIAL NO. -925076).....	3102-12
BOOM, BACKHOE.....	3344-2	BUCKET CYLINDER, MULTI-PURPOSE	
BOOM, LOADER	3140-2	(SERIAL NO. 925077-).....	3102-13
BOOM, PILOT SECTION RELIEF VALVE	3362-40	BUCKET LEVELING LINKAGE.....	3115-2
BOOM,BACKHOE,PROTECTION KIT.....	3344-3	BUCKET LEVELING LINKAGE.....	3115-4
BOOM,PILOT SECTION, BACKHOE VALVE	3362-40	BUCKET LEVELING ROD	3115-2
BOOT, MECHANICAL SUSPENDED SEAT	1821-8	BUCKET LEVELING ROD	3115-4
BOTTOM GUARD.....	1746-4	BUCKET LEVELING YOKE	3115-2
BOX, BATTERY.....	1913-2	BUCKET LEVELING YOKE.....	3115-4
BOX, TOOL.....	1913-2	BUCKET LINKAGE, LOADER	3140-4
BRACKET, AIR CLEANER MOUNTING		BUCKET LINKS AND PINS,BACKHOE.....	3345-2
(SERIAL NO. -926658).....	0520-2	BUCKET PINS, LOADER.....	3102-6
BRACKET, AIR CLEANER MOUNTING		BUCKET SECTION RELIEF VALVE	3162-12
(SERIAL NO. 926659-).....	0520-4	BUCKET SECTION RELIEF VALVE	3162-14
BRACKET, ENGINE MOUNTING	0540-2	BUCKET SECTION RELIEF VALVE	3362-12
BRACKET, EXTERNAL REAR VIEW MIRROR.....	2002-3	BUCKET SECTION, ANTI-CAVITATION RELIEF	3162-14
BRACKET, HORN (SERIAL NO. -143915)	2004-4	BUCKET SECTION, BACKHOE VALVE	3362-12
BRACKET, INTERIOR REAR VIEW MIRROR.....	2002-2	BUCKET SECTION, LOADER VALVE	3162-12
BRACKET, LICENCE PLATE.....	1314-2	BUCKET SECTION, LOADER VALVE	3162-14
BRACKET, STRIKER BOLT.....	1910-2	BUCKET SPACER, SYNTHETIC.....	3346-2
BRACKET, STRIKER BOLT.....	1910-4	BUCKET, LOADER	
BRACKET,BACKHOE VALVE MOUNTING.....	3315-2	.96 CUBIC METER (1.25 CUBIC YARD).....	3102-2
BRACKET,BACKHOE VALVE MOUNTING		BUCKET, LOADER	
(PILOT CONTROL).....	3315-3A	.96 CUBIC METER (1.25 CUBIC YARD).....	3102-14
BRACKET,RADIO ANTENA.....	2001-2	BUCKET, MULTI-PURPOSE.....	3102-8
BRACKET,STABLIZER VALVE MOUNTING	3315-2	BUCKET, PILOT SECTION RELIEF VALVE	3362-42
BRACKET,STABLIZER VALVE MOUNTING		BUCKET, PILOT SECTION, BACKHOE VALVE	3362-42
(PILOT CONTROL).....	3315-3A	BUCKET,BACKHOE.....	3302-8
BRACKETS ,SEAT	1821-2	BUCKET,LOADER	
BRACKETS, ALTERNATOR MOUNTING	0423-2	1.00 CUBIC METER (1.30 CUBIC YARD).....	3102-4
BRAKE DISK	1011-2	BUCKET,LOADER	
BRAKE HOUSING	1011-2	1.15 CUBIC METER (1.50 CUBIC YARD).....	3102-4
BRAKE LIGHT PRESSURE SWITCH	1060-2	BUCKET,LOADER,COUPLER	
BRAKE PEDAL	1060-2	1.00 CUBIC METER (1.31 CUBIC YARD).....	3102-16

ALPHABETICAL INDEX - CONTINUED

	PAGE		PAGE
BUCKET,LOADER,COUPLER		CABLES, STABILIZER CONTROL	3315-20
1.15 CUBIC METER (1.50 CUBIC YARD)	3102-16	CABLES,DUAL BATTERY	1671-4
BUCKET,MULTI-PURPOSE	3102-10	CAM/CRANKSHAFT SWITCH (FRONT WIRE	
BUCKET,MULTI-PURPOSE, COUPLER	3102-18	HARNES) (SN XXXXXX-)	1674-9A
BUMPER		CAMSHAFT	0402-2
(SERIAL NUMBER -901551)	1747-2	CAMSHAFT GEAR	0402-2
BUMPER		CAN TERMINATION RESISTOR	1674-8
(SERIAL NUMBER 901552-)	1747-4	CAN TERMINATION RESISTORS	1674-4
BUMPER		CANOPY	1811-2
(SERIAL NUMBER 901552-)	1747-6	CANOPY HEATER	1830-8
BUMPER, MAIN FRAME		CANOPY HEATER HOSE	1830-8
(SERIAL NUMBER -901551)	1747-2	CANOPY HEATER SHUT-OFF VALVE	1830-8
BUMPER, MAIN FRAME		CANOPY HEATER VALVE CONTROL CABLE	1830-8
(SERIAL NUMBER 901552-)	1747-4	CANOPY HYDRAULIC ATTENUATOR	
BUMPER, MAIN FRAME		(SN XXXXXX-)	2160-11A
(SERIAL NUMBER 901552-)	1747-6	CANOPY HYDRAULIC ATTENUATOR	
BUSHING, EXTENDIBLE ARM	3346-4	(SN -XXXXXX)	2160-10
BUSHING, MULTI-PURPOSE BUCKET	3102-8	CAP, FUEL TANK	0560-2
BUSHING, MULTI-PURPOSE BUCKET CYLINDER	3102-10	CAP, FUEL TANK	0560-4
BUSHING, MULTI-PURPOSE BUCKET CYLINDER,		CAP, RADIATOR	0510-2
COUPLER	3102-18	CAP,ENGINE OIL FILL INLET	0407-2
BUSHING,FRONT AXLE HOUSING		CAP,HUB FRONT WHEEL(WITHOUT MFWD)	
(WITHOUT MFWD) (SERIAL NO. 911132-)	0230-6	(SERIAL NO. -911131)	0230-4
		CAP,MAIN BEARING	0404-2
		CARRIER, PLANETARY PINION	0210-1
		CATALYTIC MUFFLER KIT	0530-4
		CENTER HOUSING,TURBOCHARGER (TO4045TT082	
		AND PE4045TT082)	0416-2
		CENTER KICK PANEL, REAR	1812-2
		CHARGE PUMP OIL FILTER	0360-1
		CHARGE PUMP, AXIAL BEARING	0360-1
		CHARGE PUMP,TRANSMISSION	0360-1
		CHECK VALVE, COMBO VALVE	
		(SER.NO.913480-)	3162-30
		CHECK VALVE, LOADER VALVE LOAD SENSE	
		(SER.NO.913480-)	3162-30
		CIRCUIT BREAKERS	1674-2
		CLUTCH ASSEMBLY, FIRST GEAR, POWER SHIFT	0350-4
		CLUTCH ASSEMBLY, FORWARD, POWER SHIFT	0350-12
		CLUTCH ASSEMBLY, FOURTH GEAR, POWER SHIFT	0350-10
		CLUTCH ASSEMBLY, REVERSE, POWER SHIFT	0350-14
		CLUTCH ASSEMBLY, SECOND GEAR, POWER SHIFT	0350-6
		CLUTCH ASSEMBLY, THIRD GEAR, POWER SHIFT	0350-8
		CLUTCH BACKING PLATE, POWER SHIFT	0350-4
		CLUTCH BACKING PLATE, POWER SHIFT	0350-6
		CLUTCH BACKING PLATE, POWER SHIFT	0350-8
		CLUTCH BACKING PLATE, POWER SHIFT	0350-10
		CLUTCH BACKING PLATE, POWER SHIFT	0350-12
		CLUTCH BACKING PLATE, POWER SHIFT	0350-14
		CLUTCH CARRIER, FIRST GEAR, POWER SHIFT	0350-4
		CLUTCH CARRIER, FORWARD, POWER SHIFT	0350-12
		CLUTCH CARRIER, FOURTH GEAR, POWER SHIFT	0350-10
		CLUTCH CARRIER, REVERSE, POWER SHIFT	0350-14
		CLUTCH CARRIER, SECOND GEAR, POWER SHIFT	0350-6
		CLUTCH CARRIER, THIRD GEAR, POWER SHIFT	0350-8
		CLUTCH DISK, PARK BRAKE	
		(AXLE SERIAL NO. -217496)	1111-2
		CLUTCH DISK, PARK BRAKE	
		(AXLE SERIAL NO. 217497-)	1111-4
		COLD WEATHER STARTING AID	0505-4
		COLD WEATHER STARTING AID	0505-6
		COLD WEATHER STARTING AID SOLENOID	0505-4
		COLD WEATHER STARTING AID SOLENOID	0505-6
		COLUMN, STEERING	0960-2
		COLUMN, STEERING	0960-4
		COLUMN, TILT STEERING	0960-4

C

CAB DOME LIGHT	2001-2
CAB DOOR CYLINDER	1814-2
CAB DOOR CYLINDER	1814-4
CAB DOOR HINGES	1814-2
CAB DOOR HINGES	1814-4
CAB DOORS	1814-2
CAB DOORS	1814-4
CAB FRAME	1811-4
CAB HEADLINER	1811-4
CAB HEATER	1830-6
CAB HEATER	1830-7A
CAB HEATER (20,000 BTU)	1830-10
CAB HEATER DUCTS	1830-2
CAB HEATER DUCTS	1830-4
CAB HEATER MOTOR (20,000 BTU)	1830-10
CAB HYDRAULIC ATTENUATOR	
(SN. -951254)	2160-8
CAB HYDRAULIC ATTENUATOR	
(SN. 951255-)	2160-9A
CAB MAIN WIRE HARNESS	1674-2
CAB MAIN WIRE HARNESS	1674-4
CAB MOUNTING ISOLATORS	1811-4
CAB REAR WINDOWS	
(SER.NO. -920856)	1814-8
CAB REAR WINDOWS	
(SER.NO. 920857-)	1814-9A
CAB ROOF	1811-6
CAB SIDE WINDOW LATCH	1814-2
CAB SIDE WINDOW LATCH	1814-4
CAB SIDE WINDOWS	1814-2
CAB SIDE WINDOWS	1814-4
CAB SKIRT	1927-2
CAB WINDSHIELD	1814-6
CABLE, ENGINE SPEED CONTROL	0515-2
CABLE, HEATER VALVE CONTROL	1830-6
CABLE, RADIO	2001-2
CABLE, RETURN-TO-DIG	3115-2
CABLE, SELF-LEVELING	3115-2
CABLE, SINGLE BATTERY	1671-2
CABLE, HEATER VALVE CONTROL, CANOPY	1830-8

ALPHABETICAL INDEX - CONTINUED

	PAGE		PAGE
COMBO VALVE CHECK VALVE (SER.NO.913480-)	3162-30	COOLANT RECOVERY TANK	0510-2
COMPRESSOR DIODE, A/C	1674-8	COOLANT, ENGINE HEATER	0505-2
COMPRESSOR MOUNTING BRACKETS, AIR CONDITIONING	1830-12	COOLER LINES	2160-14
COMPRESSOR MOUNTING BRACKETS, AIR CONDITIONING	1830-14	COOLER, HYDRAULIC OIL AND HOSES	2160-22
COMPRESSOR,AIR CONDITIONING	1830-12	COOLER, TRANSMISSION, HYD. OIL	2160-22
COMPRESSOR,AIR CONDITIONING	1830-14	COOLER,HYD. OIL AND HOSES (HI-AMBIENT)	2160-24
COMPRESSOR,AIR SUSPENSION SEAT	1821-16	CORD, MANUAL HOLDER ATTACHMENT	1811-2
CONDENSER,AIR CONDITIONING	1830-12	CORE, HEATER (20,000 BTU)	1830-10
CONDENSER,AIR CONDITIONING	1830-14	CORNER WINDOWPANE, REAR (SER.NO. -920856)	1814-8
CONNECTING ROD	0403-2	CORNER WINDOWPANE, REAR (SER.NO. 920857-)	1814-9A
CONNECTING ROD BEARINGS	0403-2	COUNTERWEIGHT FRAME	1749-3
CONNECTOR, SOLENOID, STANADYNE DE10 (PE4045TT093)	0413-8	COUNTERWEIGHT, FRONT	1749-2
CONNECTORS, WEATHERPACK	1674-20	COUPLER FRAME, FORKLIFT	3103-2
CONSOLE WIRING HARNESS, FRONT	1674-2	COUPLER LOADER BUCKET 1.00 CUBIC METER (1.31 CUBIC YARD)	3102-16
CONSOLE WIRING HARNESS,SIDE WITH CAB	1674-4	COUPLER LOADER BUCKET 1.15 CUBIC METER (1.50 CUBIC YARD)	3102-16
CONSOLE, BACKHOE BOOM LOCK LEVER (PILOT CONTROL)	1816-5A	COUPLER, CYLINDER, FRONT	3104-4
CONSOLE, BACKHOE CONTROL LEVER	1816-4	COUPLER, FRONT	3163-10
CONSOLE, FRONT	1816-8	COUPLER, HYDRAULIC HOSES	3163-12
CONTROLLED LOWERING DEVICE, BOOM CYL.KIT	3363-20	COUPLER, HYDRAULIC LINES	3163-12
CONTROLLED LOWERING DEVICE, BOOM CYL.KIT	3363-21A	COUPLER, HYDRAULIC, FRONT	3104-2
CONTROLLED LOWERING DEVICE,CROWD CYL.KIT	3363-22	COUPLER, LOADER BUCKET	3163-10
CONTROL CABLE, HEATER VALVE	1830-6	COUPLER, LOADER BUCKET VALVE	3162-32
CONTROL CABLE, HEATER VALVE	1830-8	COUPLER, QUICK CONNECT	2160-12
CONTROL COVER, BACKHOE, TWO LEVER	1816-2	COUPLER, QUICK CONNECT	2160-13A
CONTROL HANDLE, PILOT,BUTTON FUNTION KIT	3362-38	COUPLER, QUICK CONNECT, 3RD FUNCTION	3102-18
CONTROL LEVER CONSOLE, BACKHOE	1816-4	COUPLER, QUICK COUPLER (CASE)	3302-6
CONTROL LEVER, TRANSMISSION	0315-4	COUPLER, QUICK COUPLER (STANDARD)	3302-4
CONTROL LEVER,BACKHOE BOOM LOCK	3315-16	COUPLER, QUICK COUPLER (UNIVERSAL)	3302-2
CONTROL VALVE LINKAGE, STABILIZER	3315-20	COUPLERS, AUGER	3363-24
CONTROL VALVE LINKAGE, THREE LEVER, BACKHOE	3315-6	COUPLERS, QUICK CONNECT, 3RD. FUNCTION	3163-6
CONTROL VALVE LINKAGE,BACKHOE, TWO LEVER	3315-4	COUPLERS,AUGER	3363-26
CONTROL VALVE PISTON, POWER SHIFT	0360-2	COVER, ACCESS, INJECTION PUMP GEAR (TO4045TT082 ESN -900932)	0402-6
CONTROL VALVE, BACKHOE	3362-6	COVER, BACKHOE CONTROLS	1816-2
CONTROL VALVE, BACKHOE	3362-7A	COVER, BACKHOE LEVER	1816-4
CONTROL VALVE, LOADER/STABILIZER (SERIAL NO. 913480-)	3162-4	COVER, BACKHOE LEVERS	1816-2
CONTROL VALVE, PILOT, LEFT	3362-34	COVER, BATTERY	1913-2
CONTROL VALVE, PILOT, RIGHT	3362-36	COVER, BOOM LEVER LOCK	1816-10
CONTROL VALVE, SELECTIVE FLOW SOLENOID	1674-11A	COVER, BOOM LOCK LEVER (PILOT CONTROL)	1816-5A
CONTROL VALVE, TRANSMISSION, POWER SHIFT	0360-2	COVER, BOOM LOCK LEVER (MANUAL)	1816-2
CONTROL, ANTI-STALL (SERIAL NO.XXXXXX-)	1675-2	COVER, BOOM LOCK LEVER (MANUAL)	1816-4
CONTROL, RIDE	2160-26	COVER, FLOOR TO FRONT CONSOLE	1812-2
CONTROL, RIDE	2160-28	COVER, FUSE PANEL	1816-8
CONTROL,TEMPERATURE HEATER	1830-8	COVER, JUMP START PROTECTION	1674-8
CONTROLLER ARM, PILOT (LEFT SIDE)	1816-14	COVER, LINKAGE	1812-2
CONTROLLER ARM, PILOT (RIGHT SIDE)	1816-16	COVER, LOADER CONTROL	1816-12
CONTROLLER PUMP, HYDRAULIC	2160-5A	COVER, LOADER CONTROL VALVE PLUMBING	1913-4
CONTROLLER, ENGINE PE4045TT093	0413-6	COVER, MIDDLE FLOOR	1812-2
CONTROLLER, FLEX (SERIAL NO.XXXXXX-)	1675-2	COVER, OIL FILLER OPENING	0407-2
CONTROLLER, LEFT HAND VALVE	3362-34	COVER, OPERATOR STATION	1927-2
CONTROLLER, RIGHT HAND VALVE	3362-36	COVER, REAR FLOOR	1812-2
CONTROLLER,SELECTIVE FLOW CONTROL	1674-10	COVER, ROCKER ARM	0402-4
CONTROLS, FOUR-LEVER STANDARD BACKHOE	3315-8	COVER, STABILIZER CONTROL	1816-10
CONVERSION, BACKHOE CONTROL LEVER LINKAGE (SAE PATTERN)	3315-22	COVER, STABILIZER CONTROL	1816-12
CONVERTER, TORQUE	0350-1	COVER, STEERING COLUMN	1816-6
		COVER, THERMOSTAT	0418-2
		COVER, TIMING GEAR (TO4045TT082 ESN -900932)	0402-6

ALPHABETICAL INDEX - CONTINUED

	PAGE		PAGE
COVER, WHEEL HUB (WITHOUT MFWD) (SERIAL NO. 911132-)	0230-8	CYLINDER, BACKHOE STABILIZER HYDRAULICS	3363-3A
COVER,REMOTE START POST	1671-8	CYLINDER, BOOM (SERIAL NO. 910495-926300)	3165-3
COVER,SEAT BELT	1821-2	CYLINDER, EXTENDIBLE ARM	3365-13
COVER,TIMING GEAR (TO4045TT082 ESN 90933 - ,PE4045TT082 & PE4045TT093)	0402-8	CYLINDER, EXTENDIBLE ARM	3365-14
CRANKSHAFT	0401-2	CYLINDER, EXTENDIBLE ARM	3365-15
CRANKSHAFT GEAR	0401-2	CYLINDER, EXTENDIBLE DIPPERSTICK	3365-13
CRANKSHAFT TIMING WHEEL	0401-2	CYLINDER, EXTENDIBLE DIPPERSTICK	3365-14
CRANKSHAFT/CAM SWITCH (FRONT WIRE HARNES) (SN XXXXXX-)	1674-9A	CYLINDER, EXTENDIBLE DIPPERSTICK	3365-15
CROWD CYL.KIT, CONTROLLED LOWERING DEVICE	3363-22	CYLINDER, FRONT COUPLER	3104-4
CROWD CYL.KIT, LOWERING DEVICE,CONTROLLED	3363-22	CYLINDER, HYDRAULIC FRONT COUPLER	3104-2
CROWD CYLINDER	3365-6	CYLINDER, LOADER BOOM LIFT (SERIAL NO. -910494)	3165-2
CROWD CYLINDER HYDRAULIC HOSES	3363-10	CYLINDER, LOADER BOOM LIFT (SERIAL NO. 926301-)	3165-4
CROWD CYLINDER HYDRAULIC OIL LINES	3363-10	CYLINDER, MULTI-PURPOSE BUCKET (SERIAL NO. -925076)	3102-12
CROWD CYLINDER HYDRAULICS	3363-10	CYLINDER, MULTI-PURPOSE BUCKET (SERIAL NO. 925077-)	3102-13
CROWD CYLINDER PIN	3346-2	CYLINDER, POWER STEERING (WITHOUT MFWD)	0960-18
CROWD CYLINDER REPAIR KIT	3365-6	CYLINDER, STABILIZER (SERIAL NO. -925993)	3365-10
CROWD SECTION RELIEF VALVE	3362-14	CYLINDER, STABILIZER (SERIAL NO. XXXXXX-)	3365-12
CROWD SECTION, BACKHOE VALVE	3362-14	CYLINDER, STABILIZER (SERIAL NO. 925994-XXXXXX)	3365-11
CROWD SPACER, SYNTHETIC	3346-2	CYLINDER, STEERING, (WITH MFWD)	0960-16
CROWD, PILOT SECTION RELIEF VALVE	3362-44	CYLINDER, STEERING, (WITHOUT MFWD)	0960-20
CROWD, PILOT SECTION, BACKHOE VALVE	3362-44	CYLINDER, SWING (SN -957114)	3365-7
CUSHIONS,SEAT	1821-2	CYLINDER, SWING (SN 957115-)	3365-8
CUTTING EDGE ,COUPLER, LOADER BUCKET 1.00 CUBIC METER (1.31 CUBIC YARD)	3102-16	CYLINDER,CROWD	3365-6
CUTTING EDGE ,COUPLER, LOADER BUCKET 1.15 CUBIC METER (1.50 CUBIC YARD)	3102-16	CYLINDER,EXTENDIBLE DIPPERSTICK	3346-4
CUTTING EDGE ,LOADER BUCKET 1.00 CUBIC METER (1.30 CUBIC YARD)	3102-4	CYLINDER,FRONT AXLE STEERING (WITHOUT MFWD)(SERIAL NO. 911132-)	0230-7
CUTTING EDGE,BACKHOE BUCKET	3302-8	CYLINDER,LOADER BUCKET (SERIAL NO. -941225)	3165-6
CUTTING EDGE,LOADER BUCKET .96 CUBIC METER (1.25 CUBIC YARD)	3102-2	CYLINDER,LOADER BUCKET (SERIAL NO. 941226-)	3165-8
CUTTING EDGE,LOADER BUCKET .96 CUBIC METER (1.25 CUBIC YARD)	3102-14	CYLINDER,LOADER BUCKET (SN 941226-) REPLACEMENT	3165-10
CUTTING EDGE,LOADER BUCKET 1.15CUBIC METER(1.50 CUBIC YARD)	3102-4	CYLINDER,SWING TRUNNION BLOCK	1740-2
CUTTING EDGE,MULTI-PURPOSE BUCKET	3102-8		
CYLINDER BLOCK	0404-2	D	
CYLINDER CAB DOOR	1814-2	DECALS	1320-2
CYLINDER CAB DOOR	1814-4	DECALS	1320-4
CYLINDER HEAD	0409-2	DECALS	1320-6
CYLINDER HEAD GASKET	0409-2	DECALS	1320-8
CYLINDER HEAD REMOVAL GASKET SET	0452-1	DELUXE LIGHTS SERIAL NO. -XXXXXX	1673-4
CYLINDER LINER	0403-2	DELUXE LIGHTS SERIAL NO. XXXXXX-	1673-6
CYLINDER REPAIR KIT, BACKHOE BOOM	3365-2	DEUTSCH TERMINALS	1674-23
CYLINDER REPAIR KIT, BACKHOE BOOM	3365-3	DEVICE,CONTROLLED LOWERING,BOOM CYL.KIT	3363-20
CYLINDER REPAIR KIT, BACKHOE BUCKET (SERIAL NO. -926799)	3365-4	DEVICE,CONTROLLED LOWERING,BOOM CYL.KIT	3363-21A
CYLINDER REPAIR KIT, BACKHOE BUCKET (SERIAL NO. 926800-)	3365-5	DEVICE,CONTROLLED LOWERING,CROWD CYL.KIT	3363-22
CYLINDER REPAIR KITS, STABLIZER (SERIAL NO. -925993)	3365-10	DIAGNOSTIC RECEPTACLE, LOAD SENSE	2160-16
CYLINDER REPAIR KITS, STABLIZER (SERIAL NO. XXXXXX-)	3365-12	DIAGNOSTIC RECEPTACLE, LOAD SENSE	2160-17A
CYLINDER REPAIR KITS, STABLIZER (SERIAL NO. 925994-XXXXXX)	3365-11	DIAGNOSTIC RECEPTACLE, LOAD SENSE	2160-17C
CYLINDER ROD LOCK BAR	1313-2	DIFF LOCK SOLENOID	0360-6
CYLINDER, BACKHOE BOOM	3365-2	DIFFERENTIAL ASSEMBLY WITH LOCK	0210-2
CYLINDER, BACKHOE BOOM	3365-3	DIFFERENTIAL HOUSING WITH LOCK	0210-2
CYLINDER, BACKHOE BUCKET (SERIAL NO. -926799)	3365-4	DIFFERENTIAL HOUSING,REAR	0201-2
CYLINDER, BACKHOE BUCKET (SERIAL NO. 926800-)	3365-5	DIFFERENTIAL LOCK PLUMBING	0210-6
CYLINDER, BACKHOE BUCKET HYDRAULICS	3363-6		
CYLINDER, BACKHOE STABILIZER HYDRAULICS	3363-2		

ALPHABETICAL INDEX - CONTINUED

	PAGE		PAGE
DIFFERENTIAL LOCK PUSH BUTTON	1674-12	ELEMENT,FUEL FILTER (TO4045TT082 PE4045T	
DIFFERENTIAL LOCK SWITCH	1674-12	T082)	0420-2
DIFFERENTIAL SPIRAL BEVEL GEAR (MFWD)	0250-12	EMBLEM, SMV	2008-2
DIFFERENTIAL WITH LOCK	0210-2	ENABLE SWITCH, REAR WIPER	1814-14
DIFFERENTIAL,LIMITED SLIP (MFWD)	0250-10	ENGINE BALANCER SHAFT	0415-2
DIODE, A/C COMPRESSOR	1674-8	ENGINE CONTROLLER PE4045TT093	0413-6
DIODES	1674-8	ENGINE COOLANT HEATER	0505-2
DIPPERSTICK EXTENDIBLE	3346-4	ENGINE COOLANT TEMPERATURE SENDER	1674-8
DIPPERSTICK EXTENDIBLE ARM CYLINDER	3346-4	ENGINE COOLANT TEMPERATURE SWITCH	
DIPPERSTICK, CYLINDER EXTENDIBLE	3365-13	(FRONT WIRE HARNESS) (SN XXXXXX-)	1674-9A
DIPPERSTICK, CYLINDER EXTENDIBLE	3365-14	ENGINE FLYWHEEL	0433-2
DIPPERSTICK, CYLINDER EXTENDIBLE	3365-15	ENGINE FRONT WIRE HARNESS (SN XXXXXX-)	1674-9A
DIPPERSTICK, EXT. ARM GRIP REPAIR	3346-6	ENGINE MAJOR OVERHAUL GASKET SET	0452-2
DIPPERSTICK,EXT.PROTECTION KIT	3346-6	ENGINE MOUNT ISOLATOR	0540-2
DIPPERSTICK,STANDARD	3346-2	ENGINE MOUNTING BRACKET	0540-2
DIPSTICK TUBE, ENGINE OIL	0407-3A	ENGINE OIL BY-PASS VALVE	0404-2
DIPSTICK, ENGINE OIL	0407-3A	ENGINE OIL COOLER	0419-2
DIPSTICK, GUARD, TRANSMISSION	1746-4	ENGINE OIL COOLER ADAPTER	0419-2
DIPSTICK,TRANSMISSION OIL	0341-4	ENGINE OIL DIPSTICK	0407-3A
DISK, BRAKE	1011-2	ENGINE OIL DIPSTICK TUBE	0407-3A
DOME LIGHT	1811-4	ENGINE OIL FILL INLET CAP	0407-2
DOOR FLAP RELAY, A/C	1674-4	ENGINE OIL FILTER	
DOOR STRAP	1814-4	(PE4045TT082 VSN -911999)	0407-6
DOOR TETHER	1814-4	ENGINE OIL FILTER (PE4045TT082 VSN 91200	
DOORS,CAB	1814-2	0-) (PE4045TT093)	0407-8
DOORS,CAB	1814-4	ENGINE OIL FILTER HEADER	
DP SWITCH KIT	2160-20	(PE4045TT082 VSN -911999)	0407-6
DRAIN PACKAGE, ENVIORMENTAL	1369-6	ENGINE OIL FILTER HEADER (PE4045TT082 VS	
DRAIN REGULATOR, STABILIZER VALVE		N 912000-) (PE4045TT093)	0407-8
(SER.NO.913480-)	3162-30	ENGINE OIL PAN	0407-4
DRAIN VALVE,RADIATOR	0510-2	ENGINE OIL PRESSURE REGULATING VALVE	
DRIVE SHAFT YOKE (MFWD)	0250-3	(TO4045TT082 ESN -900932)	0402-6
DRIVE SHAFT, UNIVERSAL (MFWD)	0250-3	ENGINE OIL PRESSURE SWITCH	1674-8
DRIVE SHAFT,REAR (REVERSER)	0325-1	ENGINE OIL PUMP	0407-10
DRIVE WHEEL,FRONT(MFWD)	0110-3	ENGINE OIL PUMP GEAR	0407-10
DRIVE WHEEL,REAR	0110-2	ENGINE OIL PUMP HOUSING	0407-10
DRIVE,PLANETARY (MFWD)	0250-8	ENGINE OIL PUMP INTAKE	0407-10
DRIVE,STARTER MOTOR		ENGINE OVERHAUL KIT	0450-2
(TO4045TT082 ESN -894287)	0422-1	ENGINE OVERHAUL KIT	0452-2
DRIVER LINK	3345-2	ENGINE REBUILD KIT	0452-2
DRYER,RECEIVER, AIR CONDITIONING	1830-12	ENGINE REPLACEMENT	0404-4
DRYER,RECEIVER, AIR CONDITIONING	1830-14	ENGINE SHORT BLOCK	0404-4
DUAL BATTERIES	1671-4	ENGINE SIDE PANELS	1910-2
DUAL BATTERY CABLES	1671-4	ENGINE SIDE PANELS	1910-4
DUCTS, AIR CONDITIONING	1830-2	ENGINE SIDE SHIELDS	1910-2
DUCTS, AIR CONDITIONING	1830-4	ENGINE SIDE SHIELDS	1910-4
DUCTS, CAB HEATER	1830-2	ENGINE SPEED CONTROL	0515-2
DUCTS, CAB HEATER	1830-4	ENGINE SPEED CONTROL CABLE	0515-2
		ENGINE SPEED CONTROL LEVER	0515-2
		ENGINE SPEED CONTROL LINKAGE	0515-2
E		ENGINE SUPPORT	0540-2
EDGING, ISOLATOR	0510-2	ENGINE THERMOSTAT	0418-2
ELBOW,EXHAUST	0410-2	ENGINE VENTILATING HOSE	0408-2
ELECTRICAL, FRONT COUPLER HARNESS	1674-5C	ENGINE VENTILATING SYSTEM	0408-2
ELECTRICAL, PILOT ENABLE	1674-5A	ENGINE WIRING HARNESS	1674-8
ELECTRONIC ETHER STARTING AID	0505-4	ENVIORMENTAL DRAIN PACKAGE	1369-6
ELEMENT, AIR CLEANER		ETHER SWITCH	1674-6
(SERIAL NO. -926658)	0520-2	EVAPORATOR	1830-6
ELEMENT, AIR CLEANER		EVAPORATOR	1830-7A
(SERIAL NO. 926659-)	0520-4	EVAPORATOR TEMPERATURE SWITCH	1830-7A
ELEMENT, ENGINE OIL FILTER		EXHAUST ADAPTER	0410-2
(PE4045TT082 VSN -911999)	0407-6	EXHAUST ELBOW	0410-2
ELEMENT, ENGINE OIL FILTER (PE4045TT082		EXHAUST EXTENSION	0530-2
VSN 912000-) (PE4045TT093)	0407-8	EXHAUST MANIFOLD	0410-1
ELEMENT, FILTER	2160-20	EXHAUST MANIFOLD GASKET	0410-1
		EXHAUST VALVE	0409-2
		EXPANSION VALVE	1830-6

ALPHABETICAL INDEX - CONTINUED

	PAGE		PAGE
EXPANSION VALVE.....	1830-7A	FILTER, LOW PRESSURE AUXILIARY KIT	
EXT. DIPPER ARM GRIP REPAIR KIT.....	3346-6	(SERIAL NO. 905458-).....	3363-30
EXT. DIPPERSTICK PROTECTION KIT.....	3346-6	FILTERS, AIR CLEANER	
EXTENDABLE DIPPERSTICK AUXILIARY HYDRAULIC		(SERIAL NO. -926658).....	0520-2
ICS.....	3363-18	FILTERS, AIR CLEANER	
EXTENDABLE DIPPERSTICK HYDRAULIC		(SERIAL NO. 926659-).....	0520-4
BUCKET CYLINDER HYDRAULIC HOSES.....	3363-8	FIRST GEAR CLUTCH ASSEMBLY, POWER SHIFT.....	0350-4
EXTENDED GRILLE HOUSING.....	1921-4	FIRST GEAR CLUTCH CARRIER, POWER SHIFT.....	0350-4
EXTENDIBLE ARM CYLINDER.....	3365-13	FIRST GEAR, BELLVILLEWASHER, POWER SHIFT.....	0350-4
EXTENDIBLE ARM CYLINDER.....	3365-14	FITTINGS, BRAKE VALVE.....	1060-4
EXTENDIBLE ARM CYLINDER.....	3365-15	FITTINGS, SWING CYLINDER.....	3363-12
EXTENDIBLE ARM LOCKING PIN.....	3346-4	FLASHER, 12 VOLT.....	1674-2
EXTENDIBLE ARM PAD.....	3346-4	FLASHER, 4-WAY.....	1674-2
EXTENDIBLE ARM WEARSTRIPS.....	3346-4	FLEX CONTROLLER	
EXTENDIBLE DIPPER PEDAL		(SERIAL NO. XXXXXX-).....	1675-2
(PILOT CONTROL).....	3315-11A	FLEXPLATE, TORQUE CONVERTOR.....	0350-1
EXTENDIBLE DIPPERSTICK.....	3346-4	FLOOR COVER, REAR.....	1812-2
EXTENDIBLE DIPPERSTICK CYLINDER.....	3365-13	FLOOR MATS.....	1812-2
EXTENDIBLE DIPPERSTICK CYLINDER.....	3365-14	FLOOR PLATE, LOADER LINKAGE.....	3115-6
EXTENDIBLE DIPPERSTICK CYLINDER.....	3365-15	FLOW CONTROL VALVE.....	3363-1A
EXTENDIBLE SECTION SHUT-OFF PLUG.....	3362-18	FLOW CONTROL VALVE.....	3363-1E
EXTENDIBLE SECTION, BACKHOE VALVE.....	3362-18	FLUID, STARTING.....	0505-4
EXTENSION CYLINDER HYDRAULICS HOSES		FLYWHEEL HOUSING.....	0433-3
(WITH EXTENDIBLE DIPPERSTICK).....	3363-14	FLYWHEEL RING GEAR.....	0433-2
EXTENSION, EXHAUST.....	0530-2	FLYWHEEL, ENGINE.....	0433-2
EXTERNAL REAR VIEW MIRROR.....	2002-3	FNR, RANGE SWITCH.....	0315-4
		FOOT CONTROL, FIFTH FUNCTION.....	3315-10
		FOOT CONTROL, SIXTH FUNCTION.....	3315-12
F		FORKLIFT FORKS.....	3103-2
FAN DRIVE BELT.....	0510-2	FORKS, PALLET.....	3103-2
FAN DRIVE BELT TENSIONER.....	0429-2	FORKS, LOADER FORKLIFT.....	3103-2
FAN DRIVE HOUSING.....	0429-2	FORWARD CLUTCH ASSEMBLY, POWER SHIFT.....	0350-12
FAN DRIVE HUB.....	0429-2	FORWARD CLUTCH CARRIER, POWER SHIFT.....	0350-12
FAN DRIVE PULLEY.....	0429-2	FORWARD, BELLVILLEWASHER, POWERSHIFT.....	0350-12
FAN SHROUD.....	0510-2	FORWARD, NEUTRAL, REVERSE CONTROL.....	0315-4
FAN SHROUD, RADIATOR.....	0510-2	FOURTH GEAR CLUTCH ASSEMBLY, POWER SHIFT.....	0350-10
FAN, ALTERNATOR.....	1672-2	FOURTH GEAR CLUTCH CARRIER, POWER SHIFT.....	0350-10
FAN, ALTERNATOR		FOURTH GEAR, BELLVILLEWASHER, POWERSHIFT.....	0350-10
(SN XXXXXX-).....	1672-4	FRAME (ARM), SUSPENSION SEAT SCISSOR.....	1821-10
FAN, CAB HEATER (20,000 BTU).....	1830-10	FRAME, CAB.....	1811-4
FENDERS.....	1927-2	FRAME, COUNTERWEIGHT.....	1749-3
FIFTH FN LEVER FOR THREE LEVER CONTROLS.....	3315-14	FRAME, FORKLIFT COUPLER.....	3103-2
FIFTH FUNCTION FOOT CONTROL.....	3315-10	FRAME, GRILLE.....	1921-2
FIFTH FUNCTION MANUAL VALVE KIT.....	3362-26	FRAME, GRILLE, EXTENDED.....	1921-4
FIFTH FUNCTION PEDAL.....	3315-10	FRAME, MAIN FRAME.....	1740-2
FIFTH FUNCTION PEDAL		FRAME, ROPS.....	1811-2
(PILOT CONTROL).....	3315-11A	FRAME, SWING.....	3343-2
FILTER ELEMENT.....	2160-20	FREEZE/COMPRESSOR SWITCH, AIR CONDITIONI	
FILTER ELEMENT, PILOT CONTROL		NG.....	1830-7A
(SN -943092).....	3363-1A	FRESH AIR FILTER.....	1816-12
FILTER ELEMENT, PILOT CONTROL		FRONT AXLE (MFWD).....	0250-2
(SN -943092).....	3363-1E	FRONT AXLE (WITHOUT MFWD)	
FILTER, BREATHER, HYDRAULIC RESERVOIR.....	2160-18	(SERIAL NO. -911131).....	0230-2
FILTER, CHARGE PUMP.....	0360-1	FRONT AXLE (WITHOUT MFWD)	
FILTER, ENGINE OIL		(SERIAL NO. 911132-).....	0230-5
(PE4045TT082 VSN -911999).....	0407-6	FRONT AXLE HOUSING (MFWD).....	0250-4
FILTER, ENGINE OIL (PE4045TT082 VSN 9120		FRONT AXLE HOUSING (MFWD).....	0250-6
00-) (PE4045TT093).....	0407-8	FRONT AXLE HOUSING (MWFWD).....	0250-4
FILTER, FRESH AIR.....	1816-12	FRONT AXLE HOUSING (WITHOUT MFWD)	
FILTER, FUEL (PE4045TT093).....	0420-4	(SERIAL NO. 911132-).....	0230-6
FILTER, FUEL (TO4045TT082 PE4045TT082).....	0420-2	FRONT AXLE HUB (MFWD).....	0250-6
FILTER, HYDRAULIC OIL.....	2160-20	FRONT AXLE KING PIN.....	0250-6
FILTER, TRANSMISSION.....	0360-1	FRONT AXLE LUBRICATION SYSTEM.....	1370-2
FILTER, LOW PRESSURE AUXILIARY KIT		FRONT AXLE PIVOT PIN (MFWD).....	0250-2
(SERIAL NO. -905457).....	3363-28	FRONT AXLE PIVOT PIN (WITHOUT MFWD)	
		(SERIAL NO. 911132-).....	0230-5

ALPHABETICAL INDEX - CONTINUED

	PAGE		PAGE
FRONT AXLE SWIVEL HOUSING (WITHOUT MFWD) (SERIAL NO. 911132-).....	0230-7	FUEL TEMPERATURE SENSOR (FRONT WIRE HARNES) (SN XXXXXX-).....	1674-9A
FRONT AXLE UNIVERSAL DRIVE SHAFT (MFWD).....	0250-6	FUEL TEMPERATURE SENSOR, STANADYNE DE10 (PE4045TT093).....	0413-8
FRONT AXLE WHEEL HUB(WITHOUT MFWD) (SERIAL NO. 911132-).....	0230-8	FUEL TRANSFER PUMP.....	0421-2
FRONT CONSOLE.....	1816-8	FUEL TRANSFER PUMP PUSH ROD.....	0421-2
FRONT CONSOLE COVER,FLOOR.....	1812-2	FUSE PANEL.....	1674-2
FRONT CONSOLE SWITCHES.....	1674-2	FUSE PANEL COVER.....	1816-8
FRONT CONSOLE WIRING HARNESS WITH CAB.....	1674-2	FUSES.....	1674-2
FRONT COUNTERWEIGHT.....	1749-2		
FRONT COUPLER CYLINDER.....	3104-4	G	
FRONT COUPLER VALVE.....	3162-32	GASKET SET, CYLINDER HEAD REMOVAL.....	0452-1
FRONT COUPLER, HYDRAULIC.....	3104-2	GASKET SET,ENGINE MAJOR OVERHAUL.....	0452-2
FRONT DRIVE WHEEL (MFWD).....	0110-3	GASKET SET,IN CHASSIS OVERHAUL.....	0452-1
FRONT DRIVE WHEEL VALVE STEM (MFWD).....	0110-3	GASKET, AIR INLET (PE4045TT082 XXXXXX-).....	0414-2
FRONT FLOOR MAT.....	1812-2	GASKET, CYLINDER HEAD.....	0409-2
FRONT LIGHTS SWITCH.....	1674-2	GASKET, EXHAUST MANIFOLD.....	0410-1
FRONT PLATE (W/O AUX. DRIVE).....	0404-1	GASKET, TIMING GEAR COVER (TO4045TT082 ESN -900932).....	0402-6
FRONT WHEEL (WITHOUT MFWD).....	0120-1	GASKET, TURBOCHARGER (TO4045TT082 AND PE 4045TT082).....	0416-2
FRONT WHEEL BEARINGS(WITHOUT MFWD) (SERIAL NO. -911131).....	0230-4	GASKET,OIL PAN.....	0407-4
FRONT WHEEL HUB(WITHOUT MFWD) (SERIAL NO. -911131).....	0230-4	GASKET,ROCKER ARM COVER.....	0402-4
FRONT WINDSHIELD WIPER MOTOR.....	1814-10	GASKET,TIMING GEAR COVER (TO4045TT082 ES N 90933- ,PE4045TT082 & PE4045TT093).....	0402-8
FRONT WINDSHILD WIPER SWITCH.....	1674-2	GASKETS, INTERMEDIATE PLATE, POWER SHIFT.....	0360-6
FUEL FILTER (PE4045TT093).....	0420-4	GEAR, CAMSHAFT.....	0402-2
FUEL FILTER (TO4045TT082 PE4045TT082).....	0420-2	GEAR, CRANKSHAFT.....	0401-2
FUEL FILTER ELEMENT (TO4045TT082 PE4045T T082).....	0420-2	GEAR, ENGINE OIL PUMP.....	0407-10
FUEL FILTER FUEL LINES (TO4045TT082 PE40 45TT082).....	0420-2	GEAR, FUEL INJECTION PUMP DRIVE PE4045TT093.....	0413-6
FUEL FILTER HEATER (TO4045TT082 PE4045TT 082).....	0420-2	GEAR, FUEL INJECTION PUMP DRIVE (TO4045T T082 AND PE4045TT082).....	0413-4
FUEL FILTER SERVICE KIT (TO4045TT082 PE4 045TT082).....	0420-2	GEAR, PLANET (MFWD).....	0250-8
FUEL GAUGE SENDER.....	0560-2	GEAR, PLANETARY PINION.....	0210-1
FUEL GAUGE SENDER.....	0560-4	GEAR, PLANETARY RING.....	0210-1
FUEL HOSES.....	0560-2	GEAR, RING (MFWD).....	0250-8
FUEL HOSES.....	0560-4	GEAR, SPIRAL BEVEL WITH LOCK.....	0210-2
FUEL INJECTION LINES (TO4045TT082 AND PE 4045TT082).....	0413-4	GEAR, UPPER IDLER (W/O AUX. DRIVE).....	0404-1
FUEL INJECTION LINES PE4045TT093.....	0413-6	GEAR,BEVEL DRIVE (MFWD).....	0250-10
FUEL INJECTION NOZZLE (TO4045TT082 AND P E4045TT082).....	0413-2	GEAR,DIFFERENTIAL SPIRAL BEVEL (MFWD).....	0250-12
FUEL INJECTION PUMP (TO4045TT082 AND PE4 045TT082).....	0413-4	GREASE BANK, FRONT AXLE.....	1370-2
FUEL INJECTION PUMP DRIVE GEAR PE4045TT093.....	0413-6	GRILLE.....	1921-2
FUEL INJECTION PUMP DRIVE GEAR (TO4045TT 082 AND PE4045TT082).....	0413-4	GRILLE HOUSING.....	1921-2
FUEL INJECTION PUMP PE4045TT093.....	0413-6	GRILLE HOUSING, EXTENDED.....	1921-4
FUEL INJECTION SEAL, W/TURBO PE4045TT093.....	0413-3	GRILLE SCREEN.....	1921-2
FUEL INJECTION SYSTEM (TO4045TT082 AND P E4045TT082).....	0413-4	GRILLE SCREEN EXTENDED.....	1921-4
FUEL INJECTION SYSTEM PE4045TT093.....	0413-6	GRILLE, CAB HEATER (20,000 BTU).....	1830-10
FUEL LINES,FUEL FILTER (TO4045TT082 PE40 45TT082).....	0420-2	GRIPPER TEETH, REPAIR KIT, EXT. DIPPER.....	3346-6
FUEL TANK.....	0560-2	GROUND CABLE.....	1674-8
FUEL TANK.....	0560-4	GROUND STRAP.....	1674-8
FUEL TANK CAP.....	0560-2	GUARD, BOTTOM.....	1746-4
FUEL TANK CAP.....	0560-4	GUARD, LOADER CONTROL VALVE PLUMBING.....	1913-4
FUEL TANK STRAINER.....	0560-2	GUARD, MFWD.....	1740-2
FUEL TANK STRAINER.....	0560-4	GUARD, RADIATOR FAN.....	0510-2
		GUARD, TRANSMISSION CONTROL LEVER.....	0315-4
		GUARD,STABILIZER KIT.....	1746-2
		H	
		HAND HELD HYDRAULIC TOOL KIT (SERIAL NO. -913416).....	3363-32

ALPHABETICAL INDEX - CONTINUED

	PAGE		PAGE
HAND HELD HYDRAULIC TOOL KIT		HOSE, AIR CLEANER	
(SERIAL NO. 913417-)	3363-34	(SERIAL NO. 926659-)	0520-4
HARNES CONNECTOR KIT	1674-8	HOSE, ENGINE VENTILATING	0408-2
HARNES, A/C PRESSURE SWITCH	1674-4	HOSE, HYDRAULIC, RIDE CONTROL	2160-26
HARNES, ANCHOR, TIE BAND MOUNT		HOSE, HYDRAULIC, RIDE CONTROL	2160-28
SERIAL NO. -XXXXXX	1673-4	HOSE, WINDSHIELD WASHER	1814-12
HARNES, ANCHOR, TIE BAND MOUNT		HOSES, ATTACHMENT KIT	3363-42
SERIAL NO. XXXXXX-	1673-6	HOSES, FUEL	0560-2
HARNES, ENGINE FRONT (SN XXXXXX-)	1674-9A	HOSES, FUEL	0560-4
HARNES, ENGINE WIRING	1674-8	HOSES, HAND HELD HYDRAULIC TOOL KIT	
HARNES, LOAD COUPLER CONTROL CHASSIS	1674-5C	(SERIAL NO. -913416)	3363-32
HARNES, LOADER COUPLER, CAB	1674-5C	HOSES, HAND HELD HYDRAULIC TOOL KIT	
HARNES, PATTERN SELECTOR	3362-32	(SERIAL NO. 913417-)	3363-34
HARNES, PILOT ENABLE WIRING	1674-5A	HOSES, HYDRAULIC	
HARNES, QUICK COUPLER	1674-5C	(SERIAL NO. -905457)	3363-28
HARNES, RADIO	2001-2	HOSES, HYDRAULIC	
HARNES, RIDE CONTROL	2160-26	(SERIAL NO. 905458-)	3363-30
HARNES, RIDE CONTROL	2160-28	HOSES, LOADER BOOM LIFT CYLINDER HOSES	3163-2
HARNES, ROOF WIRING		HOSES, LOADER BOOM LIFT CYLINDER HOSES	3163-8
SERIAL NO. -XXXXXX	1673-4	HOSES, LOADER BUCKET CYLINDER HOSES	3163-4
HARNES, ROOF WIRING		HOSES, LOADER BUCKET CYLINDER HOSES	3163-6
SERIAL NO. XXXXXX-	1673-6	HOSES, MAIN HYDRAULIC	2160-12
HARNES, SIDE CONSOLE WIRING, WITH CAB	1674-4	HOSES, MAIN HYDRAULIC	2160-13A
HEAD, CYLINDER	0409-2	HOSES, MAIN HYDRAULIC	2160-14
HEADER, ENGINE OIL FILTER		HOSES, MAIN HYDRAULIC, LOAD SENSE	2160-16
(PE4045TT082 VSN -911999)	0407-6	HOSES, MAIN HYDRAULIC, LOAD SENSE	2160-17A
HEADER, ENGINE OIL FILTER (PE4045TT082 V		HOSES, MAIN HYDRAULIC, LOAD SENSE	2160-17C
SN 912000-) (PE4045TT093)	0407-8	HOSES, MULTI-PURPOSE BUCKET	3102-10
HEADLINER LAMP	1811-4	HOSES, MULTI-PURPOSE BUCKET, COUPLER	3102-18
HEADLINER, CAB	1811-4	HOSES, OIL COOLER	2160-22
HEADLINER, ROPS	1811-2	HOSES, OIL COOLER, HI-AMBIENT	2160-24
HEADREST, SEAT	1821-3	HOSES, RADIATOR	0510-2
HEAT AND NOISE BARRIER	1834-2	HOSES, STEERING (WITH MFWD)	
HEATER CORE (20,000 BTU)	1830-10	(SERIAL NO. -911131)	0960-8
HEATER HOSE, CANOPY	1830-8	HOSES, STEERING (WITH MFWD)	
HEATER VALVE CONTROL	1830-8	(SERIAL NO. 911132-)	0960-10
HEATER VALVE CONTROL CABLE	1830-6	HOSES, STEERING (WITHOUT MFWD)	0960-12
HEATER VALVE CONTROL CABLE,CANOPY	1830-8	HOSES, STEERING (WITHOUT MFWD)	0960-14
HEATER VALVE KNOB	1830-8	HOSES, SWING CYLINDER	3363-12
HEATER, CAB (20,000 BTU)	1830-10	HOSES, THIRD FUNCTION HYDRAULIC HOSES	3163-4
HEATER, CANOPY	1830-8	HOSES, THIRD FUNCTION HYDRAULIC HOSES	3163-6
HEATER, ENGINE COOLANT	0505-2	HOSES,AIR CONDITIONING COMPRESSOR	1830-12
HEATER,FUEL FILTER (TO4045TT082 PE4045TT		HOSES,AIR CONDITIONING COMPRESSOR	1830-14
082)	0420-2	HOSES,AIR CONDITIONING COMPRESSOR,	
HEATER, TEMERATURE CONTROL	1830-8	RECEIVER DRYER	1830-12
HEIGHT ADJUSTER FOR NON-SUSPENDED SEAT	1821-14	HOSES,AIR CONDITIONING COMPRESSOR,	
HI-AMBIENT OIL COOLER	2160-24	RECEIVER DRYER	1830-14
HIGH PRESSURE SWITCH	1830-6	HOSES,RECEIVER DRYER,	
HIGH PRESSURE SWITCH	1830-7A	AIR CONDITIONING COMPRESSOR	1830-12
HINGE PINS, MULTI-PURPOSE BUCKET	3102-8	HOSES,RECEIVER DRYER,	
HINGES, CAB DOORS	1814-2	AIR CONDITIONING COMPRESSOR	1830-14
HINGES, CAB DOORS	1814-4	HOUSING, BELL	0341-2
HOLDER, MANUAL	1811-2	HOUSING, BRAKE	1011-2
HOOD	1910-2	HOUSING, BRAKE VALVE	1060-2
HOOD	1910-4	HOUSING, BRAKE VALVE	1060-4
HOOD LATCH	1910-2	HOUSING, DIFFERENTIAL WITH LOCK	0210-2
HOOD LATCH	1910-4	HOUSING, FAN DRIVE	0429-2
HOOD STRICKER BRACKET	0520-4	HOUSING, FLYWHEEL	0433-3
HOOD SUPPORT	1910-2	HOUSING, FRONT INSTRUMENT PANEL	1816-8
HOOD SUPPORT	1910-4	HOUSING, GRILLE	1921-2
HORN (FRONT WIRE HARNESS) (SN XXXXXX-)	1674-9A	HOUSING, GRILLE, EXTENDED	1921-4
HORN (SERIAL NO. -143915)	2004-4	HOUSING, PARK BRAKE	
HORN (SERIAL NO. 143916-)	2004-6	(AXLE SERIAL NO. -217496)	1111-2
HORN SWITCH	1674-6	HOUSING, PARK BRAKE	
HOSE, AIR CLEANER		(AXLE SERIAL NO. 217497-)	1111-4
(SERIAL NO. -926658)	0520-2	HOUSING, SIDE INSTRUMENT PANEL	1816-10
		HOUSING, SIDE INSTRUMENT PANEL	1816-12