



# NEW HOLLAND

**L160**  
**L170**

Workshop  
Manual

Workshop  
Manual

Print No. 87634734  
English - Printed in Italy

---

# L160, L170 REPAIR MANUAL

## COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION.....	3
SECTION 10 - ENGINE.....	4
SECTION 27 - REAR DRIVE AXLE (GEARBOXES).....	6
SECTION 29 - HYDROSTATIC TRANSMISSION.....	6
SECTION 33 - BRAKES AND CONTROLS.....	8
SECTION 35 - HYDRAULIC SYSTEM.....	9
SECTION 37 - TOWING HOOKS AND BALLASTING.....	11
SECTION 39 - FRAMES.....	11
SECTION 44 - AXLES AND WHEELS.....	12
SECTION 50 - CAB CLIMATE CONTROL.....	12
SECTION 55 - ELECTRICAL SYSTEM.....	13
SECTION 82 - FRONT LOADER (BOOM AND MOUNTING PLATE).....	15
SECTION 88 - ACCESSORIES.....	16
SECTION 90 - PLATFORMS, CAB, BODYWORK, AND DECALS.....	17

The following pages are the collation of the contents pages from each section and chapter of the L160, L170 Repair Manual. Complete Repair Manual part # 87634733.

The sections used through out all New Holland product Repair Manuals may not be used for each product. Each Repair Manual will be made up of one or several books.

Each book will be labeled as to which sections are in the overall Repair Manual and the sections that each book contains.

The sections listed above are the sections utilized for the L160, L170 Skid Steer.

---

---

# SECTION 00 – GENERAL INFORMATION

BOOK 1 - 87634735

## CONTENTS

Section	Description	Page
	Introduction .....	00-2
	About Improvements .....	00-2
	Company Policy .....	00-3
	Parts and Accessories .....	00-3
	Model Codes .....	00-3
	Precautionary Statements .....	00-4
	Safety Precaution Information .....	00-5
	General Safety Information .....	00-7
	Machine Model and Serial Number Location .....	00-9
	Engine Model and Serial Number Location .....	00-9
	Hardware Torque Specifications .....	00-10
	Installation of Adjustable Fittings in Straight Thread O Ring Bosses .....	00-12
	Standard Torque Data for Hydraulic Tubes and Fittings .....	00-12
	Pipe Thread Fitting Torque .....	00-13
	Lubricants and Coolants .....	00-13
	Sealants .....	00-13
	Properly Support a Raised Machine .....	00-14
	Properly Support Boom on Boom Lock Pins .....	00-14
	Raising Boom Without Hydraulic Oil Flow .....	00-14
	Raising Boom Without Battery Voltage (12V) .....	00-16
	Reattaching Cylinders After Repair with Boom Resting on Boom Lock Pins .....	00-17
	Major Unit Overhaul .....	00-18
	Cab and Boom Tilt Procedure .....	00-19
	Craning the Skid Steer .....	00-25
	Special Tools .....	00-28
	Specifications .....	00-29
	Dimensions .....	00-35
	Cab and Boom Tilt Procedure (Cab Upgrade Machines Only).....	00-37

---

## SECTION 10 – ENGINE

BOOK 1 - 87634735

### Chapter 1 – L160 - N844, L170 - N844T

#### CONTENTS

Section	Description	Page
10 000	General Engine Information .....	10-3
	General Description .....	10-3
	Engine Component Descriptions .....	10-3
	Engine Model and Serial Number Location .....	10-5
	Turbocharger Lubrication .....	10-5
	Safety Precautions .....	10-6
	General Engine Specifications .....	10-7
	Troubleshooting .....	10-11
	L170 - Excessive Oil Consumption .....	10-15
	Specifications - Service Standards .....	10-17
	Torque Specifications .....	10-21
	Engine Components Electrical Diagram .....	10-22
10 001 10	Engine Removal .....	10-23
10 001 53	Engine Disassembly Sequence .....	10-28
	Engine Component Maintenance .....	10-36
10 101 55	Valve Seat .....	10-39
10 101 56	Cylinder Block .....	10-41
10 105 22	Piston and Piston Rings .....	10-42
	Connecting Rod .....	10-45
10 103 10	Bearing Holder .....	10-47
	Front Crankshaft Bearing (Bushing) .....	10-48
10 103 30	Crankshaft .....	10-50
10 103 76	Flywheel and Ring Gear .....	10-52
10 106 40	Camshaft Assembly .....	10-52
10 106 66	Camshaft Gear and Bearing Assembly .....	10-53
	Timing Gear .....	10-54
10 304 41	Oil Pump .....	10-54
10 304 10	Oil Filter .....	10-55
10 402 28	Water Pump Assembly and Thermostat Housing .....	10-55
10 402 30	Thermostat .....	10-55
10 230 24	Governor .....	10-57
	Governor Operation .....	10-59

---

10 304 38	Engine Reassembly Sequence .....	10-61
	Crankshaft and Bearing Holder Assembly .....	10-62
	Rear Oil Seal .....	10-63
	Backplate/Flywheel Housing .....	10-63
	Flywheel .....	10-63
	Piston and Connecting Rod .....	10-64
	Oil Intake and Oil Strainer .....	10-64
	Oil Sump .....	10-64
	Dipstick and Tube .....	10-64
	Front Plate .....	10-64
	Idle Gear and Oil Pump Assembly .....	10-66
	Timing Gear Case Installation .....	10-66
	Crankshaft Pulley .....	10-66
	Injection Pump Installation .....	10-66
	Adjusting the Fuel Injection Timing .....	10-67
	Spill Timing Procedure .....	10-68
29 100 50	Reinstallation of Engine into Skid Steer Frame .....	10-75
	How to Operate the Engine After Overhaul .....	10-77
	Cooling System .....	10-78
	Cooling System Operation .....	10-78
	Water Pump Assembly and Thermostat Housing .....	10-79
	Radiator .....	10-80
	Fuel System .....	10-82
	Fuel Specifications .....	10-82
	Diesel Fuel .....	10-82
	Diesel Fuel Storage .....	10-82
	Fuel System Components .....	10-83
	Fuel Gauge .....	10-84
	Cold Start Aid .....	10-85
	Fuel Filter System .....	10-85
	Priming the Fuel System .....	10-86
	Fuel System Testing .....	10-87
	Fuel System Components .....	10-90
10 236 08	Fuel Injection Timing .....	10-96
	Turbocharger - L170 N844T Engine .....	10-101
10 250 30	Turbocharger Removal .....	10-103
	Miscellaneous Engine Electrical .....	10-116
10 223 10	Shut-off Solenoid .....	10-117
	Special Tools .....	10-119
	Labor Guide .....	10-120

---

## SECTION 27 – REAR DRIVE AXLE (GEARBOXES)

BOOK 2 - 87634738

### Chapter 1 – Gearboxes

#### CONTENTS

Section	Description	Page
27 000	General Information .....	27-2
	Specifications .....	27-4
	Troubleshooting .....	27-5
	Testing .....	27-7
27 126	Gearboxes .....	27-8
27 126 40	Gearbox Removal and Inspection .....	27-8
27 126 48	Gearbox Disassembly .....	27-12
	Gearbox Parts Inspection .....	27-13
	Gearbox Resassembly .....	27-14
27 126 40	Gearbox Resinstallation .....	27-16
	Labor Guide .....	27-19

## SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87634738

### Chapter 1 - Neutralizer, Pumps, Motors

#### CONTENTS

Section	Description	Page
29 100	General Information .....	29-3
	Operation .....	29-3
	Specifications .....	29-5
29 100 01	Troubleshooting .....	29-6
	Hydrostatic Drive System Testing .....	29-8
	Hydrostatic System Oil Flow .....	29-11
	Hydrostatic Charge System Pressure Test .....	29-14
	Hydrostatic Pump Case Drain Test .....	29-15
	Hydrostatic Pump High Pressure Test .....	29-18

---

	Hydrostatic Pump Efficiency Test .....	29-20
	Hydrostatic Motor Case Drain Test .....	29-22
	Hydrostatic Motor Efficiency Test .....	29-23
	Hydraulic, Hydrostatic System Air Ingress Test .....	29-25
	Hydrostatic Pumps .....	29-27
29 100 40	Hydrostatic Pump Removal .....	29-27
29 100 46	Hydrostatic Pump Disassembly .....	29-31
	Hydrostatic Pump Parts Inspection .....	29-36
	Hydrostatic Pump Reassembly .....	29-41
	Hydraulic System Pump Installation (Without High Flow) .....	29-47
	Hydraulic System Pump/High Flow Pump Installation .....	29-49
	Hydrostatic Pump Reinstallation .....	29-54
	Hydrostatic Motor .....	29-58
29 100 60	Hydrostatic Motor Removal .....	29-58
29 100 66	Hydrostatic Motor Disassembly .....	29-62
	Hydrostatic Motor Parts Inspection .....	29-67
	Hydrostatic Motor Reassembly .....	29-70
	Hydrostatic Motor Reinstallation .....	29-79
	Hydraulic System Cleaning Procedure .....	29-85
	Start-up Procedure After Rebuild (After Pump or Motor Replacement) .....	29-88
	Charge Check Valve .....	29-90
29 100 36	Charge Check Valve Removal and Replacement .....	29-90
29 100	Steering System .....	29-91
	Hydrostatic System Controls .....	29-91
29 130 30	Neutralizer Assembly .....	29-93
	Left Control Handle With No Boom Hand Control .....	29-97
29 100 10	Left Control Handle With No Boom Hand Control Removal .....	29-97
29 100 10	Left Control Handle With No Boom Hand Control Disassembly .....	29-97
	Left Control Handle With No Boom Hand Control Inspection .....	29-98
	Left Control Handle With No Boom Hand Control Reassembly .....	29-98
	Left Control Handle With No Boom Hand Control Reinstallation .....	29-98
29 100 11	Left Control Handle With Boom Hand Control .....	29-100
	Left Control Handle With Boom Hand Control Removal .....	29-100
29 100 10	Left Control Handle With Boom Hand Control Disassembly .....	29-101
	Left Control Handle With Boom Hand Control Inspection .....	29-102
	Left Control Handle With Boom Hand Control Reassembly .....	29-103
	Left Control Handle With Boom Hand Control Reinstallation .....	29-104
	Right Control Handle With Auxiliary or Bucket Control .....	29-106
29 100 15	Right Control Handle With Auxiliary or Bucket Control Removal .....	29-106



29 100 15	Right Control Handle With Auxiliary or Bucket Control Disassembly.....	29-107
	Right Control Handle With Auxiliary or Bucket Control Inspection.....	29-109
	Right Control Handle With Auxiliary or Bucket Control Reassembly.....	29-110
	Right Control Handle With Auxiliary or Bucket Control Reinstallation.....	29-113
29 130 06	Drive Control Adjustment Procedure.....	29-115
29 130 06	Neutral Adjustment.....	29-116
	Labor Guide.....	29-118
	Machines Equipped With ISO Pattern Pilot Controls.....	29-121
	Pilot Control Travel System Overview.....	29-121
	Specifications.....	29-142
	Troubleshooting.....	29-143
	Check 1 - Checking the DA Pressure.....	29-144
	Check 2 - Checking Charge Pressure/Flow.....	29-146
	Check 3 - Checking Circuit Relief Valve Pressure.....	29-147
	Pump Adjustments.....	29-148
	Pump Removal.....	29-149
	Pump Installation.....	29-153
	Pump Disassembly.....	29-156
	Pump Assembly.....	29-173
	Pilot Control Travel Lever Removal.....	29-189
	Pilot Control Travel Lever Installation.....	29-193
	Illustration - Hydrostatic System (Machines Equipped With Pilot Controls).....	29-195
	Procedure to Bleed Air From the Pilot Control Hydraulic System.....	29-196

## **SECTION 33 - BRAKES AND CONTROLS**

### **BOOK 2 - 87634738**

#### **Chapter 1 - Parking Brake**

##### **Contents**

Section	Description	Page
33 000	General Information.....	33-2
	Specifications.....	33-4
	Troubleshooting.....	33-5
	Testing.....	33-7
33 110	Parking Brake.....	33-8
	Parking Brake Removal and Installation.....	33-9
	Labor Guide.....	33-22

# SECTION 35 - HYDRAULIC SYSTEM

BOOK -3 - 87634740

## Chapter 1 - Valves, Gear Pump, Cylinders, and Pedal Controls

### Contents

Section	Description	Page
35 000 -		
	General Information.....	35-3
	Hydraulic System Compatibility.....	35-4
	Boom Cylinder Pivot Pins.....	35-6
	Boom Cylinder Pivot Pin Location and Machine Usage.....	35-6
	Control Valve Power Beyond.....	35-7
	Specifications.....	35-8
	Troubleshooting.....	35-12
	Auxiliary Boom Hydraulics Troubleshooting.....	35-16
	Hydraulic System Testing.....	35-18
	Hydraulic System Oil Flow.....	35-24
	Control Valve - Bucket Spool Shifted.....	35-25
	Control Valve - Boom Spool Shifted.....	35-26
	Control Valve - Auxiliary Spool Shifted.....	35-27
35 710 02		
	Main System Pressure Tests.....	35-28
	Checking Main System Pressure at Boom Cylinders.....	35-30
	Checking Main System Pressure at Bucket Cylinders.....	35-31
	Checking Main System Pressure at Auxiliary Boom Hydraulic Quick Couplers.....	35-32
	Boom Circuit Relief Valve Test.....	35-33
	Gear Pump Flow Efficiency Test.....	35-35
	Boom and Bucket Spool Lock Solenoid Test.....	35-39
	Hydraulic, Hydrostatic System Air Ingress Test.....	35-41
	Control Valve Specifications.....	35-43
35 724 50		
	Control Valve Removal.....	35-44
	Control Valve Disassembly and Inspection.....	35-45
	Control Valve Parts Inspection.....	35-49
	Control Valve Reassembly.....	35-50
	Control Valve Reinstallation.....	35-53
	Hydraulic Pump Specifications.....	35-54
35 710 10		
	Hydraulic Pump Removal.....	35-55
35 710 20		
	Hydraulic Pump Removal/Disassembly (Without High Flow).....	35-56
	High Flow Pump Parts Inspection.....	35-58
	Hydraulic Pump Parts Inspection.....	35-59
	Hydraulic Pump Reassembly/Installation (Without High Flow).....	35-61
	Hydraulic Pump and High Flow Pump Reassembly/Installation.....	35-64
	New Hydraulic Pump Installation (Without High Flow).....	35-70
	New Hydraulic Pump/High Flow Pump Installation.....	35-72
	Gear Pump Start-up Procedure.....	35-78
	Cylinders, Boom and Bucket.....	35-79
35 710 10		
	Boom Cylinder Removal.....	35-81
35 730 18		
	Boom Cylinder Disassembly.....	35-83
	Boom Cylinder Parts Inspection.....	35-84
	Boom Cylinder Reassembly.....	35-85
	Boom Cylinder Reinstallation.....	35-87

35 730 10	Bucket Cylinder Removal.....	35-87
35 730 13	Bucket Cylinder Disassembly.....	35-88
	Bucket Cylinder Parts Inspection.....	35-89
	Bucket Cylinder Reassembly.....	35-90
	Bucket Cylinder Reinstallation.....	35-92
	Pedal Controls.....	35-93
35 724 16	Pedal Removal (With Boom and Bucket Pedal Controls).....	35-93
	Pedal Inspection (With Boom and Bucket Pedal Controls).....	35-93
	Pedal Reinstallation (With Boom and Bucket Pedal Controls).....	35-95
35 724 16	Pedal Removal (With Boom and Bucket Hand Controls).....	35-98
	Pedal Inspection (With Boom and Bucket Hand Controls).....	35-99
	Pedal Reinstallation (With Boom and Bucket Hand Controls).....	35-100
35 300	Hydraulic Cooling, Filter, Reservoir System.....	35-103
	Filter System.....	35-104
	Filter Removal.....	35-104
35 705 05	Base Removal.....	35-104
	Reassembly.....	35-105
	Oil Cooler.....	35-105
35 300 10	Oil Cooler Removal.....	35-105
	Oil Cooler Reassembly.....	35-106
35 300	Oil Reservoir.....	35-106
35 300 10	Oil Reservoir Removal.....	35-107
	Oil Reservoir Reinstallation.....	35-108
	Adapting Attachments.....	35-109
	Labor Guide.....	35-110
<b>Machines Equipped With Pilot Controls</b>		
	Specifications.....	35-111
	Loader Function Troubleshooting.....	35-112
	Pilot Pressure Test.....	35-113
	Illustration - Loader Control.....	35-114
	Right Control Handle - Removal.....	35-115
	Right Control Handle - Installation.....	35-118
	Hydraulic Schematic - Frame 3 - (Mechanical Control Machines).....	35-120
	Hydraulic Schematic - Frame 4- (Mechanical Control Machines).....	35-121
	Hydraulic Schematic - Frame 5- (Pilot Control Machines).....	35-122
	Hydraulic Schematic - Frame 6- (Pilot Control Machines).....	35-123
	Hydraulic Schematic - Frame 7- (Pilot Control Machines).....	35-124
	Hydraulic Schematic - Frame 8- (Pilot Control Machines).....	35-125
	Hydraulic Schematic - Frame 9- (Pilot Control Machines).....	35-126

---

## SECTION 37 – TOWING HOOKS AND BALLASTING

BOOK 3 - 87634740

### Chapter 1 – Rear Counterweights

#### CONTENTS

Section	Description	Page
37 140 10	Rear Counterweights .....	37-2
37 140 12	Rear Counterweight Support Removal .....	37-2

## SECTION 39 – FRAMES

BOOK 3 - 87634740

### Chapter 1 – Lower Main, ROPS

#### CONTENTS

Section	Description	Page
	General Information .....	39-2
	ROPS .....	39-2
	ROPS Frame .....	39-2
90 152 46	ROPS Removal .....	39-2
	ROPS Reinstallation .....	39-8
	Labor Guide .....	39-11
	ROPS Removal (Cab Upgrade Machines Only).....	39-12
	ROPS Installation (Cab Upgrade Machines Only).....	39-24

---

# SECTION 44 – AXLES AND WHEELS

BOOK 3 - 87634740

## Chapter 1 – Axles

### CONTENTS

Section	Description	Page
44 100	General Information .....	44-2
	Specifications .....	44-4
	Troubleshooting .....	44-5
	Testing .....	44-7
44 106	Axles .....	44-8
44 106 10	Axle Housing Assembly Removal .....	44-8
44 106 16	Axle Disassembly .....	44-9
	Axle Parts Inspection .....	44-11
	Axle Reassembly .....	44-12
	Axle Housing Reinstallation .....	44-14
	Final Drive .....	44-15
44 106 48	Drive Chain and Sprocket Removal .....	44-15
	Final Drive Parts Inspection .....	44-19
	Final Drive Reassembly .....	44-20
44 511	Tires/Wheels .....	44-22
	Tire and Track Installation .....	44-23
	Labor Guide .....	44-24

---

**SECTION 50 - CAB CLIMATE CONTROL**  
**CHAPTER 1 - HEATER/DEF ROSTER/AIR CONDITIONER**  
 Book 3 - 87634740  
**CONTENTS**

Section	Description	Page
50 100	Heater/Defroster (Cab).....	50-2
	Labor Guide.....	50-8
	Air Conditioning System Special Tools.....	50-9
	Air Conditioning System General Specifications.....	50-11
	Air Conditioning System Discharging and Evacuate and Recovery.....	50-13
	Air Conditioning System Charging.....	50-19
	Compressor Removal.....	50-21
	Compressor Installation.....	50-23
	Compressor Oil Level Check.....	50-25
	Compressor Belt Measure and Tension Adjust.....	50-28
	Compressor Magnetic Clutch Disassemble.....	50-29
	Compressor Magnetic Clutch Assembly.....	50-37
	Air Conditioning System Removal.....	50-43
	Air Conditioning System Installation.....	50-45
	Air Conditioning System Condenser Removal.....	50-46
	Air Conditioning System Condenser Installation.....	50-47
	Air Conditioning System Evaporator Removal.....	50-48
	Air Conditioning System Evaporator Installation.....	50-49
	Receiver/Drier Removal and Installation.....	50-51
	Air Conditioning System Visual Inspection and Troubleshooting.....	50-53
	Air Conditioning System Testing.....	50-54
	Air Conditioning System Leakage Test.....	50-55
	Air Conditioning System Problem Solving.....	50-56
	Air Conditioning System Problem Solving.....	50-57

---

## SECTION 55 - ELECTRICAL SYSTEM

### Chapter 1 - Instrument Cluster, Circuits, Alternator, and Starter Book 4 - 87634741

#### Contents

Section	Description	Page
55 000	General Electrical Information . . . . .	55- 4
	Definition of Terms . . . . .	55-5
	Adapting Attachments Requiring 12V Electrical Power. . . . .	55-7
	Specifications . . . . .	55-8
	Wire Identification and Circuit Diagram Legend . . . . .	55-12
	Electrical Diagram - Starting System. . . . .	55-13
	Electrical Diagram - Power Distribution . . . . .	55-14
	Electrical Diagram -Safety Interlock and Fuel Supply System . . . . .	55-15
	Electrical Diagram - Instrument Cluster Monitoring System . . . . .	55-16
	Electrical Diagram - Standard Lamps . . . . .	55-17
	Electrical Diagram - Loader Arm Auxiliary Electrical Control Box (Optional). . . . .	55-18
	Electrical Diagram - Loader Arm Auxiliary Electric Power Controls (Optional) . . . . .	55-19
	Electrical Diagram - Flasher and Turn Signals North America Electrical . . . . .	55-20
	Electrical Diagram - Main Electrical European On-Road Regulations. . . . .	55-21
	Electrical Diagram - Boom/Rear Electrical European On-Road Regulations . . . . .	55-22
	Electrical Diagram - Right-Hand Handle (Option) Electrical Multifunction Adaptation. . . . .	55-23
	Electrical Diagram - Left-Hand Handle (Options) . . . . .	55-24
	Electrical Diagram - Right-Hand Handle (Options) . . . . .	55-25
	Electrical Diagram - Glow Plugs . . . . .	55-26
	Electrical Diagram - Rotating Beacon (Optional). . . . .	55-27
	Electrical Diagram - Two Speed (Optional) . . . . .	55-28
	Electrical Diagram - Horn (Optional) . . . . .	55-29
	Electrical Diagram - Accessory Outlet (Optional) . . . . .	55-30
	Electrical Diagram - Back-up Alarm (Optional) . . . . .	55-31
	Electrical Diagram - Wiper/Washer (Optional). . . . .	55-32
	Electrical Diagram - Auxiliary Hydraulics (Optional) . . . . .	55-33
	Electrical Diagram - High Flow (Optional) . . . . .	55-34
	Electrical Diagram - Hydraulic Coupler (Optional). . . . .	55-35
	Electrical Diagram - Heating and Air Conditioning (Optional) . . . . .	55-36
	Electrical Diagram - Pilot Hydraulic Controls. . . . .	55-37
	Electrical Diagram - Ground Connections . . . . .	55-38
	Electrical Diagram - Ground Connections . . . . .	55-39
	Wire Identification and Circuit Diagram Legend (Cab Upgrade Machines) . . . . .	55-40
	Electrical Diagram - Starting System (Cab Upgrade Machines) . . . . .	55-41
	Electrical Diagram - Power Distribution (Cab Upgrade Machines) . . . . .	55-42
	Electrical Diagram -Safety Interlock and Fuel Supply System (Cab Upgrade Machines) . . . . .	55-43
	Electrical Diagram - Instrument Cluster Monitoring System (Cab Upgrade Machines) . . . . .	55-44
	Electrical Diagram - Standard Lamps (Cab Upgrade Machines). . . . .	55-45
	Electrical Diagram - Loader Arm Auxiliary Electrical Control Box (Optional) (Cab Upgrade Machines) . . . . .	55-46
	Electrical Diagram - Loader Arm Auxiliary Electric Power Controls (Optional) (Cab Upgrade Machines) . . . . .	55-47

## SECTION 55 - ELECTRICAL SYSTEM

	Electrical Diagram - Flasher and Turn Signals North America Electrical (Cab Upgrade Machines) . . . . .	55-48
	Electrical Diagram - Main Electrical European On-Road Regulations (Cab Upgrade Machines) . . . . .	55-49
	Electrical Diagram - Boom/Rear Electrical European On-Road Regulations (Cab Upgrade Machines) . . . . .	55-50
	Electrical Diagram - Work Lamps (Cab Upgrade Machines) . . . . .	55-51
	Electrical Diagram - Control Lever Interface (Cab Upgrade Machines) . . . . .	55-52
	Electrical Diagram - Left-Hand Handle (Options) (Cab Upgrade Machines) . . . . .	55-53
	Electrical Diagram - Right-Hand Handle (Options) (Cab Upgrade Machines) . . . . .	55-54
	Electrical Diagram - Grid Heater System (Cab Upgrade Machines) . . . . .	55-55
	Electrical Diagram - Rotating Beacon (Optional) (Cab Upgrade Machines) . . . . .	55-56
	Electrical Diagram - Two Speed (Optional) (Cab Upgrade Machines) . . . . .	55-57
	Electrical Diagram - Horn (Optional) (Cab Upgrade Machines) . . . . .	55-58
	Electrical Diagram - Accessory Outlet (Optional) (Cab Upgrade Machines) . . . . .	55-59
	Electrical Diagram - Back-up Alarm (Optional) (Cab Upgrade Machines) . . . . .	55-60
	Electrical Diagram - Wiper/Washer/Door Switch (Optional) (Cab Upgrade Machines) . . . . .	55-61
	Electrical Diagram - Auxiliary Hydraulics (Optional) (Cab Upgrade Machines) . . . . .	55-62
	Electrical Diagram - High Flow (Optional) (Cab Upgrade Machines) . . . . .	55-63
	Electrical Diagram - Hydraulic Mount Plate (Optional) (Cab Upgrade Machines) . . . . .	55-64
	Electrical Diagram - Heating and Air Conditioning (Optional) (Cab Upgrade Machines) . . . . .	55-65
	Electrical Diagram - Pilot Hydraulic Controls . . . . .	55-66
	Electrical Diagram - Ground Connections (Cab Upgrade Machines) . . . . .	55-67
	Electronic Instrument Cluster (EIC) Panel . . . . .	55-68
	Electronic Instrument Cluster (EIC) Panel (Cab Upgrade Machines) . . . . .	55-69
	Electronic Instrument Cluster Operating Instructions . . . . .	55-70
	Electronic Instrument Cluster Troubleshooting . . . . .	55-73
	Advanced Instrument Cluster (AIC) Panel (Optional) . . . . .	55-77
	Advanced Instrument Cluster (AIC) Panel (Optional) (Cab Upgrade Machines) . . . . .	55-78
	Advanced Instrument Cluster Operating Instructions . . . . .	55-79
	Advanced Instrument Cluster Troubleshooting . . . . .	55-86
55 100	Removal, Installation and Wiring of Electrical Components . . . . .	55-90
55 301 40	Battery Removal and Installation . . . . .	55-91
	Cab Fuse Block and Panel Removal and Installation . . . . .	55-92
55 201 15	Seat Switch Removal . . . . .	55-93
	Seat Switch Installation . . . . .	55-94
55 201 14	Seat Belt Buckle and Switch Assembly Removal and Installation . . . . .	55-94
55 404 20	Road Light and Work Light Switch Removal and Installation . . . . .	55-95
	Engine Fuse and Relay Panel . . . . .	55-96
55 100 34	Start Interlock Relay Removal and Installation . . . . .	55-97
	Engine Fuse Block Removal and Installation . . . . .	55-98
55 100 34	Preheat Relay Removal and Installation . . . . .	55-99
55 201 76	Preheat Glow Plug Removal and Installation . . . . .	55-100
	Fuel System Components . . . . .	55-101
	Electric Fuel Pump . . . . .	55-102
10 210 21	Electric Fuel Pump Removal . . . . .	55-104



---

## SECTION 55 - ELECTRICAL SYSTEM

10 223	Fuel Shutoff Solenoid . . . . .	55-104
	Fuel Shutoff Solenoid Testing . . . . .	55-104
10 223 10	Replacement of Fuel Shutoff Solenoid . . . . .	55-105
55 414 14	Air Filter Restriction Indicator Switch Removal and Installation . . . . .	55-106
55 414 10	Engine Coolant Temperature Sender Removal and Installation . . . . .	55-106
55 414 12	Engine Oil Pressure Switch Removal and Installation . . . . .	55-107
55 414 28	Hydrostatic Charge Pressure Switch Removal and Installation . . . . .	55-107
55 414 24	Hydraulic Oil Filter Restriction Switch Removal and Installation . . . . .	55-108
55 414 20	Hydraulic Oil Temperature Sender Removal . . . . .	55-108
	Hydraulic Oil Temperature Sender Installation . . . . .	55-109
35 724 90	Boom/Bucket Control Valve Spool Lock Solenoid Removal and Installation . . . . .	55-110
55 404	Road/Work Lights . . . . .	55-111
55 301	Alternator (55 Amp Version) . . . . .	55-114
	Alternator Service Specifications . . . . .	55-116
	Alternator - System Testing and Troubleshooting . . . . .	55-117
	Initial Tests . . . . .	55-120
55 301 10	Alternator Removal . . . . .	55-125
55 301 12	Alternator Disassembly . . . . .	55-126
	Alternator Installation . . . . .	55-132
55 201	Starter . . . . .	55-133
	Starter Motor Troubleshooting . . . . .	55-134
55 201 50	Starter Motor Removal . . . . .	55-135
	Starter Motor Disassembly . . . . .	55-140
	Starter Motor Inspection and Repair . . . . .	55-144
	Starter Motor Reassembly . . . . .	55-150
	Starter Motor Installation . . . . .	55-153
	Miscellaneous Engine Components . . . . .	55-154
	Glow Plugs and Glow Plug Troubleshooting . . . . .	55-154
	Oil Pressure Switch . . . . .	55-155
	Fuel Shutoff Solenoid . . . . .	55-155
	Labor Guide . . . . .	55-156

---

## SECTION 82 – FRONT LOADER (BOOM AND MOUNTING PLATE)

BOOK 4 - 87634741

### Chapter 1 – Buckets

#### CONTENTS

Section	Description	Page
82 100	General Information .....	82-2
	Buckets .....	82-2
82 100 77	Boom Lock Pins and Linkage .....	82-3
	Boom .....	82-3
82 100 70	Attachment Mounting Plate .....	82-4
	Boom and Cylinder Pivot Pins .....	82-4
	Boom and Cylinder Pivot Pin Location and Machine Usage .....	82-4
	Boom and Cylinder Pivot Pins Size .....	82-5
82 100 30	Pallet Fork .....	82-6
82 100 20	Utility Fork .....	82-7
82 100 12	Bucket Cutting Edge (Replacement) .....	82-8
82 100	Bucket Latch Plate Installation Procedure .....	82-9
82 100	Dirt Tooth Kit Installation .....	82-11
	Bucket Tooth Spacing .....	82-13
	Boom Lock Pin/Linkage .....	82-15
82 100 77	Boom Lock Pin/Linkage Removal .....	82-15
	Boom Lock Pin/Linkage Reinstallation .....	82-16
	Boom, Upper and Lower Link .....	82-18
	Boom, Upper and Lower Link Removal .....	82-18
82 100 70	Front Boom Mounting Plate Pivot Hub Replacement .....	82-24
	Boom, Upper and Lower Link Reinstallation .....	82-25
	Attachment Mounting Plate .....	82-29
82 100 70	Attachment Mounting Plate Removal .....	82-29
	Repair/Rebuild Mounting Plate .....	82-30
82 100 74	Latch Lever and Pin Removal/Repair .....	82-30
	Attachment Mounting Plate Parts Inspection .....	82-32
	Checking Procedure for Buckets and Attachments .....	82-36
	Checking Procedure .....	82-38
	Checking the Loader Faceplate .....	82-39
	Labor Guide .....	82-41

---

## SECTION 88 – ACCESSORIES

BOOK 4 - 87634741

### Chapter 1 – Dealer Installed Options

#### CONTENTS

Section	Description	Page
88 100	General Information .....	88-2
	Adapting Attachments Requiring 12V Electrical Power .....	88-2
	Hydraulic System Compatibility .....	88-5
90 000	Arm Pads For Cab Side Panels .....	88-7
90 000	Armrests for Deluxe Seat .....	88-7
90 000	Forearm Rests .....	88-8
55 000	Back-up Alarm .....	88-9
10 300	Block Heater (Engine) .....	88-10
55 000	Electric Power Supply (12 Volt, 15 Amp) .....	88-11
10 254	Exhaust (Engine) .....	88-12
10 254	Aspirator Precleaner Muffler .....	88-12
35 000	High Flow Hydraulics .....	88-14
	High Flow Hydraulics Troubleshooting .....	88-16
	High Flow Hydraulics Component Replacement .....	88-18
55 000	Horn .....	88-25
90 000	Shoulder Belt (Seat) .....	88-26
88 000	Slow-moving Vehicle (SMV) Sign Kit .....	88-27
55 000	Warning Light (Rotary Beacon) .....	88-28
55 000	Warning Lights (Four-way Flashers/Turn Signal/Horn) .....	88-31
	Labor Guide .....	88-35

---

# SECTION 90 – PLATFORM, CAB, BODYWORK, AND DECALS

BOOK 4 - 87634741

## Chapter 1 – Cab and Seat

### CONTENTS

Section	Description	Page
	General Information .....	90-2
	Seat and Seat Pan Support .....	90-2
90 152	Cab Inner Shell .....	90-3
90 120 10	Seat Removal .....	90-3
90 120 12	Seat Pan Support Removal .....	90-3
	Seat, Switch and Pan Reinstallation .....	90-5
	Cab Inner Shell .....	90-7
90 152 34	Cab Inner Shell Removal .....	90-7
90 152	Cab Inner Shell Reinstallation .....	90-14
90 108	Safety Decals .....	90-22
	Labor Guide .....	90-26

**Thanks very much for your reading,  
Want to get more information,  
Please click here, Then get the complete  
manual**

**JustClickHere** 

**NOTE:**

**If there is no response to click on the link above,  
please download the PDF document first, and then  
click on it.**

**Have any questions please write to me:  
[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**