



T4030F – T4040F – T4050F TRACTORS

SERVICE MANUAL

SECTIONS

GENERAL GUIDELINES	00
ENGINE	10
CLUTCH	18
TRANSMISSIONS	21
DRIVE LINES	23
FRONT MECHANICAL TRANSMISSION	25
REAR MECHANICAL TRANSMISSION	27
POWER TAKE-OFF	31
BRAKES	33
HYDRAULIC SYSTEMS	35
STEERING	41
AXLE AND WHEELS	44
CAB AIR CONDITIONING SYSTEM	50
ELECTRICAL SYSTEM	55
PLATFORM, CAB, BODYWORK	90

T E C H N I C A L S U P P O R T

INTRODUCTION

- *This manual is divided into sections identified by two-figure numbers and each section has independent page numbering.
For easy reference, these sections have the same numbers and names as the Repairs Rate Book sections.*
- *The different sections can easily be found by consulting the table of contents on the following pages.*
- *The document number of the manual and the edition/update dates are given at the bottom of each page.*
- *Pages updated in the future will be identified by the same document number followed by an additional digit: first edition standard manual 84131814A – 1st update 84131814A1 – 2nd update 84131814A2 – etc.
The update pages can replace or supplement the pages of the standard manual; the information necessary for the procedure for adding or replacing pages is given on the title page of the update.
The publication will be completed with an appropriate index.
If it is necessary to issue a new updated manual (2nd edition) it will have document number 84131814B, this indicates that the manual is composed of the standard version 84131814A completed with all the updates: 1st update 84131814A1 – 2nd update 84131814A2 – etc.*
- *The information contained in this manual was current on the date printed on each section. As NEW HOLLAND constantly improves its product range, some information may be out of date subsequent to modifications implemented for technical or commercial reasons, or to meet legal requirements in different countries.
In the event of conflicting information, consult the NEW HOLLAND Sales and Service Departments.*

IMPORTANT WARNINGS

- *All maintenance and repair work described in this manual must be performed exclusively by NEW HOLLAND service technicians, in strict accordance with the instructions given and using any specific tools necessary.*
- *Anyone performing the operations described herein without strictly following the instructions is personally responsible for any eventual injury or damage to property.*
- *The Manufacturer and all organisations belonging to the Manufacturer's distribution network, including but not restricted to national, regional or local distributors, will accept no responsibility for personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer, including those used for maintenance and/or repair of the product manufactured or marketed by the Manufacturer.
In any case, the product manufactured or marketed by the Manufacturer is covered by no guarantee of any kind against personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer.*

TEXT AND ILLUSTRATIONS ARE THE PROPERTY OF
CNH ITALIA S.P.A.



No part of the text or illustrations
may be reproduced

PRINTED IN ITALY

Print No. **84131814A** – 06 – 2008

CONTENTS VOLUME 1

	Page	Date		Page	Date
00 – GENERAL GUIDELINES			Engine disassembly–assembly	29–30–31– 32–33–34– 35–36–37– 38–39–40– 41–42–43– 44–45–46– 47–48–49– 50–51–52– 53–54–55– 56–57–58– 59–60–61– 62	06–08
General instructions	1–2	06–08			
Safety regulations	3–4–5	06–08			
Tractor refuelling	6	06–08			
10 – ENGINE					
CHAPTER 1 – Engine model T4050F					
Summary	1	06–08	Checks and measurements – cylinder block and liners	63–64–65	06–08
General specifications ...	2–3–4	06–08	Checks and measurements – crankshaft, bearings and flywheel	66–67	06–08
Fuel system data	4	06–08	Checks and measurements – connecting rods .	68–69	06–08
Engine block data	5	06–08	Checks and measurements – pistons	70–71–72– 73	06–08
Crankshaft data	5	06–08	Checks and measurements – camshaft, tappets and valves	74–75–76– 77	06–08
Connecting rod data	6	06–08	Checks and measurements – cylinder heads ..	78	06–08
Piston data	6–7	06–08	Engine oil low pressure indicator	79	06–08
Timing gear data	7	06–08	Engine oil filter	79	06–08
Timing gear data	–		Checks and measurements – cooling system ..	80	06–08
Rotating counterweights main data	7	06–08	Removal–Installation – crankshaft front seal	81–82	06–08
Cylinder head data	8–9	06–08	Removal–Installation – crankshaft rear seal	83–84–85	06–08
Torque specifications	10–11	06–08	Valve clearance adjustment	86–87	06–08
Tools	12	06–08	Removal–Installation – injectors	88–89–90	06–08
Engine view	13	06–08	Removal – Installation – Bosch injection pump	91–92–93	06–08
Lubrication diagrams	14	06–08	Bosch injection pump – timing	94–95–96	06–08
Engine cooling system diagram	15	06–08			
Additional counterweight diagram	16	06–08			
Exhaust gas recirculation system (EGR)	17	06–08			
Fault diagnosis	18–19–20– 21	06–08			
Engine removal–installation	22–23–24– 25–26–27– 28	06–08			

	Page	Date		Page	Date
Bosch injection pump – air bleeding	96	06-08	Tools	4-5	06-08
Removal-Installation – coolant pump	97-98	06-08	Sections	6-7-8-9-10	06-08
Coolant pump drive belts .	99-100	06-08	Description and operation	11	06-08
CHAPTER 2 – Engine models T4030F and T4040F			Fault diagnosis	11-12	06-08
Summary	1	06-08	Removal-Installation – rear transmission – gearbox casing	13-14-15-16-17-18-19-20-21-22-23-24	06-08
General specifications	2-3	06-08	Disassembly-Assembly – transmission-gearbox casing	25-26-27-28-29-30-31-32	06-08
Engine removal-installation	4-5-6-7-8-9-10	06-08	Gearbox driving and driven shafts end float adjustment.	33	06-08
18 – CLUTCH			Sealing compound application diagram	34	06-08
Main Data	1-2	06-08	CHAPTER 2 – Mechanical transmission and splitter		
Tightening torque – Tools .	2	06-08	Main Data	1-2	06-08
Sections	3-4	06-08	Torque specifications	2	06-08
Fault diagnosis	5	06-08	Tools	2	06-08
Removal-Installation – clutch	6	06-08	Sections	3-4-5	06-08
Clutch Overhaul	7-8-9-10-11	06-08	Description and operation	6	06-08
Checks and measurements – clutch	12-13	06-08	Fault diagnosis	7	06-08
Adjustments – clutch disengagement levers	13-14	06-08	Splitter device and creeper unit casing, shafts and bearings disassembly		
Adjustments – clutch pedal	15	06-08	8-9-10	06-08	
PTO clutch lever adjustment	16	06-08	CHAPTER 3 – Power Shuttle transmission		
PTO clutch servo control			Main Data	1-2	06-08
Sections	17	06-08	Torque specifications	3	06-08
Description and operation	18-19	06-08	Tools	4-5	06-08
Servo control adjustment .	20	06-08	Sections	6-7-8-9-10	06-08
21 – TRANSMISSION			CHAPTER 1 – Transmission and range gear (16x16)		
Main Data	1-2	06-08	Main Data	1-2	06-08
Torque specifications	2-3	06-08	Torque specifications	2-3	06-08

	Page	Date		Page	Date
Clutch control pressure test	9	06-08	Disassembly-Assembly – front epicyclic final drive with brake	22-23	06-08
Description and operation	11	06-08	Disassembly-Assembly – front epicyclic final drive	24-25-26	06-08
Fault diagnosis	11	06-08	Disassembly-Assembly – wheel hubs and steering knuckle	27	06-08
Disassembly-Assembly – transmission-gearbox casing	12-13-14-15-16-17-18	06-08	Adjustments – steering knuckle bearings	28	06-08
Disassembly-Reassembly – Power Shuttle control valve	19-20-21	06-08	Removal-Installation – front axle differential and bevel drive support	29-30-31-32	06-08
Disassembly-Assembly – accumulator	22	06-08	Overhaul – differential lock unit	33-34-35	06-08
23 – DRIVE LINES			Overhaul – front axle bevel drive	36-37	06-08
Main Data	1	06-08	Adjustments – bevel drive	38-39-40-41-42-43-44	06-08
Torque specifications	2	06-08	Overhaul – front differential	45	06-08
Sections	3-4	06-08	Replacing steering knuckle pins and bearings	46	06-08
Description and operation	5-6	06-08	27 – MECHANICAL TRANSMISSION REAR		
Fault diagnosis	6	06-08	Main Data	1-2	06-08
Removal-Installation – drive gear casing	7-8-9	06-08	Torque specifications	3-4	06-08
Disassembly-Assembly – drive gear casing	10-11	06-08	Tools	5-6-7	06-08
25 – MECHANICAL TRANSMISSION FRONT			Sections	8-9	06-08
Main Data	1-2	06-08	Description and operation	9-10	06-08
Torque specifications	3-4-5	06-08	Fault diagnosis	11-12	06-08
Tools	6	06-08	Disassembly-Assembly – transmission-gearbox casing	13-14-15-16-17-18	06-08
Sections	7-8-9-10-11	06-08	Adjustments – differential lock engagement sleeve position	19	06-08
Description and operation	11-12	06-08	Adjustments – bevel drive	20-21-22-23-24	06-08
Fault diagnosis	13	06-08	Removal – Installation side gear casing	25-26-27	06-08
Removal-Installation – front axle	14-15-16-17-18-19-20-21	06-08			

	Page	Date		Page	Date
Disassembly–Assembly – drive wheel shaft	27–28–29	06–08	Torque specifications	3–4	06–08
Disassembly–Assembly – epicyclic final drive	29	06–08	Tools	5	06–08
31 – POWER TAKE-OFF			Sections	6–7–8–9– 10	06–08
CHAPTER 1 – Mechanical power take-off			Description and operation	11–12–13– 14	06–08
Main Data	1–2–3	06–08	Fault diagnosis	15–16	06–08
Tools	3	06–08	Removal–Installation – lift	17–18–19	06–08
Torque specifications	4–5	06–08	Disassembly–Assembly – lift	20–21–22– 23–24–25	06–08
Sections	6–7	06–08	Adjusting the lift	26–27–28– 29–30–31– 32–33–34– 35	06–08
Description and operation	8–9–10	06–08	Lift pressure relief valve . .	36	06–08
Fault diagnosis	10	06–08	Disassembly–Assembly – lift control valve	37–38–39– 40	06–08
Power take-off overhaul . .	11–12–13– 14	06–08			
33 – BRAKES			CHAPTER 2 – Auxiliary control valves		
Main Data	1–2	06–08	Open centre system		
Torque specifications	2	06–08	Main Data	1	06–08
Sections	3–4–5	06–08	Tools	1	06–08
Tools	5–6	06–08	Torque specifications	2	06–08
Description and operation	6	06–08	Sections	3–4–5	06–08
Fault diagnosis	7–8	06–08	Description and operation	6–7–8–9	06–08
Removal–Installation – ser- vice brake	9–10	06–08	Removal–Installation – front auxiliary control valves	10–11–12	06–08
Removal–Installation – ser- vice brake pump	11–12–13– 14	06–08	Disassembly–Assembly – auxiliary control valves . . .	13–14	06–08
Adjustments – service brake pedals travel	14–15	06–08	Rod hardening test	14	06–08
Service brake circuit air bleeding	15–16–17	06–08	Blow-by test	15	06–08
Removal–Installation – parking brake	17–18	06–08	Adjustment of the automat- ic detent release pressure	15	06–08
Adjustments – parking handbrake travel	19	06–08	Removal–Installation – flow control valve	16	06–08
35 – HYDRAULIC SYSTEMS			Flow control valve adjust- ment	17–18	06–08
CHAPTER 1 – Rear mechanical hydraulic lift					
Main Data	1–2–3	06–08			

	Page	Date		Page	Date
CHAPTER 3 – Auxiliary control valve for trailer braking			Diagrams	3	06-08
Sections	1	06-08	Disassembly-Reassembly – gear pumps	4	06-08
Description and operation	1-2-3-4-5-6-7	06-08	41 – STEERING		
Fault diagnosis	8-9-10	06-08	CHAPTER 1 – Steering		
Removal-Installation – trailer brake valve	11	06-08	Main Data	2	06-08
CHAPTER 4 – Electronically controlled hydraulic lift			Torque specifications	2	06-08
Main Data	2-3	06-08	Tools	2	06-08
Torque specifications	4	06-08	Description and operation	3-4-5	06-08
Tools	5	06-08	View of hydrostatic steering control valve components	6	06-08
Sections	6-7-8	06-08	Fault diagnosis	7-8	06-08
Location of Components .	9-10	06-08	Removal-Installation – steering wheel	9	06-08
Description and operation	11-12-13-14-15-16-17	06-08	Removal-Installation – hydrostatic steering control valve	10-11-12	06-08
Removal-Installation – lift	18-19-20-21-22	06-08	Disassembly-Assembly – hydrostatic control valve ..	13-14-15-16-17-18-19-20-21-22-23-24-25-26-27-28	06-08
Replacement – control unit	23	06-08	Hydrostatic steering control valve bench testing	29-30	06-08
Position sensor replacement	24-25	06-08	Pressure relief valve testing	31	06-08
Replacement – draft sensor	26	06-08	CHAPTER 2 – Constant flow gear pump		
Disassembly-Assembly – lift	27-28	06-08	Main Data	1-2	06-08
Cylinder safety valve	31	06-08	Torque specifications	2	06-08
Removal-Installation – hydraulic control valve	32-33	06-08	Diagrams	3-4	06-08
Disassembly-Assembly – hydraulic control valve ...	33-34-35	06-08	Description and operation	4	06-08
CHAPTER 5 – Constant flow gear pump			Disassembly-Reassembly – gear pumps	5	06-08
Main Data	1-2	06-08	44 – AXLES AND WHEELS		
Torque specifications	2	06-08	Main Data	1-2	06-08
Description and operation	2	06-08	Front wheel track diagram	2	06-08
			Sections	3	06-08
			Torque specifications	4-5-6	06-08
			Tools	6-7	06-08

	Page	Date		Page	Date
Fault diagnosis	7	06-08	Transmitters, sensors and switches	10-11-12-13-14-15-16-17	06-08
Removal-Installation – front axle	8-9-10	06-08			
Disassembly-Assembly – wheel axle hub	11-12-13	06-08	CHAPTER 2 – Components		
Stub axle hub overhaul	14-15-16-17	06-08	Components	2-3-4-5-6-7	06-08
Checking leading wheel alignment	18	06-08	Service	8-9-10-11	06-08
50 – CAB AIR CONDITIONING SYSTEM			CHAPTER 3 – Starting System		
Safety regulations	2	06-08	Technical data	1	06-08
Main specifications	3	06-08	Description and operation	2	06-08
Tools	4	06-08	Fault diagnosis	3	06-08
Operating principles	5	06-08	System testing	4-5-6	06-08
Conditioning system components	6-7-8-9-10-11	06-08	Overhaul	7-8	06-08
Cab controls	12-13-14	06-08	Starter motor testing	9-10	06-08
Instructions for use – air conditioning system	15	06-08	CHAPTER 4 – Charging system		
Refrigerant recovery – recycling and evacuation – charging stations	16-17	06-08	Technical data	1	06-08
Dehydration, recharging and refrigeration check	18-19-20-21-22	06-08	Torque specifications	1	06-08
System recharging function check	23-24-25-26-27-28	06-08	Description and operation	2-3	06-08
Fault diagnosis	29-30-31-32	06-08	System testing	4-5-6-7-8-9-10	06-08
Air conditioning system maintenance	33	06-08	Removal-Installation and Overhaul – alternator	11-12-13-14-15-16-17-18	06-08
Compressor drive belt tension adjustment	34	06-08	CHAPTER 5 – Battery		
Removal-Installation – air conditioning unit	35-36-37-38	06-08	Technical data	1	06-08
55 – ELECTRICAL SYSTEM			Description and operation	1	06-08
CHAPTER 1 – Instruments			Removal-Installation – battery	2	06-08
Analogue instrumentation	1-2-3-4	06-08	Battery maintenance	3	06-08
Electronic Instruments	5-6-7-8-9	06-08	Battery charging	4-5-6	06-08
			Battery troubleshooting	7	06-08
			CHAPTER 6 – Electrical circuits for tractors with cab		
			Index	1	06-08

	Page	Date
CHAPTER 7 – Electrical circuits for tractors with platform		
Index	1	06-08
CHAPTER 8 – Connectors		
Index	1	06-08
CHAPTER 9 – Error codes		
Index	1	06-08
CHAPTER 10 – HH Menu and calibrations		
Index	1	06-08
90 – BODYWORK AND DRIVING POSITION		
CHAPTER 1 – Cab removal-installation		
Removal-Installation – cab	1-2-3-4-5 -6-7-8	06-08
CHAPTER 2 – Removal of cab internal components		
Multi-function panel Removal-Installation	1	06-08
Fuse or relay replacement	2	06-08
Fusebox replacement	3	06-08
Removal-Installation – electronic control unit	4-5-6	06-08
Removal-Installation wind-screen wiper motor	7	06-08
Removal-Installation rear windscreen wiper motor ..	8	06-08
Replacement of glued cab windows	9-10	06-08

GENERAL INSTRUCTIONS

IMPORTANT NOTICE

All maintenance and repair work described in this manual must be performed exclusively by NEW HOLLAND service technicians, in strict accordance with the instructions given and using any specific tools necessary. Anyone performing the operations described herein without strictly following the instructions is personally responsible for any eventual injury or damage to property.

BATTERY

Before carrying out any kind of service operation disconnect and isolate the battery negative lead, unless otherwise requested for specific operations (e.g.: operations requiring the engine to be running), after which it is necessary to disconnect the above-mentioned lead to complete the work.

SHIMMING

For each adjustment operation, select adjusting shims and measure individually using a micrometer, then add up the recorded values. Do not rely on measuring the entire shimming set, which may be incorrect, or the rated value indicated for each shim.

ROTATING SHAFT SEALS

For correct rotating shaft seal installation, proceed as follows:

- before assembly, allow the seal to soak in the oil it will be sealing for at least thirty minutes;
- thoroughly clean the shaft and check that the working surface on the shaft is not damaged;
- position the sealing lip facing the fluid; with hydrodynamic lips, take into consideration the shaft rotation direction and position the grooves so that they will deviate the fluid towards the inner side of the seal;
- coat the sealing lip with a thin layer of lubricant (use oil rather than grease) and fill the gap between the sealing lip and the dust lip on double lip seals with grease;
- insert the seal in its seat and press down using a flat punch; do not tap the seal with a hammer or mallet;
- whilst inserting the seal, check that it is perpendicular to the seat; once settled, make sure that it makes contact with the thrust element, if required;
- to prevent damaging the seal lip on the shaft, position a protective guard during installation operations.

“O-RING” SEALS

Lubricate the O-RING seals before inserting them in the seats, this will prevent them from overturning and twisting, which would jeopardise sealing efficiency.

SEALING COMPOUNDS

Apply one of the following sealing compounds on the mating surfaces marked with an X: LOCTITE 518, LOCTITE 5205, SUPERBOND 559 MASCHERPA or BETABLOCK A272M GURIT ESSEX.

Before applying the sealing compound, prepare the surfaces as follows:

- remove any incrustations using a wire brush;
- thoroughly de-grease the surfaces using one of the following cleaning agents: trichlorethylene, petrol or a water and soda solution.

BEARINGS

When installing bearings it is advised to:

- heat the bearings to 176 to 194 °F (80 to 90 °C) before fitting on the shafts;
- allow the bearings to cool before installing them from the outside.

SPRING PINS

When fitting split socket elastic pins, ensure that the pin notch is positioned in the direction of the force required to stress the pin.

Spiral spring pins do not require special positioning.

SPARE PARTS

Use genuine parts only.

Only genuine spare parts guarantee the same quality, duration and safety as they are the same parts that are assembled during production.

Only **genuine parts** can offer this guarantee.

When ordering spare parts, always provide the following information:

- tractor model (commercial name) and frame number;
- engine type and number;
- part number of the ordered part, which can be found in the “Microfiches” or the “Spare Parts Catalogue”, used for order processing.

TOOLS

The tools that NEW HOLLAND propose and illustrate in this manual are:

- specifically researched and designed for use with NEW HOLLAND vehicles;
- essential for reliable repair operations;
- accurately built and rigorously tested so as to offer efficient and long-lasting operation.

By using these tools, repair personnel will benefit from:

- operating in optimal technical conditions;
- obtaining the best results;
- saving time and effort;
- working in safe conditions.

IMPORTANT NOTES

Wear limit values indicated for certain parts are recommended, but not binding. The terms “front”, “rear”, “right-hand” and “left-hand” (when referred to different parts) are intended as seen from the driving position with the vehicle in the normal direction of movement.

MOVING THE TRACTOR WITH THE BATTERY REMOVED

External power supply cables should only be connected to the respective positive and negative cable terminals, using efficient clamps that guarantee adequate and secure contact.

Disconnect all services (lights, windshield wipers, etc.) before starting the vehicle.

If the vehicle electrical system requires checking, carry out operations with the power supply connected; once checking is completed, disconnect all services and switch off the power supply before disconnecting the cables.

SAFETY REGULATIONS

PAY ATTENTION TO THIS SYMBOL


This warning symbol points out important messages concerning your safety.

Carefully read the following safety regulations and observe advised precautions in order to avoid potential hazards and safeguard your health and safety.

In this manual the symbol is accompanied by the following key-words:

CAUTION – Warnings concerning unsuitable repair operations that may jeopardise the safety of Service personnel.

DANGER – Specific warnings concerning potential hazards for operator safety or for other persons directly or indirectly involved.

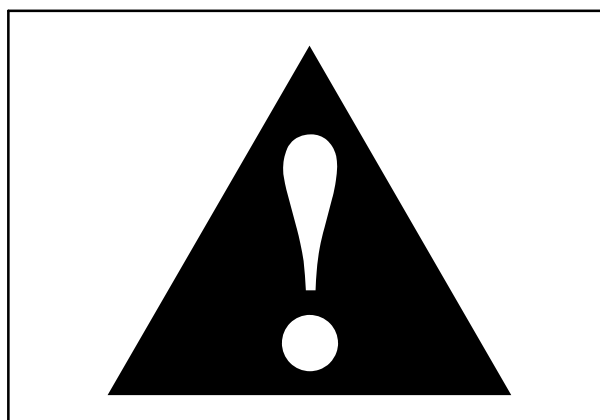

1

ACCIDENT PREVENTION

Most accidents or injuries that occur in workshops are the result of non-observance of simple and fundamental safety regulations. For this reason, IN MOST CASES THESE ACCIDENTS CAN BE AVOIDED by foreseeing possible causes and consequently acting with the necessary caution and care.

Accidents may occur with all types of vehicle, regardless of how well it was designed and built.

A careful and judicious service technician is the best guarantee against accidents.

Precise observance of the most basic safety rule is normally sufficient to avoid many serious accidents.

DANGER. Never carry out any cleaning, lubrication or maintenance operations when the engine is running.

SAFETY REGULATIONS

GENERAL GUIDELINES

- Carefully follow specified repair and maintenance procedures.
- Do not wear rings, wristwatches, jewellery, unbuttoned or loose articles of clothing such as: ties, torn clothing, scarves, open jackets or shirts with open zips that may remain entangled in moving parts. It is advised to wear approved safety clothing, e.g.: non-slip footwear, gloves, safety goggles, helmets, etc.
- Do not carry out repair operations with someone sitting in the driver's seat, unless the person is a trained technician who is assisting with the operation in question.

- Do not operate the vehicle or use any of the implements from different positions, other than the driver's seat.
- Do not carry out operations on the vehicle with the engine running, unless specifically indicated.
- Stop the engine and check that the hydraulic circuits are pressure-free before removing caps, covers, valves, etc.
- All repair and maintenance operations must be carried out using extreme care and attention.
- Service steps and platforms used in a workshop or in the field should be built in compliance with the safety rules in force.
- Disconnect the batteries and label all controls to indicate that the vehicle is being serviced. Any parts that are to be raised must be locked in position.
- Do not check or fill fuel tanks, accumulator batteries, nor use starting liquid when smoking or near naked flames, as these fluids are inflammable.
- Brakes are inoperative when manually released for repair or maintenance purposes. Use blocks or similar devices to control the machine in these conditions.
- The fuel nozzle should always be in contact with the filling aperture. Maintain this position until filling operations are completed in order to avoid possible sparks caused by the accumulation of static electricity.

- Only use specified towing points for towing the tractor. Connect parts carefully. Make sure that all pins and/or locks are secured in position before applying traction. Never remain near the towing bars, cables or chains that are operating under load.
- Transport vehicles that cannot be driven using a trailer or a low-loading platform trolley, if available.
- When loading or unloading the vehicle from the trailer (or other means of transport), select a flat area capable of sustaining the trailer or truck wheels. Firmly secure the tractor to the truck or trailer and lock the wheels in the position used by the carrier.
- Electric heaters, battery-chargers and similar equipment must only be powered by auxiliary power supplies with efficient ground insulation to avoid electrical shock hazards.
- Always use suitable hoisting or lifting devices when raising or moving heavy parts.
- Take extra care if bystanders are present.
- Never pour petrol or diesel oil into open, wide or low containers.
- Never use petrol, diesel oil or other inflammable liquids as cleaning agents. Use non-inflammable, non toxic commercially available solvents.
- Wear safety goggles with side guards when cleaning parts with compressed air.
- Limit the air pressure to a maximum of 30.45 psi (2.1 bar), according to local regulations.
- Do not run the engine in confined spaces without suitable ventilation.
- Do not smoke, use naked flames, or cause sparks in the area when fuel filling or handling highly inflammable liquids.
- Never use naked flames for lighting when working on the machine or checking for leaks.
- All movements must be carried out carefully when working under, on or near the vehicle. Wear protective equipment: helmets, goggles and special footwear.
- When carrying out checks with the engine running, request the assistance of an operator in the driver's seat. The operator must maintain visual contact with the service technician at all times.
- If operating outside the workshop, position the vehicle on a flat surface and lock in position. If working on a slope, lock the vehicle in position. Move to a flat area as soon as is safely possible.
- Damaged or bent chains or cables are unreliable. Do not use them for lifting or towing. Always use suitable protective gloves when handling chains or cables.
- Chains should always be safely secured. Make sure that the hitch-up point is capable of sustaining the load in question. Keep the area near the hitch-up point, chains or cables free of all bystanders.
- Maintenance and repair operations must be carried out in a CLEAN and DRY area. Eliminate any water or oil spillage immediately.
- Do not create piles of oil or grease-soaked rags as they represent a serious fire hazard. Always place them into a metal container. Before starting the tractor or its attachments, check, adjust and block the operator's seat. Also check that there are no persons within the tractor or implement range of action.
- Do not keep into your pockets any object which might fall unobserved into the tractor's inner compartments.
- In the presence of protruding metal parts, use protective goggles or goggles with side guards, helmets, special footwear and gloves.
- When welding, use protective safety devices: tinted safety goggles, helmets, special overalls, gloves and footwear. All persons present in the area where welding is taking place must wear tinted goggles. NEVER LOOK DIRECTLY AT THE WELDING ARC WITHOUT SUITABLE EYE PROTECTION.
- Metal cables tend to fray with repeated use. Always use suitable protective devices (gloves, goggles, etc.) when handling cables.
- Handle all parts carefully. Do not put your hands or fingers between moving parts. Always wear suitable safety clothing – safety goggles, gloves and shoes.

START UP

- Never run the engine in confined spaces that are not equipped with adequate ventilation for exhaust gas extraction.
- Never bring your head, body, arms, legs, feet, hands, fingers near fans or rotating belts.

ENGINE

- Always loosen the radiator cap slowly before removing it to allow any remaining pressure in the system to be discharged. Filling up with coolant should only be carried out with the engine stopped or idling (if hot).
- Never fill up with fuel when the engine is running, especially if hot, in order to prevent the outbreak of fire as a result of fuel spillage.
- Never check or adjust fan belt tension when the engine is running. Never adjust the fuel injection pump when the vehicle is moving.
- Never lubricate the vehicle when the engine is running.

ELECTRICAL SYSTEMS

- If it is necessary to use auxiliary batteries, remember that both ends of the cables must be connected as follows: (+) with (+) and (–) with (–). Avoid short-circuiting the terminals. **GAS RELEASED FROM BATTERIES IS HIGHLY INFLAMMABLE.** During charging, leave the battery compartment uncovered to improve ventilation. Never check the battery charge using “jumpers” (metal objects placed on the terminals). Avoid sparks or flames near the battery zone. Do not smoke to prevent explosion hazards.
- Before servicing operations, check for fuel or current leaks. Eliminate any eventual leaks before proceeding with work.
- Never charge batteries in confined spaces. Make sure that there is adequate ventilation in order to prevent accidental explosion hazards as a result of the accumulation of gases released during charging operations.
- Always disconnect the batteries before performing any kind of servicing on the electrical system.

HYDRAULIC SYSTEMS

- A liquid leaking from a tiny hole may be almost invisible but, at the same time, be powerful enough

to penetrate the skin; Therefore, NEVER USE HANDS TO CHECK FOR LEAKS. Use a piece of cardboard or wood for this purpose. If any liquid penetrates skin tissue, call for medical aid immediately. Failure to treat this condition with correct medical procedure may result in serious infection or dermatosis.

- In order to check the pressure in the system use suitable instruments.

WHEELS AND TYRES

- Check that the tyres are correctly inflated at the pressure specified by the manufacturer. Periodically check for possible damage to the rims and tyres.
- Stand away from (at the side of) the tyre when checking inflation pressure.
- Only check pressure when the tractor is unloaded and the tyres are cold, to avoid incorrect readings as a result of over-pressure. Do not reuse parts of recovered wheels as improper welding, brazing or heating may weaken the wheel and make it fail.
- Never cut or weld a rim mounted with an inflated tyre.
- To remove the wheels, lock both the front and rear vehicle wheels. After having raised the vehicle, position supports underneath, according to regulations in force.
- Deflate the tyre before removing any object caught in the tyre tread.
- Never inflate tyres using inflammable gases; as this may result in explosions and injury to bystanders.

REMOVAL AND INSTALLATION

- Lift and handle all heavy parts using suitable hoisting equipment. Ensure that parts are supported by appropriate slings and hooks. Use lifting eyes provided to this purpose. Extra care should be taken if persons are present near the load to be lifted.
- Handle all parts carefully. Do not put your hands or fingers between parts. Wear suitable safety clothing, safety goggles, gloves and footwear.
- Avoid twisting chains or metal cables. Always wear safety gloves when handling cables or chains.

CONSUMABLES

COMPONENT TO BE FILLED OR TOPPED UP	QUANTITY US gal. (litres)	RECOMMENDED NEW HOLLAND PRODUCTS	NEW HOLLAND SPECIFICATIONS	INTERNATIONAL SPECIFICATIONS
Cooling system: less cab with cab	2.77 (10.5) 3.57 (13.5)	Water and AMBRA AGRIFLU liquid 50% + 50%	NH 900 A	–
Windscreen washer reservoir	0.52 (2)	Water and AREXONS DP1* liquid	–	–
Fuel tank: main tank side tank	9.64 (36.5) 6.73 (25.5)	Decanted and filtered diesel fuel	–	–
Engine oil sump: T4030F and T4040F	2.25 (8.5)	Oil AMBRA SUPER GOLD 15W – 40	NH 330G (SAE 15W–40)	API CF–4/SG CCMC D4 MIL–L–2104E
T4050F	2.77 (10.5)	10W – 30	NH 324G (SAE 15W–40)	
Brake circuit	0.13 (0.5)	AMBRA BRAKE LHM fluid	NH 610 A	ISO 7308
with front brakes	0.05 (0.2)			
Front axle: housing casing	0.73 (2.8)	AMBRA MULTI G oil	NH 410 B	API GL4 ISO 32/46 SAE 10W–30
final drives without brakes (each)	0.26 (1.0)			
final drives with brakes (each)	0.46 (1.75)			
Rear transmission (bevel drive, final drives and brakes), gearbox, hydraulic lift, PTO and hydraulic steering:	11.62 (44)			
Grease fittings	–	AMBRA GR9 grease	NH 710 A	NLGI 2

SECTION 10 – ENGINE**Chapter 1 – Engine (mod. T4050F)****INDEX**

Section	Meaning	Page
10 000	General specifications	2
	Main Data	4
	Torque specifications	10
	Tools	12
	Cross-sectional views	13
	Schematic Diagrams	14
	Exhaust gas recirculation system (EGR)	17
	Fault diagnosis	18
10 001 10	Engine Removal–Installation	22
10 001 54	Engine Disassembly–Assembly	29
10 102 70	Crankshaft front seal – Replacement	81
10 102 74	Crankshaft rear seal – Replacement	83
10 106 12	Valve/rocker arm clearance adjustment	86
10 218 30	Injector Removal–Installation	88
10 246 14	Bosch injection pump Removal–Installation, timing and air bleeding	91
10 402 10	Coolant pump Removal–Installation	97
10 414 10	Coolant pump and generator drive belts Tension Adjustment	99

GENERAL SPECIFICATIONS	
Engine, technical type: – mod. T4050F – type F4CE9484M*J603 (BOSCH pump) .	
Cycle	diesel, 4–stroke
Fuel injection	Direct
Number of cylinders in line	4
Piston diameter	104 mm
Piston stroke	132 mm
Total displacement	4485 cm ³
Compression ratio	17,5:1
Maximum Power Output: – mod. T4050F – type F4CE9484M*J603	71 kW (97 Hp)
Maximum power speed	2300 rpm
– Maximum torque: mod. T4050F – type F4CE9484M*J603	418 Nm
Maximum torque speed	1300 rpm
Number of main bearings	5
Sump pan	structural, cast iron
Lubrication	forced, with lobe pump
Pump drive	from crankshaft
Engine speed/oil pump speed ratio	1:1
Oil filtration	via mesh filter on inlet and cartridge on delivery line
Normal oil pressure with engine warmed-up	
at slow idling	1.2 bar
at fast idling	3.9 bar

(continued)

(overleaf)

GENERAL SPECIFICATIONS	
Cooling	coolant circulation
Radiator	four lines of vertical pipes with copper fins
Fan, attached to the pulley	intake, in plastic with 11 blades
Coolant pump	centrifugal vane-type
Engine speed/coolant pump speed ratio	1:1,977
Coolant thermometer	coloured scale divided into three sections
Temperature ranges corresponding to each section:	
– Initial blue section	40° ÷ 60 °C
– Middle green section (normal working conditions)	60° ÷ 110 °C
– end red section	110° ÷ 120 °C
Temperature Control	via thermostat valve
– initial opening	81 ± 2 °C
Valve Timing	overhead valves operated by tappets, rods and rocker arms via the camshaft located in the engine block; the camshaft is driven by the crankshaft using straight-tooth gears
Intake:	
– start: Before T.D.C.	10° ± 30'
– end: after B.D.C.	10° ± 30'
Exhaust:	
– start: before B.D.C.	64°
– end: after T.D.C.	26°
Clearance between valves and rocker arms with engine cold:	
– intake	0,25 ± 0.05 mm
– exhaust	0,50 ± 0.05 mm
Supply	
Air filtering	via dry air filter with dual cartridge, clogging warning, centrifugal pre-filter and automatic dust extractor
Fuel pump	with double diaphragm
Fuel filtration	via mesh filter in the fuel pump, a replaceable cartridge filter on the injection pump feed line
Minimum fuel flow rate with pump shaft rotating at 1800 rpm .	127.6 l/h
Cam operated	via engine timing

(continued)

(overleaf)

GENERAL SPECIFICATIONS	
BOSCH Injection pump	rotating distributor type
All-speed governor, incorporated in pump: BOSCH	centrifugal counterweights
Automatic advance regulator, incorporated in pump: BOSCH	hydraulic
Turbocharger: – type	HOLSET HX25
Injection pump	rotating distributor with speed governor and advance variator incorporated
BOSCH pump: – mod. T4050F– type F4CE9484M*J603	VE 4/12 F1150–2856537
Direction of rotation	anticlockwise
Injection order	1–3–4–2 (for all models)

MAIN DATA

BOSCH–type injectors: F4CE9484M*J603	2856255
Number of nozzle holes	6
Nozzle hole diameter mm: F4CE9484M*J603	0,237
Calibration pressure bar	260 ÷ 274

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**