

---

# T1530 SERVICE MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION .....	2
SECTION 10 - ENGINE .....	3
SECTION 18 - CLUTCH .....	10
SECTION 21 - TRANSMISSION .....	12
SECTION 25 - FWD FRONT AXLE .....	14
SECTION 27 - DIFFERENTIAL, REAR AXLE .....	15
SECTION 29 - HYDROSTATIC TRANSMISSION .....	16
SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS .....	20
SECTION 33 - BRAKES .....	23
SECTION 35 - HYDRAULIC SYSTEM .....	23
SECTION 41 - STEERING .....	27
SECTION 44 - WHEELS AND TIRES .....	29
SECTION 55 - ELECTRICAL SYSTEM .....	30
SECTION 90 - PLATFORM .....	38

The following pages are the collation of the contents pages from each section and chapter of the T1530 Service manual. Complete Service part # 84227369.

The sections used through out all New Holland product Service manuals may not be used for each product. Each Service manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Service manual and which sections are in each book.

The sections listed above are the sections utilized for the T1530 Tractors.

---

# SECTION 00 - GENERAL INFORMATION

BOOK 1 - 84227370

## Chapter 1 - General Information

### CONTENTS

Section	Description	Page
	Introduction .....	2
	Precautionary Statements .....	3
	Personal Safety .....	3
	Machine Safety and Information .....	3
	Safety .....	4
	Precautionary Statements .....	4
	The Tractor .....	4
	Servicing the Tractor .....	4
	Operating the Tractor .....	5
	Driving the Tractor .....	5
	Operating the PTO .....	6
	Diesel Fuel .....	6
	Safety Frame (ROPS) .....	6
	Safety Decals .....	7
	Instruction Decals .....	9
	International Symbols .....	13
	Specifications .....	14
	General Dimensions .....	19
	Minimum Hardware Tightening Torques .....	22
	Metric Bolt Torque Specifications .....	23
	Lubricants .....	24
	Recommended Lubricants and Coolants .....	24
	Adjustments .....	25
	Rear Tire Liquid .....	25

---

## SECTION 10 - ENGINE

BOOK 1 - 84227370

### Chapter 1 - Engine

#### CONTENTS

Section	Description	Page
	Specifications .....	6
	Metric Bolt Torque Specifications .....	15
	Special Tools .....	16
	Compression Test and Tools .....	17
	Description of Operation - Engine .....	18
	Troubleshooting .....	19
	Cylinder Head and Valve Train Components .....	23
	Separating the Tractor at the Clutch Housing/Engine .....	24
	Removal .....	24
	Attaching the Tractor at the Clutch Housing/Engine .....	34
	Installation .....	34
	Overhaul - Engine .....	44
	Engine .....	44
	Fuel Injector and Glow Plug .....	44
	Removal .....	44
	Oil Pressure Switch .....	44
	Temperature Sending Switch and Alternator .....	44
	Removal .....	44
	Fan, Water Pump, and External Oil Tube .....	45
	Removal .....	45
	Air Inlet Manifold .....	45
	Removal .....	45
	Rocker Arm Shaft and Support Bracket .....	46
	Removal .....	46
	Cylinder Head .....	46
	Removal .....	46
	Valve Tappet .....	46
	Removal .....	46
	Fuel Shutoff Solenoid .....	47
	Removal .....	47

---

## SECTION 10 - ENGINE

BOOK 1 - 84227370

### Chapter 1 - Engine (Continued)

#### CONTENTS

Section	Description	Page
	Engine Timing Gear Cover, Timing Gears, and Cam Shaft .....	47
	Timing Gear Cover Removal .....	47
	Timing Gears and Camshaft .....	49
	Removal .....	49
	Oil Sump .....	50
	Removal .....	50
	Oil Suction Pipe and Strainer .....	50
	Removal .....	50
	Balancer Assembly .....	51
	Removal .....	51
	Connecting Rods, Bearings, and Pistons, Rings .....	51
	Removal .....	51
	Flywheel .....	52
	Removal .....	52
	Backplate and Oil Seal .....	52
	Removal .....	52
	Crankshaft and Main Bearings .....	52
	Removal .....	52
	Cylinder Head .....	53
	Disassembly .....	53
	Inspection and Repair .....	53
	Valve Seats .....	54
	Valves .....	55
	Valve Guides .....	56
	Valve Springs .....	57
	Rocker Arms .....	57
	Push Rods .....	58
	Cylinder Head .....	58
	Assembly .....	58
	Cylinder Block .....	59

---

## SECTION 10 - ENGINE

BOOK 1 - 84227370

### Chapter 1 - Engine (Continued)

#### CONTENTS

Section	Description	Page
	Pistons .....	59
	Disassembly and Inspection .....	59
	Piston Rings .....	62
	Connecting Rods .....	62
	Pin to Bushing Clearance .....	63
	Connecting Rod Bearing .....	64
	Clearance Check .....	64
	Pistons, Rings, and Connecting Rod .....	65
	Assembly .....	65
	Crankshaft - Main Bearing and Thrust Washer .....	66
	Removal and Inspection .....	66
	Crankshaft .....	67
	Bearing (Bushing) .....	68
	Replacement .....	68
	Main Bearing .....	69
	Assembly .....	69
	Port Block .....	70
	Removal .....	70
	Installation .....	70
	Timing Gear .....	71
	Camshaft .....	71
	Disassembly .....	71
	Inspection .....	71
	Assembly .....	72
	Flywheel .....	72
	Timing Gear Housing .....	73
	Front Oil Seal and Steering Pump Seal .....	73
	Replacement .....	73
	Crankshaft and Bearing Holder .....	74
	Installation .....	74

---

## SECTION 10 - ENGINE

BOOK 1 - 84227370

### Chapter 1 - Engine (Continued)

#### CONTENTS

Section	Description	Page
	Rear Oil Seal and Backplate .....	74
	Installation .....	74
	Flywheel .....	75
	Installation .....	75
	Pistons and Connecting Rods .....	75
	Installation .....	75
	Balancer Assembly .....	76
	Installation .....	76
	Balancer Shims .....	76
	Oil Suction Pipe and Suction Strainer .....	77
	Installation .....	77
	Oil Sump .....	77
	Installation .....	77
	Camshaft and Camshaft Gear .....	77
	Installation .....	77
	Idle Gear, Oil Pump, and Injection Timing .....	78
	Installation .....	78
	Timing Gear Cover .....	78
	Installation .....	78
	Crankshaft Pulley .....	78
	Installation .....	78
	Fuel Injection Pump .....	79
	Installation .....	79
	Hydraulic Oil Pump .....	79
	Installation .....	79
	Power Steering Pump .....	80
	Installation .....	80
	Head Gasket Selection .....	80
	Selection Chart .....	80
	Cylinder Head .....	81
	Installation .....	81

---

## SECTION 10 - ENGINE

BOOK 1 - 84227370

### Chapter 1 - Engine (Continued)

#### CONTENTS

Section	Description	Page
	Valve Clearance .....	81
	Adjustment .....	81
	Valve Cover .....	82
	Installation .....	82
	Water Pump and Cooling Fan .....	82
	Installation .....	82
	External Oil Tube .....	82
	Assembly .....	82
	Glow Plug and Connector .....	83
	Installation .....	83
	Fuel Injector .....	83
	Installation .....	83
	Fuel Piping .....	83
	Installation .....	83
	Alternator and Temperature Sender Switch .....	84
	Installation .....	84
	Exhaust Manifold .....	84
	Installation .....	84
	Description of Operation - Engine Lubrication System .....	85
	Oil Filter .....	88
	Construction and Function .....	88
	Maintenance .....	88
	Oil Pump .....	88
	Removal .....	88
	Inspection .....	88
	Installation and Adjustment .....	89
	Engine Oil Pressure .....	90
	Check .....	90
	Oil Pressure Relief Valve .....	91
	Removal .....	91
	Installation .....	91
	Oil Consumption .....	91

---

## SECTION 10 - ENGINE

BOOK 1 - 84227370

### Chapter 1 - Engine (Continued)

#### CONTENTS

Section	Description	Page
	Description of Operation - Cooling System .....	92
	Maintenance .....	94
	Coolant .....	94
	Radiator Cap .....	94
	Thermostat .....	95
	Water Pump .....	95
	Cooling Fan .....	95
	Overhaul - Cooling System .....	96
	Radiator .....	96
	Removal .....	96
	Inspection and Repair .....	98
	Water Pump .....	99
	Removal .....	99
	Inspection and Repair .....	100
	Installation .....	100
	Thermostat .....	101
	Removal .....	101
	Inspection and Repair .....	102
	Installation .....	102
	Radiator .....	103
	Installation .....	103



---

# SECTION 10 - ENGINE

BOOK 1 - 84227370

## Chapter 2 - Fuel Systems

### CONTENTS

Section	Description	Page
	Specifications .....	3
	Standards for Adjusting the Injection Pump .....	4
	Torque Specifications .....	4
	Special Tools .....	4
	Description of Operation - Injection Pump .....	5
	Injection Pump .....	5
	Troubleshooting - Fuel System .....	7
	General .....	7
	Fuel Injectors .....	10
	Governor .....	11
	Fuel Variation Mechanism .....	12
	Delivery Valve Assembly .....	13
	CTD (Compact Timing Device) Mechanism .....	13
	Pumping Elements .....	15
	Delivery Valves .....	15
	Injection Pump .....	17
	Removal .....	17
	Repair .....	19
	Installation .....	19
	Fuel Injection Pump .....	20
	Installation (New Pump or Drive Component) .....	20
	Injection Pump Timing .....	21
	Fuel Screw/High Idle .....	22
	Adjustment .....	22
	Auto Bleed .....	23
	Description of Operation - Governor .....	24
	Governor .....	24
	Disassembly .....	26
	Assembly .....	27
	Adjustments .....	29
	Injectors .....	30
	Removal .....	31

---

## SECTION 10 - ENGINE

BOOK 1 - 84227370

### Chapter 2 - Fuel Systems (Continued)

#### CONTENTS

Section	Description	Page
	Disassembly .....	32
	Assembly/Adjustment .....	32
	Engine Breather Valve .....	33
	Removal .....	34
	Installation .....	34
	Troubleshooting - Engine Breather Valve .....	35

## SECTION 18 - CLUTCH

BOOK 1 - 84227370

### Chapter 1 - Clutch

#### CONTENTS

Section	Description	Page
	Specifications .....	3
	Bolt Torques .....	4
	Special Tools .....	4
	Description of Operation .....	5
	Troubleshooting .....	7
	Overhaul .....	8
	Separating the Tractor at the Clutch Housing/Engine .....	8
	Preparation .....	8
	Removal .....	8
	Clutch .....	15
	Removal .....	15
	Inspection .....	15
	Assembly .....	16

---

## SECTION 18 - CLUTCH

BOOK 1 - 84227370

### Chapter 1 - Clutch (Continued)

#### CONTENTS

Section	Description	Page
	Attaching the Clutch Housing to the Engine .....	17
	Installation .....	17
	Flywheel Dimensions .....	24
	Clutch Release Bearing .....	25
	Removal .....	25
	Inspection .....	26
	Installation .....	26
	Clutch Linkage Components .....	26
	Cross Shaft Bushings .....	26
	Disassembly .....	26
	Assembly .....	27
	Pedal Bushings .....	28
	Removal .....	28
	Disassembly .....	28
	Assembly .....	28
	Installation .....	28
	Pedal .....	29
	Adjustment .....	29
	Clutch Pedal Safety Switch .....	29
	Adjustment .....	29

---

## SECTION 21 - TRANSMISSION

BOOK 1 - 84227370

### Chapter 1 - SSS 12 x 12 Gear Transmission

#### CONTENTS

Section	Description	Page
	Specifications .....	3
	SSS Gear Transmission .....	3
	Metric Bolt Torque Specifications .....	4
	Special Tools .....	5
	Description of Operation .....	5
	Powerflow .....	8
	Troubleshooting .....	12
	Overhaul .....	13
	Separating the Tractor at Clutch Housing/Transmission Housing .....	13
	Removal .....	13
	Main Transmission Input Shaft Retainer .....	20
	Disassembly .....	20
	Input Shaft .....	21
	Disassembly .....	21
	Reverse Idler Shaft and Gear .....	22
	Disassembly .....	22
	Shift Rails .....	23
	Disassembly .....	23
	Upper Countershaft .....	25
	Disassembly .....	25
	Main Shaft .....	28
	Disassembly .....	28
	Shuttle Gears .....	31
	Disassembly .....	31
	Inspection .....	31
	Main Transmission Range Gear Shifter .....	32
	Disassembly .....	32
	Inspection .....	32
	Synchronizers - Shuttle Gears .....	33
	Shuttle Transmission Gears/ Synchronizer .....	34
	Disassembly .....	34
	Inspection .....	38

---

## SECTION 21 - TRANSMISSION

BOOK 1 - 84227370

### Chapter 1 - SSS 12 x 12 Gear Transmission (Continued)

#### CONTENTS

Section	Description	Page
	Shuttle Transmission Gears/ Synchronizer .....	40
	Assembly .....	40
	Main Transmission Range Gear Shifter .....	43
	Assembly .....	43
	Shuttle Gears .....	44
	Assembly .....	44
	Main Shaft .....	44
	Assembly .....	44
	Range Gears .....	48
	Assembly .....	48
	Range Gear Shift Fork .....	50
	Assembly .....	50
	Countershaft .....	51
	Assembly .....	51
	Shift Rails .....	52
	Assembly .....	52
	Input Shaft With Retainer .....	56
	Assembly .....	56
	End Play Adjustment (Upper Shaft) .....	58
	Attaching the Transmission / Differential Housing .....	59
	Attaching the Clutch Housing/Transmission Housing .....	60

---

## SECTION 25 - FWD FRONT AXLE

BOOK 1 - 84227370

### Chapter 1 - FWD Front Axle

#### CONTENTS

Section	Description	Page
	Specifications .....	2
	Front to Rear Axle Ratio .....	2
	Method 1 .....	3
	Method 2: Rolling Test .....	4
	Bolt Torque Specifications .....	5
	Special Tools .....	5
	Description of Operation - FWD Front Axle .....	6
	FWD Front Axle .....	6
	Troubleshooting .....	7
	Lubrication .....	9
	Lubricate Every 50 Hours .....	9
	Overhaul - FWD Axle .....	10
	FWD Axle .....	10
	Removal .....	10
	Inspection .....	10
	Installation .....	11
	Gear Reduction Drop Box .....	12
	Disassembly .....	12
	Inspection .....	14
	Front Axle and Differential .....	15
	Disassembly .....	15
	Inspection .....	16
	Pinion Shaft .....	17
	Disassembly .....	17
	Inspection .....	17
	Assembly .....	18
	Differential .....	19
	Assembly .....	19
	Ring Gear-to-Pinion Backlash .....	20
	Axle and Differential .....	22
	Assembly .....	22
	Gear Reduction Box .....	24
	Assembly .....	24
	Bevel Gear-to-Pinion Backlash .....	27
	Check .....	27

---

# SECTION 27 - DIFFERENTIAL, REAR AXLE

BOOK 2 - 84227371

## Chapter 1 - Differential, Rear Axle

### CONTENTS

Section	Description	Page
	Specifications . . . . .	2
	Differential Pinion Gear to Shaft Clearance . . . . .	2
	Bolt Torque Specifications . . . . .	3
	Metric Bolt Torque Specifications . . . . .	3
	Special Tools . . . . .	3
	Description of Operation . . . . .	4
	Differential . . . . .	5
	Differential Lock . . . . .	5
	Rear Axle . . . . .	6
	Overhaul . . . . .	7
	Differential . . . . .	7
	Removal . . . . .	7
	Disassembly . . . . .	9
	Inspection . . . . .	9
	Assembly . . . . .	10
	Installation . . . . .	10
	Drive Pinion . . . . .	12
	Removal . . . . .	12
	Disassembly . . . . .	12
	Inspection . . . . .	13
	Assembly . . . . .	13
	Rear Axle . . . . .	16
	Removal . . . . .	16
	Disassembly . . . . .	17
	Inspection . . . . .	20
	Assembly . . . . .	21
	Final Pinion . . . . .	25
	Removal . . . . .	25
	Disassembly . . . . .	26
	Inspection . . . . .	28
	Assembly . . . . .	29
	Installation . . . . .	31

---

# SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 84227371

## Chapter 1 - Hydrostatic Transmission

### CONTENTS

Section	Description	Page
	Description of Operation - Hydrostatic Transmission . . . . .	3
	Variable Displacement Pump . . . . .	5
	Operation . . . . .	5
	Fixed Displacement Motor . . . . .	7
	Operation . . . . .	7
	Fluid Flow . . . . .	8
	Neutral Position . . . . .	8
	Forward Position . . . . .	9
	Reverse Position . . . . .	10
	Overhaul . . . . .	11
	Hydrostatic Unit . . . . .	11
	Removal . . . . .	11
	Precautions Before Disassembly . . . . .	12
	Hydrostatic Pump . . . . .	15
	Disassembly . . . . .	15
	Hydrostatic Motor . . . . .	16
	Disassembly . . . . .	16
	Hydrostatic Motor Shaft . . . . .	18
	Removal . . . . .	18
	Swash Plate . . . . .	19
	Removal . . . . .	19
	Hydrostatic Transmission . . . . .	19
	Inspection . . . . .	19
	Hydrostatic Pump . . . . .	22
	Assembly . . . . .	22
	HST Piston Pump Cylinder Block . . . . .	23
	Assembly . . . . .	23
	HST Motor Cylinder Block . . . . .	25
	Assembly . . . . .	25
	Port Block Feed and Check Valves . . . . .	26
	Disassembly . . . . .	26
	Inspection . . . . .	26



---

# SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 84227371

## Chapter 1 - Hydrostatic Transmission (Continued)

### CONTENTS

Section	Description	Page
	Feed (Check) Valves Servicing .....	27
	Inspection .....	27
	Assembly .....	27
	Charge Pressure Relief Valve .....	28
	Disassembly .....	28
	Inspection .....	28
	Assembly .....	28
	High Pressure Relief Valve .....	28
	Removal .....	28
	Installation .....	28
	Hydrostatic Pump and Port Block .....	29
	Assembly .....	29
	Hydrostatic Motor and Port Block .....	30
	Assembly .....	30
	HST Cooler Check Valve .....	31
	Disassembly .....	31
	Inspection .....	31
	Assembly .....	31
	Pressure Tests .....	32
	High Pressure Relief Valve .....	32
	Charge Pressure Relief Valve .....	34
	Troubleshooting .....	36
	Specifications .....	40
	Hydrostatic Transmission .....	40
	Bolt Torques .....	40

---

# SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 84227371

## Chapter 2 - Hydrostatic Transmission Linkage

### CONTENTS

Section	Description	Page
	HST Control Linkage .....	2
	HST Neutralizer (Spring Holder) .....	3
	Removal .....	4
	Disassembly .....	4
	Inspection .....	4
	Assembly .....	5
	Installation .....	7
	HST Neutral Adjustment .....	8
	Pedal(s) Stop Bolt Adjustment .....	10
	Forward Pedal .....	10
	Reverse Pedal .....	10
	Cruise Control (Optional) .....	11
	HST Electronic Cruise Control Circuit (Optional) .....	12
	Cruise Control Switch .....	12
	Cruise Control Relay .....	13
	Cruise Control Magnet .....	13
	Brake Switch Function .....	13

---

# SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 84227371

## Chapter 3 - Hydrostatic Gearbox

### CONTENTS

Section	Description	Page
	Specifications .....	3
	Special Tools .....	3
	Description of Operation .....	4
	HST Unit .....	5
	Power Flow .....	5
	Gearbox .....	5
	Separating Between Clutch and Center Range Gear Housings .....	7
	Range Gearbox Disassembly .....	14
	PTO Input Shaft .....	14
	Removal .....	14
	Top Counter Shaft .....	14
	Removal .....	14
	Shift Fork and Shift Rail .....	15
	Removal .....	15
	Main Shaft .....	16
	Removal .....	16
	Transmission Input Shaft .....	17
	Removal .....	17
	Inspection .....	17
	Shift Arm .....	18
	Assembly .....	18
	Main Shaft .....	18
	Assembly .....	18
	Shifter Fork and Shift Rail .....	20
	Assembly .....	20
	Transmission Input Shaft .....	21
	Assembly .....	21
	Top Counter Shaft .....	22
	Assembly .....	22

---

## SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 84227371

### Chapter 3 - Hydrostatic Gearbox (Continued)

#### CONTENTS

Section	Description	Page
	PTO Input Shaft .....	22
	Assembly .....	22
	Range Gearbox to Rear Differential Housing .....	23
	Assembly .....	23
	Hydrostatic Transmission .....	24
	Installation .....	24
	Range Gearbox to Clutch Housing .....	24
	Assembly .....	24
	Reassembly of Tractor .....	26

## SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS

BOOK 2 - 84227371

### Chapter 1 - Power Take-Off (PTO) Systems

#### CONTENTS

Section	Description	Page
	Specifications .....	3
	PTO Hydraulic System (HST Model Only) .....	3
	PTO Clutch .....	3
	Metric Bolt Torque Specifications .....	4
	Special Tools .....	5
	Description of Operation .....	6
	Rear PTO .....	7
	Power Flow Diagram for the 12 x 12 Synchronized Shuttle Shift Transmission .....	7
	Power Flow Diagram for the Hydrostatic Transmission (HST) .....	8
	Hydraulic Fluid Flow .....	9
	PTO Clutch Assembly (HST) .....	9

**Thanks very much for your reading,  
Want to get more information,  
Please click here, Then get the complete  
manual**

**JustClickHere** 

**NOTE:**

**If there is no response to click on the link above,  
please download the PDF document first, and then  
click on it.**

**Have any questions please write to me:  
[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**

---

## SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS

BOOK 2 - 84227371

### Chapter 1 - Power Take-Off (PTO) Systems (Continued)

#### CONTENTS

Section	Description	Page
	Troubleshooting (HST) .....	12
	Troubleshooting (12 x 12) .....	13
	Pressure Testing (HST) .....	14
	Test Procedure .....	14
	Overhaul .....	16
	PTO System Diverter Valve Assembly (HST) .....	16
	Removal .....	16
	Disassembly .....	17
	Inspection .....	17
	Assembly .....	17
	Installation .....	18
	PTO Clutch Control Valve (HST) .....	19
	Removal .....	19
	Disassembly .....	20
	Inspection .....	20
	Assembly .....	20
	Installation .....	22
	PTO Clutch (HST) .....	23
	Removal .....	23
	Disassembly .....	26
	Inspection .....	28
	Assembly .....	30
	Installation .....	34
	Power Take Off System for 12 x 12 Synchronized Shuttle Shift Transmission .....	38
	Removal .....	38
	Inspection .....	42
	Assembly .....	43

**Thanks very much for your reading,  
Want to get more information,  
Please click here, Then get the complete  
manual**

**JustClickHere** 

**NOTE:**

**If there is no response to click on the link above,  
please download the PDF document first, and then  
click on it.**

**Have any questions please write to me:  
[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**