

---

# TN65F-TN95F REPAIR MANUAL

## COMPLETE CONTENTS

SECTION 00 - GENERAL .....	2
SECTION 10 - ENGINE .....	2
SECTION 18 - CLUTCH .....	3
SECTION 21 - TRANSMISSIONS .....	3
SECTION 23 - DRIVE LINES .....	6
SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION .....	6
SECTION 27 - REAR MECHANICAL WHEEL DRIVE .....	7
SECTION 31 - MECHANICAL POWER TAKE-OFF .....	7
SECTION 33 - BRAKING SYSTEM .....	8
SECTION 35 - HYDRAULIC SYSTEM .....	8
SECTION 41 - STEERING .....	12
SECTION 44 - AXLE AND WHEELS .....	12
SECTION 50 - CAB AIR CONDITIONING SYSTEM .....	13
SECTION 55 - ELECTRICAL SYSTEMS .....	13
SECTION 90 - CAB .....	22

The following pages are the collation of the contents pages from each section and chapter of the TNF Series Repair manual. Complete Repair part # 87026001.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TNF Series Tractors.

---

## SECTION 00 - GENERAL

BOOK 1 - 87026002

### CONTENTS

Section	Description	Page
	General instructions .....	1

## SECTION 10 - ENGINE

BOOK 1 - 87026002

### Chapter 1 - Engine

#### CONTENTS

Section	Description	Page
<b>10 000</b>	General specifications .....	2
	Data .....	5
	Torque settings .....	20
	Tools .....	21
	Cross-sectional views .....	23
	Lubrication and cooling system diagrams .....	25
	Troubleshooting .....	27
<b>10 001</b>	Removal - Installation - Overhaul .....	31
	Checks, dimensions and repairs .....	73

---

## SECTION 18 - CLUTCH

BOOK 1 - 87026002

### Chapter 1 - Clutch

#### CONTENTS

Section	Description	Page
18 000	General Characteristics .....	1
	Tightening Torque .....	2
	Tools .....	3
	Sectional diagrams .....	3
	Clutch Troubleshooting .....	5
	Stacco - Riattacco .....	6
	Overhaul .....	11
	Checks, measurements and repairs .....	16
	Adjustments .....	17

## SECTION 21 - TRANSMISSIONS

BOOK 2 - 87026003

### Chapter 1 - Mechanical Transmission

#### CONTENTS

Section	Description	Page
21 000	Main data .....	1
	Torque settings .....	2
	Tools .....	5
	Cross-sectional views .....	7
	Description and operation .....	12
	Troubleshooting .....	12
21 110	Installment - Removal .....	13

---

## SECTION 21 - TRANSMISSIONS

BOOK 2 - 87026003

### Chapter 2 - Mechanical Transmission and Splitter

#### CONTENTS

Section	Description	Page
21 000	Main data .....	1
	Torque settings .....	2
	Tools .....	2
	Cross-sectional views .....	3
	Description and operation .....	6
	Troubleshooting .....	7
21 110	Removal-Instalment .....	8

## SECTION 21 - TRANSMISSIONS

BOOK 2 - 87026003

### Chapter 3 - Power Shuttle Transmission

#### CONTENTS

Section	Description	Page
21 000	Main data .....	1
	Tightening Torques .....	3
	Tools .....	4
	Cross-sectional views .....	6
	Description and operation .....	11
	Troubleshooting gearbox, gear range, reverser .....	11
21 110	Installation - Removal .....	12
	Automatic Self Diagnosis (ECM) .....	23
	ECM - First Start-up (self configuration) .....	24
	Diagnosis During Operation .....	25
	Fault Codes Indication .....	26
	Calibration and Diagnostic Unit (CDU) .....	27
	Power Shuttle Fault Code Priority .....	28
	Calibration Unit Use (CDU) .....	31
H1 - Clutches A (LO) and (B) HI Calibration .....	34	

---

## SECTION 21 - TRANSMISSIONS

BOOK 2 - 87026003

### Chapter 3 - Power Shuttle Transmission (Continued)

#### CONTENTS

Section	Description	Page
	Calibration Error Codes .....	38
	H2 - Clutches A (LO) and (B) HI Calibration Values .....	39
	H3 - System Configuration .....	40
	Operator's Presence Seat Switch Configuration .....	42
	H4 - Power Shuttle Hardware/Software Revision Level .....	43
	H5 - Control Switch Diagnosis .....	44
	H6 - Clutch A Fill Time .....	50
	H7 - Clutch B Fill Time .....	52
	H8 - Erasure of Data Stored in NVM .....	53
	H9 - Voltmeter Functions .....	55
	HA - Clutch Pedal Potentiometer and Status Switch .....	61
	Clutch Pedal Potentiometer Replacement .....	63
	HC - Transmission Oil Temperature Sender .....	64
	HD - HI/LO Synchronizer Operation .....	65
	HE - HI/LO Speed Shift Adjustment .....	67
	HF - Stored Error Codes .....	68
	Access to Error Codes via HI/LO Speed Switches .....	69
	Troubleshooting Fault Codes .....	74

---

## SECTION 23 - DRIVE LINES

BOOK 3 - 87026004

### Chapter 1 - Drive Lines

#### CONTENTS

Section	Description	Page
<b>23 000</b>	Main data .....	1
	Torque settings .....	2
	Cross-sectional views .....	3
	Description, operation and 4WD circuit diagram .....	5
	Troubleshooting .....	6
	Removal-Installation .....	7
	<b>23 101</b>	Removal-Installation .....
	Automatic four-wheel drive faults diagnosis .....	12
	Automatic four-wheel drive faults code signals .....	13
	Automatic four-wheel drive faults code .....	15
	Automatic four-wheel calibrations .....	23
	Troubleshooting Fault Codes .....	35

## SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION

BOOK 3 - 87026004

### Chapter 1 - Front Axle Mechanical Transmission

#### CONTENTS

Section	Description	Page
<b>25 000</b>	Main data .....	1
	Torque settings .....	3
	Tools .....	6
	Cross-sectional views .....	7
	Description and operation .....	11
	Troubleshooting .....	13
	<b>25 100</b>	Removal - Installation - Front axle overhaul .....

---

## SECTION 27 - REAR MECHANICAL WHEEL DRIVE

BOOK 3 - 87026004

### Chapter 1 - Rear Mechanical Wheel Drive

#### CONTENTS

Section	Description	Page
27 000	Main specifications .....	1
	Tightening Torque .....	3
	Equipment .....	5
	Sectional drawings .....	8
	Description and operation .....	9
	Troubleshooting .....	11
27 100	Removal - Refitting - Overhaul .....	13

## SECTION 31 - MECHANICAL POWER TAKE-OFF

BOOK 3 - 87026004

### Chapter 1 - Mechanical Power Take-off

#### CONTENTS

Section	Description	Page
31 000	Technical specifications .....	1
	Tools .....	4
	Tightening torque .....	5
	Sectional drawings .....	7
	Description and operation .....	9
	Troubleshooting .....	11
	Removal and refitting .....	11

---

## SECTION 33 - BRAKING SYSTEM

BOOK 3 - 87026004

### Chapter 1 - Braking System

#### CONTENTS

Section	Description	Page
<b>33 000</b>	Technical specifications .....	1
	Tightening torque .....	2
	Sectional drawings .....	3
	Tools .....	5
	Description and operation .....	6
	Troubleshooting .....	7
	<b>33 202</b>	Removal-Refitting - Overhauling service brakes .....
	Removal-Refitting - Service brake pump .....	11
<b>33 110</b>	Removal-Refitting - Parking brake disc .....	18

## SECTION 35 - HYDRAULIC SYSTEM

BOOK 4 - 87026005

### Chapter 1 - Rear Mechanical Hydraulic Lift

#### CONTENTS

Section	Description	Page
<b>35 000</b>	Main data .....	1
	Torque settings .....	3
	Tools .....	5
	Cross-sectional views .....	6
	Description and operation .....	11
	Troubleshooting .....	15
	<b>35 114</b>	Removal - Refitting - Overhaul .....



---

## SECTION 35 - HYDRAULIC SYSTEM

BOOK 4 - 87026005

### Chapter 2 - Open Centre System Auxiliary Control Valves

#### CONTENTS

Section	Description	Page
<b>35 000</b>	Main data - Tools .....	1
	Torque settings .....	2
	Cross-sectional views .....	3
	Description and operation .....	6
	Troubleshooting .....	see lift chapter 1
<b>35 204</b>	Overhaul .....	10

## SECTION 35 - HYDRAULIC SYSTEM

BOOK 4 - 87026005

### Chapter 3 - Trailer Brake Auxiliary Control Valve

#### CONTENTS

Section	Description	Page
<b>35 000</b>	Section .....	1
	Description and operation .....	1
	Troubleshooting .....	8
	Installation - Removal .....	11

---

## SECTION 35 - HYDRAULIC SYSTEM

BOOK 4 - 87026005

### Chapter 4 - Electronically Controlled Hydraulic Lift (Rear)

#### CONTENTS

Section	Description	Page
35 000	Main data .....	1
	Torque settings .....	4
	Tools .....	5
	Cross-sectional views .....	6
	Description and operation .....	11
	Electronic control unit replacement .....	18
	Draft sensor replacement .....	19
	Position sensor replacement .....	22
	Lift calibration .....	24
	HH Menu .....	29
	35 114	Overhaul - Removal-Installation .....
Electronic lift faults diagnosis (postmodification) .....		63
Electronic lift faults signals (postmodification) .....		64
Electronic lift faults codes (postmodification) .....		66
Electronic lift calibration (postmodification) .....		88
Troubleshooting fault codes .....		103

## SECTION 35 - HYDRAULIC SYSTEM

BOOK 4 - 87026005

### Chapter 5 - Non-stop Flow Gear Pump

#### CONTENTS

Section	Description	Page
35 000	Main data .....	1
	Torque settings .....	3
	Description and operation .....	4
	Troubleshooting .....	see chapter 1
35 104	Overhaul .....	5

---

## SECTION 35 - HYDRAULIC SYSTEM

BOOK 5 - 87026006

### Chapter 6 - Front Electronic Lift and Front Power Take-off

#### CONTENTS

Section	Description	Page
	Main data .....	1
	Tightening Torques .....	3
	Cross-sectional views .....	6
	Description and operation .....	11
	Troubleshooting .....	16
<b>31 140 30</b>	Front power take-off transmission shaft R.I. ....	18
<b>31 140 34</b>	Front power take-off transmission shaft A.D. ....	26
<b>31 140 43</b>	Front power take-off electromagnetic coupling R.I. ....	28
<b>31 140 46</b>	Front power take-off electromagnetic coupling A.D. ....	31
<b>31 162 52</b>	Front lift support R.I. ....	35
	Front power take-off faults diagnosis .....	38
	Front power take-off faults code signals .....	39
	Front power take-off faults codes .....	41
	Front power take-off calibration .....	46
	Front electronic lift faults diagnosis .....	58
	Front electronic lift faults code signals .....	59
	Front electronic lift faults codes .....	61
	Front electronic lift calibration .....	72
	Troubleshooting fault codes .....	89

---

## SECTION 41 - STEERING

BOOK 5 - 87026006

### Chapter 1 - Steering

#### CONTENTS

Section	Description	Page
<b>41 000</b>	Torque settings main data .....	1
	Components .....	2
	Operation .....	3
	Troubleshooting .....	5
	Tools .....	6
<b>41 204</b>	Hydrostatic steering control valve - Removal-Refitting .....	7
	Hydrostatic steering control valve - Disassembly-Assembly .....	12
	Hydrostatic steering control valve - Bench testing .....	26

## SECTION 44 - AXLE AND WHEELS

BOOK 5 - 87026006

### Chapter 1 - Axle and Wheels

#### CONTENTS

Section	Description	Page
<b>44 000</b>	Main specifications .....	1
	Sectional Diagrams .....	3
	Tightening Torque .....	4
	Equipment .....	6
	Troubleshooting .....	7
<b>44 101</b>	Removal - Refitting .....	8
<b>44 101</b>	Wheel hub disassembly - Assembly .....	11
<b>44 101</b>	Snub axle overhaul .....	14

---

## SECTION 50 - CAB AIR CONDITIONING SYSTEM

BOOK 5 - 87026006

### Chapter 1 - Cab Air Conditioning System

#### CONTENTS

Section	Description	Page
50 000	Safety instructions .....	2
	General characteristics .....	3
	Tools .....	4
	Operating principles .....	5
	Main components of the cab air conditioning system .....	6
	Cab controls .....	12
	Use .....	15
	Refrigerant recovery - recycling and evacuation - charging stations .....	16
	Troubleshooting .....	29
50 200	Functional testing of air conditioning system .....	23
	Compressor drive belt tension adjustment .....	34
	Air conditioning unit removal and re-fitting .....	35

## SECTION 55 - ELECTRICAL SYSTEMS

BOOK 6 - 87026007

### Chapter 1 - Instruments (Below S/N 1180245)

#### CONTENTS

Section	Description	Page
55100	Analog instruments .....	1
	Transmitters, sensors and switches .....	5
	Digital instruments .....	13
	Maintenance .....	16

---

## SECTION 55 - ELECTRICAL SYSTEMS

BOOK 6 - 87026007

### Chapter 2 - Instruments (Between S/N's 1180245 and 1203065)

#### CONTENTS

#### UNDER DEVELOPMENT

## SECTION 55 - ELECTRICAL SYSTEMS

BOOK 6 - 87026007

### Chapter 3 - Instruments (After S/N 1203065)

#### CONTENTS

Section	Description	Page
55 100	Analog instruments .....	1
	Transmitters, sensors and switches .....	5
	Digital instruments .....	13
	Maintenance .....	16

## SECTION 55 - ELECTRICAL SYSTEMS

BOOK 6 - 87026007

### Chapter 4 - Components (Below S/N 1180245)

#### CONTENTS

Section	Description	Page
55 440	Introduction .....	1
	Dashboard component description .....	1
	Cap component description .....	7
	External controls .....	12
	Central panel controls .....	12
	Maintenance .....	14

---

**SECTION 55 - ELECTRICAL SYSTEMS**

BOOK 6 - 87026007

**Chapter 5 - Components (Between S/N's 1180245 and 1203065)**

CONTENTS

**UNDER DEVELOPMENT**

**SECTION 55 - ELECTRICAL SYSTEMS**

BOOK 6 - 87026007

**Chapter 6 - Components (After S/N 1203065)**

CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
<b>55 440</b>	Introduction .....	1
	Description of components .....	1
	Maintenance .....	18

---

## SECTION 55 - ELECTRICAL SYSTEMS

BOOK 6 - 87026007

### Chapter 7 - Starting System (Below S/N 1180245)

#### CONTENTS

Section	Description	Page
<b>55 000</b>	Technical information .....	1
	Tightening torque .....	1
	Description and operation .....	2
	Starting circuit wiring diagram .....	3
	Troubleshooting .....	4
	System tests .....	5
<b>55 201</b>	Starter motor removal and refitting .....	7
	Overhaul .....	8
	Bench tests .....	10

## SECTION 55 - ELECTRICAL SYSTEMS

BOOK 6 - 87026007

### Chapter 8 - Starting System (Between S/N's 1180245 and 1203065)

#### CONTENTS

**UNDER DEVELOPMENT**



---

## SECTION 55 - ELECTRICAL SYSTEMS

BOOK 6 - 87026007

### Chapter 9 - Starting System (After S/N 1203065)

#### CONTENTS

Section	Description	Page
<b>55 000</b>	Technical data .....	See chapter 7, page 1
	Tightening torque .....	See chapter 7, page 1
	Troubleshooting .....	See chapter 7, page 4
	System testing .....	See chapter 7, page 5
<b>55 201</b>	Starter motor removal-installation .....	See chapter 7, page 7
	Overhaul .....	See chapter 7, page 8
	Bench tests .....	See chapter 7, page 10
	Description and operation .....	1
	Starting circuit wiring diagram .....	2

## SECTION 55 - ELECTRICAL SYSTEMS

BOOK 6 - 87026007

### Chapter 10 - Charging System (Below S/N 1180245)

#### CONTENTS

Section	Description	Page
<b>55 000</b>	Technical information .....	1
	Tightening torque .....	1
	Description and operation .....	2
	System testing and troubleshooting .....	4
<b>55 301</b>	Removal, re-installation and servicing .....	9

---

## SECTION 55 - ELECTRICAL SYSTEMS

BOOK 6 - 87026007

### Chapter 11 - Charging System (Between S/N's 1180245 and 1203065)

CONTENTS

**UNDER DEVELOPMENT**

## SECTION 55 - ELECTRICAL SYSTEMS

BOOK 6 - 87026007

### Chapter 12 - Charging System (After S/N 1203065)

CONTENTS

Section	Description	Page
<b>55 000</b>	Technical information .....	See chapter 10, page 1
	Tightening torques .....	See chapter 10, page 1
	Description and operation .....	See chapter 10, page 2
<b>55 301</b>	Removal-installation and overhaul .....	See chapter 10, page 9
	System testing and troubleshooting .....	1

---

## SECTION 55 - ELECTRICAL SYSTEMS

BOOK 6 - 87026007

### Chapter 13 - Battery

#### CONTENTS

Section	Description	Page
55 000	Technical information .....	1
	Description and operation .....	1
55 300	Removal and re-installation .....	2
	Battery checking and maintenance .....	3
	Charging the battery .....	4
	Battery problems - Frequent causes .....	7

## SECTION 55 - ELECTRICAL SYSTEMS

BOOK 7 - 87026008

### Chapter 14 - Electrical Circuits (Below S/N 1180245)

#### CONTENTS

Section	Description	Page
55 100	Tractor with cab - Component location .....	3
	Tractor without cab - Component location .....	4
	Electrical circuit components .....	5
	Dashboard - Component location .....	9
	Main wiring (version with cab) .....	10
	Fuse and relays (version with cab) .....	11
	Main wiring (version without cab) .....	14
	Fuse and relays (version without cab) .....	15
	Symbols used in electrical circuits .....	17
	Electric wire colour coding .....	18
	Electrical diagram and connector identification code .....	18
	Wiring diagrams .....	20
- General diagrams .....	20	

---

## SECTION 55 - ELECTRICAL SYSTEMS

BOOK 7 - 87026008

### Chapter 14 - Electrical Circuits (Below S/N 1180245) (Continued)

#### CONTENTS

Section	Description	Page
	- Connector overview .....	27
	Main front wiring (engine and light circuits) .....	32
	- Ignition circuit .....	33
	- Side light, main beam and dipped headlight, parking light circuits .....	39
	Main cab wiring (version with cab) .....	46
	Main platform wiring (version without cab) .....	48
	- Direction indicator and hazard light circuits .....	49
	- Ventilation, air conditioning, windscreen and rear window wiper, work and internal lighting circuits .....	54
	Main rear wiring (transmission circuit) .....	61
	- Differential lock and brake light circuit .....	63
	- Trailer brake light circuit .....	70
	- Rear electronic lift circuit .....	76
	- Front lift and PTO circuits .....	87
	- Power Shuttle circuit .....	90
	- Digital instrument circuit .....	100
	Alarm circuit wiring (N.A.S.O. version) .....	106
	- Alarm circuit (N.A.S.O. version) .....	107

## SECTION 55 - ELECTRICAL SYSTEMS

BOOK 7 - 87026008

### Chapter 15 - Electrical Circuits (Between S/N's 1180245 and 1203065)

#### CONTENTS

**UNDER DEVELOPMENT**

---

# SECTION 55 - ELECTRICAL SYSTEMS

BOOK 7 - 87026008

## Chapter 16 - Electrical Circuits (After S/N 1203065)

### CONTENTS

Section	Description	Page
<b>55 100</b>	Electrical circuit components .....	3
	Tractor with cab - Location of components .....	5
	Tractor without cab - Location of components .....	6
	Dashboard - Location of components .....	7
	Main wiring (Model with cab) .....	8
	Fuses and relays (Model with cab) .....	9
	Main wiring (Model without cab) .....	17
	Fuses and relays (Model without cab) .....	18
	Electrical circuit symbols .....	24
	Electrical wires colour coding .....	25
	Electrical diagram and connector identification code .....	25
	Wiring diagrams .....	26
	- General diagrams .....	26
	- Connector overview .....	56
	Main front wiring (engine and lights circuit) .....	61
	- Start-up circuit .....	62
	- Side lights, main beam and dipped headlights, parking lights circuits .....	68
	Main cab wiring (Model with cab) .....	75
	Main platform wiring (Model without cab): .....	76
	- Direction indicator and hazard light circuit .....	77
	- Ventilation, air conditioning, windscreen and rear window wiper, work and internal lighting circuits .....	82
	- Ventilation, air conditioning, windscreen and rear window wiper, work and internal lighting circuits .....	85
	Main rear wiring (Transmission circuit): .....	91
	- Differential lock and brake lights circuit .....	92
	- Trailer brake circuit .....	100
	- Rear mechanical lift transmission circuit .....	104

**Thanks very much for your reading,  
Want to get more information,  
Please click here, Then get the complete  
manual**

**JustClickHere** 

**NOTE:**

**If there is no response to click on the link above,  
please download the PDF document first, and then  
click on it.**

**Have any questions please write to me:  
[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**