

---

# TL70, TL80, TL90, TL100 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL GUIDELINES .....	2
SECTION 10 - ENGINE .....	2
SECTION 18 - CLUTCH .....	3
SECTION 21 - TRANSMISSIONS .....	3
SECTION 23 - DRIVE LINES .....	6
SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION .....	7
SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION .....	8
SECTION 31 - POWER TAKE-OFF .....	8
SECTION 33 - BRAKES .....	10
SECTION 35 - HYDRAULIC SYSTEMS .....	11
SECTION 41 - STEERING .....	17
SECTION 44 - AXLES AND WHEELS .....	17
SECTION 50 - AUXILIARY UNITS .....	18
SECTION 55 - ELECTRICAL SYSTEM .....	19
SECTION 90 - BODYWORK AND DRIVING POSITION .....	25

The following pages are the collation of the contents pages from each section and chapter of the TL Series Tractor Repair manual. Complete Repair part # 87043516.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TL Series Tractors.

---

## SECTION 00 - GENERAL GUIDELINES

BOOK 1 - 87043517

### Chapter 1 - General Guidelines

#### CONTENT

Description	Page
General Instructions .....	1

## SECTION 10 - ENGINE

BOOK 1 - 87043517

### Chapter 1 - Engine

#### CONTENTS

Section	Description	Page
	General specifications .....	2
	Data .....	5
	Tightening Torques .....	22
	Tools .....	23
	Cross-sectional views .....	25
	Lubrication diagram .....	27
	Cooling system diagram .....	28
	Fault diagnosis .....	29
10 001 10	Engine R.I. ....	33
10 001 30	Engine. Compression Test .....	48
10 001 53	Engine D.A. Checks, dimensions and repairs .....	49
10 101 53	Valve guides - Replacement .....	91
10 101 60	Injector sleeve - Replacement .....	95
10 102 70	Crankshaft front seal - Replacement .....	97
10 106 12	Valve tappet clearance - Adjustment .....	100
10 218 30	Engine injector R.I. ....	103
10 246 14	Bosch injection pump R.I. Timing. Air bleed .....	106
10 402 10	Coolant pump R.I. ....	114
10 402 28	Coolant pump D.A. ....	117
10 402 30	Thermostat valve R.I. ....	118
10 406 10	Radiator R.I. ....	122
10 414 10	Coolant pump and generator drive belts. Tension adjustment .....	126

---

## SECTION 18 - CLUTCH

BOOK 2 - 87043518

### Chapter 1 - Clutch

#### CONTENTS

Section	Description	Page
	Clutches. General specifications .....	2
	Tightening Torques .....	3
	Tools .....	3
	Cross-sectional views .....	4
	Fault diagnosis .....	5
	Checks, dimensions and repairs .....	6
18 100 40	Main transmission clutch release - Adjustment .....	8
18 110 10	Clutch R.I. ....	9
18 110 30	Dual Clutch 12"/12" - Test bench overhaul and adjustment .....	21

## SECTION 21 - TRANSMISSIONS

BOOK 2 - 87043518

### Chapter 1 - Transmission and range gear (12 x 4)

#### CONTENTS

Section	Description	Page
	Transmission and range gear. Data .....	2
	Tightening Torques .....	3
	Tools .....	4
	Cross-sectional views .....	6
	Description and Operation .....	8
	Fault diagnosis .....	8
	Gearbox/transmission casing R.I. .... (See operation 21 118 12)*	
	Gearbox/transmission casing D.A. and adjustments .....	(See operation 21 118 85)*

\*Note: These operations are covered in Section 27.

---

## SECTION 21 - TRANSMISSIONS

BOOK 2 - 87043518

### Chapter 2 - Reverser

#### CONTENTS

Section	Description	Page
	Transmission with range gear and reverser. Data .....	2
	Tightening Torques .....	3
	Tools .....	4
	Cross-sectional views .....	4
	Description and Operation .....	6
	Fault diagnosis .....	6
21 110 85	Clutch-reverser casing. Disassembly-Assembly .....	7

## SECTION 21 - TRANSMISSIONS

BOOK 2 - 87043518

### Chapter 3 - OVER DRIVE Unit

#### CONTENTS

Section	Description	Page
	OVER DRIVE transmission data .....	1
	Tightening Torques .....	2
	Tools .....	3
	Cross-sectional views .....	3
	Description and Operation .....	5
	Fault diagnosis .....	5
21 110 10	OVER DRIVE Unit R.I. ....	6
21 110 87	OVER DRIVE Casing - Replacement .....	7

---

## SECTION 21 - TRANSMISSIONS

BOOK 2 - 87043518

### Chapter 4 - 24x12 Mechanical Shuttle Transmission with Dual Command (HI-LO)

#### CONTENTS

Section	Description	Page
	Data .....	2
	Tightening Torques .....	4
	Tools .....	5
	Cross-sectional views .....	6
	Description and Operation .....	10
	Fault diagnosis .....	16
21 110 10	Clutch casing with Dual Command (2 Speed Power Shift) R.I. ....	18
21 110 87	Clutch casing with Dual Command (2 Speed Power Shift) D.A. ....	27
21 168 05	Dual Command (HI-LO) linkage adjustment .....	36
21 168 21	Dual Command (HI-LO) solenoid valve R.I. ....	37
21 168 22	Dual Command (HI-LO) control valve R.I. ....	41
21 168 23	Dual Command (HI-LO) control valve D.A. ....	45

## SECTION 21 - TRANSMISSIONS

BOOK 2 - 87043518

### Chapter 5 - Reverser and creeper unit

#### CONTENTS

Section	Description	Page
	Data .....	2
	Tightening Torques .....	3
	Tools .....	4
	Cross-sectional views .....	6
	Description and Operation .....	8
	Fault diagnosis .....	8
21 110 87	Reverser-clutch casing and creeper unit D.A. ....	9

---

## SECTION 21 - TRANSMISSIONS

BOOK 3 - 87043519

### Chapter 6 - 24 x 24 Dual Command Power Shuttle

#### CONTENTS

Section	Description	Page
	Data .....	2
	Tightening Torques .....	4
	Tools .....	6
	Cross-sectional views .....	8
	Description and Operation .....	11
<b>21 110 88</b>	Clutch casing with Power Shuttle and Dual Command (HI-LO) units D.A. ....	18
<b>21 154 60</b>	Clutch (A) D.A. ....	25
	Clutch (B) D.A. ....	27
	Fault code decoding .....	28
	Description of systems .....	29, 64
	Automatic self-diagnosis .....	30, 65
	Transmission disabled indicators .....	31, 66
	Self-configuration .....	33, 68
	Diagnostics .....	63, 102

## SECTION 23 - DRIVE LINES

BOOK 4 - 87043520

### Chapter 1 - Drive lines

#### CONTENTS

Section	Description	Page
	Data .....	2
	Tightening Torques .....	3
	Tools .....	3
	Cross-sectional views .....	4
	Description of operation and hydraulic diagrams .....	5
	Fault diagnosis .....	6
<b>23 202 20</b>	Services control valve R.I. ....	7
<b>23 202 24</b>	Services control valve D.A. ....	10
<b>23 202 50</b>	Drive gear assembly R.I. ....	12
<b>23 202 52</b>	Drive gear housing R.I. ....	17

---

# SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION

BOOK 4 - 87043520

## Chapter 1 - Front axle mechanical transmission

### CONTENTS

Section	Description	Page
	Data .....	2
	Tightening Torques .....	4
	Tools .....	6
	Cross-sectional views .....	9
	Description of LIM-SLIP self-locking differential operation .....	14
	Description of front differential lock operation .....	15
	Fault diagnosis .....	16
<b>25 100 30</b>	Front axle R.I. ....	17
<b>25 100 38</b>	Front axle D.A. - Overhaul .....	21
<b>25 102 24</b>	Front axle differential - Overhaul .....	30
<b>25 102 27</b>	Front axle differential with LIM-SLIP unit - Overhaul .....	31
<b>25 104 34</b>	Differential lock clutch assembly - Overhaul .....	33
<b>25 108 30</b>	Front epicyclic final drive without brake D.A. ....	35
<b>25 108 30</b>	Front epicyclic final drive with brake D.A. ....	39
<b>25 108 46</b>	Steering knuckle pins and bearings .....	42
	Adjustments .....	43
	Leading wheels. Toe-in check .....	(See operation <b>44 511 80</b> )

---

## SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION

BOOK 4 - 87043520

### Chapter 1 - Rear axle mechanical transmission

#### CONTENTS

Section	Description	Page
	Data .....	2
	Tightening Torques .....	3
	Tools .....	5
	Cross-sectional views .....	10
	Description and Operation .....	15
	Fault diagnosis .....	16
<b>21 118 12</b>	Gearbox-transmission casing R.I. ....	18
<b>21 118 85</b>	Gearbox/transmission casing D.A. and adjustments .....	39
<b>27 110 10</b>	Adjustments - differential lock control pedal travel .....	58
<b>27 120 10</b>	Final drive casing R.I. ....	59
<b>27 120 32</b>	Epicyclic final drive D.A. ....	62
<b>27 120 34</b>	Drive wheel shaft D.A. ....	63
	Platform R.I. .... (See operation <b>90 110 36</b> )	

## SECTION 31 - POWER TAKE-OFF

BOOK 4 - 87043520

### Chapter 1 - Mechanical power take-off

#### CONTENTS

Section	Description	Page
	Data .....	2
	Tools .....	5
	Tightening Torques .....	6
	Cross-sectional views .....	7
	Description of operation .....	11
	Fault diagnosis .....	12
<b>31 112 20</b>	Power take-off housing R.I. ....	13
<b>31 112 45</b>	Power take-off driving shaft D.A. ....	16
<b>31 112 48</b>	Driven shaft and other parts D.A. ....	16



---

# SECTION 31 - POWER TAKE-OFF

BOOK 4 - 87043520

## Chapter 2 - Electro-hydraulic power take-off

### CONTENTS

Section	Description	Page
	Data .....	2
	Tools .....	5
	Tightening Torques .....	6
	Cross-sectional views .....	7
	Description, operation and hydraulic diagrams .....	13
	Fault diagnosis .....	24
<b>31 114 64</b>	Power take-off clutch brake Replacement .....	25
<b>31 116 21</b>	Electro-hydraulic power take-off housing R.I. ....	27
<b>31 116 47</b>	Speed selection control device D.A. ....	31
<b>31 116 55</b>	Power take-off driving shaft D.A. ....	31
<b>31 116 58</b>	PTO driven shaft D.A. ....	31
	Services control valve R.I. .... (See operation <b>23 202 20</b> )	
	Services control valve for tractors without Dual command (HI-LO) D.A. .... (See operations <b>23 202 24 - 23 202 29</b> )	

---

## SECTION 33 - BRAKES

BOOK 4 - 87043520

### Chapter 1 - Brakes

#### CONTENTS

Section	Description	Page
	Data .....	1
	Tightening Torques .....	2
	Cross-sectional views .....	3
	Description and Operation .....	4
	Fault diagnosis .....	7
<b>33 110 08</b>	Handbrake control. Travel adjustment .....	8
<b>33 110 20</b>	Parking brake casing. R.I. ....	9
<b>33 110 26</b>	Parking brake casing. D.A. ....	9
<b>33 202 04</b>	Brake hydraulic system. Air bleed .....	12
<b>33 202 46</b>	Service brake pump. R.I. ....	13
<b>33 202 60</b>	Service brake cylinder. R.I. ....	15

---

# SECTION 35 - HYDRAULIC SYSTEMS

BOOK 5 - 87043521

## Chapter 1 - Hydraulic System - All Models

### CONTENTS

Section	Description	Page
	Precautionary Statements .....	3
	Hydraulic System - General Description .....	4
	Hydraulic System Configurations (Table 1) .....	5
	Low Pressure, Steering and Lubrication System .....	7
	High Pressure System Description and Operation .....	7
	Oil Flow Priority (Table 2) .....	7
	Hydraulic Power Lift (HPL) Control .....	8
	Lift-O-Matic .....	11
	Auxiliary Control Valves - General Description .....	12
	Adding Rear Remote Valves .....	12
	Single and Double Acting Cylinders .....	12
	Remote Valves with Automatic Release .....	12
	Remote Valves with Float Setting .....	12
	Rear Remote Valve Control Levers .....	12
	Regulating Oil Flow .....	13
	Optional Joystick Control for Mid-Mount Remote Valves .....	13
	Mid-Mount Remote Control Valves (Optional) .....	14
	Auxiliary Control Valve Oil Flow .....	15
	Double-Acting Valve with Automatic Detent Release and Float Position - Float Phase ....	15
	Double-Acting Valve with Automatic Detent Release and Float Position - Lift Phase .....	16
	Double-Acting Valve with Automatic Detent Release and Float Position - Lower Phase ...	17
	Double-Acting Valve without Automatic Detent Release - Lift Phase .....	18
	Double-Acting Valve without Automatic Detent Release - Lower Phase .....	18
	Single-Acting Valve without Automatic Detent Release - Lift Phase .....	19
	Single-Acting Valve without Automatic Detent Release - Lower Phase .....	19
35 104 30	Lift Oil Pump - Disassembly-Assembly .....	24
	Testing .....	26
	Adjustment of the Automatic Detent Release Pressure .....	28
35 204 46	Flow Control Valve .....	29
35 116 30	Supplementary Cylinder - Removal and Installation .....	32
35 116 33	Supplementary Cylinder D.A. ....	32
	Data .....	33

---

## SECTION 35 - HYDRAULIC SYSTEMS

BOOK 5 - 87043521

### Chapter 2 - Mechanically Operated Hydraulic Power Lift (HPL)

#### CONTENTS

Section	Description	Page
	Special Tools .....	2
	Specifications .....	3
	Torque Valves .....	6
	HPL Control Valve .....	6
	Hydraulic Power Lift Troubleshooting .....	10
	Hydraulic Power Lift (HPL) Control Valve Oil Flow .....	12
35 108 16	Lift-O-Matic Control D.A. ....	18
35 110 08	Linkage Adjustments .....	19
	Operations to be Performed to Adjust Upper Stroke Limit of the Lift-O-Matic Device ...	21
35 110 17	Rear Lift External Controls D.A. ....	22
35 110 30	Rear Lift R.I. ....	23
35 110 40/42/46	Rear Hydraulic Lift D.A. ....	30
	Lift Adjustments .....	35
35 114 10	Lift Control Valve R.I. ....	41
35 114 14	Lift Control Valve D.A. ....	43

---

## SECTION 35 - HYDRAULIC SYSTEMS

BOOK 5 - 87043521

### Chapter 3 - (KONTAK) Auxiliary Control Valves TL Standard

#### CONTENTS

Section	Description	Page
	Auxiliary Control Valve Cross-sectional Views .....	2
	TL Standard Kontak Remote Control Valves .....	5
	Standard Kontak Tube Arrangement .....	6
	Kontak Mid Mount Remotes .....	11
35 204 46	Flow Control Valve D.A. ....	15
35 204 46	Auxiliary Control Valves D.A. ....	16

## SECTION 35 - HYDRAULIC SYSTEMS

BOOK 5 - 87043521

### Chapter 4 - (REXROTH) Auxiliary Control Valves TL Deluxe - Before Serial Number 1277947

#### CONTENTS

Section	Description	Page
	TL Deluxe Hydraulic Systems Containing Rexroth Remote Control Valves .....	2
	Rexroth Auxiliary Control Valves .....	5
	Unload Valve .....	9

---

## SECTION 35 - HYDRAULIC SYSTEMS

BOOK 5 - 87043521

### Chapter 5 - (BOSCH) Auxiliary Control Valves TL Deluxe - After Serial Number 1273956

#### CONTENTS

Section	Description	Page
	Deluxe Rear Remote Valve Arrangement (BOSCH) .....	2
	Deluxe Rear Remote Valve Arrangement (BOSCH with Factory Installed Option) .....	3
	Bosch Type Rear Remote Valve .....	5
	TL Deluxe Hydraulic Systems Containing BOSCH Type Remote Valves .....	6
	Bosch Closed-center Remote Control Valves With Open-center Pump .....	7
35 114 30	Pressure Relief Valve R.I. ....	11
35 204 40	BOSCH Control Valves Removal and Installation .....	12
35 204 46	BOSCH Control Valves Disassembly and Assembly .....	15
	Connecting Plate .....	18

## SECTION 35 - HYDRAULIC SYSTEMS

BOOK 5 - 87043521

### Chapter 6 - Low Pressure Hydraulic System

#### CONTENTS

Section	Description	Page
	Low-Pressure, Steering and Lubrication Circuit - Description and Operation .....	2
35 104	Low-Pressure Circuit Hydraulic Pump .....	2
	Power Shuttle - Hydraulic System .....	3
	Hydraulic Power Shuttle Transmission .....	3
	Oil Flow .....	5
	Low Pressure, Steering and Lubrication Circuit Oil Flow .....	7
	Power Take-Off [Electro-Hydraulic] .....	30
	Dual Command (HI-LO) .....	31

---

## SECTION 35 - HYDRAULIC SYSTEMS

BOOK 5 - 87043521

### Chapter 7 - Low-Pressure Hydraulic System Overhaul and Adjustments

#### CONTENTS

Section	Description	Page
	Dual Command 12 Speed Power Shift .....	2
	Power Shuttle and Dual Command (HI-LO) .....	3
	Hydrostatic Steering Hydraulic Pump .....	5
	Electro-hydraulic PTO Data .....	6
	Data on Control Valve with Solenoid Valves .....	6
	Steering System .....	7
	Special Tools .....	8
	Cross Sectional Views .....	10
	Dual Command (HI-LO) Troubleshooting (Front Clutch) .....	14
	Dual Command (HI-LO) Troubleshooting (Rear Clutch) .....	15
	Hydraulically Controlled Differential Lock Troubleshooting .....	16
	Front Axle Hydraulic Differential Lock Troubleshooting .....	17
	Hydrostatic Steering Troubleshooting .....	18
	Electro-Hydraulic Drive Gear Troubleshooting .....	20
23 202 20	Services Control Valve R.I. ....	21
23 202 24	Services Control Valve R.I. (without Dual Command) D.A. ....	24
41 206 20	Hydrostatic Steering Oil Pump D.A. ....	26
21 168 21	Dual Command (HI-LO) Solenoid Valve R.I. ....	29
21 168 22	Dual Command (HI-LO) Control Valve R.I. ....	33
21 168 23	Dual Command (HI-LO) Control Valve D.A. ....	37

---

## SECTION 35 - HYDRAULIC SYSTEMS

BOOK 5 - 87043521

### Chapter 8 - Trailer brake auxiliary control valves (ISO)

#### CONTENTS

Section	Description	Page
	Cross-sectional views .....	1
	Description and Operation .....	1
	Trailer brake control valve hydraulic circuit diagram with KONTAK control valves .....	2
	Trailer brakes control valve hydraulic circuit diagram with BOSCH control valves .....	3
	Functional testing and troubleshooting .....	10

## SECTION 35 - HYDRAULIC SYSTEMS

BOOK 5 - 87043521

### Chapter 9 - Electronic draft control (ISO)

#### CONTENTS

Section	Description	Page
	Data .....	2
	Tightening Torques .....	4
	Tools .....	4
	Details of electronic lift components .....	5
	Description and Operation .....	8
	Fault code decoding .....	12
	Diagnostics .....	13
<b>35 130 30</b>	Lift electronic control centre - Replacement .....	47
<b>35 130 31</b>	Electronic lift control panel R.I. ....	48
<b>35 130 36</b>	Lift arm potentiometer - Replacement .....	49
<b>35 130 56</b>	Draft sensor R.I. ....	50
<b>35 134 04</b>	Electronic lift calibration .....	52
<b>35 134 30</b>	Electronic draft control R.I. ....	54
<b>35 138 20</b>	Hydraulic control valve R. I. ....	60



---

## SECTION 41 - STEERING

BOOK 6 - 87043522

### Chapter 1 - Steering

#### CONTENTS

Operation	Description	Page
	Data .....	2
	Tightening Torques .....	4
	Components and operating diagrams .....	5
	Fault diagnosis .....	11
	Tools .....	12
<b>41 204 30</b>	Hydrostatic steering control valve R.I. ....	13
<b>41 204 34</b>	Hydrostatic steering control valve D.A. ....	19
<b>41 204 38</b>	Hydrostatic steering control valve bench tests .....	33
<b>41 206 20</b>	Hydrostatic steering oil pump D.A. ....	35
<b>41 216 10</b>	Front axle steering cylinder R.I. ....	37
<b>41 216 20</b>	Front axle steering cylinder R.I. ....	38

## SECTION 44 - AXLES AND WHEELS

BOOK 6 - 87043522

### Chapter 1 - Axles and wheels

#### CONTENTS

Operation	Description	Page
	Data .....	1
	Cross-sectional views .....	3
	Tightening Torques .....	4
	Fault diagnosis and equipment .....	5
<b>44 101 22</b>	Front axle hub D. A. ....	6
<b>44 101 30</b>	Front axle R.I. ....	9
<b>44 101 46</b>	Stub axle Overhaul .....	12
<b>44 511 80</b>	Checking 2 WD front wheel camber and toe-in .....	15
<b>44 511 80</b>	Checking 4 WD front wheel alignment .....	16

---

# SECTION 50 - AUXILIARY UNITS

BOOK 6 - 87043522

## Chapter 1 - Auxiliary units

### CONTENTS

<b>Operation</b>	<b>Description</b>	<b>Page</b>
	Safety regulations .....	2
	General specifications .....	3
	Tools .....	4
	Operating principles .....	5
	Main components of the cab air conditioning system .....	7
	Warnings for air conditioning system repair operations .....	11
	Cab controls .....	12
	Instructions for use - air conditioning system .....	15
	Refrigerant recovery - recycling and evacuation - charging stations .....	15
	Electronic leak detector 380000314 .....	16
	Air conditioning system maintenance .....	17
	Air conditioning system troubleshooting .....	18
	Air conditioning system troubleshooting .....	19
<b>50 200 03</b>	Cab air conditioning system functional testing .....	23
<b>50 200 06</b>	Checking for gas leaks with leak detector 380000314 .....	24
<b>50 200 10</b>	Compressor drive belts. Tension adjustment .....	25
<b>50 200 26</b>	Air conditioner compressor. R.I. ....	26
<b>50 200 40</b>	Heating pipes. Replacement .....	28
<b>50 200 60</b>	Air conditioning pipes. Replacement .....	30
<b>50 200 72</b>	Air conditioner condenser. Replacement .....	36
<b>50 200 74</b>	Dryer filter. Replacement .....	37
<b>50 206 50</b>	Cab heater unit. R.I. ....	39
<b>50 206 56</b>	Air conditioner evaporator. Replacement .....	42
<b>50 206 66</b>	Electric cab fan. R.I. ....	45

---

## SECTION 55 - ELECTRICAL SYSTEM

BOOK 7 - 87043523

### Chapter 1 - Electrical System on Models Before Serial Number 1266941 (CAB) or 1268756 (ROPS)

#### CONTENTS

Section	Description	Page
55 000	Instruments .....	3
	Components .....	13
	Starting System .....	22
	Charging System .....	33
	Battery .....	51
	Electrical Circuits .....	58

## SECTION 55 - ELECTRICAL SYSTEM

BOOK 7 - 87043523

### Chapter 2 - INSTRUMENTS *(after SN 1266941 for models with cab, after SN 1268756 for models with platform)*

#### CONTENTS

Section	Description	Page
55418	Analog instruments .....	1
	Transmitters, sensors and switches .....	4
	Maintenance .....	12
	Electronic instruments .....	13
	Diagnostics .....	17

---

## SECTION 55 - ELECTRICAL SYSTEM

BOOK 7 - 87043523

### Chapter 3 - COMPONENTS *(after SN 1266941 for models with cab, after SN 1268756 for models with platform)*

#### CONTENTS

Section	Description	Page
55 40440	Introduction .....	1
	Dashboard controls .....	2
	Operating controls, right-hand side .....	7
	Electronic lift control panel .....	9
	Controls on right-hand cab upright .....	10
	Cab controls .....	12
	External controls .....	14
	Maintenance .....	15

## SECTION 55 - ELECTRICAL SYSTEM

BOOK 7 - 87043523

### Chapter 4 - STARTING SYSTEM *(after SN 1266941 for models with cab, after SN 1268756 for models with platform)*

#### CONTENTS

Section	Description	Page
55 000	Technical data .....	1
	Tightening torques .....	1
	Description and operation .....	2
	Troubleshooting .....	4
	System testing .....	5
	Removal-Installation .....	7
	Bench tests .....	10

**Thanks very much for your reading,  
Want to get more information,  
Please click here, Then get the complete  
manual**

**JustClickHere** 

**NOTE:**

**If there is no response to click on the link above,  
please download the PDF document first, and then  
click on it.**

**Have any questions please write to me:  
[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**