

---

# TC29DA, TC33DA REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION .....	2
SECTION 10 - ENGINE .....	3
SECTION 18 - CLUTCH .....	10
SECTION 21 - GEAR TRANSMISSION .....	11
SECTION 25 - FWD AXLE .....	14
SECTION 27 - DIFFERENTIAL, REAR AXLE .....	17
SECTION 29 - HYDROSTATIC TRANSMISSION .....	18
SECTION 31 - POWER TAKE-OFF SYSTEMS .....	22
SECTION 33 - BRAKES .....	24
SECTION 35 - HYDRAULIC SYSTEM .....	24
SECTION 41 - STEERING SYSTEMS .....	27
SECTION 44 - WHEELS AND TIRES .....	29
SECTION 55 - ELECTRICAL SYSTEM .....	30
SECTION 90 - PLATFORM .....	36

The following pages are the collation of the contents pages from each section and chapter of the TC29DA, TC33DA Repair manual. Complete Repair part # 87057407.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TC29DA, TC33DA Tractors.

---

# SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87057408

## Chapter 1 - General Information

### CONTENTS

Section	Description	Page
	Personal Safety .....	2
	Machine Safety .....	2
	Safety .....	3
	Precautionary Statements .....	3
	Servicing the Tractor .....	3
	Operating the Tractor .....	4
	Driving the Tractor .....	4
	Operating the PTO .....	5
	Diesel Fuel .....	5
	Safety Frame (ROPS) .....	5
	Safety Decals .....	6
	Instruction Decals .....	7
	Ecology and the Environment .....	11
	Specifications .....	13
	General Dimensions .....	19
	Tightening Torques .....	22
00 400	Lubrication and Maintenance .....	24
	Lubrication .....	24
	Liquid Ballast (Optional) .....	26
	Tire Pressure .....	26
	Rear Tire Liquid .....	26

---

# SECTION 10 - ENGINE

BOOK 1 - 87057408

## Chapter 1 - Engine Systems

### CONTENTS

Section	Description	Page
	Specifications .....	6
	Engine Bolt Torque Specifications .....	14
	Engine Fuel System Bolt Torque Specifications .....	14
	Metric Bolt Torque Specifications .....	15
	Special Tools .....	16
	Compression Test and Tools .....	16
	Description of Operation - General Information .....	17
	Cylinder Head and Valve Train Components .....	18
	Cylinder Block Assembly .....	18
	Troubleshooting .....	20
	Overhaul .....	24
	Engine .....	24
	Preparation .....	24
	Fuel Injector and Glow Plug .....	25
	Removal .....	25
	Oil Pressure Switch .....	26
	Removal .....	26
	Temperature Sending Switch and Alternator .....	26
	Removal .....	26
	Fan, Water Pump and External Oil Tube .....	26
	Removal .....	26
	Head Cover .....	27
	Removal .....	27
	Rocker Arm Shaft and Support Bracket .....	27
	Removal .....	27
10 101	Cylinder Head .....	28
	Removal .....	28
	Valve Tappet .....	28
	Removal .....	28
	Fuel Shutoff Solenoid .....	28
	Removal .....	28
	Timing Gear Cover .....	29
	Removal .....	29

---

# SECTION 10 - ENGINE

BOOK 1 - 87057408

## Chapter 1 - Engine Systems (Continued)

### CONTENTS

Section	Description	Page
10 106	Timing Gears and Camshaft .....	31
	Removal .....	31
10 102	Oil Sump .....	31
	Removal .....	31
	Oil Suction Pipe and Strainer .....	32
	Removal .....	32
	Connecting Rods, Bearings, Pistons and Rings .....	32
	Removal .....	32
10 103	Flywheel .....	33
	Removal .....	33
	Backplate and Oil Seal .....	33
	Removal .....	33
	Crankshaft and Main Bearings .....	33
	Removal .....	33
10 101	Cylinder Head .....	34
	Disassembly .....	34
	Inspection and Repair .....	34
	Valve Seats .....	35
	Inspection and Repair .....	35
	Valves .....	36
	Inspection and Replacement .....	36
	Valve Guides .....	37
	Inspection and Replacement .....	37
	Valve Springs .....	38
	Inspection and Replacement .....	38
	Rocker Arms .....	38
	Inspection and Replacement .....	38
	Push Rods .....	39
	Inspection and Replacement .....	39
	Cylinder Head .....	40
	Assembly .....	40
	Cylinder Block .....	40
	Inspection .....	40

---

# SECTION 10 - ENGINE

BOOK 1 - 87057408

## Chapter 1 - Engine Systems (Continued)

### CONTENTS

Section	Description	Page
10 105	Pistons .....	41
	Disassembly and Inspection .....	41
	Piston Rings .....	43
	Disassembly and Inspection .....	43
	Connecting Rods .....	43
	Disassembly and Inspection .....	43
	Connecting Rod Bearing Oil Clearance Check .....	45
	Pistons, Rings and Connecting Rod .....	46
	Assembly .....	46
10 103	Main Bearing and Thrust Washer .....	47
	Removal and Inspection .....	47
	Crankshaft .....	47
	Inspection .....	47
	Crankshaft Bearing (Bushing) .....	48
	Inspection .....	48
	Replacement .....	49
	Crankshaft Main Bearing and Thrust Washer .....	49
	Assembly .....	49
	Port Block .....	50
	Removal .....	50
	Installation .....	50
10 106	Timing Gear .....	50
	Inspection .....	50
	Camshaft .....	51
	Disassembly .....	51
	Inspection .....	51
	Assembly .....	51
10 103	Flywheel .....	52
	Inspection and Repair .....	52
10 102	Timing Gear Housing .....	52
	Front Oil Seal and Steering Pump Seal .....	52
	Replacement .....	52

---

# SECTION 10 - ENGINE

BOOK 1 - 87057408

## Chapter 1 - Engine Systems (Continued)

### CONTENTS

Section	Description	Page
10 103	Crankshaft and Bearing Holder .....	53
	Installation .....	53
	Rear Oil Seal and Backplate .....	53
	Installation .....	53
	Flywheel .....	54
	Installation .....	54
10 105	Pistons and Connecting Rods .....	54
	Installation .....	54
	Oil Suction Pipe and Suction Strainer .....	55
	Installation .....	55
	Oil Sump .....	55
	Installation .....	55
10 106	Camshaft and Camshaft Gear .....	56
	Installation .....	56
10 106	Idler Gear, Oil Pump and Injection Timing .....	56
	Installation .....	56
	Timing Gear Cover .....	56
	Installation .....	56
	Crankshaft Pulley .....	57
	Installation .....	57
	Fuel Injection Pump .....	57
	Installation .....	57
	Power Steering Pump .....	57
	Installation .....	57
10 101	Head Gasket Selection .....	58
	Cylinder Head .....	58
	Assembly .....	58
10 106	Valve Clearance Adjustment .....	59
	Head Cover .....	59
	Installation .....	59
	Water Pump and Cooling Fan .....	59
	Installation .....	59

---

# SECTION 10 - ENGINE

BOOK 1 - 87057408

## Chapter 1 - Engine Systems (Continued)

### CONTENTS

Section	Description	Page
	External Oil Tube .....	60
	Installation .....	60
	Glow Plug and Connector .....	60
	Installation .....	60
	Fuel Injector .....	60
	Installation .....	60
10 218	Fuel Piping .....	61
	Installation .....	61
	Alternator and Temperature Sender Switch .....	61
	Installation .....	61
	Exhaust Manifold .....	61
	Installation .....	61
10 304	Description of Operation - Engine Lubrication System .....	62
10 206	Oil Filter .....	65
	Construction and Function .....	65
	Maintenance .....	65
10 304	Oil Pump .....	65
	Removal .....	65
	Inspection .....	65
	Installation and Adjustment .....	66
	Engine Oil Pressure Check .....	67
	Oil Pressure Relief Valve .....	68
	Removal .....	68
	Installation .....	68
	Oil Consumption .....	68
10 400	Description of Operation - Cooling System .....	69
	Maintenance .....	71
	Coolant .....	71
	Radiator Cap .....	71
10 402	Thermostat .....	72
10 402	Water Pump .....	72
10 414	Cooling Fan .....	72
	Overhaul .....	73

---

## SECTION 10 - ENGINE

BOOK 1 - 87057408

### Chapter 1 - Engine Systems (Continued)

#### CONTENTS

Section	Description	Page
10 406	Radiator .....	73
	Removal .....	73
	Inspection and Repair .....	75
	Installation .....	75
10 402	Water Pump .....	77
	Removal .....	77
	Inspection and Repair .....	78
	Installation .....	78
10 402	Thermostat .....	79
	Removal .....	79
	Inspection and Repair .....	80
	Installation .....	80

## SECTION 10 - ENGINE

BOOK 1 - 87057408

### Chapter 2 - Fuel System

#### CONTENTS

Section	Description	Page
	Specifications .....	3
	Fuel Injection Pump Specifications .....	4
	Special Tools .....	4
	Troubleshooting - General .....	5
	Troubleshooting - Fuel Injectors .....	8
	Troubleshooting - Governor .....	9
10 242	Description of Operation - Injection Pump .....	10
	Effective Stroke .....	11
10 244	Fuel Variation Mechanism .....	11
	Delivery Valve .....	12



---

# SECTION 10 - ENGINE

BOOK 1 - 87057408

## Chapter 2 - Fuel System (Continued)

### CONTENTS

Section	Description	Page
	Injection Quantity Adjustment Mechanism .....	13
10 244	CTD (Compact Timing Device) Mechanism .....	13
10 214	Delivery Valves .....	15
10 214	Injection Pump .....	17
	Removal .....	17
	Repair .....	18
	Installation .....	19
	Timing and Governor Adjustment .....	20
10 230	Original Pump and Drive Components .....	20
	Installation .....	20
	New Pump or Drive Component .....	21
	Installation .....	21
	Spill-Timing Procedure .....	22
	Bleeding the Fuel System .....	26
	Fuel Setting - Adjustment .....	28
	Fuel Screw/High Idle .....	28
10 230	Description of Operation - Governor .....	29
	Governor .....	31
	Disassembly .....	31
	Assembly .....	32
10 218	Description of Operation - Injectors .....	34
	Injectors .....	35
	Removal .....	35
	Disassembly .....	36
	Assembly and Adjustment .....	36
	Engine Breather Valve .....	37
	Removal .....	38
	Installation .....	38
	Troubleshooting .....	39

---

# SECTION 18 - CLUTCH

BOOK 1 - 87057408

## Chapter 1 - Clutch

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Troubleshooting .....	3
	Specifications .....	4
	Special Tools .....	5
	Description of Operation - Single Clutch .....	6
	HST Transmission .....	6
	Adjustments .....	8
	Free-Play .....	8
	Overhaul .....	9
	Single Clutch .....	9
	Removal .....	9
	Inspection .....	9
	Installation .....	10
	Adjustment .....	11
	Release Lever Height .....	11
	Description of Operation - Double Clutch .....	13
	9 x 3 Gear Transmission .....	13
	Adjustments .....	14
	Free-Play .....	14
	PTO Clutch .....	14
	Overhaul .....	15
	Double Clutch .....	15
	Disassembly .....	15
	Inspection .....	16
	Assembly .....	16
	Double Clutch Adjustments .....	17
	Servicing Clutch-Related Components .....	18
	Clutch Pilot Bearing (9 x 3 Transmission Only) .....	18
	Removal .....	18
	Installation .....	18

---

## SECTION 18 - CLUTCH

BOOK 1 - 87057408

### Chapter 1 - Clutch (Continued)

#### CONTENTS

Section	Description	Page
	Clutch Dimensions .....	19
	Clutch Release Bearing .....	21
	Removal .....	21
	Inspection .....	21
	Assembly .....	22
	Clutch Linkage Components .....	22
	Clutch Cross Shaft Bushings .....	22
	Removal .....	22
	Assembly .....	23
	Clutch Pedal Bushings .....	24
	Removal .....	24
	Assembly .....	24

## SECTION 21 - GEAR TRANSMISSION

BOOK 2 - 87057409

### Chapter 1 - Gear Transmission

#### CONTENTS

Section	Description	Page
	Specifications .....	3
	General Bolt Torque Specifications .....	4
	Special Tools .....	5
	Description of Operation .....	6
	Powerflow .....	8
	Initial Power Flow - Transmission Input .....	10
	Initial Power Flow - PTO Input .....	11
	FWD Power Flow .....	12
21 110 10	Overhaul .....	13

---

# SECTION 21 - GEAR TRANSMISSION

BOOK 2 - 87057409

## Chapter 1 - Gear Transmission (Continued)

### CONTENTS

Section	Description	Page
21 114	Separating the Tractor at Clutch Housing/Engine .....	13
	Separating Clutch Housing/Transmission .....	20
	Separating Transmission/Differential .....	20
	Clutch Housing .....	21
21 148 63	Disassembly .....	21
	Shift Rails .....	22
	Removal .....	22
	Main Shaft and Gears .....	22
	Removal .....	22
	PTO Countershaft and Gears .....	23
	Removal .....	23
	Countershaft and Gears .....	23
	Removal .....	23
	Reverse Idler Shaft and Gear .....	24
	Removal .....	24
	FWD Shift Rail .....	24
	Removal .....	24
	FWD Driveshaft and Gear .....	25
	Removal .....	25
	Rear Main Shaft and Gears .....	25
	Removal .....	25
	Range Gear Shift Rail, Arm and Fork .....	25
	Removal .....	25
	Drive Pinion and Gears .....	25
	Removal .....	25
	Inspection .....	26
	Assembly .....	26
	Preparation .....	26
	Drive Pinion and Gears .....	27
	Installation .....	27
	Range Gear Shift Rail, Arm and Fork .....	27
	Installation .....	27

---

# SECTION 21 - GEAR TRANSMISSION

BOOK 2 - 87057409

## Chapter 1 - Gear Transmission (Continued)

### CONTENTS

Section	Description	Page
	Rear Main Shaft and Gears .....	28
	Installation .....	28
	FWD Driveshaft and Gear .....	28
	Installation .....	28
	FWD Shift Rail .....	29
	Installation .....	29
	Reverse Idler Shaft and Gear .....	29
	Installation .....	29
	Countershaft and Gears .....	30
	Installation .....	30
	PTO Countershaft and Gears .....	30
	Installation .....	30
	Main Shaft and Gears .....	32
	Installation .....	32
	Shift Rails .....	33
	Installation .....	33
	Clutch Housing .....	34
	Assembly .....	34
	Transmission Differential .....	35
	Assembly .....	35
	Clutch Housing/Transmission .....	36
	Assembly .....	36
	Clutch Housing/Engine .....	37
	Assembly .....	37
	Overhaul - Main Shift Lever .....	45

---

# SECTION 25 - FWD AXLE

BOOK 2 - 87057409

## Chapter 1 - SuperSteer

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Specifications .....	3
	Front to Rear Axle Ratio .....	3
	Special Tools .....	6
25 100	Description of Operation - SuperSteer, Front Axle and Sensitrack .....	6
	Automatic Position (Engaged) .....	7
	Automatic Position (Disengaged) .....	7
	Full Time Front Wheel Drive (Locked Down) .....	7
	SuperSteer Front Axle .....	8
	Sensitrack .....	10
	Removal .....	10
	Disassembly .....	11
	Inspection and Repair .....	11
	Assembly .....	12
	Cable Adjustment .....	15
	Installation .....	15
25 100	SuperSteer Axle .....	16
	Removal .....	16
	SuperSteer Axle Components .....	19
25 108	Reduction Gear - Drop Box .....	20
	Removal .....	20
	Disassembly .....	22
	Reduction Gear Box Assembly .....	23
	Seal Installation .....	23
	Front Axle and Differential .....	25
25 102	Disassembly .....	25
	Drive Pinion .....	26
	Disassembly .....	26
	Front Axle .....	26
	Inspection and Repair .....	26
	Differential .....	27
	Inspection .....	27

---

## SECTION 25 - FWD AXLE

BOOK 2 - 87057409

### Chapter 1 - SuperSteer (Continued)

#### CONTENTS

Section	Description	Page
	Front Axle and Differential .....	27
	Assembly .....	27
	Differential Gear .....	28
	Assembly .....	28
	Axle and Differential .....	28
	Assembly .....	28
	Ring Gear-To-Pinion .....	29
	Backlash Check and Adjustment .....	29
	SuperSteer Axle .....	33
	Installation .....	33
	Crankshaft Pulley .....	34
	Installation .....	34
	Steering Stops .....	35
	Adjustment .....	35

---

## SECTION 25 - FWD AXLE

BOOK 2 - 87057409

### Chapter 2 - Standard FWD Axle

#### CONTENTS

Section	Description	Page
	Specifications .....	2
	Four Wheel Drive .....	2
	Bolt Torque Specifications .....	3
	Troubleshooting .....	4
	Description of Operation .....	5
	Standard Front-Wheel Drive Axle .....	5
	Removal .....	7
25 102	Front Axle and Differential .....	8
	Disassembly .....	8
	Drive Pinion .....	9
	Disassembly .....	9
	Front Axle .....	10
	Inspection and Repair .....	10
	Differential .....	11
	Inspection and Repair .....	11
	Front Axle and Differential .....	11
	Assembly .....	11
	Differential Gear .....	12
	Assembly .....	12
	Axle and Differential .....	12
	Assembly .....	12
	Ring Gear-To-Pinion .....	13
	Backlash Check and Adjustment .....	13
	Front Wheel Drive Axle .....	15
	Installation .....	15
	Reduction Gear – Drop Box .....	17
	Disassembly .....	17
	Reduction Gear Box .....	19
	Assembly .....	19
	Steering Stops .....	21
	Adjustment .....	21



---

# SECTION 27 - DIFFERENTIAL, REAR AXLE

BOOK 2 - 87057409

## Chapter 1 - Differential, Rear Axle

### CONTENTS

Section	Description	Page
	Specifications .....	2
	Ring Gear and Pinion Gear Pattern Specification and Adjustment .....	2
	Bolt Torque Specifications .....	3
	Special Tools .....	3
	Introduction .....	4
27 110	Description of Operation - Differential Assembly .....	5
27 110	Differential Lock .....	6
	Overhaul .....	7
27 106	Differential .....	7
	Removal .....	7
	Disassembly .....	9
	Inspection .....	9
	Drive Pinion .....	10
	Removal .....	10
	Disassembly (with HST Transmission) .....	10
	Disassembly (with 9 x 3 Transmission) .....	11
	Assembly and Installation .....	12
	Differential .....	13
	Assembly and Installation .....	13
	Description of Operation - Rear Axle .....	15
	Overhaul .....	16
	Rear Axle .....	16
	Removal .....	16
27 126	Disassembly .....	17
	Inspection .....	20
	Assembly .....	20

---

# SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87057409

## Chapter 1 - Hydrostatic Transmission

### CONTENTS

Section	Description	Page
	Specifications .....	5
	Hydrostatic Transmission .....	5
	Bolt Torques .....	5
	Special Tools .....	8
	Troubleshooting .....	9
	Description of Operation .....	10
29 202	Hydrostatic Transmission – TC29DA and TC33DA .....	10
29 212	Variable Displacement Pump .....	12
29 212	Fixed Displacement Motor .....	13
	Fluid Flow .....	14
	Neutral Position .....	14
	Forward Position .....	15
	Reverse Position .....	16
	HST Charge Circuit .....	17
	Overhaul .....	18
	Separating the Tractor Between the Engine and Clutch Housing .....	18
	Attaching the Tractor at Engine and Clutch Housing .....	21
	Separating the Tractor Between the Hydrostatic Transmission and the Rear Axle Center Housing .....	22
	Hydrostatic Unit .....	22
	Removal .....	22
	Hydrostatic Gearbox .....	23
	Removal .....	23
	Hydrostatic Unit and Gearbox .....	23
	Installation .....	23
29 202	Hydrostatic Pump .....	26
	Disassembly .....	26
	Hydrostatic Motor .....	27
	Disassembly .....	27
	Hydrostatic Motor Shaft .....	29
	Disassembly .....	29

---

# SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87057409

## Chapter 1 - Hydrostatic Transmission (Continued)

### CONTENTS

Section	Description	Page
	Charge Pump .....	29
	Disassembly .....	29
	Swash Plate .....	30
	Disassembly .....	30
	Inspection .....	30
	Hydrostatic Pump .....	32
	Assembly .....	32
	HST Piston Pump Cylinder Block .....	33
	Assembly .....	33
	HST Motor Cylinder Block .....	35
	Assembly .....	35
29 130	Port Block - Neutral and Feed Valves .....	36
	Disassembly .....	36
	Inspection .....	36
	Assembly .....	36
	Neutral Valve .....	37
	Disassembly .....	37
	Inspection .....	37
	Assembly .....	37
	Charge Pump Relief Valve .....	37
	Disassembly .....	37
	Inspection .....	37
	Assembly .....	37
	High Pressure Relief Valve .....	38
	Removal .....	38
	Installation .....	38
	Hydrostatic Pump and Port Block .....	38
	Assembly .....	38
	Motor and Port Block .....	40
	Assembly .....	40
	HST Cooler Check Valve .....	41
	Disassembly .....	41

---

# SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87057409

## Chapter 1 - Hydrostatic Transmission (Continued)

### CONTENTS

Section	Description	Page
	Inspection .....	41
	Assembly .....	41
	Pressure Tests .....	42
	High Pressure Relief Valve .....	42
	Charge Pump Relief Valve .....	43
	Description of Operation .....	44
29 300	Hydrostatic Transmission Gearbox .....	44
	HST .....	45
	Gearbox Power Flow .....	45
	Overhaul .....	49
	Gearbox .....	49
	Removal .....	49
	Gearbox Case .....	50
	Removal .....	50
	PTO Input Shaft .....	50
	Disassembly .....	50
	Transmission Input Shaft .....	50
	Disassembly .....	50
	FWD Shift Rod .....	51
	Disassembly .....	51
	FWD Drive Shaft .....	51
	Disassembly .....	51
	Rear Main Shaft .....	51
	Disassembly .....	51
	Range Gear Shifter Rod .....	52
	Disassembly .....	52
	Drive Pinion Shaft .....	52
	Disassembly .....	52
	PTO Countershaft .....	52
	Disassembly .....	52
	Gearbox Components .....	53
	Inspection .....	53

**Thanks very much for your reading,  
Want to get more information,  
Please click here, Then get the complete  
manual**

**JustClickHere** 

**NOTE:**

**If there is no response to click on the link above,  
please download the PDF document first, and then  
click on it.**

**Have any questions please write to me:  
[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**