
FX30, FX40, FX50, FX60 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 14 - LIVE P.T.O.	10
SECTION 21 - TRANSMISSION	13
SECTION 23 - 4WD LINES	14
SECTION 25 - FRONT MECHANICAL DRIVE	14
SECTION 29 - HYDROSTATIC SYSTEM	15
SECTION 33 - BRAKES AND CONTROL	16
SECTION 35 - HYDRAULIC SYSTEM	16
SECTION 50 - CAB CLIMATE CONTROL	20
SECTION 55 - ELECTRICAL SYSTEM	20
SECTION 60 - PRODUCT FEEDING	24
SECTION 64 - CHOPPING	26
SECTION 70 - EJECTION	27

The following pages are the collation of the contents pages from each section and chapter of the FX30, FX40, FX50 and FX60 Repair manual. Complete Repair part # 87342121.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book. The sections listed above are the sections utilized for the FX30, FX40, FX50 and FX60 Forage Harvesters.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87342122

CONTENT

Section	Description	Page
	Introduction	2
	Important information	2
	General instructions	3
	Shimming	3
	Rotating shaft seals	3
	O-ring seals	3
	Sealing compounds	3
	Bearings	3
	Cotter pins	3
	Protecting the electronic / electrical systems during charging or welding	4
	Spare parts	5
	Tools	5
	Safety regulations	6
	Accident prevention	6
	Safety rules	6
	General guidelines	6
	Start-up	8
	Engine	8
	Electrical system	8
	Hydraulic systems	8
	Wheels and Tyres	9
	Removal and Re-fitting	9
	Explanation of machine serial number	10
	Conversion chart	11
	Hardware tightening torques	12
	Drive line and components	14
	Lubricants to be used	16

SECTION 10 - ENGINE

BOOK 1 - 87342122

Chapter 1 - IVECO Engine F3A - General

Model
FX 30

IVECO Engine
F3AE0684D*B001

CONTENTS

Section	Description	Page
	Walk around the engine	2
	Left Side View	2
	Right Side View	3
	Front View	4
	Rear View	5
	Top View	6
	The iveco engine	7
	Engine block and cylinder liners	9
	Crankshaft	9
	Crankshaft sealing rings	10
	Connecting rods	10
	Pistons	10
	Camshaft	11
	Timing system	11
	Flywheel	12
	Auxiliary drivebelt	13
	Lubrication	14
	Oil filter	15
	External Coil	15
	Upstream Mount	15
	Filter Septum	15
	Downstream Mount	15
	Structural Parts	15
	Oil sump	16
	Cooling	16
	Electronically controlled injection system	17
	Electronic Control Unit	17
	Pump injector	18
	Filling Stage	18
	Injection Stage	18
	Flow-back Stage	19

SECTION 10 - ENGINE

BOOK 1 - 87342122

Chapter 2 - IVECO Engine - F3A

Model IVECO Engine
FX 30 F3AE0684D*B001

CONTENTS

Section	Description	Page
	General specifications	3
	Fuel system data	7
	Main data	8
	Torque settings	17
	Plan of tightening sequence	22
	Sub-Cranckcase	22
	Cylinder head	23
	Exhaust manifold	23
	Turbocharger	23
	Heat exchanger	24
	Engine oil sump	24
	Rocker arm cover	24
	Tools	25
	Mechanical troubleshooting	29
	Preliminary conditions	29
Op. 10 001 54	Engine - Disassembly – Assembly	33
	General notes	43
	Cranckshaft	44
	Pistons, Pistons rings and Connecting rods	48
	Cylinder head	50
	Oil pump and , timing system intermediate gears	51
	Engine flywheel	53
	Camshaft	54
	Injectors pump	55
	Rocker arm shaft	55
	Completing the engine	59
	Assembly diagram for Fan drive belt – Water pump – Alternator	63
	Cranckcase, Cylinder liners	64
	Cranckshaft, Bearings	67

SECTION 10 - ENGINE

BOOK 1 - 87342122

Chapter 2 - IVECO Engine - F3A (Continued)

Section	Description	Page
	Selecting main and big end bearing shells	70
	Main journals	72
	Crankpins	72
	Selecting small end bearings (pins with nominal diameter)	72
	Selecting the main bearing shells (pins with nominal diameter)	74
	Selecting the main bearing shells (pins with nominal diameter)	76
	Selecting the main bearing shells (ground pins)	77
	Selecting the big end bearing shells (pins with nominal diameter)	79
	Selecting the big end bearing shells (ground pins)	81
	Checking main journal assembly clearance	83
	Tightening sequence of the screws fixing the sub-crankcase under the crankcase.	84
	Remove the sub-crankcase	84
	Checking crankshaft end float	84
	Pistons	85
	Connecting rods	88
	Piston and Connecting rod - Assembly	91
	Cylinder head	95
	Tappets and Camshaft	98
	Valve springs, Rocker arm shaft and Rocker arms	103
	Lubrication system	106
	Cooling circuit	111
	Fuel supply	112
Op. 10 101 53	Replacing the valve guides	115
Op. 10 101 60	Injector case - Replacement	116
Op. 10 102 70	Crankshaft front cover seal - Replacement	119
Op. 10 106 12	Adjusting clearance of rocker arms to valves and pre-load of pump injector rocker arms	120
Op. 10 218 30	Pump injector - Removal - Refitting	122
Op. 10 246 14	Bleeding the fuel supply system	125
Op. 10 402 11	Water pump - Removal-Refitting	126
Op. 10 402 30	Thermostat - Removal - Refitting	127

SECTION 10 - ENGINE

BOOK 1 - 87342122

Chapter 3 - IVECO Engine F3B - General

Model	IVECO Engine
FX 40	F3BE0684A*B001
FX 50	F3BE0684D*B001

CONTENTS

Section	Description	Page
	Engine description	3
	Engine main components	3
	Crankshaft	4
	Crankcase gas ring	4
	Connecting rods	5
	Pistons	5
	Cylinder head	6
	Camshaft	6
	Intake valve control	6
	Exhaust valve control	6
	Injector-pump control	6
	Camshaft drive	7
	Camshaft driving	7
	Engine flywheel	8
	Auxiliary component control	9
	Oil sump	9
	Oil filter	10
	Fuel supply	11
	Main components of the ms6.2 edc system	11
	Pump injector	11
	Operation	12
	Filling phase	12
	Injection phase	12
	Pressure reduction phase	13

SECTION 10 - ENGINE

BOOK 1 - 87342122

Chapter 3 - IVECO Engine F3B - General (Continued)

Section	Description	Page
	MS6.2 electronic control unit	13
	Control unit operation	14
	Fuel batching	14
	Flow-rate correction depending on water temperature	14
	Flow-rate correction to avoid noises, fumes or overloads	14
	De-rating	14
	Electronic injection spark advance check	14
	Speed regulator	15
	Engine start-up	15
	Cold start-up	15
	Hot start-up	15
	Run Up	15
	After Run	15
	Cylinder Balancing	16
	Synchronisation search	16
	Engine coolant temperature sensor	16
	Fuel temperature sensor	16
	Supercharging air temperature sensor	17
	Supercharging pressure sensor	17
	Flywheel sensor	17
	Distribution sensor	18
	Pre - After heating resistance	18

SECTION 10 - ENGINE

BOOK 1 - 87342122

Chapter 4 - IVECO Engine F3B

Model	IVECO Engine
FX 40	F3BE0684A*B001
FX 50	F3BE0684D*B001

CONTENTS

Section	Description	Page
	General specification	3
	Fuel system data	7
	Main data	8
	Torque settings	13
	Plan of tightening sequence	16
	Tools	19
	Mechanical troubleshooting	22
Op. 10 001 54	Engine - Disassembly – Assembly	30
	General notes	39
	Crankshaft	41
	Pistons and connecting rods	45
	Cylinder head	47
	Oil pump and intermediate timing gears	48
	Engine flywheel	49
	Camshaft	50
	Injectors pump	52
	Rocker arm shaft	52
	Completing the engine	56
	Crankcase and cylinder liners	61
	Crankshaft and Bearings	63

SECTION 10 - ENGINE

BOOK 1 - 87342122

Chapter 4 - IVECO Engine F3B (Continued)

Section	Description	Page
	Selecting main and big end bearing shells	66
	Preliminary appraisal of data to make the selection	67
	Main journals	67
	Crankpins	67
	Selecting small end bearings (pins with nominal diameter)	67
	Selecting the main bearing shells (pins with nominal diameter)	69
	Selecting the main bearing shells (pins with nominal diameter)	71
	Selection of main half-bearings (rectified pins)	72
	Selecting the big end bearing shells (pins with nominal diameter)	73
	Selection of connecting rod half-bearings (rectified pins)	75
	Checking main journal assembly clearance	76
	Remove the sub-crankcase	77
	Checking crankshaft end float	77
	Pistons	78
	Connecting rods	81
	Piston - Connecting rod assembly	84
	Cylinder head	86
	Valves	87
	Tappets and Camshaft	90
	Valve springs, Rocker arm shaft and rocker arms	94
	Lubrication system	98
	Cooling system	102
	Fuel supply	103
Op. 10 101 53	Valve guides - Replacement	106
Op. 10 101 60	Injector case - Replacement	107
Op. 10 102 70	Crankshaft front cover seal - Replacement	110
Op. 10 106 12	Clearance of valves to rocker arms and pre-load of pump injector rocker arms	111
Op. 10 218 30	Pump injector - Removal, Refitting	113
Op. 10 246 14	Bleeding the fuel supply system	117
Op. 10 402 11	Water pump - Removal, Refitting	118
Op. 10 402 30	Thermostat - Removal, Refitting	118

SECTION 10 - ENGINE

BOOK 1 - 87342122

Chapter 5 - CATERPILLAR Engine

Model
FX 60

CATERPILLAR Engine
C-15

CONTENTS

Section	Description	Page
	General	2
	New Holland - Caterpillar	2
	Caterpillar engine	2
	Service / Parts	3

SECTION 14 - LIVE P.T.O.

BOOK 2 - 87342123

Chapter 1 - Main drive belt assembly

CONTENT

Section	Description	Page
	Tightening torques and Adjustments	1
	Main drive belt assembly - Remove	2
	Tensioner pulley assembly	4
	Cutterhead drive pulley	5
	Main drive pulley	6
	Cutterhead drive pulley carrier	7
	Cutterhead reverse drive motor coupling	7
	Cutterhead drive pulley shaft	9
	Main drive belt assembly - Install	11

SECTION 14 - LIVE P.T.O.

BOOK 2 - 87342123

Chapter 2 - Main drive gearbox series 5262 > 5294

CONTENT

Section	Description	Page
	Tightening torques and Adjustments	2
	Special tools	2
	Main drive gearbox - Remove	3
	Battery box - Remove	6
	Fuel reservoir - Remove	7
	Rubber vibration damper - Replace	10
	Main drive gearbox - Disassemble / Assemble	11
	Splitting the main drive gearbox	11
	Lower gearbox half - Disassembly / assembly	12
	Disassembly	14
	Assembly	15
	Intermediate gear assembly	17
	Hydro gear assembly	18
	Upper gearbox half - Disassembly / assembly	19
	Main hydraulic clutch - Remove	21
	Output shaft - Remove / Install	22
	Main clutch - Install	23
	Connecting the two gearbox halves together	25
	Main clutch - Overhaul	26
	Pressure hose - Remove / install	27
	Clutch plates - Replace	27
	Clutch seals - Replace	28

SECTION 14 - LIVE P.T.O.

BOOK 2 - 87342123

Chapter 3 - Main drive gearbox series 5298 >

CONTENT

Section	Description	Page
	Special tools	2
	Main drive gearbox - Shafts	3
	General	4
	Main drive shaft - Remove	5
	Main clutch - Remove	6
	Main clutch - Disassemble	7
	Main clutch - Assemble / Install	11
	Main drive shaft - Disassemble	14
	Main drive shaft - Assemble	15
	Main drive shaft - Install	16
	Main drive gearbox - Remove / Install	17
	Main drive gearbox - Disassemble / Assemble	18
	Splitting the main drive gearbox	18
	Lower gearbox half - Disassemble / Assemble	20
	Disassemble	22
	Assemble	24
	Main drive gearbox - Assemble	27

SECTION 21 - TRANSMISSION

BOOK 2 - 87342123

CONTENT

Section	Description	Page
	Specifications	2
	Tightening torques and Adjustments	2
	Special tools	3
	Gearbox shafts	4
	Shifting diagram	4
	Disassembly of traction gearbox	5
	General	5
	Removal of selector forks and shifter shafts	5
	Removal of drive shaft	5
	Removal of the countershaft	6
	Removal of transmission main shaft	7
	Removal of the half-shaft from the differential	8
	Removal of the differential	9
	Assembly of traction gearbox	10
	Assembly of the differential	10
	Assembly of the half-shafts of the differential	10
	Assembly of transmission main shaft	11
	Assembly of the countershaft	12
	Assembly of the drive shaft	12
	Assembly of selector shafts and forks	13
	Calculation of shims to be installed on the shafts	13
	Assembly of the cover	14

SECTION 23 - 4WD LINES

BOOK 2 - 87342123

CONTENT

Section	Description	Page
	Specifications	2
	Tightening torques	2
	Special tools	3
	Self-made tools	3
	Gearbox shafts	5
	4WD gearbox - Removal	6
	4WD gearbox - Components	7
	4WD gearbox - Disassembly	9
	Intermediate shaft	10
	Input shaft	11
	Output shaft and clutch	12
	Clutch cylinder	13
	4WD gearbox - Assembly	14
	Clutch cylinder	14
	Output shaft and clutch - pre assembly	15
	Input shaft - pre assembly	19
	Intermediate shaft - installation	21
	Input shaft - installation	22
	Cover - installation	25
	Clutch pre-assembly - installation	25
	4WD gearbox - Installation	26

SECTION 25 - FRONT MECHANICAL DRIVE

BOOK 2 - 87342123

Chapter 1 - Final drives FX30

CONTENTS

Section	Description	Page
	Final drives - Disassembly	2
	Output shaft	2
	Input shaft	2
	Final drives - Assembly	4
	Input shaft	4
	End play adjustment	4
	Output shaft	4
	Preload adjustment	4

SECTION 25 - FRONT MECHANICAL DRIVE

BOOK 2 - 87342123

Chapter 2 - Final drives FX40-50-60

CONTENTS

Section	Description	Page
	Specifications	2
	Tightening Torques	2
	Gearbox shafts	3
	Wheel bolt - Replacement	4
Op 25.310	Final drive - R./ I.	5
Op 25.310	Final drive D./A.	7
	Disassembly	7
	Assembly	10

SECTION 29 - HYDROSTATIC SYSTEM

BOOK 2 - 87342123

CONTENT

Section	Description	Page
	Hydrostatic circuit and components	2
	Circuit	2
	Hydrostatic Pump and motor Identification plate	4
	Hydrostatic Pump	5
	Pump operation	5
	Circuit	6
	Pump characteristics	9
	Multifunction valve	10
	Servo Valve	14
	System in Neutral	14
	Servo Solenoid Valve Energized	14
	Hydrostatic Motor	16
	Fixed Displacement Motors	16
	Drive Motor Characteristics	17
	Oil Cooler bypass Valve	18
	Filling and bleeding the hydrostatic system	19
	Starting the hydrostatic system	21

SECTION 33 - BRAKES AND CONTROL

BOOK 2 - 87342123

CONTENT

Section	Description	Page
	Brake system	2
	General	2
	Road Mode	3
	Parking brake adjustment	4
	Replacement of the brake linings	5
	Removal	5
	Installation	5
	Bleeding the brakes	6
	Bleeding the left-hand side circuit	6
	Bleeding the connection pipe between the two main cylinders	6
	Bleeding the right-hand side circuit	7
	Disassembly and assembly of brake shoes and discs	8
	Disassembly of brake shoes	8
	Disassembly of brake discs	8
	Assembly of brake discs	8
	Assembly of brake shoes	9

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87342124

Chapter 1 - General

CONTENT

Section	Description	Page
Op. 35.000	Torque tables for hydraulic components	2
	Union nuts	2
	Ferrules	2
	Metric fittings	2
	Unions	2
	Connections	3
	Swivel nut with ball-type nipple	3
Op. 35.304	Pump group - Disassembly and Assembly	4
	Disassembly of the pump group	5
	Removal of the triple pump from the hydrostatic pump	6
	Splitting of the triple pump	7
	Assembly of the pump group	10
	Installation of the pump group to the hydrostatic pump	10

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87342124

Chapter 2 - Work hydraulics - Attachment height control

CONTENT

Section	Description	Page
Op. 35.000	Circuit diagrams	2
	Work Hydraulics - Attachment height control	2
Op. 35.300	Hydraulic oil reservoir	4
	Low pressure filter	5
	Breather	5
	High pressure filter	5
	Non-return valve	5
	Function	5
Op. 35.304	Work hydraulics pump	6
	Specifications	6
	High pressure relief valve	7
Op. 35.410	Attachment height control valve (EMR)	8
	Neutral position	10
	Attachment lifting position	10
	Attachment lowering position	11
	Pressure relief valve h	11
	Emergency hand buttons	11
	Specifications	11
	Attachment compensation valve	12
	Specifications	12
	Transport mode	14
	Compensation mode	14
	Stubble height mode	14
	Pressure sensor	15
	Specifications	15
	Hydropneumatic accumulators	16
	Filling	17
	Attachment lift cylinders	18

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87342124

Chapter 3 - Work hydraulics - Base unit

CONTENT

Section	Description	Page
Op. 35.000	Circuit diagrams - Base unit	2
Op. 35.310	Stack valve	7
	Repair of control valves	8
	Load sensing valve	9
	System in neutral	9
	Cutterhead reverse drive motor	10
	Specifications	10
	Spout rotation pressure relief valve	12
	Spout rotation motor	12
	Specifications	12
	Quick-release couplings	13
	Specifications	13
	Spout lift cylinder	14
	Cylinder disassembly and assembly	14
	Reinstallation of spout lift cylinder	15

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87342124

Chapter 4 - Steering hydraulics

CONTENT

Section	Description	Page
Op 35.000	Circuit diagrams - Steering hydraulics	2
Op. 35.310	Steering hydraulics pump	7
	Specifications	7
	Steering valve	8
	Special tools	9
Op. 35 311	Steering valve - D./A.	10
	Steering cylinders	18
	Disassembly and assembly	18
	Toe-in adjustment, steering ball joints, steering wheel stops	19

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87342124

Chapter 5 - Low pressure hydraulics

CONTENT

Section	Description	Page
Op. 35.000	Circuit diagrams - Low pressure hydraulics	2
Op.35.300	Low pressure hydraulic reservoir	4
	Oil and Filter change procedure	4
	Oil pressure check procedure	5
	Filling the system when (re)installing the low pressure pump	5
	Filling the system after (re)installing the main drive transfer gearbox	5
Op. 35.310	Low pressure pump	6
	Specifications	6
	Low pressure valve	7
	Main drive belt tensioning cylinder	10
	Spout deflector cylinder	11

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87342124

Chapter 6 - High-flow hydraulics

CONTENT

Section	Description	Page
Op. 35.000	Circuit diagrams - High-Flow hydraulics	2

SECTION 50 - CAB CLIMATE CONTROL

BOOK 3 - 87342124

CONTENT

Section	Description	Page
	Correct use of the airconditioning system	2
	Storage maintenance	2
	Air conditioning circuit	3
	Components	3
	Specifications	4
	Refrigerant	4
	Compressor	4
	Compressor clutch	4
	Circuit parameters	4
	Low pressure switch	4
	High pressure switch	4
	Filter-drier	5
Op. 50.200	Compressor clutch replacement	6
	Clutch removal	6
	Clutch installation	8
Op. 50.206	Ventilation unit	10

SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 87342124

Chapter 1 - General

CONTENT

Section	Description	Page
	General information	2
	Wires	2
	Color code	2
	Wire identification	3
	Fuses	4
	Symbols	4
	Relays	10
	Connectors	11

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**