

---

# TC23DA, TC26DA REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION .....	2
SECTION 10 - ENGINE .....	3
SECTION 18 - SINGLE CLUTCH .....	10
SECTION 21 - TRANSMISSION .....	11
SECTION 25 - FWD FRONT AXLE .....	13
SECTION 27 - DIFFERENTIAL, REAR AXLE .....	14
SECTION 29 - HYDROSTATIC TRANSMISSION .....	15
SECTION 31 - POWER TAKE-OFF (PTO) .....	19
SECTION 33 - BRAKES .....	20
SECTION 35 - HYDRAULIC SYSTEM .....	21
SECTION 41 - STEERING .....	24
SECTION 44 - WHEELS AND TIRES .....	25
SECTION 55 - ELECTRICAL SYSTEM .....	26
SECTION 90 - PLATFORM .....	32

The following pages are the collation of the contents pages from each section and chapter of the TC23DA, TC26DA Repair manual. Complete Repair part # 87367140.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TC23DA, TC26DA Tractors.

---

# SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87367141

## Chapter 1 - General Information

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Introduction .....	2
	Precautionary Statements .....	3
	Safety .....	4
	The Tractor .....	4
	Servicing the Tractor .....	4
	Operating the Tractor .....	5
	Driving the Tractor .....	5
	Operating the PTO .....	6
	Diesel Fuel .....	6
	Safety Frame (ROPS) .....	6
	Safety Decals .....	7
	Instruction Decals .....	9
	Product Identification Plate .....	13
	Universal Symbols .....	14
	Specifications - TC23DA, TC26DA .....	15
	General Dimensions - TC23DA, TC26DA .....	20
	Minimum Hardware Tightening Torques .....	23
	Lubricants .....	25
	Adjustments .....	26

---

# SECTION 10 - ENGINE

BOOK 1 - 87367141

## Chapter 1 - Engine Systems

### CONTENTS

Section	Description	Page
10 000	Specifications .....	6
	Cylinder Head .....	6
	Cylinder Block .....	7
	Piston .....	7
	Piston Ring .....	8
	Connecting Rod .....	8
	Crankshaft .....	9
	Camshaft .....	10
	Valves .....	11
	Push Rods .....	12
	Rocker Arms .....	12
	Lubrication System .....	12
	Cooling System .....	13
	Torque Specifications .....	14
	Metric Bolt Torque Specifications .....	14
	Special Tools .....	15
	Description and Operation - General Information .....	16
	Identification Chart .....	16
	Cylinder Head and Valve Train Components .....	17
	Cylinder Block Assembly .....	17
	Troubleshooting .....	19
	Overhaul - Engine .....	25
	Engine Preparation .....	25
	Disassembly .....	25
	Fuel Injector and Glow Plug .....	27
	Removal .....	27
	Oil Pressure Switch .....	27
	Removal .....	27
	Temperature Sending Switch and Alternator .....	28
	Removal .....	28
	Fan, Water Pump, and External Oil Tube .....	28
	Removal .....	28

---

# SECTION 10 - ENGINE

BOOK 1 - 87367141

## Chapter 1 - Engine Systems (Continued)

### CONTENTS

Section	Description	Page
	Valve Cover .....	28
	Removal .....	28
	Rocker Shaft and Push Rod .....	29
	Removal .....	29
	Cylinder Head .....	29
	Removal .....	29
	Valve Tappet .....	29
	Removal .....	29
	Fuel Shut-off Solenoid .....	30
	Removal .....	30
	Engine Timing Gear Cover .....	30
	Removal .....	30
	Timing Gears and Camshaft .....	32
	Removal .....	32
	Oil Sump .....	32
	Removal .....	32
	Oil Suction Pipe and Strainer .....	33
	Removal .....	33
	Connecting Rods, Bearing and Pistons .....	33
	Removal .....	33
	Flywheel .....	34
	Removal .....	34
	Backplate and Oil Seal .....	34
	Removal .....	34
	Crankshaft and Main Bearing .....	34
	Removal .....	34
18 110	Cylinder Head .....	35
	Disassembly .....	35
	Inspection .....	35
	Valve Seats .....	36
	Inspection .....	36

---

# SECTION 10 - ENGINE

BOOK 1 - 87367141

## Chapter 1 - Engine Systems (Continued)

### CONTENTS

Section	Description	Page
	Valves .....	37
	Inspection .....	37
	Valve Guides .....	39
	Inspection .....	39
	Valve Springs .....	39
	Inspection .....	39
	Rocker Arms .....	40
	Inspection .....	40
	Push Rods .....	40
	Inspection .....	40
	Cylinder Head .....	41
	Assembly .....	41
	Cylinder Block .....	41
	Inspection .....	41
10 105	Pistons, Piston Rings, and Connecting Rods .....	42
	Disassembly .....	42
	Piston .....	42
	Inspection .....	42
	Piston Rings .....	44
	Inspection .....	44
	Connecting Rods .....	45
	Inspection .....	45
	Bearing Oil Clearance Check .....	47
10 105	Pistons, Piston Rings, and Connecting Rod .....	47
	Assembly .....	47
10 103	Crankshaft Main Bearings .....	48
	Removal .....	48
	Inspection .....	48
	Crankshaft .....	49
	Inspection .....	49
	Crankshaft Journal Wear Limit and Bearing Usage .....	49

---

# SECTION 10 - ENGINE

BOOK 1 - 87367141

## Chapter 1 - Engine Systems (Continued)

### CONTENTS

Section	Description	Page
	Crankshaft Front Main Bearing (Bushing) .....	50
	Inspection .....	50
	Replacement .....	50
	Crankshaft Main Bearing .....	51
	Assembly .....	51
	Port Block .....	51
	Removal .....	51
	Installation .....	51
	Timing Gear .....	52
	Inspection .....	52
	Camshaft .....	52
	Disassembly .....	52
	Inspection .....	53
	Assembly .....	53
10 103	Flywheel .....	54
	Inspection .....	54
	Timing Gear Housing .....	54
	Front Oil Seal and Steering Pump Seal .....	54
	Replacement .....	54
	Crankshaft and Bearing Holder .....	55
	Assembly .....	55
	Rear Oil Seal and Backplate .....	55
	Assembly .....	55
	Flywheel .....	56
	Installation .....	56
	Piston and Connecting Rod .....	56
	Installation .....	56
	Oil Suction Pipe and Suction Strainer .....	57
	Installation .....	57
	Oil Sump .....	57
	Installation .....	57

---

# SECTION 10 - ENGINE

BOOK 1 - 87367141

## Chapter 1 - Engine Systems (Continued)

### CONTENTS

Section	Description	Page
	Camshaft and Camshaft Gear .....	57
	Assembly .....	57
	Idler Gear, Oil Pump and Injection Timing .....	58
	Installation .....	58
	Timing Gear Cover .....	58
	Installation .....	58
	Crankshaft Pulley .....	58
	Installation .....	58
	Fuel Injection Pump .....	59
	Installation .....	59
	Power Steering Pump .....	59
	Installation .....	59
	Head Gasket .....	60
	Cylinder Head .....	61
	Assembly .....	61
	Valve Clearance Adjustment .....	62
	Valve Cover .....	62
	Installation .....	62
	Fan, Water Pump and External Oil Tube .....	63
	Installation .....	63
	Glow Plug and Connector .....	63
	Installation .....	63
	Fuel Injector .....	63
	Installation .....	63
	Fuel Piping .....	64
	Installation .....	64
	Alternator and Temperature Sending Switch .....	64
	Installation .....	64
	Exhaust Manifold, Radiator, and Air Cleaner .....	65
	Installation .....	65

---

# SECTION 10 - ENGINE

BOOK 1 - 87367141

## Chapter 1 - Engine Systems (Continued)

### CONTENTS

Section	Description	Page
10 304	Description of Operation - Engine Lubrication System .....	66
10 206	Engine Oil Filter .....	69
10 304	Oil Pump .....	69
	Removal .....	69
	Inspection .....	69
	Installation and Adjustment .....	70
	Engine Oil Pressure Check .....	71
	Oil Pressure Relief Valve .....	71
	Removal .....	71
	Installation .....	71
	Oil Consumption .....	72
10 400	Description of Operation - Cooling System .....	73
	Maintenance .....	75
	Coolant .....	75
	Thermostat .....	75
	Water Pump .....	75
	Cooling Fan .....	75
	Radiator .....	75
	Radiator Cap .....	75
	Overhaul - Cooling System .....	76
10 406	Radiator .....	76
	Removal .....	76
	Inspection and Repair .....	77
	Installation .....	77
10 402	Water Pump and Thermostat .....	78
	Removal .....	78
	Inspection and Repair .....	80
	Assembly .....	80
	Installation .....	80
	Compression Test and Tools .....	82



---

# SECTION 10 - ENGINE

BOOK 1 - 87367141

## Chapter 2 - Fuel System

### CONTENTS

Section	Description	Page
	Specifications .....	2
10 242	Description and Operation - Injection Pump .....	3
10 236	Pumping Elements .....	5
10 214	Delivery Valves .....	5
	Troubleshooting - General .....	8
	Troubleshooting - Fuel Injectors .....	11
	Troubleshooting - Governor .....	12
	Injection Pump .....	13
10 214	Removal .....	13
	Installation .....	13
	Timing and Governor Adjustments .....	14
10 230	Installation Using Original Pump and Drive Components .....	14
	Install a New Pump or Drive Component .....	14
	Spill-timing Procedure .....	15
	Bleeding the Fuel System .....	19
	Full Screw/High Idle Adjustment .....	19
10 230	Description of Operation - Governor .....	20
	Governor .....	22
	Disassembly .....	22
	Assembly .....	22
	Adjustments .....	23
10 218	Description and Operation - Injectors .....	25
	Injector .....	26
	Removal .....	26
	Disassembly .....	27
	Assembly and Adjustment .....	27
	Engine Breather Valve .....	28
	Removal .....	29
	Installation .....	29
	Troubleshooting .....	30

---

# SECTION 18 - SINGLE CLUTCH

BOOK 1 - 87367141

## Chapter 1 - Single Clutch

### CONTENTS

Section	Description	Page
	Specifications .....	2
	Special Tools .....	3
	Description and Operation - General Information .....	4
	Troubleshooting .....	5
	Single Clutch .....	3
	Free Play Adjustment .....	3
	Separating the Tractor Between the Engine and Clutch Housing - 9 x 3 Transmission .....	7
	Disassembly .....	7
	Removal .....	16
	Installation .....	16
	Assembly .....	18
	Description and Overhaul - Servicing Clutch-Related Components .....	26
18 110	Clutch Pilot Bearing - 9 x 3 Gear Transmission Only .....	26
	Removal .....	26
	Inspection .....	26
	Installation .....	26
	Clutch Release Bearing .....	27
	Removal .....	28
	Inspection .....	29
	Assembly .....	29
	Flywheel Dimensions .....	30
	Clutch Cross Shaft Bushings .....	30
	Removal .....	30
	Assembly .....	30
	Clutch Pedal Bushings .....	31
	Removal .....	31
	Assembly .....	31
	Clutch Linkage Adjustment .....	32

---

# SECTION 21 - TRANSMISSION

BOOK 2 - 87367142

## Chapter 1 - Transmission Systems

### CONTENTS

Section	Description	Page
	Introduction .....	3
	Description and Operation - 9 x 3 Gear Transmission .....	4
	9 x 3 Gear Transmission - Power Flow .....	5
	Overhaul .....	11
	Transmission Preparation .....	11
	Separating the Tractor - Between the Clutch Housing and the Rear Transmission - 9 x 3 Transmission .....	12
	Removal .....	12
	Transmission Shift Cover .....	16
	Disassembly .....	18
	Assembly .....	22
	Input Shaft, Idler Gear and Countershaft Gear .....	26
	Removal .....	26
	Main Shaft .....	27
	Removal .....	27
	Front Wheel Drive Shaft .....	28
	Removal .....	28
	Countershaft .....	29
	Removal .....	29
	Range and Rear PTO Shift Rail and Fork .....	30
	Removal .....	30
	Pinion Shaft .....	31
	Removal .....	31
	PTO Front Countershaft .....	32
	Removal .....	32
	Mid-Mount PTO Idler Shaft .....	33
	Removal .....	33
	Mid-Range Gear Case .....	34
	Disassembly .....	34
	Inspection .....	34
	Assembly .....	35

---

# SECTION 21 - TRANSMISSION

BOOK 2 - 87367142

## Chapter 1 - Transmission Systems (Continued)

### CONTENTS

Section	Description	Page
	Mid-Mount PTO Idler Shaft .....	36
	Assembly .....	36
	PTO Front Countershaft .....	36
	Assembly .....	36
	Rear PTO Countershaft .....	37
	Assembly .....	37
	Pinion Shaft .....	38
	Installation .....	38
	Shift Rail and Fork .....	39
	Installation .....	39
	Countershaft .....	40
	Assembly .....	40
	Front Wheel Drive Shaft .....	41
	Assembly .....	41
	Front Wheel Drive Shift Cover .....	41
	Assembly .....	41
	Main Shaft .....	42
	Assembly .....	42
	Input Shaft, Idler Gear and Countershaft Gear .....	43
	Assembly .....	43
	Reconnecting the Tractor - Between the Clutch Housing and the Rear Transmission - 9 x 3 Transmission .....	44
	Installation .....	44

---

# SECTION 25 - FWD FRONT AXLE

BOOK 2 - 87367142

## Chapter 1 - FWD Front Axle

### CONTENTS

Section	Description	Page
	Specifications .....	2
	Front Wheel Drive .....	2
	Metric Bolt Torque Specifications .....	3
25 100	Description and Operation - Front Axle - Front Wheel Drive .....	4
	Troubleshooting .....	5
	Front Axle .....	5
	Overhaul .....	6
	Front-Wheel Drive Front Axle .....	6
	Removal .....	6
25 108	Front Axle .....	7
	Disassembly .....	7
25 102	Differential .....	9
	Disassembly .....	9
	Inspection .....	9
	Axle .....	9
	Inspection .....	9
	Differential .....	11
	Assembly .....	11
	Pinion .....	11
	Assembly .....	11
	Ring Gear to Pinion Backlash Check (Using Original Components) .....	13
	Ring Gear to Pinion Backlash Check (Using New Components) .....	14
	Shim Calculation - Alternate Method .....	15
	Pinion-To-Ring Gear Tooth Contact Adjustment .....	16
	Front-Wheel Drive Front Axle .....	17
	Installation .....	17
	Final Pinion and Wheel Shaft .....	17
	Backlash Adjustment .....	17

---

# SECTION 27 - DIFFERENTIAL, REAR AXLE

BOOK 2 - 87367142

## Chapter 1 - Differential, Rear Axle

### CONTENTS

Section	Description	Page
	Specifications .....	2
	Metric Bolt Torque Specifications .....	3
	Special Tools .....	3
27 106	Description and Operation - General Information .....	4
	Differential .....	4
27 110	Differential Lock .....	5
27 126	Rear Axle and Brakes .....	6
	Overhaul .....	10
27 106	Differential .....	10
	Removal .....	10
	Drive Pinion .....	12
	Removal .....	12
	Differential .....	13
	Disassembly .....	13
	Inspection .....	13
	Assembly .....	14
	Rear Axle and Brakes .....	18
	Rear Axle Disassembly .....	18
	Inspection .....	18
	Rear Axle Assembly .....	18
27 110	Differential Lock .....	20
	Disassembly .....	20
	Assembly .....	21
	Ring Gear and Pinion Gear Pattern Adjustment .....	22

---

# SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87367142

## Chapter 1 - Hydrostatic Transmission

### CONTENTS

Section	Description	Page
	Specifications .....	5
	Metric Bolt Torque Specifications .....	7
	Special Tools .....	8
29 202	Description and Operation - Hydrostatic Transmission .....	9
29 212	Variable Displacement Pump .....	11
29 212	Fixed Displacement Motor .....	12
	Fluid Flow .....	13
	Neutral Position .....	13
	Forward Position .....	14
	Reverse Position .....	15
	Troubleshooting .....	16
	Overhaul - Hydrostatic Transmission .....	17
	Transmission Preparation .....	17
	Separation between the Clutch Housing and the Extension Housing - the Extension Housing and Rear Transmission .....	18
29 202	Hydrostatic Unit .....	22
	Removal .....	22
	Precautions Before Disassembly .....	26
	Motor and Port Block .....	26
	Disassembly .....	26
	Hydrostatic Motor .....	28
	Disassembly .....	28
	Hydrostatic Motor Shaft .....	30
	Disassembly .....	30
	Charge Pump .....	30
	Disassembly .....	30
	Swash Plate .....	31
	Disassembly .....	31
	Inspection .....	33
	Swash Plate/Charge Pump .....	36
	Assembly .....	36

---

# SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87367142

## Chapter 1 - Hydrostatic Transmission (Continued)

### CONTENTS

Section	Description	Page
	HST Piston Pump Cylinder Block . . . . .	37
	Assembly . . . . .	37
	HST Motor Cylinder Block . . . . .	39
	Assembly . . . . .	39
29 130	Port Block . . . . .	40
	Neutral and Feed Valves . . . . .	40
	Disassembly . . . . .	40
	Inspection . . . . .	40
	Assembly . . . . .	41
	Charge Pump Relief Valve . . . . .	41
	Disassembly . . . . .	41
	Inspection . . . . .	41
	High Pressure Relief Valve . . . . .	42
	Removal . . . . .	42
	Installation . . . . .	42
	Hydrostatic Pump and Port Block . . . . .	42
	Assembly . . . . .	42
	Motor and Port Block . . . . .	44
	Assembly . . . . .	44
29 204	Check Valve . . . . .	45
	Disassembly . . . . .	45
	Inspection . . . . .	45
	Assembly . . . . .	45
	Installation of the Clutch Housing and the Extension Housing - the Extension Housing and Rear Transmission . . . . .	46
	Pressure Tests . . . . .	51
	High Pressure Relief Valve . . . . .	51
	Charge Pump (Low) Pressure Relief Valve . . . . .	52
	Description and Operation - Gearbox . . . . .	54
29 300	Gearbox . . . . .	54



---

# SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87367142

## Chapter 1 - Hydrostatic Transmission (Continued)

### CONTENTS

Section	Description	Page
	Overhaul – Gearbox .....	57
	Gearbox .....	57
	Removal .....	57
	Separation between the Clutch Housing and the Extension Housing – the Extension Housing and Rear Transmission .....	57
	Transmission Drive Shaft and PTO Input Shaft .....	61
	Removal .....	61
	Main Bearing Holder Plate .....	62
	Removal .....	62
	Main Shaft .....	63
	Removal .....	63
	FWD Drive Shaft (FWD Model only) .....	63
	Removal .....	63
	Countershaft .....	65
	Removal .....	65
	Range and Rear PTO Shift Rail and Fork .....	66
	Removal .....	66
	Pinion Shaft .....	67
	Removal .....	67
	PTO Front Countershaft .....	68
	Removal .....	68
	Mid-Mount PTO Idler Shaft .....	69
	Removal .....	69
	Inspection .....	69
	Shift Rail and Fork .....	70
	Installation .....	70
	Mid-Mount PTO Idler Shaft .....	71
	Assembly .....	71
	PTO Front Countershaft .....	72
	Assembly .....	72
	Pinion Shaft .....	73
	Installation .....	73

---

# SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87367142

## Chapter 1 - Hydrostatic Transmission (Continued)

### CONTENTS

Section	Description	Page
	Countershaft .....	73
	Assembly .....	73
	FWD Shaft (FWD Models only) .....	74
	Assembly .....	74
	Main Shaft .....	75
	Assembly .....	75
	Input Shaft, Transmission Drive Shaft and Retaining Plate .....	75
	Assembly .....	75
	Front Wheel Drive Shift Cover .....	77
	Assembly .....	77
	Installation of the Clutch Housing and the Extension Housing - the Extension Housing and Rear Transmission .....	78
	Overhaul and Adjustments - Control Linkage .....	83
29 200	Control Linkage .....	83
	Initial Adjustments .....	84
	Control Rod .....	84
	Pedal Stop .....	84
	HST Neutralizer .....	85
	Removal .....	85
	Disassembly .....	86
	Inspection .....	87
	Assembly .....	88
	Installation .....	89
	HST Neutral Adjustment .....	90
	Linkage Damper .....	91
	Removal .....	91
	Pedal .....	92
	Removal .....	92
	Pedal Pivot Shaft .....	94
	Removal .....	94
	Damper, Pivot Shaft, Pedal and FWD Drive Shaft .....	95
	Assembly .....	95

---

# SECTION 31 - POWER TAKE-OFF (PTO)

BOOK 3 - 87367143

## Chapter 1 - Power Take-Off (PTO)

### CONTENTS

Section	Description	Page
	Specifications .....	3
	Rear PTO .....	3
	Mid-Mount PTO .....	3
	Metric Bolt Torque Specifications .....	4
	Description and Operation - PTO System .....	5
31 110	9 x 3 Gear Transmission .....	5
31 110	Hydrostatic Transmission .....	6
	Overhaul - Rear PTO .....	7
31 114	9 X 3 Rear PTO Output Shaft .....	7
	Removal .....	7
	Inspection .....	7
	Assembly .....	8
	HST Rear PTO Output Shaft .....	9
	Removal .....	9
	Inspection .....	9
	Assembly .....	10
	Description and Operation - Mid-Mount PTO .....	11
	Mid-Mount Power Take-Off .....	11
	Overhaul - Mid-Mount PTO .....	13
31 120	9 x 3 Optional Mid-Mount PTO .....	14
	Gearbox and Countershaft .....	14
	Removal .....	14
	Output Shaft .....	14
	Removal .....	14
	Inspection .....	15
	Assembly .....	15
	Gearbox and Countershaft .....	15
	Assembly .....	15
	Hydrostatic Transmission, Standard Mid-Mount PTO .....	17
	Gearbox and Countershaft .....	17
	Removal .....	17

---

## SECTION 31 - POWER TAKE-OFF (PTO)

BOOK 3 - 87367143

### Chapter 1 - Power Take-Off (PTO) (Continued)

#### CONTENTS

Section	Description	Page
	Output Shaft .....	17
	Removal .....	17
	Inspection .....	18
	Assembly .....	18
	Gearbox and Countershaft .....	18
	Assembly .....	18

## SECTION 33 - BRAKES

BOOK 3 - 87367143

### Chapter 1 - Brakes

#### CONTENTS

Section	Description	Page
	Specifications .....	2
	Overhaul .....	3
33 120	Brakes and Final Pinion .....	3
	Removal .....	3
	Inspection .....	4
	Assembly .....	4
	Brake Adjustment .....	5

**Thanks very much for your reading,  
Want to get more information,  
Please click here, Then get the complete  
manual**

**JustClickHere** 

**NOTE:**

**If there is no response to click on the link above,  
please download the PDF document first, and then  
click on it.**

**Have any questions please write to me:  
[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**