
T2310, T2320, T2330 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 18 - CLUTCH	10
SECTION 21 - TRANSMISSION	12
SECTION 25 - FWD FRONT AXLE	14
SECTION 27 - DIFFERENTIAL, REAR AXLE	17
SECTION 29 - HYDROSTATIC TRANSMISSION	18
SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS	21
SECTION 33 - BRAKES	24
SECTION 35 - HYDRAULIC SYSTEM	24
SECTION 41 - STEERING	28
SECTION 44 - 2WD FRONT AXLE	30
SECTION 50 - CLIMATE CONTROL	30
SECTION 55 - ELECTRICAL	35
SECTION 90 - PLATFORM	52

The following pages are the collation of the contents pages from each section and chapter of the T2310, T2320, T2330 Repair manual. Complete Repair part # 87491390.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87491391

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Introduction	3
	Precautionary Statements	4
	Personal Safety	4
	Machine Safety	4
	Information	4
	Technical Information	5
	Hardware	5
	General	5
	Plating	5
	Nut Tightening	5
	Locknuts	5
	Jam Nuts	5
	Thread Lubrication	5
	Safety	6
	Precautionary Statements	6
	The Tractor	6
	Servicing the Tractor	6
	Operating the Tractor	7
	Driving the Tractor	7
	Operating the PTO	8
	Diesel Fuel	8
	Safety Frame (ROPS)	8
	Decals - T2310, T2320, T2330 with 12x12 Transmission	9
	Safety Decals	9
	Instruction Decals - T2310, T2320, T2330 with 12x12 Transmission	11
	Decals - T2310, T2320 with HST	14
	Safety Decals	14
	Instruction Decals - T2310, T2320 with HST Transmission	16
	Universal Symbols	20
	Specifications - T2310, T2320, T2330 with 12x12 Gear Transmission	21
	General Dimensions	28

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87491391

Chapter 1 - General Information (Continued)

CONTENTS

Section	Description	Page
	Specifications - T2310, T2320 with Hydrostatic Transmission	34
	General Dimensions	40
	Minimum Hardware Tightening Torque	48
	Special Tools	48
	Adjustments	50

SECTION 10 - ENGINE

BOOK 1 - 87491391

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	6
	Metric Bolt Torque Specifications	15
	Special Tools	16
	Compression Test and Tools	17
	Description of Operation	18
	Troubleshooting	19
	Cylinder Head and Valve Train Components	23
	Separating the Tractor at the Clutch Housing/Engine - 12x12 Transmission	24
	Removal	24
	Separating the Tractor at the Engine/Frame	28
	Installation	30
	Attaching the 12x12 Transmission to the Engine	34
	Overhaul	39
	Engine	39
	Fuel Injector and Glow Plug	39
	Removal	39

SECTION 10 - ENGINE

BOOK 1 - 87491391

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Oil Pressure Switch	39
	Temperature Sending Switch and Alternator	39
	Removal	39
	Fan, Water Pump, and External Oil Tube	40
	Removal	40
	Air Inlet Manifold	40
	Removal	40
	Rocker Arm Shaft and Support Bracket	41
	Removal	41
	Cylinder Head	41
	Removal	41
	Valve Tappet	41
	Removal	41
	Fuel Shutoff Solenoid	42
	Removal	42
	Engine Timing Gear Cover, Timing Gears, and Cam Shaft	42
	Timing Gear Cover Removal	42
	Timing Gears and Camshaft	44
	Removal	44
	Oil Sump	45
	Removal	45
	Oil Suction Pipe and Strainer	45
	Removal	45
	Balancer Assembly	46
	Removal	46
	Connecting Rods, Bearings, and Pistons, Rings	46
	Removal	46
	Flywheel	47
	Removal	47
	Backplate and Oil Seal	47
	Removal	47
	Crankshaft and Main Bearings	47
	Removal	47

SECTION 10 - ENGINE

BOOK 1 - 87491391

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Cylinder Head	48
	Disassembly	48
	Inspection and Repair	48
	Valve Seats	49
	Valves	50
	Valve Guides	51
	Valve Springs	52
	Rocker Arms	52
	Push Rods	53
	Cylinder Head	53
	Assembly	53
	Cylinder Block	54
	Pistons	54
	Disassembly and Inspection	54
	Piston Rings	57
	Connecting Rods	57
	Pin to Bushing Clearance	58
	Connecting Rod Bearing	59
	Clearance Check	59
	Pistons, Rings, and Connecting Rod	60
	Assembly	60
	Crankshaft - Main Bearing and Thrust Washer	61
	Removal and Inspection	61
	Crankshaft	62
	Bearing (Bushing)	63
	Replacement	63
	Main Bearing	64
	Assembly	64
	Port Block	65
	Removal	65
	Installation	65
	Timing Gear	66

SECTION 10 - ENGINE

BOOK 1 - 87491391

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Camshaft	66
	Disassembly	66
	Inspection	66
	Assembly	67
	Flywheel	67
	Timing Gear Housing	68
	Front Oil Seal and Steering Pump Seal	68
	Replacement	68
	Crankshaft and Bearing Holder	69
	Installation	69
	Rear Oil Seal and Backplate	69
	Installation	69
	Flywheel	70
	Installation	70
	Pistons and Connecting Rods	70
	Installation	70
	Balancer Assembly (N844 and N844L Engines)	71
	Installation	71
	Balancer Shims	71
	Oil Suction Pipe and Suction Strainer	72
	Installation	72
	Oil Sump	72
	Installation	72
	Camshaft and Camshaft Gear	72
	Installation	72
	Idler Gear, Oil Pump, and Injection Timing	73
	Installation	73
	Timing Gear Cover	73
	Installation	73
	Crankshaft Pulley	73
	Installation	73
	Fuel Injection Pump	74
	Installation	74

SECTION 10 - ENGINE

BOOK 1 - 87491391

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Hydraulic Oil Pump	74
	Installation	74
	Power Steering Pump	75
	Installation	75
	Head Gasket Selection	75
	Selection Chart	75
	Cylinder Head	76
	Installation	76
	Valve Clearance	76
	Adjustment	76
	Valve Cover	77
	Installation	77
	Water Pump and Cooling Fan	77
	Installation	77
	External Oil Tube	77
	Assembly	77
	Glow Plug and Connector	78
	Installation	78
	Fuel Injector	78
	Installation	78
	Fuel Piping	78
	Installation	78
	Alternator and Temperature Sender Switch	79
	Installation	79
	Exhaust Manifold	79
	Installation	79
	Description of Operation - Engine Lubrication System	80
	Oil Filter	83
	Construction and Function	83
	Maintenance	83

SECTION 10 - ENGINE

BOOK 1 - 87491391

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Oil Pump	83
	Removal	83
	Inspection	83
	Installation and Adjustment	84
	Engine Oil Pressure	85
	Oil Pressure Relief Valve	86
	Removal	86
	Installation	86
	Oil Consumption	86
	Description of Operation - Cooling System	87
	Maintenance	89
	Coolant	89
	Radiator Cap	89
	Thermostat	90
	Water Pump	90
	Cooling Fan	90
	Overhaul - Cooling System	91
	Radiator	91
	Removal	91
	Inspection and Repair	92
	Installation	92
	Water Pump	93
	Removal	93
	Inspection and Repair	95
	Installation	95
	Thermostat	96
	Removal	96
	Inspection and Repair	96
	Installation	97
	Cab Heater	97
	Installation	97

SECTION 10 - ENGINE

BOOK 1 - 87491391

Chapter 2 - Fuel Systems

CONTENTS

Section	Description	Page
	Specifications	3
	Standards for Adjusting the Injection Pump	4
	Torque Specifications	4
	Special Tools	4
	Description of Operation	5
	Injection Pump	5
	Troubleshooting	7
	General	7
	Fuel Injectors	10
	Governor	11
	Fuel Variation Mechanism	12
	Delivery Valve Assembly	13
	CTD (Compact Timing Device) Mechanism	13
	Pumping Elements	15
	Delivery Valves	15
	Injection Pump	17
	Removal	17
	Repair	19
	Installation	19
	Calibration/Adjustments	20
	Fuel Pump	20
	Installation (New Pump or Drive Component)	20
	Spill-timing Procedure	21
	Fuel Screw/High Idle	25
	Adjustment	25
	Fuel Flow Chart	26
	Auto Bleed	26
	Fuel Lift Pump	27
	Removal	27
	Inspection	27
	Installation	27
	Specifications	27

SECTION 10 - ENGINE

BOOK 1 - 87491391

Chapter 2 - Fuel Systems (Continued)

CONTENTS

Section	Description	Page
	Troubleshooting	27
	Description of Operation	28
	Governor	28
	Disassembly	30
	Assembly	31
	Adjustments	33
	Injectors	34
	Removal	35
	Disassembly	36
	Assembly/Adjustment	36
	Engine Breather Valve	37
	Removal	38
	Installation	38
	Troubleshooting - Engine Breather Valve	39

SECTION 18 - CLUTCH

BOOK 1 - 87491391

Chapter 1 - Clutch

CONTENTS

Section	Description	Page
	Specifications	3
	Bolt Torques	4
	Special Tools	4
	Description of Operation	5
	Troubleshooting	7
	Overhaul	8

SECTION 18 - CLUTCH

BOOK 1 - 87491391

Chapter 1 - Clutch (Continued)

CONTENTS

Section	Description	Page
	Separating the Tractor at the Clutch Housing/Engine	8
	Removal	8
	Clutch	14
	Removal	14
	Inspection	14
	Assembly	15
	Attaching the 12x12 Transmission to the Engine	16
	Clutch Related Components	22
	Pilot Bearing	22
	Removal	22
	Installation	22
	Damper Disc	22
	Removal	23
	Inspection	23
	Installation	23
	Flywheel Dimensions	24
	Clutch Release Bearing	25
	Removal	25
	Inspection	26
	Installation	26
	Clutch Linkage Components	26
	Cross Shaft Bushings	26
	Disassembly	26
	Assembly	27
	Pedal Bushings	28
	Removal	28
	Disassembly	28
	Assembly	28
	Installation	28
	Pedal	29
	Adjustment	29
	Maximum Travel Adjustment	29

SECTION 21 - TRANSMISSION

BOOK 2 - 87491392

Chapter 1 - 12 x 12 Synchronized Shuttle Shift Gear Transmission

CONTENTS

Section	Description	Page
	Specifications	3
	Metric Bolt Torque Specifications	4
	Special Tools	5
	Description of Operation	6
	Cross Section - 12 x 12 Transmission	8
	Powerflow	9
	Troubleshooting	13
	Overhaul	14
	Separating the Tractor at the Clutch Housing/Engine	14
	Removal	14
	Clutch Housing	20
	Disassembly	20
	Main Transmission	24
	Retainer Cover	24
	Disassembly	24
	Main Shift Rails and Shift Forks	25
	Disassembly	25
	Main Shaft	28
	Disassembly	28
	Range Shift Rail and Shift Fork	31
	Disassembly	31
	Range Gear Countershaft	32
	Disassembly	32
	Input Shaft	33
	Disassembly	33
	Reverse Idler Shaft	34
	Disassembly	34
	Shuttle Shift Rail and Fork	36
	Disassembly	36
	Main Countershaft	37
	Disassembly	37

SECTION 21 - TRANSMISSION

BOOK 2 - 87491392

Chapter 1 - 12 x 12 Synchronized Shuttle Shift Gear Transmission (Continued)

CONTENTS

Section	Description	Page
	Synchronizers	39
	Disassembly	39
	Main Transmission Components	40
	Inspection	40
	Synchronizers	40
	Assembly	40
	Main Countershaft	41
	Assembly	41
	Shuttle Shift Rail and Fork	42
	Assembly	42
	Reverse Idler Shaft	44
	Assembly	44
	Input Shaft	46
	Assembly	46
	Main Countershaft End Float	47
	Assembly - Bearing (no preload)	47
	Range Gear Countershaft	47
	Assembly	47
	Range Shift Rail and Fork	48
	Assembly	48
	Main Shaft	49
	Assembly	49
	Retainer Cover	52
	Assembly	52
	Main Shaft End Float	53
	Assembly	53
	Main Shift Rails and Forks	54
	Assembly	54
	Clutch Housing	58
	Assembly	58
	Attaching the 12 x 12 Transmission to the Engine	63
	Transmission Shift Levers	69

SECTION 21 - TRANSMISSION

BOOK 2 - 87491392

Chapter 1 - 12 x 12 Synchronized Shuttle Shift Gear Transmission (Continued)

CONTENTS

Section	Description	Page
	Main Shift Control Lever	70
	Removal	70
	Installation	70
	Main Shift Lever	71
	Adjustment	71
	Shuttle Shift Control Lever	72
	Removal	72
	Installation	72

SECTION 25 - FWD FRONT AXLE

BOOK 2 - 87491392

Chapter 1 - FWD Front Axle, Supersteer™ and Sensitrack™

CONTENTS

Section	Description	Page
	Specifications	3
	Front to Rear Axle Ratio	3
	Bolt Torque Specifications	6
	Special Tools	6
	Description of Operation - FWD Front Axle	7
	FWD Front Axle	7
	Troubleshooting	8
	Lubrication	10
	Lubricate Every 50 Hours - Supersteer™	10
	Lubricate Every 50 Hours - Standard FWD	10

SECTION 25 - FWD FRONT AXLE

BOOK 2 - 87491392

Chapter 1 - FWD Front Axle, Supersteer™ and Sensitrack™ (Continued)

CONTENTS

Section	Description	Page
	Overhaul – Standard FWD Axle	11
	Standard FWD Axle	11
	Removal	11
	Installation	11
	Gear Reduction Drop Box	12
	Disassembly	12
	Front Axle and Differential	15
	Disassembly	15
	Drive Pinion	16
	Disassembly	16
	Front Axle	17
	Inspection	17
	Differential	17
	Inspection	17
	Gear Reduction—Drop Box	17
	Inspection	17
	Drive Pinion	18
	Assembly	18
	Differential Gear	18
	Assembly	18
	Axle and Differential	19
	Assembly	19
	Differential Case Bearing Preload	20
	Check and Adjustment	20
	Gear Reduction Box	21
	Assembly	21
	Bevel Gear-to-Pinion Backlash	23
	Check	23
	Description of Operation – Supersteer/Sensitrack	24
	Supersteer	24
	Sensitrack	25
	Automatic Position (Engaged)	26

SECTION 25 - FWD FRONT AXLE

BOOK 2 - 87491392

Chapter 1 - FWD Front Axle, Supersteer™ and Sensitrack™ (Continued)

CONTENTS

Section	Description	Page
	Automatic Position (Disengaged)	27
	Full Time Front Wheel Drive (Locked Down)	27
	Supersteer Front Axle	27
Overhaul - Supersteer Axle		30
	Supersteer Axle	32
	Removal	32
	Gear Reduction-Drop Box	35
	Disassembly	35
	Front Axle and Differential	38
	Disassembly	38
	Drive Pinion	38
	Disassembly	38
	Front Axle	39
	Inspection	39
	Differential	39
	Inspection	39
	Gear Reduction-Drop Box	39
	Inspection	39
	Drive Pinion	40
	Assembly	40
	Differential Gear	40
	Assembly	40
	Axle and Differential	41
	Assembly	41
	Differential Case Bearing Preload	42
	Check and Adjustment	42
	Gear Reduction Box	43
	Assembly	43
	Bevel Gear-to-pinion Backlash	45
	Check	45
	Supersteer Axle	46
	Installation	46

SECTION 27 - DIFFERENTIAL, REAR AXLE

BOOK 2 - 87491392

Chapter 1 - Differential, Rear Axle

CONTENTS

Section	Description	Page
	Specifications	2
	Bolt Torque Specifications	3
	Special Tools	3
	Description of Operation	4
	Differential	5
	Differential Lock	5
	Rear Axle	6
	Overhaul	7
	Differential	7
	Removal	7
	Disassembly	9
	Inspection	9
	Assembly	10
	Installation	10
	Drive Pinion	12
	Removal	12
	Disassembly	12
	Inspection	13
	Assembly	13
	Rear Axle	16
	Removal	16
	Disassembly	17
	Inspection	20
	Assembly	21
	Final Pinion	25
	Removal	25
	Disassembly	26
	Inspection	28
	Assembly	29
	Installation	31

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87491392

Chapter 1 - Hydrostatic Transmission - T2310-T2320

CONTENTS

Section	Description	Page
	Specifications	4
	Metric Bolt Torque Specifications	6
	Special Tools	6
	Description of Operation	7
	Power Flow	8
	High Range	8
	Low Range	9
	Oil Flow	10
	Neutral Position	10
	Forward Position	11
	Reverse Position	12
	Variable Displacement Pump	13
	Two Position Displacement Motor	14
	Hi/Lo Speed Control/Control Pod	15
	Hi/Lo Speed Control	15
	Foot Control Pedals	16
	Troubleshooting	18
	Charge Pump Relief Valve	20
	Test	20
	Pressure Testing and Adjustments	21
	High Pressure Relief Valve	21
	Hi/Low Pressure Test	23
	Separating the Tractor	25
	T2310 and T2320 w/HST Transmission	25
	Separating at the HST Housing/Engine	25
	Separating the HST Housing at the Gearbox	32
	Attaching the HST Housing to the Gearbox	34
	Attaching the HST to the Engine	37
	Hydrostatic Transmission	44
	Disassembly	44
	Charge Pump	44
	Removal	44

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87491392

Chapter 1 - Hydrostatic Transmission - T2310-T2320 (Continued)

CONTENTS

Section	Description	Page
	Port Block	45
	Removal	45
	Cylinder Block Assembly	46
	Removal	46
	Motor Swash Plate	46
	Removal	46
	Input and Output Shaft	47
	Removal	47
	Pump Swash Plate	47
	Removal	47
	Port Block	48
	Removal	48
	Inspection	48
	Piston	49
	Assembly	49
	Charge Pump	50
	Assembly	50
	Swash Plate	50
	Assembly	50
	Pump Shaft (Input Shaft)	51
	Assembly	51
	Charge Pump	51
	Assembly	51
	Cylinder Block Assembly for Pump	51
	Assembly for Pump	51
	Motor Shaft	52
	Assembly	52
	Cylinder Block Assembly for Motor	52
	Assembly for Motor	52
	Port Block	53
	Assembly	53
	Installation	54

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87491392

Chapter 1 - Hydrostatic Transmission - T2310-T2320 (Continued)

CONTENTS

Section	Description	Page
	Hydrostatic Transmission	55
	Assembly	55
	Check Valve	55
	Disassembly	55
	Inspection	55
	Assembly	55
	Description and Operation - Gearbox	56
	Gearbox	56
	Gearbox Identification	57
	Overhaul - Gearbox	58
	Gearbox	58
	Removal	58
	Disassembly	59
	Inspection	63
	Assembly	64
	Installation	67
	Hi/Lo Solenoid Valve	69
	Removal	71
	Disassembly	71
	Inspection	72
	Testing	72
	Assembly	73
	Adapter Block	74
	Removal	74
	Disassembly	75
	Inspection	76
	Assembly	76
	Cruise Control	77
	Electromagnet Air Gap Adjustment	78
	Adjustment	78

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**