
TL80A, TL90A, TL100A REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	2
SECTION 18 - CLUTCH	7
SECTION 21 - TRANSMISSIONS	8
SECTION 23 - FWD TRANSFER BOX	11
SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION	12
SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION	13
SECTION 31 - POWER TAKE-OFF	14
SECTION 33 - BRAKES	16
SECTION 35 - HYDRAULIC SYSTEMS	17
SECTION 41 - STEERING	24
SECTION 44 - AXLES AND WHEELS	25
SECTION 50 - AUXILIARY UNITS	26
SECTION 55 - ELECTRICAL SYSTEMS	28
SECTION 90 - CAB, PLATFORM, AND BODYWORK	37

The following pages are the collation of the contents pages from each section and chapter of the TLA Series Repair manual. Complete Repair part # 87580875.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TLA Series Tractors.

SECTION 00 - GENERAL

BOOK 1 - 87580876

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	3
	Health and Safety	5
	Precautionary Statements	15
	Safety	16
	Ecology and the Environment	19
	Minimum Hardware Tightening Torques	20
	Federal Emissions Warranty	22
	Consumables	25

SECTION 10 - ENGINE

BOOK 1 - 87580876

Chapter 1 - Engine

CONTENTS

Operation	Description	Page
	Specifications	3
	Tightening Torques	9
	Special Tools	11
	Description and Operation	12
	Sectional Views	12
	Troubleshooting	17
	Overhaul	21
10 001 10	Engine	21
	Removal	21
	Installation	39
	Compression Test	41
	Considerations	41
	Uniform Compression	41
	Low Compression Readings	41

SECTION 10 - ENGINE

BOOK 1 - 87580876

Chapter 1 - Engine (Continued)

CONTENTS

Operation	Description	Page
	Disassembly	42
	Crankshaft Front Seal Removal	45
	Crankshaft Rear Seal Removal	47
	Assembly	53
	Bushings	53
	Tappet	54
	Camshaft	54
	Oil Nozzle	55
	Crankshaft	55
	Connecting Rod and Piston	58
	Installing the Piston Connecting Rod Assemblies in the Cylinder	59
	Big End Cap Assembly	60
	Thermostat Valve	61
	Cylinder Head	61
	Fuel Injectors	63
	Rocker Arm Assembly	63
	Timing Gear	64
	Injection Pump	66
	Counterweight and Balancer	66
	Hydraulic Pump Drive Gear	67
	Timing Gear Casing	68
	Crankshaft Rear Seal	68
	Flywheel	69
	Oil Pump	70
	Oil Sump	70
	Crankshaft Front Seal	70
	Crankshaft Front Pulley	70
	Cooling System Union	71
	Coolant Pump	71
	Fan-Alternator Pulley	71
	Auxiliary Drive Belt	73

SECTION 10 - ENGINE

BOOK 1 - 87580876

Chapter 1 - Engine (Continued)

CONTENTS

Operation	Description	Page
	Exhaust Manifold - Turbocharger	73
	Injector Feed Pipe	73
	Priming Pump - Feed Pipe	73
	Installing The Pipes Between The Fuel Supply and Injection Pumps, Pre-Heating System and Tappet Cover	74
	Starter Motor	75
	Checks, Measurements and Repairs	76
	Cylinder Block	76
	Crankshaft	79
	Main Crankshaft Tolerances	80
	Connecting Rods	81
	Pistons	83
	Measuring the Piston Diameter	84
	Piston Pins	84
	Conditions for Correct Pin-piston Coupling	85
	Piston Rings	85
	Camshaft and Valves	87
	Decarbonizing and grinding valves	87
	Checking Valve Spring Flexibility	89
	Tappets	89
	Camshaft	90
	Cylinder Head	91
	Crankshaft Front Seal	92
	Crankshaft Rear Seal	95
	Valve Tappet and Rocker Arm	98

SECTION 10 - ENGINE

BOOK 1 - 87580876

Chapter 2 - Cooling System

CONTENTS

Operation	Description	Page
	Specifications	2
	Description of Operation	3
	Radiator	3
	Coolant Thermometer	3
	Thermostat Valve	3
	Sectional Views	4
	Overhaul	5
10 402 10	Coolant Pump	5
	Removal	5
	Installation	6
10 402 30	Thermostat Valve	7
	Removal	7
	Installation	8
10 406 10	Radiator	9
	Removal	9
	Installation	14
10 414 10	Coolant Pump and Alternator Belts	15
	Tension Adjustment	15
	Polyvee Belt	15

SECTION 10 - ENGINE

BOOK 1 - 87580876

Chapter 3 - Lubrication System

CONTENTS

Operation	Description	Page
	Specifications	2
	Lubrication System Components	4
	Oil Pressure Indicator	5
	Oil Filter	6
	Oil Pump	6

SECTION 10 - ENGINE

BOOK 1 - 87580876

Chapter 4 - Fuel System

CONTENTS

Operation	Description	Page
	Specifications	2
	Special Tools	4
	Description and Operation	6
	Turbocharged Engine	6
	Manifold Pressure Compensator (LDA)	6
	Description	6
	Operation	7
	All Models	8
	Electrical Cold-start Accelerator (KKSB)	8
	Overhaul	10
10 218 30	Fuel Injectors	10
	Removal	10
	Installation	12
10 246 14	BOSCH Fuel Injection Pump	13
	Removal	13
	Locking the Injection Pump	16
	Timing the Fuel Injection Pump on a Workbench	18
	Installation	21
	Timing the Pump on the Tractor	21

SECTION 18 - CLUTCH

BOOK 1 - 87580876

Chapter 1 - Clutch

CONTENTS

Operation	Description	Page
	Specifications	2
	Tightening Torques	3
	Special Tools	3
	Description and Operation	4
	Cross Sectional Views	4
	Troubleshooting	5
	Overhaul	6
	Inspection and Adjustment	6
	12"/12" Dual Clutch	6
18 100 40	Clutch Pedal	8
18 110 10	12"/12" Dual Clutch	9
	Removal	9
	Installation	10
	Disassembly	12
	Assembly	15
	Adjust Release Levers	16
	Single Disk Clutch	17
	Inspection	17

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87053392

Chapter 1 - 12 x 12 Synchro Command Mechanical Shuttle Transmission (TL80A, TL90A, TL100A Standard Models)

CONTENTS

Operation	Description	Page
	12 x 12 Synchro Command Mechanical Shuttle Transmission	3

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87053392

Chapter 2 - Reverser (12 x 12 Mechanical Shuttle Transmissions)

CONTENTS

Operation	Description	Page
	Specifications	2
	Tightening Torques	3
	Special Tools	4
	Description and Operation	4
	Cross-Sectional Views	4
	Troubleshooting	6
	Overhaul	7
21 110 85	Clutch-Reverser Casing	7
	Removal	7
	Disassembly	7
	Assembly	10
	Installation	10

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87053392

Chapter 3 - Reverser and Creeper Unit for 20 x 12 Mechanical Shuttle Transmission (Optional for TL80A, TL90A Standard and all Deluxe Models)

CONTENTS

Operation	Description	Page
	Specifications	2
	Tightening Torques	3
	Special Tools	4
	Description and Operation	6
	Cross-Sectional Views	6
	Troubleshooting	8
	Overhaul	9
21 110 87	Reverser-Clutch Casing and Creeper Unit	9
	Removal	9
	Disassembly	9
	Assembly	13
	Installation	14

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87053392

Chapter 4 - 24 x 24 Dual Command Power Shuttle (TL80A, TL90A, TL100A Deluxe Models)

CONTENTS

Operation	Description	Page
	Specifications	2
	Tightening Torques	4
	Special Tools	6
	Description and Operation	8
	Cross-Sectional Views	8
	Overhaul	18
21 110 88	Clutch Casing with Power Shuttle and Dual Command	18
	Removal	18
	Disassembly	18
	Assembly	24
	Installation	24
21 154 60	Clutch (A)	25
	Disassembly	25
	Assembly	27
	Installing on Clutch Casing	28
21 154 60	Clutch (B)	30
	Disassembly - Assembly	30

SECTION 23 - FWD TRANSFER BOX

BOOK 2 - 87053392

Chapter 1 - FWD Transfer Box

CONTENTS

Operation	Description	Page
	Specifications	2
	Tightening Torques	3
	Special Tools	4
	Description and Operation	5
	Cross-Sectional Views	5
	Electro-Hydraulic Four Wheel Drive (FWD)	7
	Troubleshooting	8
	Overhaul	9
23 202 20	Services Control Valve	9
	Removal	9
	Installation	11
	Disassembly	12
	Assembly	13
23 202 50	Drive Gear	14
	Removal	14
	Installation	18
23 202 52	Drive Gear Housing	19
	Removal	19
	Installation	22

SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION

BOOK 2 - 87053392

Chapter 1 - Front Axle Mechanical Transmission

CONTENTS

Operation	Description	Page
	Specifications	2
	Tightening Torques	4
	Special Tools	6
	Description and Operation	9
	Cross-Sectional Views	9
	Limited-Slip Self-Locking Differential	12
	Front Differential Lock	13
	Troubleshooting	14
	Overhaul	15
25 100 30	Front Axle	15
	Removal	15
	Installation	18
	Correctly Installing Axle Support to the Engine	19
	Disassembly	20
	Assembly	28
25 102 24	Front Axle Differential	29
	Backlash Between Side and Planetary Pinion Teeth	29
25 102 27	Front Axle Differential with Limited-Slip Unit	30
	Removal	30
	Disassembly	31
	Assembly	31
	Installation	31
25 104 34	Front Differential Lock Clutch Assembly	32
	Disassembly	32
	Assembly	33
25 108 30	Front Epicyclic Final Drive	34
	Removal	34
	Installation	35
	Wheel Hub Seal Replacement	37
25 108 46	Steering Knuckle Pins and Bearings Replacement	38
	Adjustments	39
	Stub Axle	39
	Pinion	41
	Differential	45

SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION

BOOK 2 - 87053392

Chapter 1 - Rear Axle Mechanical Transmission

CONTENTS

Operation	Description	Page
	Specifications	2
	Drive and Differential Data	2
	Final Drive Data	3
	Tightening Torques	3
	Special Tools	5
	Description and Operation	10
	Sectional Views	10
	Hydraulically Controlled Rear Differential Lock	14
	Troubleshooting	15
	Drive and Differential	15
	Final Drive	15
	Differential Lock	16
	Overhaul	17
21 118 12	Rear Gearbox - Transmission Casing	17
	Removal	17
	Installation	36
	Disassembly	39
	Assembly, Adjustment, Installation	47
	Final Drive Casing	59
	Removal	59
	Installation	61
	Epicyclic Final Drive	62
	Disassembly	62
	Assembly	62
27 120 34	Drive Wheel Shaft	63
	Disassembly	63
	Assembly	64

SECTION 31 - POWER TAKE-OFF

BOOK 3 - 87580877

Chapter 1 - Mechanical Power Take-Off

CONTENTS

Operation	Description	Page
	Specifications	2
	Special Tools	4
	Tightening Torques	5
	Description and Operation	6
	Sectional Views	6
	Mechanically Operated PTO	8
	Troubleshooting	10
	Overhaul	11
31 112 20	Power Take-Off Housing	11
	Removal	11
	Installation	13
31 112 45	Power Take-Off Shafts	14
	Disassembly	14
	Assembly	16

SECTION 31 - POWER TAKE-OFF

BOOK 3 - 87580877

Chapter 2 - Electro-Hydraulic Power Take-Off

CONTENTS

Operation	Description	Page
	Specification	2
	Special Tools	4
	Tightening Torques	5
	Description and Operation	6
	Sectional Views	6
	Electro-Hydraulic PTO	10
	PTO Engagement	11
	Troubleshooting	18
	Overhaul	19
31 114 64	PTO Clutch Brake	19
	Removal	19
	Installation	21
31 116 21	PTO Housing	22
	Removal	22
	Installation	25
	Disassembly	26
	Assembly	32

SECTION 33 - BRAKES

BOOK 3 - 87580877

Chapter 1 - Brakes

CONTENTS

Operation	Description	Page
	Specifications	2
	Tightening Torques	3
	Description of Operation	4
	Sectional Views	4
	Troubleshooting	7
	Overhaul	8
33 110 08	Handbrake Lever	8
	Adjustment	8
	Parking Brake Housing	9
	Removal	9
	Disassembly	9
	Assembly	11
	Installation	11
33 202 04	Brake System Bleeding	12
33 202 46	Brake Pump	13
	Removal	13
	Installation	14
	Adjustment of Pedal Travel	14
33 202 60	Brake Units	15
	Removal	15
	Installation	18

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87580877

Chapter 1 - Hydraulic System Description

CONTENTS

Operation	Description	Page
	Specifications	2
	Precautionary Statements	3
	Description and Operation	4
	Power Steering and Lift Pump Components	4
	Hydraulic System Configurations	5
	Hydraulic System - General Description	6
	Hydraulic Power Lift (HPL) Control	7
	Rear Auxiliary (Remote) Control Valves	11
	Rear Remote Valve Arrangement	12
	Mid-Mount Control Remote Control Valves	13
	Auxiliary Control Valve Oil Flow	14

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87580877

Chapter 2 - Mechanically Operated Hydraulic Power Lift (HPL)

CONTENTS

Operation	Description	Page
	Specifications	2
	Torque Valves	4
	Sectional Views	7
	Special Tools	6
	Troubleshooting	9
	Description and Operation	10
	Hydraulic Power Lift (HPL) Control Valve Oil Flow	10
	Lower Phase	10
	Neutral Phase	12
	Lift Phase	14
	Overhaul	16
	HPL Cover	16
	Removal	16
	Disassembly	20
	Assembly	24
	Adjusting the HPL on a Workbench	26
	Adjusting the HPL on the Tractor	39
	Fast Raise/Lower Control Upper Stroke Limit	42
	HPL Control Valve	43
	Removal	43
	Disassembly	45
	Assembly	49
	Installation	50
	HPL Pump Seals	51
	Lift Pressure Relief Valve	52

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87580877

Chapter 3 - KONTAK Auxiliary Control Valves (TLA Standard Models)

CONTENTS

Operation	Description	Page
	Sectional Views	2
	Description and Operation	4
	Kontak Remote Valve Oil Flow	5
	Double-Acting Raise Position	5
	Double-Acting Lower Position	5
	Single-Acting Raise Position	6
	Single-Acting Lower Position	6
	Kontak Remote Valve With Detent Release and Float Oil Flow	7
	Double-Acting Raise Position	7
	Double-Acting Lower Position	7
	Double-Acting Float Position	8

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87580877

Chapter 4 - BOSCH Auxiliary Control Valves (TLA Deluxe Models)

CONTENTS

Operation	Description	Page
	Sectional Views	2
	Description and Operation	5
	Bosch Closed-Center Remote Control Valves With Open-Center Pump	5
	Bosch Remote Valve With Detent (Non-Adjustable), Float, and Flow Control Oil Flow ...	6
	Neutral Position	7
	Raise Position	7
	Lower Position	8
	Float Position	8
35 204 40	BOSCH Remote Valves	9
	Removal	9
	Disassembly	11
	Assembly	15
	Installation	17

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87580877

Chapter 5 - Kontak Mid-Mount Auxiliary Control Valves

CONTENTS

Operation	Description	Page
	Sectional Views	2
	Torque Values	4
	Description and Operation	5
	Kontak Mid-Mount Remote Valve Oil Flow	5
35 204 46	Flow Control Valve	7
	Disassembly	7
	Assembly	9
35 204 46	Mid-Mount Remote Valves	11
	Disassembly	11
	Assembly	11

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87580877

Chapter 6 - Low Pressure Hydraulic System

CONTENTS

Operation	Description	Page
	Low-Pressure, Steering and Lubrication Circuit	2
	Description and Operation	2
	Low Pressure Circuit Hydraulic Pump	2
	Power Shuttle Transmissions with Dual Command	3
	Services Control Valve (Models with Power Shuttle Transmission)	4
	Services Control Valve (Models with Mechanical Shuttle Transmission)	4
	Lubrication Oil Flow on TLA Models with Power Shuttle Transmission and Dual Command	5
	Oil Flow	6
	12x12 Synchro Command Mechanical Shuttle Transmission on TL80A, TL90A and TL100A Standard Models	6
	24x24 Dual Command Power Shuttle Transmission on TL80A, TL90A and TL100A Deluxe Models	7
	Rear Differential Lock (Hydraulic Control) on all TL80A, TL90A and TL100A Deluxe Models and on Standard Models with FWD	8
	Front Differential Lock (Hydraulic Control) on TL80A, TL90A and TL100A Deluxe Models with FWD	10
	Electro-Hydraulically Disengaged Four-Wheel Drive (FWD) - All Models	11
	Power Take-Off [Electro-Hydraulic Engagement] (TLA Deluxe models)	12

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**