
TC35A, TC35DA, TC40A, TC40DA, TC45A, TC45DA REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 18 - CLUTCH	10
SECTION 21 - TRANSMISSION	12
SECTION 23 - DRIVELINE	14
SECTION 25 - FWD FRONT AXLE	15
SECTION 27 - DIFFERENTIAL, REAR AXLE	18
SECTION 29 - HYDROSTATIC TRANSMISSION	19
SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS	22
SECTION 33 - BRAKES	25
SECTION 35 - HYDRAULIC SYSTEM	25
SECTION 41 - STEERING	29
SECTION 44 - 2WD FRONT AXLE	31
SECTION 50 - CLIMATE CONTROL	31
SECTION 55 - ELECTRICAL	35
SECTION 90 - PLATFORM	53

The following pages are the collation of the contents pages from each section and chapter of the TC35A - TC45DA Repair manual. Complete Repair part # 87618714.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TC35A - TC45DA Tractors.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87054260

Chapter 1 - General Information

CONTENTS

Section	Description	Page
00 000	Introduction	2
	Safety	3
	Technical Information	4
	Safety Precautions	5
	Safety Decals - TC35A, TC40A, TC45A	8
	Instruction Decals - TC35A, TC40A, TC45A	9
	Safety Decals - TC35DA, TC40DA, TC45DA	12
	Instruction Decals - TC35DA, TC40DA, TC45DA	13
	International Symbols	17
	Specifications - TC35A, TC40A, TC45A	18
	General Dimensions - TC35A, TC40A, TC45A	25
	Specifications - TC35DA, TC40DA, TC45DA	31
	General Dimensions - TC35DA, TC40DA, TC45DA	37
	Minimum Hardware Tightening Torques	41
	Special Tools	43
	Lubricants	44
00 400	Recommended Lubricants	44
	Adjustments	45
	Tire Inflation Pressure - Adjustments	45
00 100	Pre-Season and Pre-Delivery Checklist	46

SECTION 10 - ENGINE

BOOK 1 - 87054260

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	6
	Metric Bolt Torque Specifications	15
	Special Tools	16
	Compression Test and Tools	17
	Description of Operation	18
	Troubleshooting	19
	Cylinder Head and Valve Train Components	23
	Cylinder Block Assembly	23
	Separating the Tractor at the Clutch Housing/Engine - 12x12 Transmission	25
	Removal	25
	Separating the Tractor at the HST Housing/Engine - HST Transmission	29
	Removal	29
	Separating the Tractor at the HST Engine Frame	33
	Installation	35
	Attaching the 12x12 Transmission to the Engine	42
	Attaching the HST to the Engine	46
	Overhaul	54
	Engine	54
	Fuel Injector and Glow Plug	54
	Removal	54
	Oil Pressure Switch	54
	Temperature Sending Switch and Alternator	54
	Removal	54
	Fan, Water Pump and External Oil Tube	55
	Removal	55
	Air Inlet Manifold	55
	Removal	55
	Rocker Arm Shaft and Support Bracket	56
	Removal	56
10 101	Cylinder Head	56
	Removal	56
	Valve Tappet	57
	Removal	57

SECTION 10 - ENGINE

BOOK 1 - 87054260

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Fuel Shutoff Solenoid	57
	Removal	57
10 106	Engine Timing Gear Cover, Timing Gears, and Cam Shaft	57
	Timing Gear Cover Removal	57
10 106	Timing Gears and Cam Shaft	60
	Removal	60
10 102	Oil Sump	61
	Removal	61
	Oil Suction Pipe and Strainer	61
	Removal	61
10 110	Balancer Assembly	62
	Removal	62
10 105	Connecting Rods, Bearings, and Pistons, Rings	62
	Removal	62
10 103	Flywheel	63
	Removal	63
10 103	Backplate and Oil Seal	63
	Removal	63
	Crankshaft - Main Bearings	63
	Removal	63
10 101	Cylinder Head	64
	Disassembly	64
	Inspection and Repair	64
	Valve Seats	65
	Valves	66
	Valve Guides	67
	Valve Springs	68
	Rocker Arms	68
	Push Rods	69
	Cylinder Head	69
	Assembly	69
	Cylinder Block	70

SECTION 10 - ENGINE

BOOK 1 - 87054260

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Pistons	70
	Disassembly and Inspection	70
	Piston Rings	73
	Connecting Rods	73
	Connecting Rod Bearing	75
	Clearance Check	75
	Pistons, Rings, and Connecting Rod	76
	Assembly	76
10 103	Crankshaft - Main Bearing and Thrust Washer	77
	Removal and Inspection	77
	Crankshaft	78
	Bearing (Bushing)	79
	Replacement	79
	Main Bearing	80
	Assembly	80
	Port Block	81
	Removal	81
	Installation	81
10 106	Timing Gear	82
	Camshaft	82
	Disassembly	82
	Inspection	82
	Assembly	83
10 103	Flywheel	83
10 102	Timing Gear Housing	84
10 102	Front Oil Seal and Steering Pump Seal	84
	Replacement	84
10 103	Crankshaft and Bearing Holder	85
	Installation	85
	Rear Oil Seal and Backplate	85
	Installation	85
	Flywheel	86
	Installation	86

SECTION 10 - ENGINE

BOOK 1 - 87054260

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
10 105	Pistons and Connecting Rods	86
	Installation	86
10 110	Balancer Assembly	87
	Installation	87
	Balancer Shims	87
	Oil Suction Pipe and Suction Strainer	88
	Installation	88
	Oil Sump	84
	Installation	88
10 106	Camshaft and Camshaft Gear	88
	Installation	88
10 106	Idler Gear, Oil Pump, and Injection Timing	89
	Installation	89
	Timing Gear Cover	89
	Installation	89
	Crankshaft Pulley	90
	Installation	90
	Fuel Injection Pump	90
	Installation	90
	Hydraulic Oil Pump	91
	Installation	91
	Power Steering Pump	91
	Installation	91
10 101	Head Gasket Selection	92
	Selection Chart	92
	Cylinder Head	92
	Installation	92
10 106	Valve Clearance	93
	Adjustment	93
	Valve Cover	94
	Installation	94
	Water Pump and Cooling Fan	94
	Installation	94

SECTION 10 - ENGINE

BOOK 1 - 87054260

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	External Oil Tube	94
	Assembly	94
	Glow Plug and Connector	95
	Installation	95
	Fuel Injector	95
	Installation	95
10 218	Fuel Piping	95
	Installation	95
	Alternator and Temperature Sender Switch	96
	Installation	96
	Exhaust Manifold	96
	Installation	96
10 304	Description of Operation - Engine Lubrication System	97
10 206	Oil Filter	101
	Construction and Function	101
	Maintenance	101
10 304	Oil Pump	101
	Removal	102
	Inspection	102
	Installation and Adjustment	102
	Engine Oil Pressure	103
	Check	103
	Oil Pressure Relief Valve	104
	Removal	104
	Installation	104
	Oil Consumption	104
10 400	Description of Operation - Cooling System	105
	Maintenance	107
	Coolant	107
	Radiator Cap	107
10 402	Thermostat	108
10 402	Water Pump	108
10 414	Cooling Fan	108

SECTION 10 - ENGINE

BOOK 1 - 87054260

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Overhaul - Cooling System	109
10 406	Radiator	109
	Removal	109
	Inspection and Repair	110
	Installation	110
10 402	Water Pump	111
	Removal	111
	Inspection and Repair	113
	Installation	113
10 402	Thermostat	114
	Removal	114
	Inspection and Repair	114
	Installation	115
	Cab Heater	115
	Installation	115

SECTION 10 - ENGINE

BOOK 1 - 87054260

Chapter 2 - Fuel Systems

CONTENTS

Section	Description	Page
	Specifications	3
	Standards for Adjusting Injection Pump	3
	Torque Specifications	4
	Special Tools	4
	Description of Operation	5
10 242	Injection Pump	5
	Troubleshooting - General	7
	Troubleshooting - Fuel Injectors	10
	Troubleshooting - Governor	11
10 244	Fuel Variation Mechanism	12
	Delivery Valve Assembly	13
10 244	CTD (Compact Timing Device)	13
10 236	Pumping Elements	15
10 214	Delivery Valves	15
10 242	Injection Pump	17
	Removal	17
	Repair	19
	Installation	19
	Calibration/Adjustments	20
10 230	Fuel Pump	20
	Installation	20
	Spill-Timing Procedure	21
	Fuel Screw/High Idle	25
	Adjustment	25
10 230	Fuel Pump	26
	Auto Bleed	26
	Description of Operation	27
10 230	Governor	27
	Disassembly	29
	Assembly	30
	Adjustments	32

SECTION 10 - ENGINE

BOOK 1 - 87054260

Chapter 2 - Fuel Systems (Continued)

CONTENTS

Section	Description	Page
10 218	Injectors	33
	Removal	34
	Disassembly	35
	Assembly/Adjustment	35
	Engine Breather Valve	36
	Removal	37
	Installation	37
	Troubleshooting - Engine Breather Valve	38

SECTION 18 - CLUTCH

BOOK 1 - 87054260

Chapter 1 - Clutch

CONTENTS

Section	Description	Page
18 000	Specifications	3
	Bolt Torques	4
	Special Tools	4
	Description of Operation	5
	Troubleshooting	7
	Overhaul	8
	Separating the Tractor at the Clutch Housing/Engine	8
	Removal	8
18 110	Clutch	14
	Removal	14
	Inspection	14
	Assembly	15
	Attaching the 12x12 Transmission to the Engine	16

SECTION 18 - CLUTCH

BOOK 1 - 87054260

Chapter 1 - Clutch (Continued)

CONTENTS

Section	Description	Page
18 110	Clutch Related Components	22
	Pilot Bearing	22
	Removal	22
	Installation	22
	Damper Disc	22
	Removal	23
	Inspection	23
	Installation	23
	Flywheel Dimensions	24
	Clutch Release Bearing	25
	Removal	25
	Inspection	25
	Installation	26
	Clutch Linkage Components	26
18 100	Cross Shaft Bushings	26
	Disassembly	26
	Assembly	27
	Pedal Bushings	28
	Removal	28
	Disassembly	28
	Assembly	28
	Installation	28
	Pedal	29
	Adjustment	29
	Maximum Travel Adjustment	29

SECTION 21 - TRANSMISSION

BOOK 2 - 87054261

Chapter 1 - 12 x 12 Synchronized Shuttle Shift Gear Transmission

CONTENTS

Section	Description	Page
21 000	Specifications	3
	Metric Bolt Torque Specifications	4
	Special Tools	5
	Description of Operation	6
	Cross Section - 12 x 12 Transmission	8
	Powerflow	9
	Troubleshooting	13
	Overhaul	14
21 114	Separating the Tractor at the Clutch Housing/Engine	14
21 110 10	Removal	14
	Clutch Housing	20
	Disassembly	20
	Main Transmission	24
21 148 63	Retainer Cover	24
	Disassembly	24
21 148 63	Main Shift Rails and Shift Forks	25
	Disassembly	25
21 148 63	Main Shaft	28
	Disassembly	28
21 148 63	Range Shift Rail and Shift Fork	31
	Disassembly	31
21 148 63	Range Gear Countershaft	32
	Disassembly	32
21 148 63	Input Shaft	33
	Disassembly	33
21 148 63	Reverse Idler Shaft	34
	Disassembly	34
21 148 63	Shuttle Shift Rail and Fork	36
	Disassembly	36
21 148 63	Main Countershaft	37
	Disassembly	37
21 148 63	Synchronizers	39
	Disassembly	39

SECTION 21 - TRANSMISSION

BOOK 2 - 87054261

Chapter 1 - 12 x 12 Synchronized Shuttle Shift Gear Transmission (Continued)

CONTENTS

Section	Description	Page
	Main Transmission Components	40
	Inspection	40
	Synchronizers	40
	Assembly	40
	Main Countershaft	41
	Assembly	41
	Shuttle Shift Rail and Fork	42
	Assembly	42
	Reverse Idler Shaft	44
	Assembly	44
21 148 63	Input Shaft	46
	Assembly	46
21 148 63	Main Countershaft End Float	47
	Assembly	47
21 148 63	Range Gear Countershaft	48
	Assembly	48
21 148 63	Range Shift Rail and Fork	49
	Assembly	49
21 148 63	Main Shaft	50
	Assembly	50
21 148 63	Main Shaft End Float	53
	Assembly	53
21 148 63	Main Shaft Gears End Float	54
	Assembly	54
	Main Shift Rails and Forks	55
	Assembly	55
	Retainer Cover	58
	Assembly	58
21 110 10	Clutch Housing	59
	Assembly	59
	Attaching the 12 X 12 Transmission to the Engine	64
21 130	Transmission Shift Levers	70

SECTION 21 - TRANSMISSION

BOOK 2 - 87054261

Chapter 1 - 12 x 12 Synchronized Shuttle Shift Gear Transmission (Continued)

CONTENTS

Section	Description	Page
	Main Shift Control Lever	71
	Removal	71
	Installation	71
	Main Shift Lever	72
	Adjustment	72
	Shuttle Shift Control Lever	73
	Removal	73
	Installation	73

SECTION 23 - DRIVELINE

BOOK 2 - 87054261

Chapter 1 - Driveline

CONTENTS

Section	Description	Page
23 000	Bolt Torque Specifications	2
	Special Tools	3
	Description of Operation	4
	Front Wheel Drive Take Off Gearbox	4
	Sensitrack	5
	Automatic Position (Engaged)	6
	Automatic Position (Disengaged)	6
	Full Time Front Wheel Drive (Locked Down)	6
	Supersteer™ Front Axle	7
	Troubleshooting	9
	Lubrication	9
	Overhaul	10
	Front Wheel Drive Take Off Gearbox	10

SECTION 23 - DRIVELINE

BOOK 2 - 87054261

Chapter 1 - Driveline (Continued)

CONTENTS

Section	Description	Page
	Removal	10
	Disassembly	12
	Inspection	12
	Assembly	12
	Installation	12
23 260	Sensitrack	14
	Removal	14
	Disassembly	16
	Inspection	23
	Assembly	23
23 260	Installation	31
	Cable Adjustment	33

SECTION 25 - FWD FRONT AXLE

BOOK 2 - 87054261

Chapter 1 - FWD Front Axle, Supersteer™ and Sensitrack™

CONTENTS

Section	Description	Page
	Specifications	3
	Front to Rear Axle Ratio	3
	Bolt Torque Specifications	6
	Special Tools	6
25 100	Description of Operation - FWD Front Axle	7
	FWD Front Axle	7
	Troubleshooting	8
	Lubrication	10

SECTION 25 - FWD FRONT AXLE

BOOK 2 - 87054261

Chapter 1 - FWD Front Axle, Supersteer™ and Sensitrack™ (Continued)

CONTENTS

Section	Description	Page
	Overhaul - Standard FWD Axle	11
	Standard FWD Axle	11
	Removal	11
	Installation	11
25 108	Gear Reduction Drop Box	12
	Disassembly	12
25 102	Front Axle and Differential	15
	Disassembly	15
	Drive Pinion	16
	Disassembly	16
	Front Axle	17
	Inspection	17
	Differential	17
	Inspection	17
	Gear Reduction - Drop Box	17
	Inspection	17
	Drive Pinion	18
	Assembly	18
	Differential Gear	18
	Assembly	18
	Axle and Differential	19
	Assembly	19
	Differential Case Bearing Preload	20
	Check and Adjustment	20
	Ring Gear-to-Pinion Backlash	20
	Check and Adjustment	20
25 108	Gear Reduction Box	23
	Assembly	23
	Ring Gear-to-Pinion Backlash	25
	Check and Adjustment	25
	Bevel Gear-to-Pinion Backlash	26
	Check	26
	Description and Operation - Supersteer™/Sensitrack™	27
25 100	Supersteer™	27

SECTION 25 - FWD FRONT AXLE

BOOK 2 - 87054261

Chapter 1 - FWD Front Axle, Supersteer™ and Sensitrack™ (Continued)

CONTENTS

Section	Description	Page
	Sensitrack™	28
	Automatic Position (Engaged)	29
	Automatic Position (Disengaged)	30
	Full Time Front Wheel Drive (Locked Down)	30
	Supersteer™ Front Axle	30
	Overhaul - Supersteer™ Axle	33
25 100	Supersteer™ Axle	35
	Removal	35
	Gear Reduction-Drop Box	40
	Disassembly	40
25 102	Front Axle and Differential	42
	Disassembly	42
	Drive Pinion	43
	Disassembly	43
	Front Axle	44
	Inspection	44
	Differential	44
	Inspection	44
	Gear Reduction-Drop Box	44
	Inspection	44
	Drive Pinion	45
	Assembly	45
	Differential Gear	45
	Assembly	45
25 102	Axle and Differential	46
	Assembly	46
	Differential Case Bearing Preload	47
	Check and Adjustment	47
	Ring Gear-to-Pinion Backlash	47
	Check and Adjustment	47
25 108	Gear Reduction Box	50
	Assembly	50
	Bevel Gear-to-Pinion Backlash	52
	Check	52
	Supersteer™ Axle	53
	Installation	53

SECTION 27 - DIFFERENTIAL, REAR AXLE

BOOK 2 - 87054261

Chapter 1 - Differential, Rear Axle

CONTENTS

Section	Description	Page
27 000	Specifications	2
	Bolt Torque Specifications	3
	Special Tools	3
	Description of Operation	4
27 110	Differential	6
27 110	Differential Lock	6
27 126	Rear Axle	7
	Overhaul	8
27 106	Differential	8
	Removal	8
	Disassembly	10
	Inspection	10
	Assembly	11
	Installation	11
	Drive Pinion	13
	Removal	13
	Disassembly	13
	Inspection	14
	Assembly	14
27 126	Rear Axle	17
	Removal	17
	Disassembly	18
	Inspection	21
	Assembly	22
27 126	Final Pinion	26
	Removal	26
	Disassembly	27
	Inspection	29
	Assembly	30
	Installation	32

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 3 - 87054262

Chapter 1 - Hydrostatic Transmission

CONTENTS

Section	Description	Page
	Specifications	4
	Metric Bolt Torque Specifications	6
	Special Tools	6
29 202	Description of Operation	7
	Power Flow	8
	High Range	8
	Low Range	9
	Oil Flow	10
	Neutral Position	10
	Forward Position	11
	Reverse Position	12
29 212	Variable Displacement Pump	13
29 212	Two Position Displacement Motor	14
29 134	Hi/Lo Speed Control/Control Pod	15
	Hi/Lo Speed Control	15
29 200	Foot Control Pedals	16
	Troubleshooting	18
	Charge Pump Relief Valve	20
	Test	20
	Pressure Testing and Adjustments	21
	High Pressure Relief Valve	21
	Hi/Low Pressure Test	23
	Separating the Tractor	25
	TC35DA, TC40DA, and TC45DA w/HST Transmission	25
	Separating at the HST Housing/Engine	25
	Separating the HST Housing at the Gearbox	32
	Attaching the HST Housing to the Gearbox	34
	Attaching the HST to the Engine	37
29 202	Hydrostatic Transmission	44
	Disassembly	44
	Charge Pump	44
	Removal	44

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 3 - 87054262

Chapter 1 - Hydrostatic Transmission (Continued)

CONTENTS

Section	Description	Page
29 130	Port Block	45
	Removal	45
	Cylinder Block Assembly	46
	Removal	46
	Motor Swash Plate	46
	Removal	46
	Input and Output Shaft	47
	Removal	47
	Pump Swash Plate	47
	Removal	47
29 130	Port Block	48
	Removal	48
	Inspection	48
	Piston	49
	Assembly	49
	Charge Pump	50
	Assembly	50
	Swash Plate	50
	Assembly	50
	Pump Shaft (Input Shaft)	51
	Assembly	51
	Charge Pump	51
	Assembly	51
29 218	Cylinder Block Assembly for Pump	51
	Assembly for Pump	51
	Motor Shaft	52
	Assembly	52
29 218	Cylinder Block Assembly for Motor	52
	Assembly for Motor	52
	Port Block	53
29 130	Assembly	53
	Installation	54

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**