

# Complete Contents

---

## INTRODUCTION

## DISTRIBUTION SYSTEMS

A

PRIMARY HYDRAULIC POWER SYSTEM	A.10.A
SECONDARY HYDRAULIC POWER SYSTEM	A.12.A
HYDRAULIC COMMAND SYSTEM	A.14.A
PNEUMATIC SYSTEM	A.20.A
ELECTRICAL POWER SYSTEM	A.30.A
LIGHTING SYSTEM	A.40.A
ELECTRONIC SYSTEM	A.50.A
FAULT CODES	A.50.A

## POWER PRODUCTION

B

ENGINE	B.10.A
FUEL AND INJECTION SYSTEM	B.20.A
AIR INTAKE SYSTEM	B.30.A
EXHAUST SYSTEM	B.40.A
ENGINE COOLANT SYSTEM	B.50.A
LUBRICATION SYSTEM	B.60.A
STARTING SYSTEM	B.80.A

## POWER TRAIN

C

POWER COUPLING Fixed coupling	C.10.B
TRANSMISSION Mechanical	C.20.B
TRANSMISSION Hydrostatic	C.20.F
PROCESS DRIVE Primary process drive	C.50.B

## TRAVELLING

D

FRONT AXLE	D.10.A
REAR AXLE	D.12.A
2WD-4WD SYSTEM Hydrostatic	D.14.E
STEERING Hydraulic	D.20.C
SERVICE BRAKE Hydraulic	D.30.C

PARKING BRAKE Hydraulic	D.32.C
<b>BODY AND STRUCTURE</b>	<b>E</b>
SHIELD	E.20.A
OPERATOR AND SERVICE PLATFORM	E.30.A
USER CONTROLS AND SEAT	E.32.A
USER CONTROLS AND SEAT Operator seat	E.32.C
USER PLATFORM	E.34.A
ENVIRONMENT CONTROL Heating system	E.40.B
ENVIRONMENT CONTROL Air-conditioning system	E.40.C
ENVIRONMENT CONTROL Heating, ventilation and air-conditioning	E.40.D
SAFETY SECURITY ACCESSORIES Safety	E.50.B
<b>CROP PROCESSING</b>	<b>K</b>
FEEDING Header feeding	K.25.D
FEEDING Feeder housing	K.25.E
THRESHING Conventional threshing	K.40.B
SEPARATING Beating	K.42.B
SEPARATING Rotary separator	K.42.C
SEPARATING Straw walker	K.42.E
SEPARATING Straw flow beater	K.42.F
STORING AND HANDLING Grain storing	K.60.B
CLEANING Primary cleaning	K.62.B
CLEANING Tailings return system	K.62.C
RESIDUE HANDLING Straw chopper	K.64.C
RESIDUE HANDLING Spreader	K.64.D
RESIDUE HANDLING Chaff blower	K.64.F
UNLOADING Grain unloading	K.72.B

# Contents

---

## INTRODUCTION

Foreword	Book 1 - 87690998	3
Basic instructions		4
Torque		7
Conversion factors		10
Product identification		11

# Contents

---

## DISTRIBUTION SYSTEMS - A

Book 1 - 87690998

### PRIMARY HYDRAULIC POWER SYSTEM - 10.A

#### TECHNICAL DATA

##### PRIMARY HYDRAULIC POWER SYSTEM

Special tools 3

##### Hydraulic pump

General specification 4

#### FUNCTIONAL DATA

##### PRIMARY HYDRAULIC POWER SYSTEM

Static description 5

Overview 7

Component localisation 10

Hydraulic symbol 19

Hydraulic schema 22

##### Hydraulic pump

Variable displacement pump - Overview 24

Variable displacement pump - Static description 25

Variable displacement pump - Dynamic description 26

#### SERVICE

##### Signal valve

Inspect 33

##### Stack valve

Remove 34

Install 35

##### Hydraulic pump

Variable displacement pump - Remove 36

Variable displacement pump - Install 37

Variable displacement pump - Test 38

#### DIAGNOSTIC

##### PRIMARY HYDRAULIC POWER SYSTEM

Troubleshooting 42

Testing 43

# Contents

---

## DISTRIBUTION SYSTEMS - A

Book 1 - 87690998

### SECONDARY HYDRAULIC POWER SYSTEM - 12.A

#### TECHNICAL DATA

##### Hydraulic pump

Torque

3

General specification

3

#### FUNCTIONAL DATA

##### SECONDARY HYDRAULIC POWER SYSTEM

Static description

4

Overview

5

Component localisation

6

Hydraulic schema

13

#### SERVICE

##### Hydraulic pump

Remove

15

Install

16

Repair

17

Test

18

Test

19

##### Valve block

Remove

20

Install

22

#### DIAGNOSTIC

##### Hydraulic pump

Testing

24

##### Oil filter

Testing

26

# Contents

---

## DISTRIBUTION SYSTEMS - A

Book 1 - 87690998

### HYDRAULIC COMMAND SYSTEM - 14.A

#### SERVICE

Stack valve

Remove

3

Install

5

# Contents

---

## DISTRIBUTION SYSTEMS - A

Book 1 - 87690998

### PNEUMATIC SYSTEM - 20.A

#### TECHNICAL DATA

##### PNEUMATIC SYSTEM

Torque	3
Special tools	3
General specification	3

#### FUNCTIONAL DATA

##### PNEUMATIC SYSTEM

Dynamic description	4
---------------------	---

#### SERVICE

##### Air regulator

Remove	5
Install	6

##### Air tank

Remove	7
Install	8

##### Air compressor

Disassemble	9
Remove	15
Install	17
Assemble	19

#### DIAGNOSTIC

##### PNEUMATIC SYSTEM

Troubleshooting	25
-----------------	----

# Contents

---

## DISTRIBUTION SYSTEMS - A

Book 2 - 87690999 and Book 3 - 87691000

### ELECTRICAL POWER SYSTEM - 30.A

#### TECHNICAL DATA

##### ELECTRICAL POWER SYSTEM

General specification	6
Special tools	14

#### FUNCTIONAL DATA

##### ELECTRICAL POWER SYSTEM

Electrical standard	16
Electrical symbol	20
Component localisation	36
Component identification	70

##### Wiring harness

Electrical schematic frame 01	78
Electrical schematic frame 02	80
Electrical schematic frame 03	82
Electrical schematic frame 04	84
Electrical schematic frame 05	86
Electrical schematic frame 06	88
Electrical schematic frame 07	90
Electrical schematic frame 08	92
Electrical schematic frame 09	94
Electrical schematic frame 10	96
Electrical schematic frame 11	98
Electrical schematic frame 12	100
Electrical schematic frame 13	102
Electrical schematic frame 14	104
Electrical schematic frame 15	106
Electrical schematic frame 16	108
Electrical schematic frame 17	110
Electrical schematic frame 18	112
Electrical schematic frame 19	114
Electrical schematic frame 20	116
Electrical schematic frame 21	118
Electrical schematic frame 22	120
Electrical schematic frame 23	122



Electrical schematic frame 24	124
Electrical schematic frame 25	126
Electrical schematic frame 26	128
Electrical schematic frame 27	130
Electrical schematic frame 28	132
Electrical schematic frame 29	134
Electrical schematic frame 30	136
Electrical schematic frame 31	138
Electrical schematic frame 32	140
Electrical schematic frame 33	142
Electrical schematic frame 34	144
Electrical schematic frame 35	146
Electrical schematic frame 36	148
Electrical schematic frame 37	150
Electrical schematic frame 38	152
Electrical schematic frame 39	154
Electrical schematic frame 40	156
Electrical schematic frame 41	158
Electrical schematic frame 42	160
Electrical schematic frame 43	162
Electrical schematic frame 44	164
Electrical schematic frame 45	166
Electrical schematic frame 46	168
Electrical schematic frame 47	170
Electrical schematic frame 48	172
Component Diagram 00	174
Component diagram 01	191
Component diagram 02	211
Component diagram 03	227
Component diagram 04	241
Component diagram 05	251
Component diagram 06	261
Component diagram 07	269
Component diagram 08	279
Component diagram 09	286
Component diagram 10	295
Component diagram 11	304
Component diagram 12	314
Component diagram 13	324
Component diagram 14	334
Component diagram 15	344
Component diagram 16	353
Component diagram 17	362

Component diagram 18	370
Component diagram 19	378
Component diagram 20	384
Component diagram 21	386
Component diagram 22	393
Component diagram 23	401
Component diagram 24	409
Component diagram 25	419
Component diagram 26	427
Component diagram 27	431
Component diagram 28	441
Component diagram 29	447
Component diagram 30	454
Component diagram 31	462
Component diagram 32	468
Component diagram 33	474
Component diagram 35	479
Component diagram 36	489
Component diagram 37	495
Component diagram 38	502
Component diagram 39	505
Component diagram 42	506
Component diagram 43	508
Component diagram 44	512
Component diagram 46	513
Component diagram 47	517
Component diagram 48	522
Component diagram 49	527
Component diagram 50	532
Component diagram 51	541
Overview	550

## SERVICE

### ELECTRICAL POWER SYSTEM

Preliminary test	692
Service instruction	695
<b>Alternator drive system</b>	
Belt tensioner - Remove	697
Belt tensioner - Install	698
Belt tensioner - Check	699
Idler pulley - Check	700
<b>Wiring harness</b>	
Replace	701
Repair	702

DIAGNOSTIC	
ELECTRICAL POWER SYSTEM	
Problem solving	704
Fuse and relay box	
Problem solving	708
Alternator	
Testing	709
Testing	709
Problem solving	711

# Contents

---

## DISTRIBUTION SYSTEMS - A

Book 4 - 87691001

### LIGHTING SYSTEM - 40.A

FUNCTIONAL DATA	
LIGHTING SYSTEM	
Logical diagram	5
SERVICE	
Inner work light	
Replace	6
DIAGNOSTIC	
LIGHTING SYSTEM	
Problem solving	7
Head light	
Relay - Testing	11
Relay - Testing	11
Switch - Testing	12
Electrical light - Testing	13
Electrical light - Testing	13
Electrical light - Testing	14
Electrical light - Testing	14
Turn/hazard light	
Electrical light - Testing	15
Electrical light - Testing	15
Electrical light - Testing	15
Electrical light - Testing	16
Electrical light - Testing	16
Electrical light - Testing	17
Electrical light - Testing	17
Electrical light - Testing	18
Electrical light - Testing	18
Electrical light - Testing	19
Flasher unit - Testing	19
Hazard switch - Testing	22
Brake light	
Relay - Testing	24
Indicator lamp - Testing	24
Indicator lamp - Testing	25

Indicator lamp - Testing	25
Indicator lamp - Testing	26
<b>Beacon</b>	
Relay - Testing	27
Switch - Testing	27
Electrical light - Testing	28
Electrical light - Testing	28
Electrical light - Testing	29
<b>Rear work light</b>	
Relay - Testing	30
Switch - Testing	30
Electrical light - Testing	31
Electrical light - Testing	31
<b>Side work light</b>	
Relay - Testing	33
Relay - Testing	33
Electrical light - Testing	34
Electrical light - Testing	34
<b>Cleaning shoe service light</b>	
Switch - Testing	35
Electrical light - Testing	35
<b>Dome light</b>	
Relay - Testing	37
Switch - Testing	38
Testing	39
Testing	39
Problem solving	41
<b>Work light</b>	
Relay - Testing	43
Switch - Testing	43
Switch - Testing	44
Electrical light - Testing	45
Electrical light - Testing	45
<b>Inner work light</b>	
Electrical light - Testing	47
Electrical light - Testing	47
Electrical light - Testing	48
<b>Middle work light</b>	
Electrical light - Testing	49
Electrical light - Testing	49
<b>Outer work light</b>	
Electrical light - Testing	51
Electrical light - Testing	51
<b>Unloading tube light</b>	

Relay - Testing	53
Electrical light - Testing	53
Grain tank light	
Testing	55
Header work light	
Relay - Testing	56
Electrical light - Testing	56
Electrical light - Testing	57

# Contents

---

## DISTRIBUTION SYSTEMS - A

Book 4 - 87691001

### ELECTRONIC SYSTEM - 50.A

#### TECHNICAL DATA

Control module  
Service limits

3

Farming system

Sensing system - Special tools

5

#### FUNCTIONAL DATA

ELECTRONIC SYSTEM

Overview

6

Control module

Overview

9

Data bus

Overview

11

Farming system

Sensing system - Dynamic description

13

#### SERVICE

Farming system

Sensing system - Adjust

14

Sensing system - Adjust

16

#### DIAGNOSTIC

Fuse and relay box

CCM1 relay - Testing

18

CCM2 relay - Testing

18

CCM3 relay - Testing

19

Auxiliary relay - Testing

20

Auxiliary relay - Testing

21

Audio system

Antenna - Testing

23

Speaker - Testing

23

Testing

24

Problem solving

26

# Contents

---

## DISTRIBUTION SYSTEMS - A

Book 5 - 87691002, Book 6 - 87691003, Book 7 - 87691004 and Book 8 - 87691005

### FAULT CODES - 50.A

#### DIAGNOSTIC

##### ELECTRONIC SYSTEM

0000-Communication lost	20
0000-Module Offline	25
0385.2-ECU DEFECT, DATA INCORRECT (SERVICE TOOL FAULT CODE 201)	27
0385.3-ECU DEFECT, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE 201)	28
0385.4-ECU DEFECT, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE 201)	29
0386.2-EEPROM DEFECT, DATA INCORRECT (SERVICE TOOL FAULT CODE XXX)	30
0386.3-EEPROM DEFECT, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE XXX)	31
0386.4-EEPROM DEFECT, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE XXX)	32
0393.2-MAIN RELAY DEFECT, DATA INCORRECT (SERVICE TOOL FAULT CODE 199)	33
0393.3-MAIN RELAY DEFECT, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE 199)	34
0393.4-MAIN RELAY DEFECT, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE 199)	35
0394.2-AFTERRUN NOT COMPLETED, DATA INCORRECT (SERVICE TOOL FAULT CODE 64)	36
0394.3-AFTERRUN NOT COMPLETED, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE 64)	37
0394.4-AFTERRUN NOT COMPLETED, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE 64)	38
0397.2-SHUT-OFF TESTS, DATA INCORRECT (SERVICE TOOL FAULT CODE XXX)	39
0397.3-SHUT-OFF TESTS, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE XXX)	40
0397.4-SHUT-OFF TESTS, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE XXX)	41
0399.2-COOLANT TEMPERATURE SENS, DATA INCORRECT (SERVICE TOOL FAULT CODE 148)	42
0399.2-COOLANT TEMPERATURE SENS, DATA INCORRECT (SERVICE TOOL FAULT CODE 148)	43
0399.3-COOLANT TEMPERATURE SENS, SHORT TO HIGH SOURCE (SERVICE TOOL FAULT CODE 148)	44
0399.3-COOLANT TEMPERATURE SENS, SHORT TO HIGH SOURCE (SERVICE TOOL FAULT CODE 148)	45



0399.4-COOLANT TEMPERATURE SENS, SHORT TO LOW SOURCE (SERVICE TOOL FAULT CODE 148)	46
0399.4-COOLANT TEMPERATURE SENS, SHORT TO LOW SOURCE (SERVICE TOOL FAULT CODE 148)	47
0400.2-BOOST AIR TEMPERATURE, DATA INCORRECT (SERVICE TOOL FAULT CODE XXX)	48
0400.2-BOOST AIR TEMPERATURE, DATA INCORRECT (SERVICE TOOL FAULT CODE 145)	50
0400.3-BOOST AIR TEMPERATURE, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE XXX)	52
0400.3-BOOST AIR TEMPERATURE, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE 145)	54
0400.4-BOOST AIR TEMPERATURE, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE XXX)	56
0400.4-BOOST AIR TEMPERATURE, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE 145)	58
0401.2-FUEL TEMPERATURE SENSOR, DATA INCORRECT (SERVICE TOOL FAULT CODE XXX)	60
0401.2-FUEL TEMPERATURE SENSOR, DATA INCORRECT (SERVICE TOOL FAULT CODE 21)	61
0401.3-FUEL TEMPERATURE SENSOR, SHORT TO HIGH SOURCE (SERVICE TOOL FAULT CODE XXX)	62
0401.3-FUEL TEMPERATURE SENSOR, SHORT TO HIGH SOURCE (SERVICE TOOL FAULT CODE 21)	63
0401.4-FUEL TEMPERATURE SENSOR, SHORT TO LOW SOURCE (SERVICE TOOL FAULT CODE XXX)	64
0401.4-FUEL TEMPERATURE SENSOR, SHORT TO LOW SOURCE (SERVICE TOOL FAULT CODE 21)	65
0402.2-BOOST PRESSURE SENSOR, DATA INCORRECT (SERVICE TOOL FAULT CODE XXX)	66
0402.2-BOOST PRESSURE SENSOR, DATA INCORRECT (SERVICE TOOL FAULT CODE 147)	67
0402.3-BOOST PRESSURE SENSOR, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE XXX)	69
0402.3-BOOST PRESSURE SENSOR, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE 147)	70
0402.4-BOOST PRESSURE SENSOR, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE XXX)	72
0402.4-BOOST PRESSURE SENSOR, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE 147)	73
0403.2-AMBIENT PRESSURE SENSOR, DATA INCORRECT (SERVICE TOOL FAULT CODE 144)	75
0403.3-AMBIENT PRESSURE SENSOR, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE 144)	76
0403.4-AMBIENT PRESSURE SENSOR, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE 144)	77
0408.2-ENGINE OVERSPEED, DATA INCORRECT (SERVICE TOOL FAULT CODE 208)	78
0408.2-ENGINE OVERSPEED, DATA INCORRECT (SERVICE TOOL FAULT CODE 208)	79

0408.3-ENGINE OVERSPEED, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE 208)	80
0408.3-ENGINE OVERSPEED, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE 208)	81
0408.4-ENGINE OVERSPEED, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE 208)	82
0408.4-ENGINE OVERSPEED, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE 208)	83
0412.2-INK SIGNAL, DATA INCORRECT (SERVICE TOOL FAULT CODE XXX)	84
0412.3-INK SIGNAL, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE XXX)	85
0412.4-INK SIGNAL, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE XXX)	86
0413.2-SEG SIGNAL, DATA INCORRECT (SERVICE TOOL FAULT CODE XXX)	87
0413.3-SEG SIGNAL, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE XXX)	88
0413.4-SEG SIGNAL, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE XXX)	89
0414.2-CYLINDER 1, DATA INCORRECT (SERVICE TOOL FAULT CODE XXX)	90
0414.3-CYLINDER 1, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE XXX)	91
0414.4-CYLINDER 1, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE XXX)	92
0415.2-CYLINDER 4, DATA INCORRECT (SERVICE TOOL FAULT CODE XXX)	93
0415.3-CYLINDER 4, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE XXX)	94
0415.4-CYLINDER 4, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE XXX)	95
0416.2-CYLINDER 2, DATA INCORRECT (SERVICE TOOL FAULT CODE XXX)	96
0416.3-CYLINDER 2, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE XXX)	97
0416.4-CYLINDER 2, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE XXX)	98
0417.2-CYLINDER 6, DATA INCORRECT (SERVICE TOOL FAULT CODE XXX)	99
0417.3-CYLINDER 6, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE XXX)	100
0417.4-CYLINDER 6, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE XXX)	101
0418.2-CYLINDER 3, DATA INCORRECT (SERVICE TOOL FAULT CODE XXX)	102
0418.3-CYLINDER 3, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE XXX)	103
0418.4-CYLINDER 3, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE XXX)	104
0419.2-CYLINDER 5, DATA INCORRECT (SERVICE TOOL FAULT CODE XXX)	105
0419.3-CYLINDER 5, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE XXX)	106
0419.4-CYLINDER 5, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE XXX)	107
0420.2-BATTERY VOLTAGE, DATA INCORRECT (SERVICE TOOL FAULT CODE 146)	108

0420.3-BATTERY VOLTAGE, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE 146)	109
0420.3-BATTERY VOLTAGE, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE 146)	110
0420.3-BATTERY VOLTAGE, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE 146)	111
0420.4-BATTERY VOLTAGE, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE 146)	112
0435.2-AMBIENT PRESSURE (PHY), DATA INCORRECT (SERVICE TOOL FAULT CODE 16)	113
0435.3-AMBIENT PRESSURE (PHY), SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE 16)	114
0435.4-AMBIENT PRESSURE (PHY), SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE 16)	115
0436.2-SHUT-OFF UNDER VOLTAGE, DATA INCORRECT (SERVICE TOOL FAULT CODE 164)	116
0436.3-SHUT-OFF UNDER VOLTAGE, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE 164)	117
0436.4-SHUT-OFF UNDER VOLTAGE, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE 164)	118
0437.2-SHUT-OFF EXCESS VOLTAGE, DATA INCORRECT (SERVICE TOOL FAULT CODE 163)	119
0437.3-SHUT-OFF EXCESS VOLTAGE, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE 163)	120
0437.4-SHUT-OFF EXCESS VOLTAGE, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE 163)	121
0438.2-SHUT-OFF MONITOR MODULE, DATA INCORRECT (SERVICE TOOL FAULT CODE 160)	122
0438.3-SHUT-OFF MONITOR MODULE, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE 160)	123
0438.4-SHUT-OFF MONITOR MODULE, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE 160)	124
0439.2-SHUT-OFF PATH MES0, DATA INCORRECT (SERVICE TOOL FAULT CODE 162)	125
0439.3-SHUT-OFF PATH MES0, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE 162)	126
0439.4-SHUT-OFF PATH MES0, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE 162)	127
0440.2-SHUT-OFF PATH MES1, DATA INCORRECT (SERVICE TOOL FAULT CODE 161)	128
0440.3-SHUT-OFF PATH MES1, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE 161)	129
0440.4-SHUT-OFF PATH MES1, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE 161)	130
0441.2-BOOST AIR TEMP (PHY), DATA INCORRECT (SERVICE TOOL FAULT CODE 17)	131
0441.3-BOOST AIR TEMP (PHY), SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE 17)	133
0441.4-BOOST AIR TEMP (PHY), SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE 17)	135

0442.2-BATTERY VOLTAGE FILTER, DATA INCORRECT (SERVICE TOOL FAULT CODE 18)	137
0442.3-BATTERY VOLTAGE FILTER, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE 18)	138
0442.4-BATTERY VOLTAGE FILTER, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE 18)	139
0443.2-ERROR AT POSITION 5, DATA INCORRECT (SERVICE TOOL FAULT CODE 49)	140
0443.3-ERROR AT POSITION 5, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE 49)	141
0443.4-ERROR AT POSITION 5, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE 49)	142
0444.2-ERROR AT POSITION 6, DATA INCORRECT (SERVICE TOOL FAULT CODE 50)	143
0444.3-ERROR AT POSITION 6, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE 50)	144
0444.4-ERROR AT POSITION 6, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE 50)	145
0445.2-ERROR AT POSITION 7, DATA INCORRECT (SERVICE TOOL FAULT CODE 51)	146
0445.3-ERROR AT POSITION 7, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE 51)	147
0445.4-ERROR AT POSITION 7, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE 51)	148
0446.2-ERROR AT POSITION 8, DATA INCORRECT (SERVICE TOOL FAULT CODE 52)	149
0446.3-ERROR AT POSITION 8, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE 52)	150
0446.4-ERROR AT POSITION 8, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE 52)	151
0447.2-ERROR AT POSITION 13, DATA INCORRECT (SERVICE TOOL FAULT CODE 48)	152
0447.3-ERROR AT POSITION 13, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE 48)	153
0447.4-ERROR AT POSITION 13, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE 48)	154
0448.2-COOLANT TEMP SENS (PHY), DATA INCORRECT (SERVICE TOOL FAULT CODE 20)	155
0448.3-COOLANT TEMP SENS (PHY), SHORT TO HIGH SOURCE (SERVICE TOOL FAULT CODE 20)	156
0448.4-COOLANT TEMP SENS (PHY), SHORT TO LOW SOURCE (SERVICE TOOL FAULT CODE 20)	157
0449.2-ENGINE SPEED SENSOR, DATA INCORRECT (SERVICE TOOL FAULT CODE 149)	158
0449.3-ENGINE SPEED SENSOR, SHORTED TO HIGH SOURCE (SERVICE TOOL FAULT CODE 149)	160
0449.4-ENGINE SPEED SENSOR, SHORTED TO LOW SOURCE (SERVICE TOOL FAULT CODE 149)	162
0450.2-EEPROM CHECK SUM HW, DATA INCORRECT (SERVICE TOOL FAULT CODE 192)	164

**Thanks very much for your reading,  
Want to get more information,  
Please click here, Then get the complete  
manual**

**JustClickHere** 

**NOTE:**

**If there is no response to click on the link above,  
please download the PDF document first, and then  
click on it.**

**Have any questions please write to me:  
[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**