

---

# T1010, T1030, T1110 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION .....	2
SECTION 10 - ENGINE SYSTEMS .....	4
SECTION 25 - FWD .....	12
SECTION 27 - DIFFERENTIAL AND REAR AXLES .....	14
SECTION 29 - HYDROSTATIC TRANSMISSION .....	15
SECTION 31 - PTO .....	18
SECTION 33 - BRAKES .....	20
SECTION 35 - HYDRAULIC SYSTEM .....	21
SECTION 41 - POWER STEERING .....	26
SECTION 44 - WHEELS .....	28
SECTION 55 - ELECTRICAL SYSTEM .....	29
SECTION 58 - 230GM MID MOUNT MOWER .....	38
SECTION 90 - PLATFORM .....	40

The following pages are the collation of the contents pages from each section and chapter of the T1010, T1030, T1110 Repair manual. Complete Repair part # 87739173.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the T1010, T1030, T1110 Tractors.

---

# SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87739174

## Chapter 1 - General Information

### CONTENTS

Section	Description	Page
	Precautionary Statements .....	3
	Personal Safety .....	3
	Machine Safety .....	3
	Information .....	3
	Safety .....	4
	Precautionary Statements .....	4
	The Tractor .....	4
	Servicing the Tractor .....	4
	Operating the Tractor .....	5
	Driving the Tractor .....	5
	Operating the PTO .....	6
	Diesel Fuel .....	6
	Safety Frame (ROPS) .....	6
	Safety Decals .....	7
	Instruction Decals .....	10
	Ecology and the Environment .....	16
	Helpful Hints .....	16
	Universal Symbols .....	17
	General Information .....	18
	Minimum Hardware Tightening Torques .....	19
	Metric Bolt Torque Specifications .....	20
	Lubrication and Maintenance .....	21
	General Information .....	21
	Grease Fittings .....	21
	Chains .....	21
	Lubrication and Maintenance Chart .....	23
	Lubrication Fittings .....	24
	Diesel Fuel .....	24
	Fuel Usage Safety .....	24

---

# SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87739174

## Chapter 1 - General Information (Continued)

### CONTENTS

Section	Description	Page
	Specifications .....	25
	Engine .....	25
	Capacities .....	25
	Cooling System .....	26
	Electrical System .....	26
	Fuel System .....	26
	Brakes .....	27
	Steering .....	27
	Power Take-Off (PTO) .....	27
	Hydraulic Lift Section .....	27
	Transmission Speeds .....	28
	Cast Iron Weights .....	29
	Drawbars .....	29
	3-Point Hitch .....	29
	Tires .....	29
	Wheel Bolt Torques .....	29
	ROPS Attaching Bolt Torques .....	29
	General Dimensions .....	30
	Wheel Tread Settings .....	30
	Liquid Ballast (optional) .....	32
	Tire Pressure .....	32

---

# SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87739174

## Chapter 1 - Engine Systems

### CONTENTS

Section	Description	Page
	Specifications .....	6
	Torque Specifications .....	15
	Metric Bolt Torque Specifications .....	15
	Special Tools .....	16
	General Information - Description of Operation .....	17
	Identification Chart .....	17
	Cylinder Head and Valve Train Components .....	17
	Cylinder Block Assembly .....	19
	Troubleshooting .....	20
	Overhaul .....	26
	Engine Access .....	26
	Disassembly .....	26
	Fuel Injector and Glow Plug .....	29
	Removal .....	29
	Hydraulic Pump .....	30
	Removal .....	30
	Fan, Water Pump and External Oil Tube .....	30
	Removal .....	30
	Fuel Shutoff Solenoid .....	30
	Removal .....	30
	Oil Pressure Switch .....	31
	Removal .....	31
	Temperature Sending Switch and Alternator .....	31
	Removal .....	31
	Throttle Cable .....	31
	Disconnection .....	31
	Support Frame .....	32
	Removal .....	32
	Engine .....	32
	Removal .....	32
	Valve Cover .....	33
	Removal .....	33

---

# SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87739174

## Chapter 1 - Engine Systems (Continued)

### CONTENTS

Section	Description	Page
	Rocker Shaft and Push Rod .....	34
	Removal .....	34
	Cylinder Head .....	34
	Removal .....	34
	Valve Tappet .....	35
	Removal .....	35
	Engine Timing Gear Cover, Timing Gears and Camshaft .....	35
	Timing Gears and Camshaft .....	36
	Removal .....	36
	Oil Sump .....	36
	Removal .....	36
	Oil Suction Pipe and Strainer .....	37
	Removal .....	37
	Connecting Rods, Bearings and Piston .....	37
	Removal .....	37
	Flywheel .....	38
	Removal .....	38
	Backplate and Oil Seal .....	38
	Removal .....	38
	Crankshaft and Main Bearings .....	38
	Removal .....	38
	Cylinder Head .....	39
	Disassembly .....	39
	Inspection and Repair .....	39
	Valve Seats .....	40
	Inspection and Repair .....	40
	Valves .....	40
	Inspection and Repair .....	40
	Valve Guides .....	42
	Inspection and Repair .....	42
	Valve Springs .....	42
	Inspection and Repair .....	42

---

## SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87739174

### Chapter 1 - Engine Systems (Continued)

#### CONTENTS

Section	Description	Page
	Rocker Arms .....	43
	Inspection and Replacement .....	43
	Push Rods .....	43
	Inspection and Replacement .....	43
	Cylinder Head .....	44
	Assembly .....	44
	Cylinder Block .....	44
	Inspection and Repair .....	44
	Pistons .....	45
	Disassembly and Inspection .....	45
	Piston Rings .....	47
	Inspection and Replacement .....	47
	Connecting Rods .....	48
	Inspection and Repair .....	48
	Connecting Rod Bearing Oil Clearance Check .....	50
	Pistons, Rings and Connecting Rod .....	50
	Assembly .....	50
	Main Bearing and Thrust Bearing .....	51
	Removal and Inspection .....	51
	Crankshaft .....	52
	Inspection .....	52
	Crankshaft Journal Wear Limit and Bearing Usage .....	52
	Crankshaft Front Main Bearing (Bushing) .....	53
	Inspection .....	53
	Replacement .....	53
	Crankshaft Main Bearing .....	54
	Assembly .....	54
	Port Block .....	54
	Removal .....	54
	Installation .....	55
	Timing Gear .....	55
	Inspection .....	55

---

# SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87739174

## Chapter 1 - Engine Systems (Continued)

### CONTENTS

Section	Description	Page
	Camshaft . . . . .	55
	Disassembly . . . . .	55
	Inspection . . . . .	56
	Assembly . . . . .	56
	Flywheel . . . . .	57
	Inspection . . . . .	57
	Timing Gear Housing . . . . .	57
	Front Oil Seal and Steering Pump Seal . . . . .	57
	Replacement . . . . .	57
	Crankshaft and Bearing Holder . . . . .	58
	Assembly . . . . .	58
	Rear Oil Seal and Backplate . . . . .	58
	Assembly . . . . .	58
	Flywheel . . . . .	59
	Installation . . . . .	59
	Piston and Connecting Rod . . . . .	59
	Installation . . . . .	59
	Oil Suction Pipe and Suction Strainer . . . . .	60
	Installation . . . . .	60
	Oil Sump . . . . .	60
	Installation . . . . .	60
	Timing Gear Cover, Timing Gears and Camshaft . . . . .	60
	Assembly . . . . .	60
	Head Gasket Selection . . . . .	62
	Cylinder Head . . . . .	63
	Assembly . . . . .	63
	Valve Clearance Adjustment . . . . .	64
	Valve Cover . . . . .	64
	Installation . . . . .	64
	Engine . . . . .	65
	Installation . . . . .	65

---

## SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87739174

### Chapter 1 - Engine Systems (Continued)

#### CONTENTS

Section	Description	Page
	Drive Train .....	66
	Installation .....	66
	Support Frame .....	66
	Installation .....	66
	Tachometer and Throttle Cables .....	66
	Installation .....	66
	Alternator and Temperature Sending Switch .....	67
	Installation .....	67
	Oil Pressure Switch .....	67
	Installation .....	67
	Fuel Shutoff Solenoid .....	67
	Installation .....	67
	Fan, Water Pump and External Oil Tube .....	68
	Installation .....	68
	Hydraulic Pump .....	68
	Installation .....	68
	Glow Plug and Connector .....	68
	Installation .....	68
	Fuel Injection Pump .....	69
	Installation .....	69
	Fuel Injector .....	70
	Installation .....	70
	Fuel Line .....	70
	Installation .....	70
	Exhaust Manifold, Air Cleaner and Radiator .....	71
	Installation .....	71
	Engine Lubrication System - Description of Operation .....	74
	Engine Oil Filter .....	77
	Construction and Function .....	77
	Maintenance .....	77



---

# SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87739174

## Chapter 1 - Engine Systems (Continued)

### CONTENTS

Section	Description	Page
	Oil Pump .....	77
	Removal .....	77
	Inspection .....	77
	Installation and Adjustment .....	78
	Engine Oil Pressure Check .....	79
	Oil Pressure Relief Valve .....	79
	Removal .....	79
	Installation .....	79
	Oil Consumption .....	80
	Cooling System - Description of Operation .....	81
	Maintenance .....	83
	Coolant .....	83
	Thermostat .....	83
	Water Pump .....	83
	Cooling Fan .....	83
	Radiator .....	83
	Radiator Cap .....	83
	Cooling System Overhaul .....	84
	Radiator .....	84
	Removal .....	84
	Inspection and Repair .....	85
	Installation .....	86
	Water Pump and Thermostat .....	87
	Removal .....	87
	Inspection and Repair .....	89
	Installation .....	90
	Testing .....	93
	Compression Test and Tools .....	93

---

# SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87739174

## Chapter 2 - Fuel System

### CONTENTS

Section	Description	Page
	Specifications - T1010 .....	2
	Torque Specifications .....	2
	Special Tools .....	2
	Specifications - T1030, T1110 .....	3
	Torque Specifications .....	3
	Special Tools .....	3
	Fuel System - Description of Operation .....	4
	Injection Pump - Description of Operation .....	6
	Pumping Elements .....	7
	Delivery Valves .....	9
	Troubleshooting - General .....	11
	Troubleshooting - Fuel Injectors .....	14
	Troubleshooting - Governor .....	15
	Troubleshooting - Engine Breather Valve .....	16
	Overhaul .....	17
	Injection Pump .....	17
	Removal .....	17
	Repair .....	17
	Installation .....	17
	Timing and Governor Adjustments .....	18
	Using Original Pump and Drive Components .....	18
	New Pump or Drive Component .....	18
	Installation .....	18
	Spill-Timing Procedure .....	19
	Bleeding the Fuel System .....	23
	Bleeding Procedure .....	23
	Full Screw High Idle Adjustment .....	23
	Governor - Description of Operation .....	24
	Governor .....	26
	Disassembly .....	26
	Assembly .....	27
	Adjustments .....	28

---

## SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87739174

### Chapter 2 - Fuel System (Continued)

#### CONTENTS

Section	Description	Page
	Injectors - Description of Operation .....	29
	Injector .....	30
	Removal .....	30
	Disassembly .....	31
	Assembly and Adjustment .....	31
	Engine Breather Valve .....	32
	Removal .....	33
	Installation .....	33

---

## SECTION 25 - FWD

BOOK 1 - 87739174

### Chapter 1 - Front Axle

#### CONTENTS

Section	Description	Page
	Front Wheel Drive Axle - Description of Operation . . . . .	3
	FWD Tread Setting . . . . .	3
	FWD . . . . .	4
	Manual . . . . .	4
	Auto . . . . .	4
	Auto Position (Engaged) . . . . .	5
	Auto Position (Disengaged) . . . . .	5
	Full Time FWD (Locked Down) . . . . .	5
	Power Flow . . . . .	6
	Front Axle . . . . .	6
	Overhaul . . . . .	7
	FWD Axle . . . . .	7
	Removal . . . . .	7
	Final Drive Case Cover . . . . .	9
	Removal . . . . .	9
	Steering Cylinder . . . . .	9
	Removal . . . . .	9
	Final Drive Case . . . . .	9
	Removal . . . . .	9
	Idler Case . . . . .	10
	Removal . . . . .	10
	Disassembly . . . . .	10
	Differential . . . . .	10
	Removal . . . . .	10
	Drive Pinion . . . . .	11
	Removal . . . . .	11
	Differential . . . . .	11
	Disassembly . . . . .	11
	Inspection . . . . .	11
	Assembly . . . . .	11

---

## SECTION 25 - FWD

BOOK 1 - 87739174

### Chapter 1 - Front Axle (Continued)

#### CONTENTS

Section	Description	Page
	Drive Pinion .....	12
	Installation .....	12
	Differential .....	12
	Installation .....	12
	Backlash Adjustment .....	13
	Idler Case .....	15
	Assembly .....	15
	Axle Seal Installation .....	15
	Installation .....	16
	FWD Box .....	17
	Removal (Manual and Auto) .....	17
	Manual FWD Box .....	17
	Disassembly .....	17
	Inspection .....	18
	Assembly .....	19
	Auto FWD Box .....	21
	Disassembly .....	21
	Inspection .....	22
	Assembly .....	23
	Two Way Clutch (Sensitrack™) .....	26
	Disassembly .....	26
	Inspection .....	26
	Assembly .....	27
	Front to Rear Axle Ratio .....	28
	Specifications .....	30
	Front Wheel Drive .....	30

---

## SECTION 27 - DIFFERENTIAL AND REAR AXLES

BOOK 1 - 87739174

### Chapter 1 - Differential

#### CONTENTS

Section	Description	Page
	Specifications .....	2
	Bolt Torque Specifications .....	3
	Metric Bolt Torque Specifications .....	3
	Special Tool .....	3
	Description of Operation (T1010/T1030) .....	4
	Description of Operation (T1110) .....	5
	Differential .....	6
	Differential Lock .....	7
	Rear Axle .....	8
	Overhaul .....	9
	Differential .....	9
	Removal .....	9
	Drive Pinion .....	12
	Removal .....	12
	Differential .....	13
	Disassembly (T1010/T1030) .....	13
	Differential .....	14
	Disassembly (T1110) .....	14
	Inspection .....	17
	Assembly .....	17
	Ring Gear and Pinion Gear Pattern Specification and Adjustment .....	21

---

# SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87739175

## Chapter 1 - Hydrostatic Transmission

### CONTENTS

Section	Description	Page
	Specifications .....	3
	HST .....	3
	Metric Bolt Torque Specifications .....	4
	Special Tools .....	5
	Description of Operation .....	6
	HST .....	6
	Variable Displacement Pump .....	8
	Operation .....	8
	Fixed Displacement Motor .....	9
	Operation .....	9
	Hydraulic Fluid Flow .....	10
	Neutral Position .....	10
	Forward Position .....	11
	Reverse Position .....	12
	Range Gear .....	13
	Operation .....	13
	Power Flow .....	14
	High Range .....	14
	Low Range .....	14
	Troubleshooting .....	15
	Pressure Testing .....	18
	High Pressure Relief Valves .....	18
	Forward Testing .....	18
	Reverse Testing .....	19
	Low (Charge) Pressure Relief Valve .....	20
	Overhaul .....	21
	Transmission/Differential .....	21
	Separating .....	21
	Attaching .....	25

---

## SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87739175

### Chapter 1 - Hydrostatic Transmission (Continued)

#### CONTENTS

Section	Description	Page
	HST Unit .....	31
	Removal .....	31
	Disassembly .....	32
	Inspection .....	38
	Assembly .....	42
	Installation .....	51
	HST Adjustment .....	52
	Neutral Adjustment .....	52
	HST Forward Pedal Travel Adjustment .....	53
	Cooling Fan .....	54
	Transmission Range Gears .....	54
	Removal .....	54
	Inspection .....	56
	Installation .....	57

## SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87739175

### Chapter 2 - Electric Cruise Control (Optional)

#### CONTENTS

Section	Description	Page
	Description of Operation .....	2
	HST Cruise Control (optional) .....	2
	Cruise Control Switch .....	3
	Description and Location .....	3
	Removal .....	3
	Testing .....	4
	Installation .....	5



---

## SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87739175

### Chapter 2 - Electric Cruise Control (Optional) (Continued)

#### CONTENTS

Section	Description	Page
	Cruise Magnet .....	5
	Description and Location .....	5
	Removal .....	5
	Testing .....	6
	Installation .....	6
	Cruise Relays .....	7
	Description and Location .....	7
	Removal (all) .....	9
	Testing .....	10
	Testing Cruise Latch and Instrument Panel Relays (normally open) .....	10
	Installation .....	10
	Testing Cruise Brake Relay (normally closed) .....	11
	Installation .....	11
	Relay Installation (all) .....	11
	Cruise Diode .....	12
	Description and Location .....	12
	Removal .....	12
	Testing .....	13
	Installation .....	13
	Cruise Control Circuit "On Position" .....	14
	Cruise Control Circuit "Denergizing" .....	15
	Cruise Control Circuit .....	16
	Ground Circuits .....	16
	Cruise Control "ON" .....	16
	Cruise Control Indicator Lights .....	17
	Denergizing the Cruise Control Circuit .....	17
	Relay Identification .....	17
	Troubleshooting - HST Cruise Control Circuit .....	18

---

# SECTION 31 - PTO

BOOK 2 - 87739175

## Chapter 1 - PTO

### CONTENTS

Section	Description	Page
	Specifications .....	3
	Metric Bolt Torque Specifications .....	4
	Special Tools .....	5
	Description of Operation .....	6
	Power Flow .....	7
	PTO Off .....	7
	Rear and Mid PTO On .....	7
	Rear PTO On .....	8
	Mid PTO On .....	8
	Troubleshooting .....	9
	Overhaul .....	10
	PTO Clutch .....	10
	Removal .....	10
	Disassembly .....	11
	Inspection .....	15
	Assembly .....	16
	Installation .....	20
	PTO Clutch Shaft .....	21
	Removal .....	21
	PTO Change Lever .....	21
	Removal .....	21
	Rear Case Cover .....	22
	Removal .....	22
	Disassembly .....	22
	PTO Shift Rod and Input Shaft .....	24
	Removal .....	24
	Mid PTO Shaft and Gears .....	27
	Removal .....	27
	Inspection .....	28
	Mid PTO Shaft and Gears .....	29
	Installation .....	29

---

## SECTION 31 - PTO

BOOK 2 - 87739175

### Chapter 1 - PTO (Continued)

#### CONTENTS

Section	Description	Page
	PTO Shift Rod and Input Shaft .....	31
	Installation .....	31
	Rear Case Cover .....	34
	Assembly .....	34
	Installation .....	35
	PTO Clutch Shaft .....	36
	Installation .....	36
	PTO Change Lever .....	36
	Installation .....	36
	PTO Clutch Brake .....	37
	Adjustment .....	37
	PTO Clutch Brake Release .....	38
	Adjustment .....	38

---

# SECTION 33 - BRAKES

BOOK 2 - 87739175

## Chapter 1 - Brakes

### CONTENTS

Section	Description	Page
	Specifications .....	2
	Metric Bolt Torque Specifications .....	3
	Description of Operation .....	4
	Brakes .....	5
	Park Brake .....	7
	Troubleshooting .....	8
	Overhaul .....	9
	Brakes .....	9
	Removal .....	9
	Disassembly .....	9
	Inspection .....	11
	Assembly .....	12
	Installation .....	14
	Adjustments .....	15
	Brake .....	15
	Park Brake .....	16

**Thanks very much for your reading,  
Want to get more information,  
Please click here, Then get the complete  
manual**

**JustClickHere** 

**NOTE:**

**If there is no response to click on the link above,  
please download the PDF document first, and then  
click on it.**

**Have any questions please write to me:  
[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**