

NEW HOLLAND

615

616

617

**REPAIR
MANUAL**



NEW HOLLAND

S E R V I C E

CONTENTS

SECTION 0 - SAFETY	0-3
SECTION 1 - GENERAL INFORMATION	1-1
SECTION 2 - ADJUSTMENTS	2-1
SECTION 3 - DRIVELINES	3-1
SECTION 4 - BEVEL GEARBOX	4-1
SECTION 5 - CUTTER BAR	5-1
SECTION 6 - HYDRAULIC CYLINDERS	6-1
SECTION 7 - STRUCTURES	7-1
SECTION 8 - LUBRICATION	8-1
SECTION 9 - OPTIONAL EQUIPMENT	9-1
SECTION 10 - TROUBLESHOOTING	10-1
SECTION 11 - REPAIR TIME SCHEDULE	11-1
SECTION 12 - SPECIFICATIONS	12-1
INDEX	12-2

C

PRECAUTIONARY STATEMENTS

PERSONAL SAFETY

Throughout this manual and on machine decals, you will find precautionary statements ("CAUTION", "WARNING", and "DANGER") followed by specific instructions. These precautions are intended for the personal safety of you and those working with you. Please take the time to read them.



CAUTION: THE WORD "CAUTION" IS USED WHERE A SAFE BEHAVIORAL PRACTICE ACCORDING TO OPERATING AND MAINTENANCE INSTRUCTIONS AND COMMON SAFETY PRACTICES WILL PROTECT THE OPERATOR AND OTHERS FROM ACCIDENT INVOLVEMENT.



WARNING: THE WORD "WARNING" DENOTES A POTENTIAL OR HIDDEN HAZARD WHICH HAS A POTENTIAL FOR SERIOUS INJURY. IT IS USED TO WARN OPERATORS AND OTHERS TO EXERCISE EVERY APPROPRIATE MEANS TO AVOID A SURPRISE INVOLVEMENT WITH MACHINERY.



DANGER: THE WORD "DANGER" DENOTES A FORBIDDEN PRACTICE IN CONNECTION WITH A SERIOUS HAZARD.

FAILURE TO FOLLOW THE "CAUTION", "WARNING", AND "DANGER" INSTRUCTIONS MAY RESULT IN SERIOUS BODILY INJURY OR DEATH.

MACHINE SAFETY



Additional precautionary statements ("ATTENTION" and "IMPORTANT") are followed by specific instructions. These statements are intended for machine safety.

ATTENTION: The word "ATTENTION" is used to warn the operator of potential machine damage if a certain procedure is not followed.

IMPORTANT: The word "IMPORTANT" is used to inform the reader of something he needs to know to prevent minor machine damage if a certain procedure is not followed.

SAFETY DECALS

The following safety decals have been placed on your machine in the areas indicated. They are intended for your personal safety and for those working with you. Please take this manual and walk around your machine to note the content and location of these warning signs. Review these warning signs and the operating instructions detailed in this manual with your machine operators.

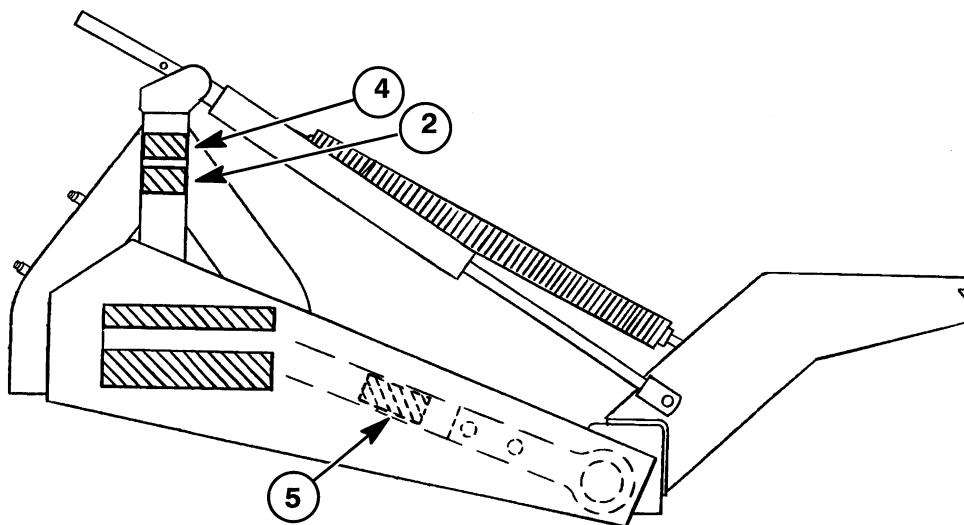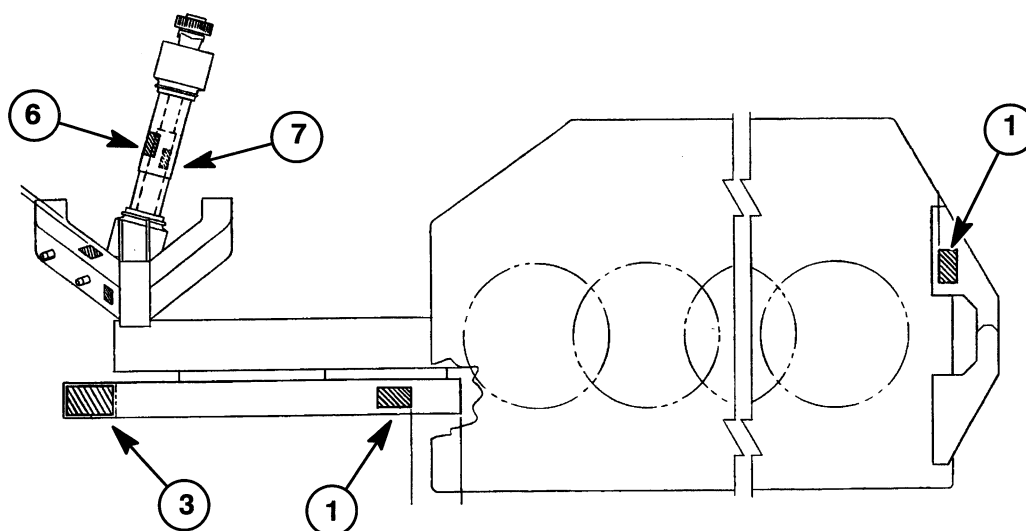

1



WARNING

STAND CLEAR!



ROTATING CUTTERS UNDER THIS COVER MAY CONTINUE TO ROTATE FOR SEVERAL MINUTES AFTER POWER IS SHUT OFF.

SHUT OFF TRACTOR AND DISENGAGE PTO BEFORE LEAVING TRACTOR: THEN LOOK AND LISTEN FOR EVIDENCE OF ROTATION BEFORE LIFTING COVER.

FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY.

3

 


WARNING

BEFORE DISMOUNTING MACHINE FROM TRACTOR:


1. RAISE CUTTERBAR SO JACK PIN CAN BE REMOVED FROM FLOTATION ROD.
2. REMOVE JACK PIN FROM FLOTATION ROD AND JACK FROM FRAME.
3. INSTALL JACK AND PIN IN JACK RECEPTACLE.
4. LOWER CUTTERBAR AND JACK BASE TO GROUND.

FAILURE TO DO SO WILL RESULT IN UNEXPECTED MOTION OF MOWER FRAME WHICH COULD RESULT IN SERIOUS INJURY.



AFTER MOUNTING MACHINE TO TRACTOR:

 1. LIFT THREE-POINT LIFT ARMS AND REMOVE JACK AND JACK PIN FROM RECEPTACLE.
2. STOW JACK ON FRAME.
3. RAISE CUTTERBAR UNTIL HOLE IN SPRING ROD SLIDES PAST UPPER PIVOT CASTING.
4. INSTALL JACK PIN IN FLOTATION ROD.



2



WARNING

—MACHINE CAN THROW STONES AND OTHER DEBRIS TOWARD OPERATOR OR BYSTANDERS.

—A TRACTOR WITH AN ENCLOSED CAB IS RECOMMENDED. ADJUST MACHINE TO REDUCE HITTING OBJECTS. KEEP ALL SHIELDS AND COVERS IN PLACE AND IN GOOD WORKING ORDER. KEEP BYSTANDERS AWAY FROM MACHINE WHILE IN OPERATION.

—FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY.

4



CAUTION

BEFORE OPERATING THIS MACHINE, READ THE OPERATOR'S MANUAL AND ALL SAFETY INSTRUCTIONS. IF YOU DO NOT HAVE A MANUAL, CONTACT YOUR FORD NEW HOLLAND DEALER OR PHONE THE CONSUMER SERVICES DEPARTMENT, FORD NEW HOLLAND INC., NEW HOLLAND, PENNSYLVANIA AT (717) 335-1345.

1. MAKE CERTAIN EVERYONE IS CLEAR OF MACHINE BEFORE STARTING ENGINE OR OPERATION.
2. DISENGAGE DRIVES INCLUDING PTO, STOP ENGINE, WAIT FOR ALL MOVEMENT TO STOP BEFORE LEAVING OPERATOR'S POSITION.
3. KEEP ALL SHIELDS IN PLACE, KEEP HANDS, FEET, CLOTHING AND HAIR AWAY FROM MOVING PARTS.
4. KEEP RIDERS OFF THE MACHINE.
5. NEVER ADJUST, LUBRICATE, CLEAN OR UNPLUG MACHINE WITH THE ENGINE RUNNING. SEE OPERATOR'S MANUAL FOR ALL ADJUSTMENT AND LUBRICATION PROCEDURES.
6. USE SLOW-MOVING VEHICLE IDENTIFICATION EMBLEM ON ALL EQUIPMENT. USE FLASHING WARNING LIGHTS ON TRACTORS AND SELF-PROPELLED EQUIPMENT WHEN OPERATING ON HIGHWAYS, EXCEPT WHEN PROHIBITED BY LAW.

40352

5



WARNING

STAND CLEAR!

ROTATING ELEMENTS MAY CAUSE SERIOUS BODILY INJURY.

705923

6



7



SECTION 1

GENERAL INFORMATION



DANGER: TO PREVENT INJURY TO BYSTANDERS, THIS MOWER IS NOT INTENDED FOR ROADSIDE OR MUNICIPAL MOWING. THIS MOWER IS INTENDED FOR AGRICULTURAL USE ONLY.

On New Holland equipment, left and right are determined by standing behind the unit, looking in the direction of travel.

The serial number plate, 1, for the Models 615, 616, and 617 is located on the left side of the main frame. Record this serial number in the space listed below.

Serial Number: _____

Give your dealer the model and serial number of your disc mower when ordering parts. Always order genuine New Holland parts from your New Holland dealer.

BEFORE USING THE NEW MACHINE

1. Thoroughly read and understand this manual. Pay particular attention to all safety precautions.
2. Check all grease fittings and the gearbox oil levels to insure the machine has been lubricated as recommended in this manual.
3. Check all adjustments to insure they have been made as detailed in the "Maintenance" section of this manual.

After 8 Hours Of Operation

1. Check for loose hardware and tighten any loose bolts.
2. Visually check the entire cutter bar for leakage and correct any leakage before operation.
3. Check mower drive belts for correct tension, and readjust as required.

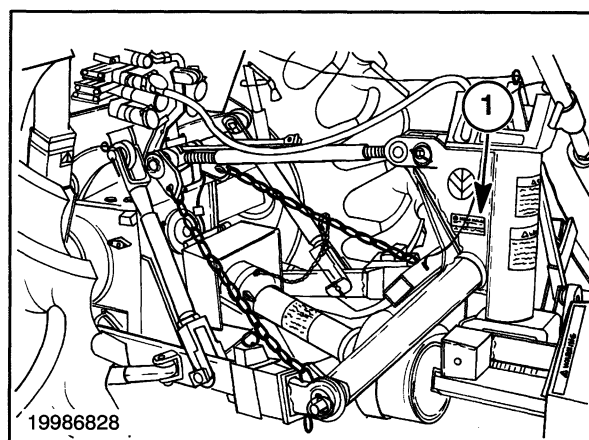


Figure 1-1

Tractor Requirements

The Model 615 disc mower above serial number 628301 is designed to fit tractors with 540 RPM PTOs with standard ASAE Category I three-point hitches.

The Models 615 below serial number 628300, 616, and 617 disc mowers are designed to fit tractors with 540 RPM PTOs with standard ASAE category II three-point hitches.

The tractor must also have adjustable sway bars or a means of locking the lower lift arms from moving sideways.

For the 615 disc mower above serial number 628301, the tractor front axle weight should be 782 kg (1725 lbs.) or greater prior to attaching the disc mower. This is for tractors with a wheel base range of 78" to 84". Add additional weight if required to achieve 782 kg (1725 lbs.) or greater.

The tractor must also be equipped with one remote hydraulic circuit with a minimum of 104 bar (1500 PSI) and a maximum of 193 bar (2800 PSI).

The tractor should be 45-horsepower minimum for the Model 615, 55-horsepower minimum for the Model 616, and 60-horsepower for the Model 617. Insufficient tractor horsepower may cause stripping and poor cutting.

The tractor must have adequate ballasting, wheel spacing, and tire spacing to be stable on hillsides. Too small a tractor may create a stability concern when mowing in hilly conditions.



CAUTION: A TRACTOR WITH AN ENCLOSED CAB IS RECOMMENDED WHEN OPERATING A ROTARY DISC CUTTING MACHINE.

ATTACHING THE MOWER TO THE TRACTOR

Model 615

Serial Number 628301 and Above

1. Clean all paint or rust from the hitch pins.
2. Attach the plate on the end of the check chains to the outer end of frame hitch pins, 1, as required to clear obstructions on the tractor. Install the check chain plates before attaching the tractor lower links.
3. Back the tractor to the mower and attach the lower links, 2, to the outer end of the frame hitch pins. Secure the links with linchpins. Install the linchpins from the top down.
4. Attach the top link to the tractor, 1, using the pin provided with the tractor top link.
5. Attach the top link to the mower, 2, in the front hole using the pin provided with the mower.

NOTE: If necessary, the top link may be mounted in the rear hole on the mower to allow greater top link length range.

6. Attach the check chain plates to the tractor at a top link mounting position, 3, with the pin provided.

NOTE: If the check chains interfere with or could damage the tractor PTO shield, relocate the check chain plates to the opposite end of the mower frame hitch pins, or attach to a different location on the tractor.

NOTE: It may be necessary to position the tractor drawbar to the side or remove it to prevent interference with the check chains or PTO shaft.

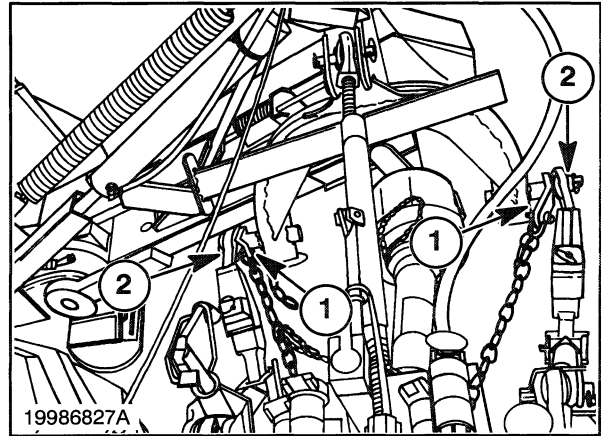


Figure 1-2

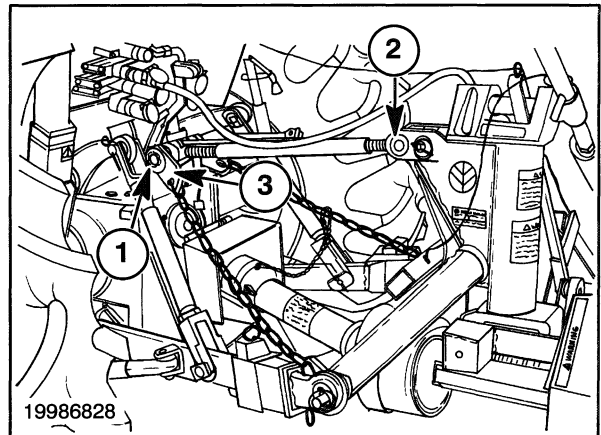


Figure 1-3

7. The PTO assembly must be fitted to the tractor being used. The tubes must overlap at least 102 mm (4"). At the same time, the tubes, 1 and 2, must be short enough so they do not bottom out.

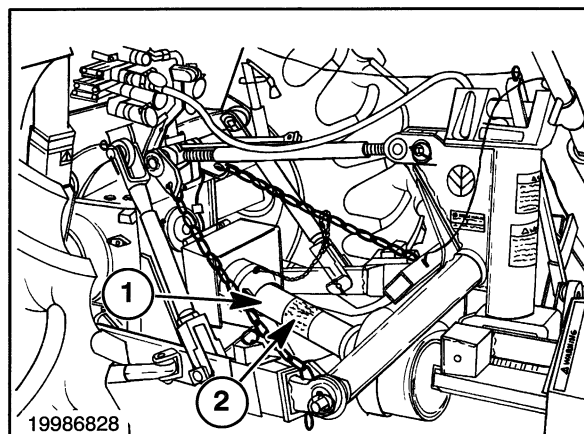


Figure 1-4

The assembly must also be long enough so it does not pull apart when the breakaway system, 1, operates.

NOTE: Most tractors will not require the PTO to be shortened.

Separate the front and rear PTO shafts. Connect the front half to the tractor PTO and the rear half to the disc mower input shaft. Raise and lower the machine to find the position where the PTO would be the shortest. Hold the shafts side by side and mark the length to provide 10 mm (3/8") clearance between the end of the shafts and the yoke.

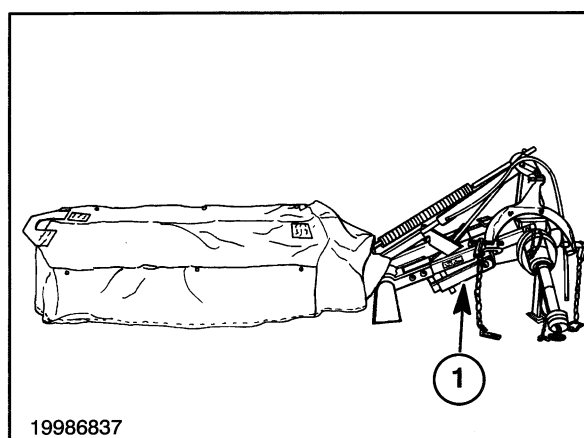


Figure 1-5

Measure how much is to be cut from your marks. Cut off an equal length from the front and rear plastic shield. Shorten the PTO telescoping shafts the same amount as the plastic shields.

NOTE: Remove the grease sleeve from the rear half of the PTO shaft before shortening the tube.

Remove the burrs from the shaft ends with a file or grinder. Clean out the metal chips and filings. Apply grease to the inside of the outer telescoping tube before assembly. Reinstall the grease sleeve on the end of the rear half of the PTO shaft.

Check to be sure the shafts do not bottom out, and operate the breakaway to be sure they do not come apart.

8. Attach the PTO assembly to the tractor.
9. Connect the hydraulic hose to the tractor, preferably to a valve section with a float position. Select the appropriate port to allow engaging the float position when lowering.

NOTE: Check the tractor operator's manual for instructions on which outlet to use for single acting cylinders.

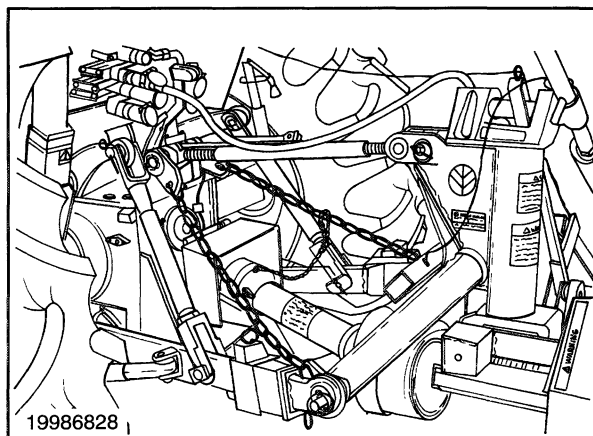


Figure 1-6

10. Raise the mower with the tractor three-point hitch. Remove pin, 2, and remove the jack stand, 1. Attach the jack stand to the mower frame by sliding the jack stand slots over lugs, 3, on the frame.

NOTE: The pin which is attached to the jack stand with a cable will be installed in the flotation system later.

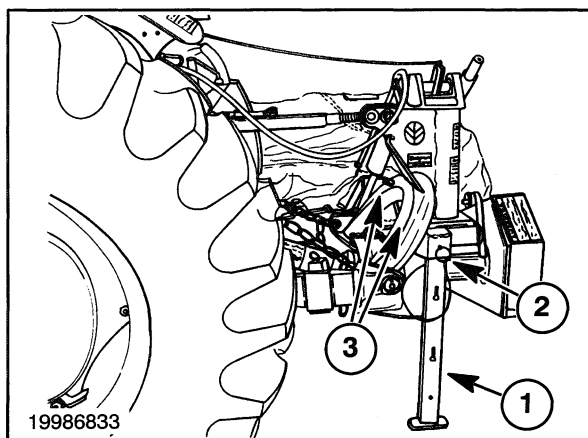


Figure 1-7

11. Level the tractor lower lift links from side to side. Adjust and lock the sway bars or whatever system the tractor has to remove as much side movement as possible.

IMPORTANT: The tractor lower links should be positioned straight behind the tractor, or have minimal offset. Excessive offset in either direction may cause damage to the mower PTO drive shaft due to excessive operating angles or contact with hitch pins, and will also put "lead" or "lag" into the cutter bar resulting in reduced cutting width and breakaway performance.

Adjust the limit chain length so the hitch pins, 1, are as close to (but not less than) 609 mm (24") as possible from the ground when the mower is supported by the limit chains.

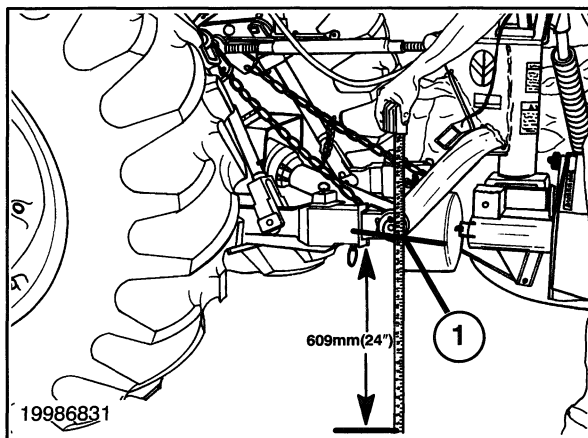


Figure 1-8

NOTE: If the high stubble kit is installed on the mower, adjust frame height to 660 mm (26") from ground in order to provide adequate flotation.

12. Fold the front half of the cutter bar curtain, 1, rearward. Secure the curtain with the rubber tie strap, 2. Flip the cutter bar up-stop channel, 3, toward the cutter bar and against the brace.

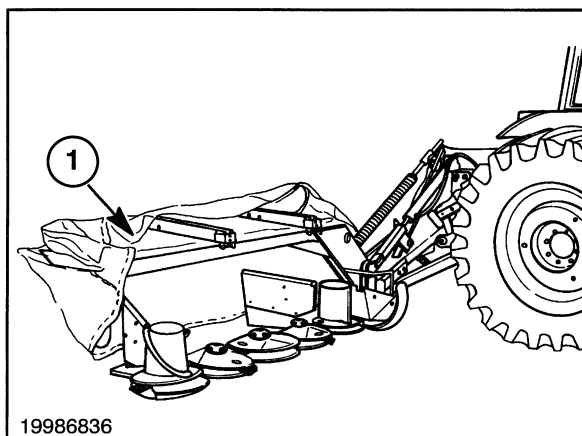


Figure 1-9

13. Raise the cutter bar with the tractor hydraulics. Raise it high enough to engage the transport latch, 1.

NOTE: Before raising the cutter bar with the hydraulic cylinder, make sure there is adequate clearance between the machine and the tractor. The top link may have to be lengthened for the cutter bar to clear the cab.

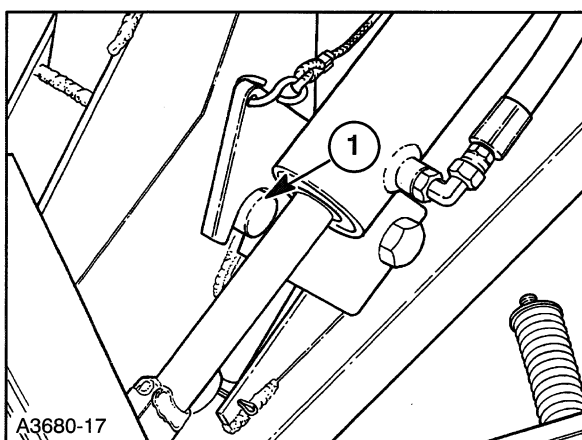


Figure 1-10

14. Install the pin, 1, which is attached to the jack stand, 2, in the upper flotation spring rod at 3. The pin has two detent balls and is properly installed when detents are on either side of the flotation spring rod.

NOTE: If the pin is inserted too far, the retaining ring may be knocked off and the pin may be lost, causing loss of flotation.

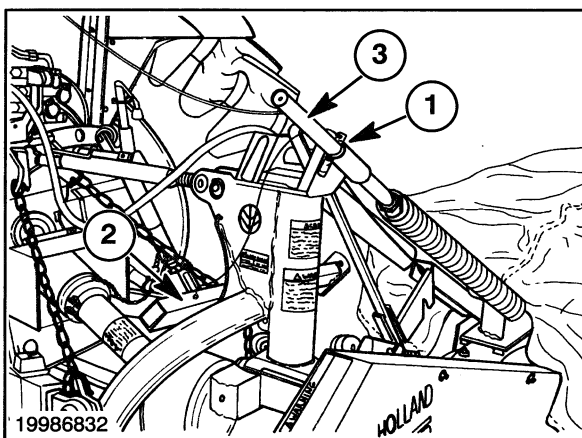


Figure 1-11

ATTACHING THE MOWER TO THE TRACTOR

Model 615 Below Serial Number 628300, and Models 616 and 617

Prior to installing the mower onto the tractor, the mower must be adjusted to match the tractor. Depending on the size of the tractor and the wheel spacing, it may be necessary to move the hex-shaped lower lift pins, 1.

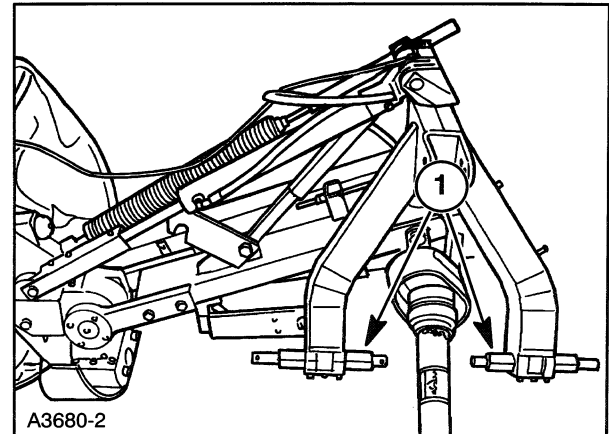


Figure 1-12

NOTE: Ideally a 102 mm (4") clearance should be held between the outside edge of the tractor tire and the mower inner shield for a full cut of the cutter bar at all times.

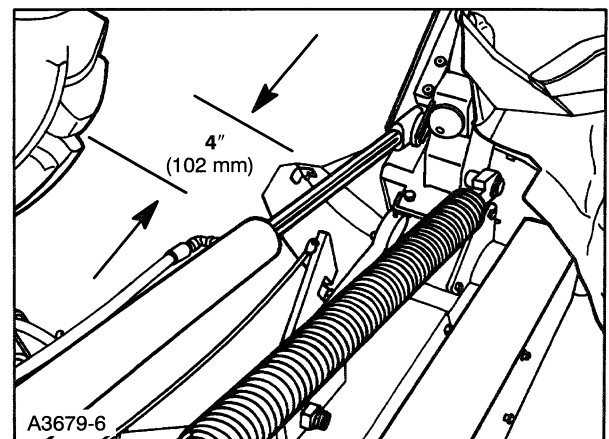


Figure 1-13

The hex-shaped hitch pins mounted on the bottom of the main frame arms can be moved to position the mower behind the tractor for different tread widths. To do this, loosen the four clamp bolts, 1, on each main frame arm until the hitch pins can be moved. Retighten the clamp bolts evenly so that both sides of the clamp block, 2, have equal clearance to the main frame arm.

NOTE: Always position the hitch pins so that the long round pin is towards the outside of the main frame. Do not position the long round pins inside the main frame, or damage to the mower PTO drive shaft could occur.

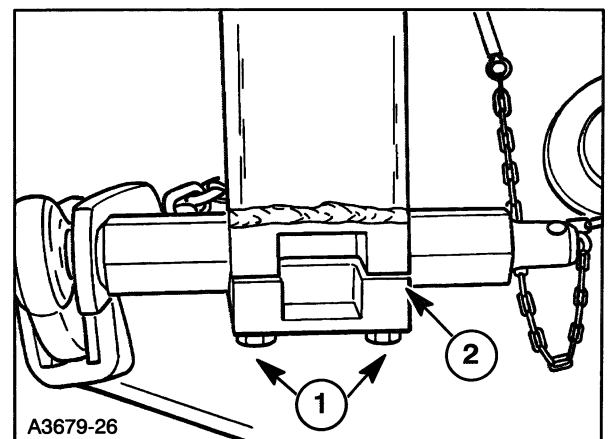


Figure 1-14

Measure from the center of the tractor to the right side of the right tire.

For tractors that measure 940 mm (37") or less, position both hitch pins to the right so that only the round pin protrudes on the left side of the main frame arms. This will position the mower towards the left, moving the cutter bar closer to the right side tractor tire.

NOTE: The tractor lower link arms may need to be offset slightly to the left to prevent the mower PTO shaft from contacting the inner end of the left hitch pin.

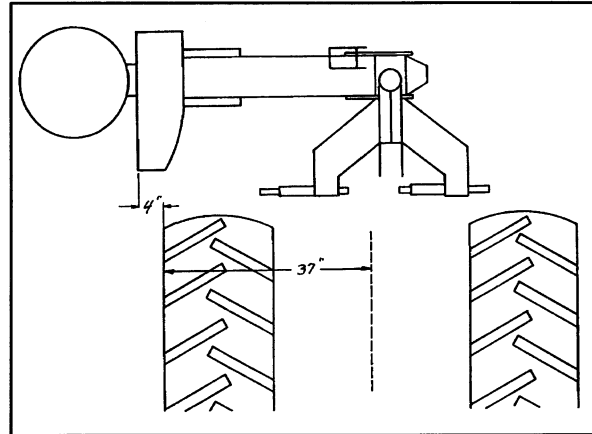


Figure 1-15

For tractors that measure 1016 mm (40"), center the hitch pins in the main frame arm.

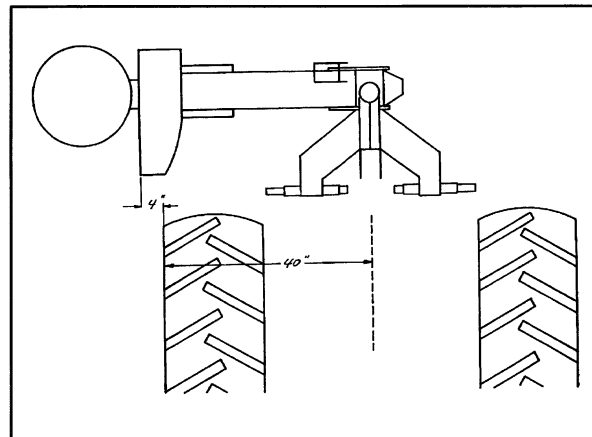


Figure 1-16

For tractors that measure 1092 mm (43"), position the hitch pins to the left so that only the round pin protrudes on the right side of the main frame arms. This will position the mower towards the right, away from the right side tractor tire.

NOTE: The tractor lower link arms may need to be offset slightly to the right to prevent the mower PTO shaft from contacting the inner end of the right hitch pin.

For tractors that measure more than 1092 mm (43"), the tractor lower link arm sway bars or check chains can be adjusted to further offset the mower to the right, or the right side tire should be moved inward.

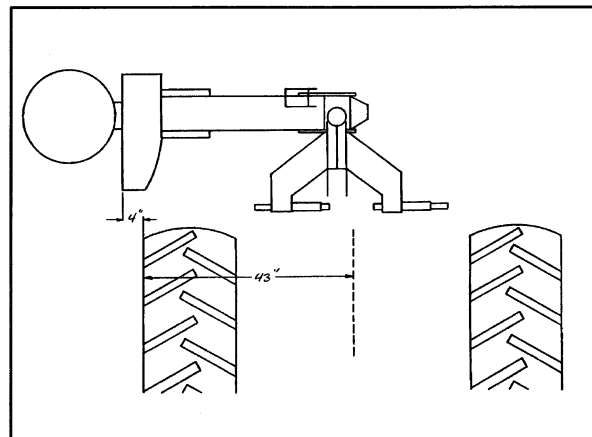


Figure 1-17

IMPORTANT: The tractor lower links should be positioned straight behind the tractor, or have minimal offset. Excessive offset in either direction may cause damage to the mower PTO drive shaft due to excessive operating angles or contact with hitch pins, and will also put "lead" or "lag" into the cutter bar resulting in reduced cutting width and breakaway performance.

1. Clean all paint or rust from the hitch pins.
2. Attach the plate on the end of the check chains to the inner or outer end of frame hitch pins, 1, as required to clear obstructions on the tractor. If installing on the outer end of the hitch pins, install the check chain plates before attaching the tractor lower links.
3. Back the tractor to the mower and attach the lower links, 2, to the outer end of the frame hitch pins. Secure the links with linchpins. Install the linchpins from the top down.

NOTE: Attach the tractor lower links to the outside pins only; do not attach the lower links to the pins inside the mower frame or damage to the mower PTO drive shaft could occur.

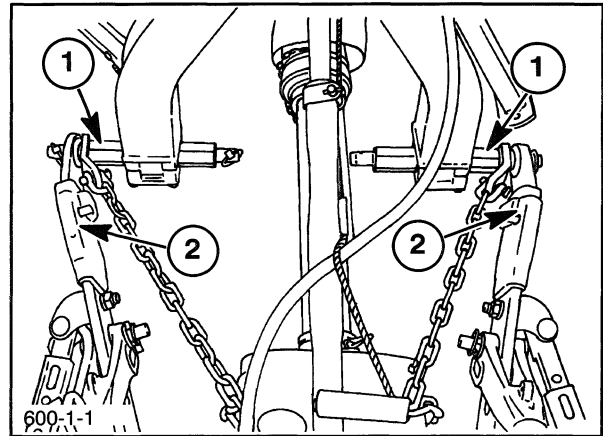


Figure 1-18

4. Attach the top link to the tractor, 1, using the pin provided with the tractor top link.
5. Attach the top link to the mower, 2, in the front hole using the pin provided with the mower.

NOTE: If necessary, the top link may be mounted in the rear hole on the mower to allow greater top link length range.

6. Attach the check chain plates to the tractor at a top link mounting position, 3, with the pin provided.

NOTE: If the check chains interfere with or could damage the tractor PTO shield, relocate the check chain plates to the opposite end of the mower frame hitch pins, or attach to a different location on the tractor.

NOTE: It may be necessary to position the tractor drawbar to the side or remove it to prevent interference with the check chains or PTO shaft.

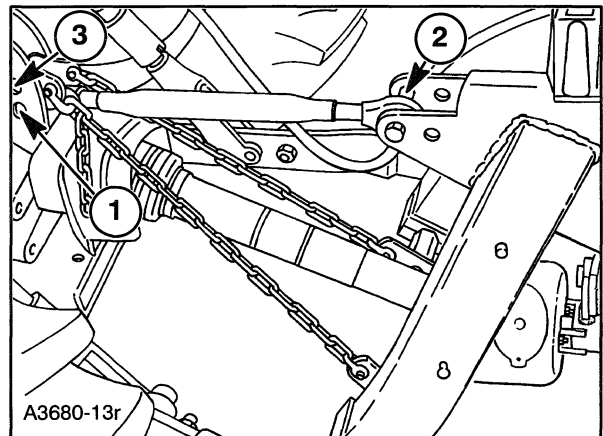


Figure 1-19

7. The PTO assembly must be fitted to the tractor being used. The tubes must overlap at least 102 mm (4"). At the same time, the tubes, 1 and 2, must be short enough so they do not bottom out.

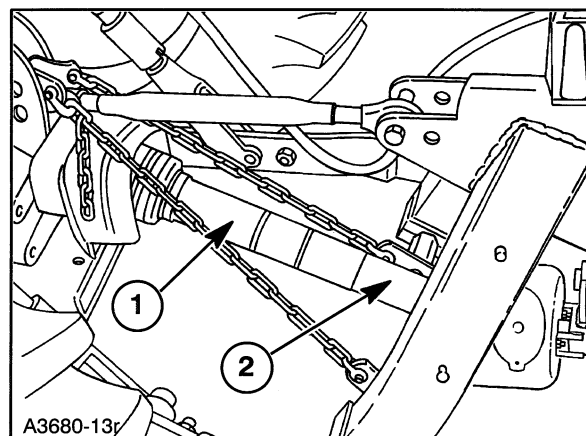


Figure 1-20

The assembly must also be long enough so it does not pull apart when the breakaway system, 2, operates.

NOTE: Most tractors will not require the PTO to be shortened.

Separate the front and rear PTO shafts. Connect the front half to the tractor PTO and the rear half to the disc mower input shaft. Raise and lower the machine to find the position where the PTO would be the shortest. Hold the shafts side by side and mark the length to provide 10 mm (3/8") clearance between the end of the shafts and the yoke.

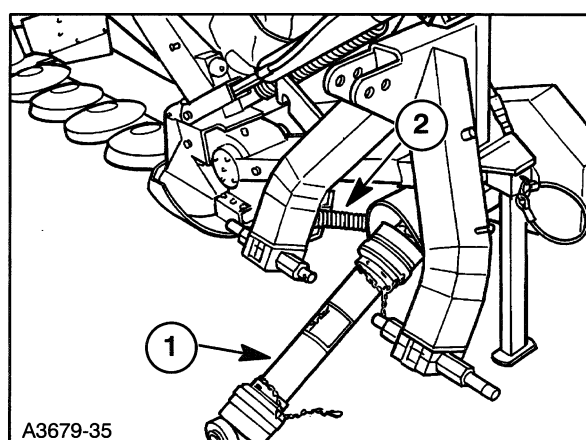


Figure 1-21

Measure how much is to be cut from your marks. Cut off an equal length from the front and rear plastic shield. Shorten the PTO telescoping shafts the same amount as the plastic shields.

NOTE: Remove the grease sleeve from the rear half of the PTO shaft before shortening the tube.

Remove the burrs from the shaft ends with a file or grinder. Clean out the metal chips and filings. Apply grease to the inside of the outer telescoping tube before assembly. Reinstall the grease sleeve on the end of the rear half of the PTO shaft.

Check to be sure the shafts do not bottom out, and operate the breakaway to be sure they do not come apart.

8. Attach the PTO assembly to the tractor.
9. Connect the hydraulic hose to the tractor, preferably to a valve section with a float position. Select the appropriate port to allow engaging the float position when lowering.

NOTE: Check the tractor operator's manual for instructions on which outlet should be used for single acting cylinders.

10. Raise the mower with the tractor three-point hitch. Remove pin, 2, and remove the jack stand, 1. Attach the jack stand to the mower frame by sliding the jack stand slots over lugs, 3, on the frame.

NOTE: The pin which is attached to the jack stand with a cable will be installed in the flotation system later.

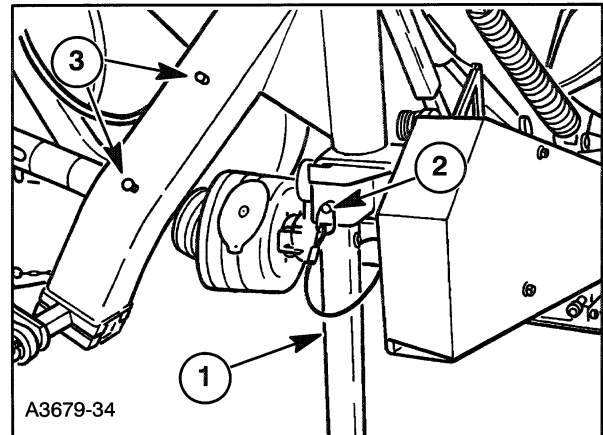


Figure 1-22

11. Level the tractor lower lift links from side to side. Adjust and lock the sway bars or whatever system the tractor has to remove as much side movement as possible.

IMPORTANT: The tractor lower links should be positioned straight behind the tractor, or have minimal offset. Excessive offset in either direction may cause damage to the mower PTO drive shaft due to excessive operating angles or contact with hitch pins, and will also put "lead" or "lag" into the cutter bar resulting in reduced cutting width and breakaway performance.

Adjust the limit chain length so the hitch pins, 1, are as close to (but not less than) 457 mm (18") as possible from the ground when the mower is supported by the limit chains.

NOTE: If the high stubble kit is installed on mower, adjust frame height to 508 mm (20") from ground in order to provide adequate flotation.

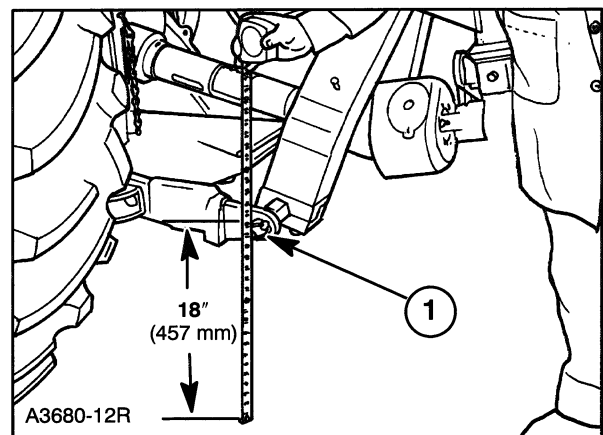


Figure 1-23

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**