

SERVICE MANUAL

B90B / B95B / B95BLR / B95BTC / B110B / B115B
Backhoe Loaders

Print No. 84428670B



TO READER

This manual has been printed for a skilful engineer to supply necessary technical information to carry out service operations on this machine.

Read carefully this manual to collect correct information relevant to repair procedures.

For any question or remark, or in case of any error relevant the contents of this manual, please contact:

CNH AMERICA LLC

245 E North Avenue
Carol Stream, IL 60188 U.S.A.

REFERENCES

Beyond this Service Manual, also refer to the documents listed below:

- Operator's Manual
- Service Parts Catalogue

SERVICE MANUAL

The Service Manual consists of two volumes:

- B90B - B95B - B95BLR - B95BTC - B110B - B115B
Service Manual for "Loader backhoe"
- B90B - B95B - B95BLR - B95BTC - B110B - B115B
Service Manual for "Engine"

The Service Manuals for "Loader backhoe" and "Engine" contain the necessary technical information to carry out service and repair on machine and on engine, necessary tools to carry out those operations and information on service standard, on procedures for connection, disconnection, disassembly and assembly of parts.

The Service Manual which covers the loader backhoe models B90B - B95B - B95BLR - B95BTC - B110B - B115B consists of the following volumes, which can be identified by their print number as stated below:

VOLUME	MACHINE TYPE	PRINT NUMBER
Service Manual for "Loader backhoe"	B90B - B95B - B95BLR - B95BTC - B110B - B115B	84428670A1
Service Manual - "Engine"	B90B - B95B - B95BLR - B95BTC - B110B - B115B	87659057A

PREVENT ACCIDENTS

The majority of accidents and injuries which occur in the workshop, at the worksite or on the road, are caused by the failure of some individual to follow simple and fundamental safety rules or precautions. For this reason most accidents can be prevented by recognizing the real cause and taking the necessary precautions, before the accident occurs.

Regardless of the care used in design and construction of any type of equipment, there may be conditions that cannot be completely safeguarded against, without interfering with reasonable accessibility and efficient operation.

A careful operator and / or technician is the best insurance against accidents.
The careful observance of this single safety rule would be sufficient to prevent serious injuries:

Never attempt to clean, lubricate or adjust a machine while it is in motion.

WARNING

Before carrying out any maintenance operation, adjustment and or repair on machines equipped with attachments, controlled hydraulically or mechanically, make sure that the attachment is lowered and safely set on the ground. If it is necessary to have the equipment partially or fully raised to gain access to certain items, be sure the equipment is suitably supported by means other than the hydraulic lift cylinders, cable and /or mechanical device used for controlling the equipment.

CNH AMERICA LLC
245 E North Avenue
Carol Stream, IL 60188 U.S.A.

All rights reserved. Reproduction of text or illustrations, in whole or in part, is strictly prohibited.

LOADER BACKHOE MODELS

The complete range of Loader Backhoe models described in this manual are identified below:

	B90B	B95B B95BLR	B95BTC	B110B	B115B
Powershift	/	/	/	●	●
Powershuttle	●	●	●	●	/
Cab	●	●	●	●	●
Rops	●	●	●	/	/
2WD	●	●	/	/	/
4WD	●	●	●	●	●
4WS	/	/	/	/	●
“Pilot” backhoe attachment controls	●	●	●	●	●
Backhoe attachment mechanical controls	●	●	●	●	●
Engine Iveco 72 kW - 97 HP model F4GE9424C*601 (mechanical)	●	/	/	/	/
Engine Iveco 72 kW - 97 HP model F4HE0484G*J102 (electronic)	/	●	●	/	/
Engine Iveco 82 kW - 110 HP model F4HE9484C*J102 (electronic)	/	/	/	●	/
Engine Iveco 82 kW - 110 HP (4WS) model F4HE9484C*J103 (electronic)	/	/	/	/	●
Short dipper backhoe	●	●	●	/	/
Long dipper backhoe	/	●	●	●	●

INDEX

SECTION 00 - SAFETY RULES

FOREWORD.....	4
SAFETY INSTRUCTIONS	6
PREVENTION OF FIRE OR EXPLOSIONS	8
PREVENTION OF BURNS	9
PRECAUTIONS FOR WASTE DISPOSAL.....	10

SECTION 01 - MAINTENANCE

SECTION 02 - TECHNICAL SPECIFICATIONS

MODELS	3
IDENTIFICATION OF MAIN COMPONENTS.....	4
TECHNICAL SPECIFICATIONS.....	5
DIESEL ENGINE	5
TRANSMISSION.....	8
AXLES	9
BRAKES	10
STEERING.....	10
HYDRAULIC SYSTEM	11
FRONT COUNTERWEIGHT	11
NOISE AND VIBRATION LEVELS	12
BUCKETS.....	12
TYRES	13
DIMENSIONS AND PERFORMANCE.....	14
DIMENSIONS - 2WS	14
DIMENSIONS - 4WS	16
LOADER ATTACHMENT PERFORMANCE.....	17
PERFORMANCE OF LOADER ATTACHMENT WITH FORKS	29
BACKHOE ATTACHMENT PERFORMANCE.....	33
BACKHOE ATTACHMENT LIFTING CAPACITY	54
SUPPLY SUMMARY TABLE	58

SECTION 21 - TRANSMISSION

POWERSHUTTLE TRANSMISSION.....	3
TECHNICAL SPECIFICATIONS.....	4
HYDRAULIC DIAGRAM	7
CONTROLS	13
LUBRICATION.....	17
GREASING	20
REMOVAL FROM MACHINE	22

INDEX

DISASSEMBLY AND ASSEMBLY	23
TROUBLESHOOTING	159
REPAIR TIMES	163
SPECIAL TOOLS	164
POWERSHIFT TRANSMISSION	165
TECHNICAL SPECIFICATIONS	165
CONTROLS	177
LUBRICATION	179
GREASING	181
REMOVAL FROM MACHINE	182
DISASSEMBLY AND ASSEMBLY	183
TROUBLESHOOTING	361
REPAIR TIMES	365
SPECIAL TOOLS	366

SECTION 25 - FRONT AXLES

2WD - 2WS FRONT AXLE	3
TECHNICAL SPECIFICATIONS	3
LUBRICATION AND GREASING	4
REMOVAL FROM MACHINE	6
DISASSEMBLY AND ASSEMBLY	7
TROUBLESHOOTING	7
4WD - 2WS FRONT AXLE	10
TECHNICAL SPECIFICATIONS	10
LUBRICATION AND GREASING	11
REMOVAL FROM MACHINE	13
DISASSEMBLY AND ASSEMBLY	14
TROUBLESHOOTING	57
SPECIAL TOOLS	61
4WS FRONT AXLE	62
TECHNICAL SPECIFICATIONS	62
LUBRICATION AND GREASING	63
REMOVAL FROM MACHINE	65
DISASSEMBLY AND ASSEMBLY	66
TROUBLESHOOTING	131
REPAIR TIMES	137
SPECIAL TOOLS	138

SECTION 27 - REAR AXLE

2WS REAR AXLE (B90B - B95B - B95BTC)	3
TECHNICAL SPECIFICATIONS	3
LUBRICATION AND GREASING	5
REMOVAL FROM MACHINE	7
DISASSEMBLY AND ASSEMBLY	8
TROUBLESHOOTING	61
REPAIR TIMES	66
SPECIAL TOOLS	67

2WS REAR AXLE (B110B).....	68
TECHNICAL SPECIFICATIONS.....	68
LUBRICATION AND GREASING	70
REMOVAL FROM MACHINE	72
DISASSEMBLY AND ASSEMBLY.....	73
TROUBLESHOOTING.....	126
REPAIR TIMES.....	131
SPECIAL TOOLS.....	132
4WS REAR AXLE (B115B).....	133
TECHNICAL SPECIFICATIONS.....	133
LUBRICATION AND GREASING	136
REMOVAL FROM MACHINE	138
DISASSEMBLY AND ASSEMBLY.....	139
TROUBLESHOOTING.....	217
REPAIR TIMES.....	222
SPECIAL TOOLS.....	224

SECTION 33 - BRAKE SYSTEM

PARKING BRAKE.....	3
TECHNICAL SPECIFICATIONS.....	3
OPERATION.....	3
DEACTIVATION AND EMERGENCY RESET - 2WS.....	6
ADJUSTMENT - 4WS.....	8
DISASSEMBLY AND ASSEMBLY.....	9
SERVICE BRAKE	18
TECHNICAL SPECIFICATIONS.....	18
OPERATION.....	18

SECTION 35 - HYDRAULIC SYSTEM

HYDRAULIC DIAGRAMS	3
HYDRAULIC DIAGRAM - 2WS CENTER PIVOT MECHANICAL MODELS	3
HYDRAULIC DIAGRAM - CENTER PIVOT B95BTC MECHANICAL MODELS	5
HYDRAULIC DIAGRAM - CENTER PIVOT B95BTC PILOT MODELS	7
HYDRAULIC DIAGRAM - 2WS CENTER PIVOT PILOT MODELS	9
HYDRAULIC DIAGRAM - 4WS CENTER PIVOT PILOT MODELS	11
HYDRAULIC DIAGRAM - QUICK COUPLER FOR B95BTC	13
HYDRAULIC PUMP	14
HYDRAULIC FIXED-FLOW-RATE GEAR PUMP.....	14
HYDRAULIC VARIABLE-FLOW-RATE PISTON PUMP	25
CONTROL VALVES	39
LOADER CONTROL VALVE - MECHANICAL CONTROLS (B90B - B95B - B95BTC - B110B)	40
LOADER CONTROL VALVE - PILOT CONTROLS (B95B - B95BLR - B95BTC - B110B - B115B).....	45
BACKHOE ATTACHMENT CONTROL VALVE - MECHANICAL CONTROLS (B90B - B95B - B95BTC - B110B).....	49
BACKHOE ATTACHMENT CONTROL VALVE - PILOT CONTROLS (B95B - B95BTC - B110B - B115B).....	53
RELIEF VALVES	58

INDEX

BACKHOE ATTACHMENT CONTROL VALVE PILOT SOLENOID VALVE	67
ACCUMULATOR "GLIDE RIDE" PARKER.....	70
TECHNICAL SPECIFICATIONS.....	70
MAINTENANCE	70
SAFETY	70
CHECKING AND ADJUSTING THE PRECHARGE PRESSURE	71
HYDRAULIC SWING SYSTEM	73
OPERATION.....	73
PRECISION SWING CONTROL.....	76
HYDRAULIC CYLINDERS.....	79
LOADER ATTACHMENT BOOM CYLINDER.....	80
LOADER BUCKET CYLINDER.....	87
4X1 LOADER BUCKET CYLINDER	95
BACKHOE BOOM CYLINDER	98
BACKHOE ATTACHMENT DIPPER CYLINDER	102
BACKHOE BUCKET CYLINDER.....	106
TELESCOPIC CYLINDER	110
STABILIZER CYLINDER	114
SWING CYLINDER.....	118
SPECIAL TOOLS.....	122
HYDRAULIC CONTROL LEVERS.....	123
TECHNICAL SPECIFICATIONS.....	123
CONTROLS AND OPERATION	124
COMPONENTS	125
DISASSEMBLY AND ASSEMBLY	127
CONTROL LEVER VALVE	130
TROUBLESHOOTING	132
PRELIMINARY CHECKS.....	132
TROUBLESHOOTING (WITH "REXROTH" CONTROL VALVES).....	133
TROUBLESHOOTING (WITH "HUSCO" CONTROL VALVES)	135
SWING	137
HYDRAULIC PUMP	138

SECTION 39 - CHASSIS

DESCRIPTION.....	3
REMOVAL AND INSTALLATION OF COMPONENTS.....	5
COMPONENTS WITHIN THE CHASSIS.....	5
COMPONENTS OF THE LOWER PART OF THE CHASSIS	6
COMPONENTS ATTACHED OUTSIDE THE CHASSIS	10
COMPONENTS OF THE UPPER PART	11

SECTION 41 - STEERING SYSTEM

DESCRIPTION.....	3
2WS STEERING SYSTEM	4
4WS STEERING SYSTEM	7

POWER STEERING	11
TECHNICAL SPECIFICATIONS.....	11
COMPONENTS	13
DISASSEMBLY.....	15
ASSEMBLY.....	18

SECTION 50 - CAB HEATING AND AIR CONDITIONING

TECHNICAL SPECIFICATIONS.....	3
GENERAL.....	3
CAB HEATING.....	5
CONTROLS.....	5
OPERATION.....	6
OVERHAUL.....	9
TROUBLESHOOTING.....	11
AIR CONDITIONING	12
PRINCIPLES OF AIR CONDITIONING	12
CONTROLS.....	17
OPERATION.....	18
TROUBLESHOOTING AND TESTING.....	25
FLUSHING THE SYSTEM.....	44
DRAINING THE SYSTEM	46
CHARGING THE SYSTEM.....	47
OVERHAUL	48
COMPRESSOR.....	53
TECHNICAL SPECIFICATIONS.....	53
REMOVAL AND INSTALLATION	54
DISASSEMBLY AND ASSEMBLY.....	57
TROUBLESHOOTING.....	66

SECTION 55 - ELECTRIC SYSTEM

ELECTRIC DIAGRAMS	3
ELECTRIC DIAGRAMS - POWERSHUTTLE ROPS (B90B)	3
ELECTRIC DIAGRAMS - POWERSHUTTLE ROPS (B95B - B95BTC - B110B).....	19
ELECTRIC DIAGRAMS - POWERSHUTTLE CAB (B90B)	32
ELECTRIC DIAGRAMS - POWERSHUTTLE CAB (B95B - B95BTC - B110B)	49
ELECTRIC DIAGRAMS - POWERSHIFT CAB (B110B)	65
ELECTRIC DIAGRAMS - 4WS POWERSHIFT CAB (B115B)	83
CONTROLS AND INSTRUMENTS	101
FRONT INSTRUMENT PANEL	101
SIDE INSTRUMENT CLUSTER PANEL (B90B)	104
SIDE INSTRUMENT PANEL (B95B - B110B - B115B).....	106
SIDE INSTRUMENT CLUSTER (B90B).....	108
SIDE INSTRUMENT CLUSTER (B95B - B95BTC - B110B - B115B)	110
ANTI-START SYSTEM.....	112
DIAGNOSTIC DISPLAY (B95B - B95BTC - B110B - B115B)	113
SYMBOLS.....	115

INDEX

SETUP MENU.....	116
PROCEDURE ABOUT SELF TEST.....	117
ON BOARD ERROR CODE RETRIEVAL.....	118
BACKLIGHTING AND DIMMING.....	119
WORK HOURS.....	120
OPERATION.....	121
WARNING SYSTEM.....	125
MAINTENANCE.....	126
WARNING MESSAGES.....	127
STARTING SYSTEM.....	134
OPERATION.....	134
STARTER MOTOR.....	137
TROUBLESHOOTING.....	142
ALTERNATOR.....	144
TECHNICAL SPECIFICATIONS.....	144
OPERATION.....	144
COMPONENTS.....	146
REMOVAL.....	147
PRELIMINARY CHECKS AND TESTS.....	148
TROUBLESHOOTING.....	157
BATTERY.....	158
TECHNICAL SPECIFICATIONS.....	158
OPERATION.....	158
REPLACEMENT.....	159
CHARGE AND ELECTROLYTE LEVEL CHECK.....	160
CONNECTING A BOOSTER BATTERY.....	161
BATTERY MASTER SWITCH.....	161
TROUBLESHOOTING.....	162

SECTION 82 - LOADER

LOADER ATTACHMENT CONTROLS.....	4
LOADER ATTACHMENT OPERATION.....	4
4x1 LOADER BUCKET CONTROL (Optional).....	7
LOADER BUCKET SELF-LEVELLING.....	8
LOADER ATTACHMENT SAFETY STRUT.....	11
LOADER ATTACHMENT SAFETY STRUT (B90B - B95B - B110B).....	11
LOADER ATTACHMENT SAFETY STRUT (B95BTC - B115B).....	13
REMOVAL AND INSTALLATION OF LOADER BUCKET.....	14
LOADER BUCKET (B90B - B95B - B110B).....	14
LOADER BUCKET (B95BTC - B115B).....	15
LOADER BUCKET WITH QUICK COUPLER (B95BTC).....	16
LOADER BUCKET WITH FORKS (Optional).....	18
BUCKET TEETH REPLACEMENT.....	19
LOADER REMOVAL.....	20
LOADER ATTACHMENT (B90B - B95B - B110B).....	20
LOADER ATTACHMENT (B95BTC - B115B).....	22

SECTION 84 - BACKHOE

DESCRIPTION AND OPERATION.....	3
BACKHOE ATTACHMENT CONTROLS.....	6
BACKHOE ATTACHMENT MECHANICAL CONTROLS	7
BACKHOE ATTACHMENT HYDRAULIC CONTROLS	17
BACKHOE ATTACHMENT DISASSEMBLY	23
BACKHOE BUCKET REPLACEMENT	25
BUCKET TEETH REPLACEMENT	26
DIPPER REMOVE	27
TELESCOPIC DIPPER REVISION.....	30
OVERHAUL	30

INDEX

B90B

B95B - B95BLR - B95BTC

B110B

B115B



SECTION 00 - SAFETY RULES

SAFETY INSTRUCTIONS

WARNING

This warning symbol points out important messages involving your safety.

Carefully read the safety rules contained herein and follow advised precautions to avoid potential hazards and to safeguard your safety and personal integrity.

In this manual you will find this symbol together with the following keywords:

WARNING

This symbol warns about the possibility of potential damages to the machine that can involve the operator's safety.

WARNING

With specific warnings about potential dangers for the operator's or other persons integrity directly or indirectly involved.

The non-compliance with the warnings preceded by the above-mentioned keywords (WARNING and DANGER) can cause serious accidents or even the death of the persons involved.

Moreover, in the present Manual, some instructions are given with text in italics, preceded by the words **NOTE** and **CAUTION**.

NOTA: *it emphasizes and underlines to the operator the correct technique or correct procedure to follow.*

WARNING


This symbol warns about the possibility of potential damages to the machine that can involve the operator's safety.

FOREWORD

Loader backhoes B90B - B95B - B95BLR - B95BTC - B110B - B115B have been designed to perform most earth-moving operations.

If you use this machine for duties involving the use of attachments, accessories, or special tools, consult your Dealer to make sure that the adaptations or modifications carried out are in conformity with the machine's technical specifications and with current regulations on safety.

Any modifications or adaptations which are not approved by the manufacturer may invalidate the machine's original conformity with safety requirements.

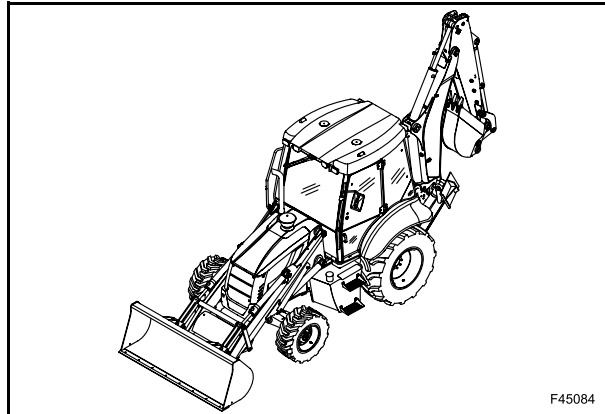

1

The machine must be used according to its intended use, respecting the safety and precautionary rules and strictly following the operating instructions. Any functional disorders, especially those affecting the safety of the machine, should therefore be rectified immediately.

⚠ DANGER ⚠

A different use of the excavator or of its working equipment:

- for lifting or transporting persons;
- as a working platform;
- for lifting loads without the attachment being approved for this purpose;
- for pulling loads;

is considered unintended use.

Unintended use may cause injury or life-threatening risks for the operator and for other persons.

The manufacturer/supplier cannot be held responsible for any damage resulting from unintended use. The risk involved in such misuse lies entirely with the user.

⚠ DANGER ⚠

It is absolutely forbidden to tamper with and/or change the setting of any of the hydraulic system valves to avoid damaging machine components, with a consequent risk for personal safety.

The current Operator's Manual is the user's guide for correct run-in, use and maintenance of the machine.

Carefully read this Operator's Manual and store it in the cab for quick location and reference.

Instructions concerning safety, operation and maintenance have been developed to permit safe service and operation of this machine.

In the event of queries or suggestions relevant to your machine do not hesitate to address to your Dealer. Dealers have qualified and trained personnel at disposal as well as Original Spares, means and equipment suitable to carry out all necessary maintenance.

Do not use this machine for any applications or purposes other than those described in this manual. If you use this machine for duties involving the use of attachments, accessories, or special tools, consult your Dealer to make sure that the adaptations or modifications carried out are in conformity with the machine's technical specifications and with current regulations on safety.

Any modifications or adaptations which are not approved by the manufacturer may invalidate the machine's original conformity with safety requirements.

IMPORTANT: *the engine and fuel system on your machine are designed and built to government emissions standards. Tampering by dealers, customers, operators and users is strictly prohibited by law. Failure to comply with this prohibition could result in government fines, rework charges, invalid warranty, legal action and possible confiscation of the machine until rework to original condition is completed. Engine service and/or repairs must be carried out by a certified technician only.*

NOTA: *each machine is supplied complete with a copy of this Manual. Descriptions and illustrations provided herein are not binding. The Manufacturer, provided that the basic characteristics of machine types described and shown in this Manual remain the same, reserves the right to change components, parts and accessories supplied without any commitment to timely update this publication; and this any time it deems it convenient for improvement purposes or due to commercial or manufacturing requirements. For exact information, please consult your Dealer or contact the Manufacturer's Branch Offices, who remain at your disposal for further help.*

SPARE PARTS

The "non-genuine" spare parts have not been checked and authorized by the Manufacturer. The assembly and/or use of such products may have negative effects on the machine design features and could impair its operation safety. The Manufacturer is not liable for any damage caused by "non-genuine" spare parts or accessories.

WARRANTY

This machine is under warranty according to the regulations in force in Your Country and in compliance with the sales agreement drawn up with the Dealer. The warranty, however, expires if the operation and maintenance instruction for this machine and contained in this manual, have not been followed.

SAFETY INSTRUCTIONS

Carefully read the safety rules contained herein and follow advised precautions to avoid potential hazards and to safeguard your safety and personal integrity.

Your safety and that of the people around you depends on you.

It is essential that you understand this manual for a correct inspection, lubrication and repair of this machine.

Read this manual carefully and check that:


- you understand fully the symbols on the controls and the safety signs used in this manual and on the machine;
- you understand fully the speed, stability, braking and steering characteristics of the machine. If you are in any doubt, consult your Dealer.

The safety messages in this section concern situations which may arise during normal machine operation, servicing and repair. These safety messages also indicate the different ways of coping with these situations. Other safety messages are used throughout the manual to indicate specific dangers.

The information given in this chapter is a summary of the basic rules to respect at all times and does not exempt you from observing traffic regulations or the requirements of insurance companies.

The presence of grease, oil, mud or (in winter) ice on the steps and access handles can cause accidents. Make sure they are always clean.

When mounting or dismounting from the machine always face the machine and use the steps and access handles on the left-hand side of the machine.

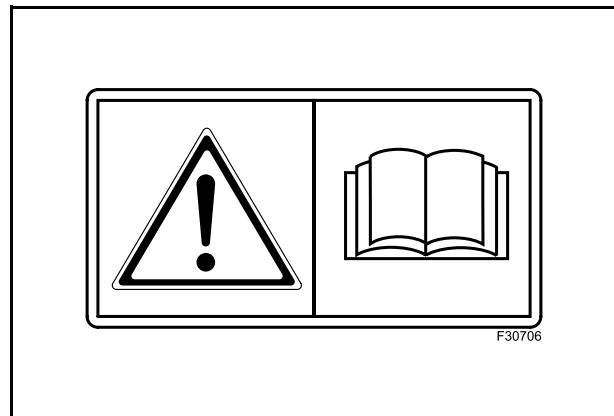

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**