

John Deere 2030 Tractor



TECHNICAL MANUAL John Deere 2030 Tractor

TM1051 (01FEB86) English

John Deere Tractor Works
TM1051 (01FEB86)

LITHO IN U.S.A.
ENGLISH



2030 TRACTOR

TECHNICAL MANUAL
TM-1051 (Nov-74)

CONTENTS

SECTION 10 - GENERAL

- Group 5 - General Tractor Specifications
- Group 10 - Predelivery, Delivery, and After-Sale Services
- Group 15 - Tune-Up and Adjustment
- Group 20 - Lubrication
- Group 25 - Separation
- Group 30 - Specifications and Special Tools

SECTION 20 - ENGINE

- Group 5 - General Information, Diagnosis, and Tests
- Group 10 - Cylinder Head, Valve Train, Camshaft, and Timing Gear Train
- Group 15 - Cylinder Block, Liners, Pistons, and Rods
- Group 20 - Crankshaft, Main Bearings, and Flywheel
- Group 25 - Lubrication System
- Group 30 - Cooling System
- Group 35 - Governor
- Group 40 - Specifications and Special Tools

SECTION 30 - FUEL SYSTEM

- Group 5 - Diagnosing Malfunctions (U.S. Tractors)
- Group 10 - Air Intake System (U.S. Tractors)
- Group 15 - Diesel Fuel System (U.S. Tractors)
- Group 20 - Gasoline Fuel System (U.S. Tractors)
- Group 25 - Control Linkage (U.S. Tractors)
- Group 30 - Diagnosing Malfunctions (Mannheim Tractors)
- Group 35 - Tank, Transfer Pump, Filter and Air Cleaner (Mannheim Tractors)
- Group 40 - Roto Diesel Fuel Injection Pump (Mannheim Tractors)
- Group 45 - Fuel Injection Nozzles (Mannheim Tractors)
- Group 50 - Cold Weather Starting Aid (Mannheim Tractors)
- Group 55 - Speed Control Linkage (Mannheim Tractors)
- Group 60 - Specifications and Special Tools

SECTION 40 - ELECTRICAL SYSTEM

- Group 5 - Information and Diagrams (U.S. Tractors)
- Group 10 - Charging Circuit (U.S. Tractors)
- Group 15 - Starting Circuit (U.S. Tractors)
- Group 20 - Ignition Circuit (U.S. Tractors)
- Group 25 - Lighting and Accessory Circuits (U.S. Tractors)

- Group 30 - Diagnosing Malfunctions (Mannheim Tractors)
- Group 35 - Components and Wiring Diagram (Mannheim Tractors)
- Group 40 - Bosch Starting Motor (Mannheim Tractors)
- Group 45 - Bosch Alternator and Regulator (Mannheim Tractors)
- Group 50 - Specifications and Special Tools

SECTION 50 - POWER TRAIN

- Group 5 - Clutches (U.S. Tractors)
- Group 6 - Transmission Clutch and Clutch Linkage (Mannheim Tractors)
- Group 10 - Hi-Lo Shift Unit
- Group 15 - Reverser
- Group 20 - Collar Shift Transmission
- Group 25 - Differential
- Group 30 - Final Drive
- Group 35 - Continuous and Transmission PTO
- Group 40 - Independent PTO
- Group 45 - Belt Pulley
- Group 50 - Specifications and Special Tools

SECTION 60 - STEERING AND BRAKES

- Group 5 - General Information

SECTION 70 - HYDRAULIC SYSTEM

- Group 5 - General Information, Diagnosis and Tests
- Group 10 - Miscellaneous Hydraulic Components
- Group 15 - Hydraulic Pumps
- Group 20 - Steering System
- Group 25 - Hydraulic Brakes
- Group 30 - Rockshaft System
- Group 35 - Selective Control Valve, Breakaway Couplers, and Remote Cylinders
- Group 40 - Specifications and Special Tools

SECTION 80 - MISCELLANEOUS

- Group 5 - Front Axle (U.S. Tractors)
- Group 10 - Front Axle (Mannheim Tractors)
- Group 15 - Specifications and Special Tools

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

Copyright ©1973
DEERE & COMPANY
Moline, Illinois
All rights reserved

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**


JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

INTRODUCTION

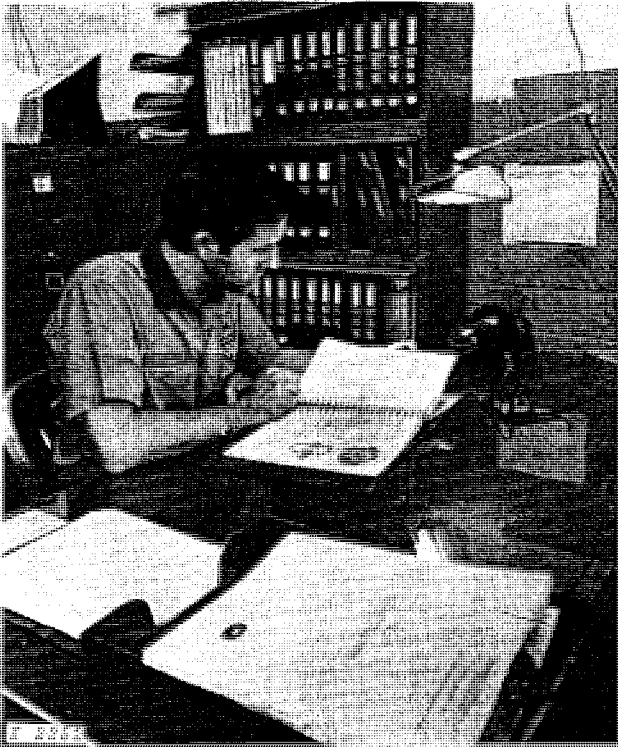

Use FOS Manuals for Reference



Use Technical Manuals for Actual Service

This technical manual is part of a twin concept of service:

- **FOS Manuals—for reference**
- **Technical Manuals—for actual service**

The two kinds of manuals work as a team to give you both the general background and technical details of shop service.

Fundamentals of Service (FOS) Manuals cover basic theory of operation, *fundamentals* of trouble shooting, *general* maintenance, and *basic* types of failures and their causes. FOS Manuals are for training new men and for reference by experienced men.

Technical Manuals are concise service guides for a *specific* machine. Technical Manuals are on-the-job guides containing only the vital information needed by a journeyman mechanic.



When a serviceman should refer to a FOS Manual for more information, a FOS symbol like the one at the left is used in the TM to identify the reference.

Some features of this technical manual:

- *Table of contents at front of manual*
- *Exploded views showing parts relationship*
- *Photos showing service techniques*
- *Specifications grouped for easy reference*

This technical manual was planned and written for you—a journeyman mechanic. Keep it in a permanent binder in the shop where it is handy. Refer to it whenever in doubt about correct service procedures or specifications.

Using the technical manual as a guide will reduce error and costly delay. It will also assure you the best in finished service work.



This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

Section 10 GENERAL

CONTENTS OF THIS SECTION

	Page		Page
GROUP 5 - SPECIFICATIONS		GROUP 20 - LUBRICATION	
General Tractor Specifications	5-1	Lubrication Chart	20-1
GROUP 10 - PREDELIVERY, DELIVERY, AND AFTER-SALE SERVICES		Engine Lubricating Oils	20-2
Predelivery Service	10-1	Greases	20-2
Delivery Service	10-4	Storing Lubricants	20-2
After-Sale Inspection	10-4	GROUP 25 - SEPARATION	
GROUP 15 - TUNE-UP		Separating Engine from Clutch Housing	25-1
Preliminary Engine Testing	15-1	Separating Clutch Housing from Transmission Case	25-2
Engine Tune-Up	15-1	Separating Tractor Front End from Engine ...	25-3
Final Engine Test	15-3	Removing Engine	25-4
Tractor Tune-Up	15-4	Removing Final Drive Assembly	25-5
		GROUP 30 - SPECIFICATIONS AND SPECIAL TOOLS	30-1

Group 5

GENERAL TRACTOR SPECIFICATIONS

	Gasoline	Diesel
ENGINE		
Maximum PTO horse- power*	60.34	60.65
Number of cylinders ...	4	4
Bore and stroke, inches	4.02 x 4.33	4.02 x 4.33
Displacement in cubic inches	219	219
Compression ratio	7.5 to 1	16.3 to 1**
Firing order	1-3-4-2	1-3-4-2
Intake valve clearance	0.014-in.	0.014-in.
Exhaust valve clear- ance	0.022-in.	0.018-in.
Slow idle	600 rpm	800 rpm***
Fast idle	2680 rpm	2650 rpm

*Official test at 2500 engine rpm (650 or 1210 PTO rpm)

**16.2 to 1 on Mannheim tractors

***650 rpm on Mannheim tractors

ELECTRICAL SYSTEM	
Battery dry voltage	12 volts
Battery specific gravity at full charge (corrected to 80°F)	1.260
Battery terminal grounded	negative
CAPACITIES (U.S. Standard Measures)	
Fuel tank	19-1/2 gals.
Cooling system	12 qts.
Crankcase (including filter)	6 qts.
Transmission-hydraulic system	10 gals.
On Mannheim tractors	
Dry system	9.5 gals.
At service intervals	7.4 gals.
Belt pulley	2-1/2 pts.
CLUTCH	Single or dual stage, spring-loaded, dry disk, foot-operated.

TRANSMISSION

Type Collar shift
Gear selections 8 forward and 4 reverse
Shifting 4 speeds each in high, low, and reverse ranges. Park lock included.

HI-LO SHIFT

Hydraulic wet clutches, no clutching required. Shifting from high to low decreases ground speed 25.8 percent (21 percent on Mannheim tractors) and increases pull power up to 35 percent (27 percent on Mannheim tractors) in any of the transmission speeds.

REVERSER

Hydraulic wet clutches, no clutching required. Provides reverse speeds for gear selections 1 through 4 which are 16% faster than corresponding forward speeds.

BRAKES Hydraulically actuated, wet-disk type.

DIFFERENTIAL AND FINAL DRIVES

Type Planetary reduction final drives with spiral bevel gear drive differential.
Differential lock . . . Hand or foot operated mechanical lock, spring-loaded out of engagement.

POWER TAKE-OFF

Type Continuous-running or independent types available in 540 and/or 1000 rpm options. On Mannheim tractors, independent types only.

HYDRAULIC SYSTEM

Type Closed center, constant pressure.
Standby oil pressure 2250 psi

STEERING

Type . . . Hydraulically actuated, with manual provision in case of hydraulic failure.

FRONT TIRES*

Size	Ply Rating
6.00-16	6
7.5L-15	6
7.50-16	6
6.00-14	4
6.00-16	4
27/9.50-15	10
6.00-16	6
7.5L-15	6
7.50-16	6

REAR TIRES*

13.6-28	4
14.9-28	6
16.9-28	6
14.9-24	6
16.9-24	6
18.4-26	6
12.4-36	4
13.6-38	4
15.5-38	6

* Additional tire sizes available.

DIMENSIONS*

Over-all height 81-1/4 in.
Over-all width, min 69-1/2 in.
Over-all length
(with 3-point hitch) 139-1/2 in.
Shipping weight (approx.)
Gasoline tractor 4720 lbs.
Diesel tractor 4800 lbs.

* 14.9-28 rear tires and 6:00-16 front tires

Group 10

PREDELIVERY, DELIVERY, AND AFTER-SALE SERVICES

PREDELIVERY SERVICE

Because of the shipping factors involved, plus extra finishing touches that are necessary to promote customer satisfaction, proper predelivery service is of prime importance to the dealer.

A tag pointing out the factory-recommended procedure for predelivery service is attached to each new tractor before it leaves the factory.

After completing the factory-recommended dealer checks and services listed on the predelivery tag, remove the tag from the tractor and file it with the shop order for the job. The tag will certify that the tractor has received the proper predelivery service when that portion of the customer's John Deere Delivery Receipt is completed.

Temporary Tractor Storage

Service	Specification	Reference
Check radiator for coolant loss and antifreeze protection	Midway between core and filler neck	
(Mannheim Tractors)		
Electrical System		
IMPORTANT: When the tractor is delivered red cable is not connected to alternator terminal "B+".		
Further, the alternator three-terminal plug is not connected. Connect cable and plug before operating tractor for the first time.		
If the tractor is to be operated for a short time without battery (using a slave battery for starting), do not, under any circumstances, interrupt the circuit by switching off the key switch before stopping the engine by means of the fuel pump shut-off cable. Further it is recommended to use additional current (lights) while engine is running. Insulating tape on battery cable end leading to starting motor should not be removed. If this advice is disregarded, damage to alternator and regulator may result.		
		Section 40, Group 35
Remove batteries. Drain electrolyte and store batteries	Store at room temperature	
(All Tractors)		
Drain fuel system (gasoline)		Operator's manual
Reduce shipping pressure of tires		Operator's manual
Cover tractor and tires for protection and cleanliness		

Before Delivering Tractor

Service	Specification	Reference
Electrical System (U.S. Tractors)		
Remove resistor and connect wiring lead (red) to alternator output terminal. Do not attempt to polarize Alternator connected. Serial No. (187301-)		Section 40, Group 10
Install electrolyte and charge batteries. Tractors Serial No. (187301-)		
Check electrolyte level and specific gravity		FOS-20 Manual
Punch date code on battery tag		
Check battery terminal connections		Section 40, Group 5
Check alternator belt tension	3/4-inch deflection, 20 lb. force	Operator's manual

Electrical System
(Mannheim Tractors)

IMPORTANT: When the tractor is delivered, red cable is not connected to alternator terminal "B+". Section 40, Group 35

Further, the alternator three-terminal plug is not connected. Connect cable and plug before operating tractor for the first time.

If the tractor is to be operated for a short time without battery (using a slave battery for starting), do not, under any circumstances, interrupt the circuit by switching off the key switch before stopping the engine by means of the fuel pump shut-off cable. Further it is recommended to use additional current (lights) while engine is running. Insulating tape on battery cable end leading to starting motor should not be removed.

If this advice is disregarded, damage to alternator and regulator may result.

If the batteries are to be installed in the tractor, remove insulating tape on terminal of battery cable. This to be done if the tractor was shipped with dry-charged batteries or without batteries.

Connect batteries in the proper polarity (negative to ground). If they are improperly connected, the rectifier diodes will be immediately destroyed. Section 40, Group 35

First connect positive (+) cable and then ground (-) strap of each battery. Only then start tractor engine. Section 40, Group 35

Before Delivering Tractor—Continued

Service	Specification	Reference
Cooling System		
Inspect radiator for coolant loss	Midway between core and filler neck	
Check antifreeze protection		
Tires and Wheels		
Adjust pressure of tires		Operator's manual
Check front wheel hub bolts, rear wheel rim clamp nuts, and rear wheel cap screws for tightness	Front hub bolts; Tires 6.00-16 or smaller ... 85 ft-lb. Tires larger than 6.00-16 ... 100 ft-lb. Rear hub bolts-300 ft-lb. Rim clamp nuts-170 ft-lb. Rear wheel-to-flanged axle; cast-130 ft-lb., steel wheel-100 ft-lb.	Operator's manual
Lubrication		
Check crankcase oil level	To upper marks on dipstick	Operator's manual
Check transmission-hydraulic sys- tem oil level	To top of "SAFE" range on dip- stick. Type 303 Special-Purpose Oil	Operator's manual
Lubricate grease fittings	John Deere Multi- purpose Lubricant	Operator's manual
Check distributor lubrication	Distributor cam lubricant	Section 40, Group 20
Check belt pulley oil level		Operator's manual
Engine		
Check air cleaner		Operator's manual
Drain sediment from diesel fuel filter		Operator's manual
Fill fuel tank and start engine	19-1/2 U.S. gallons	Operator's manual
Check operation of starter, alterna- tor, lights, flashers, gauges, and in- dicator lights		Operator's manual

Before Delivering Tractor—Continued

Service	Specification	Reference
Check engine timing	Diesel - TDC Gasoline - "S" mark, 2500 rpm	Operator's manual
Check speed control linkage for free operation		Section 20, Group 35 for gasoline tractors; Section 30, Group 25 or Group 55* for diesel tractors.
Check engine speeds		
Gasoline	Slow idle, 600 rpm High idle, 2680 rpm Foot throttle, 2800 rpm	Section 20, Group 35
Diesel	Slow idle, 800 rpm, 650 rpm* High idle, 2650 rpm Foot throttle, 2800 rpm, 2650 rpm*	Section 30, Group 25 or Group 55*
Operation		
Check transmission clutch free travel (tractors without reverser)	Approximately 1-inch free pedal travel	Operator's manual
Check clutch wear adjustment (tractors with reverser)	5-1/4 in.	Operator's manual
Shift transmission through all speeds		Operator's manual
Check power takeoff operation		Operator's manual
Check differential lock operation		Operator's manual
Check steering operation		Operator's manual
Check brakes	Bleed brakes if spongy, check for excessive pedal travel, and even position	Operator's manual
Check hydraulic system operation: Rockshaft, and remote cylinder		Operator's manual
Check 3-point hitch operation		Operator's manual
Check negative stop screw adjustment		
Tractors without Independent PTO	1/4 turn	Section 70, Group 30
Tractors with Independent PTO	1/3 turn	Section 70, Group 30
All Mannheim tractors	1/8 turn	Section 70, Group 30
Check operation of reverser, or Hi-Lo shift		Operator's Manual
Check seat operation		Operator's manual

*Mannheim tractors
 Litho in U.S.A.

Before Delivering Tractor—Continued

Service	Specification	Reference
General		
Tighten accessible nuts and cap screws		
Clean tractor and touch up paint		

DELIVERY SERVICE

A thorough discussion of the operation and service of a new tractor at the time of delivery helps to assure complete customer satisfaction. Proper delivery should be an important phase of a dealer's program. A portion of the John Deere Delivery Receipt emphasizes the importance of proper delivery service.

It is a well-known fact that many complaints have arisen simply because the owner was not shown how to operate and service his new tractor properly. Enough time should be devoted, at the customer's convenience, to introducing the owner to his new tractor and explaining to him how to operate and service it.

The following procedure is recommended before the serviceman and owner complete the delivery acknowledgments portion of the delivery receipt.

Using the tractor operator's manual as a guide, be sure that the owner understands these points thoroughly:

1. Controls and Instruments.
2. How to start and stop the engine.
3. The importance of the break-in period.
4. How to use liquid or cast-iron ballast.
5. All functions of the hydraulic system.
6. Using the power takeoff and belt pulley.
7. The importance of safety.
8. The importance of lubrication and periodic services.

After explaining and demonstrating the above features, have the owner sign the delivery receipt and give him the operator's manual.

AFTER SALE INSPECTION

The purchaser of a new John Deere tractor is entitled to a free inspection within the warranty period after the equipment has been "run in." The terms of this after-sale inspection are outlined on the back of the John Deere Delivery Receipt.

The purpose of this inspection is to make sure that the customer is receiving satisfactory performance from his tractor. At the same time, the inspection should reveal whether or not the tractor is being operated, lubricated, and serviced properly.

If the recommended after-sale service inspection is followed, the dealer can eliminate a needless volume of service work by preventing minor irregularities from developing into serious problems later on. This will promote strong dealer-customer relations and present the dealer an opportunity to answer questions that may have arisen during the first few days of operation. During the inspection service, the dealer has the further opportunity of promoting the possible sale of other new equipment.

The following inspection program is recommended within the first 100 hours of tractor operation.

Inspection Procedure

Service	Specification	Reference
Cooling System		
Check radiator coolant level.	Midway between core and filler neck	
Clean external surface of radiator core		
Check hoses and connections for leaks		
Fuel System		
Remove water and foreign matter from fuel pump and filter sediment bowls		Operator's manual
Bleed fuel system		Operator's manual
Tighten loose connections and check entire system for leaks. Correct if necessary		
Check air cleaner element and unloading valve. Clean element if necessary		Operator's manual
Electrical System		
Check specific gravity of battery(s).	Full charge - 1.260 at 80°F.	Operator's manual
Check level of battery electrolyte.	To bottom of filler neck in each cell	Operator's manual

Inspection Procedure—Continued

Service	Specification	Reference
Check belt tension	3/4-inch deflection with a 20 lb. force	Operator's manual
Start engine and check operation of starter, lights, and indicator lamps		Operator's manual
Lubrication		
Check crankcase oil level	To upper marks on dipstick	Operator's manual
Check transmission-hydraulic system oil level	In "SAFE" range on dipstick. Use John Deere Type 303 Spec- cial-Purpose Oil	Operator's manual
Check distributor lubrication	Distributor cam lubricant	Section 40, Group 20
Engine		
Check valve clearance (static)	Intake: 0.014 in. Exhaust: Gasoline-0.022 in. Diesel -0.018 in.	Operator's manual
Check engine speed (under load), and horsepower	Specification	Group 15 of this Section.
Operation		
Check transmission clutch free travel (tractors without reverser)	Approximately 1-inch free pedal travel	Operator's manual
Check clutch wear adjustment (tractors with reverser)	5-1/4 in.	Operator's manual
Shift transmission through all speeds		Operator's manual
Check Reverser, Hi-Lo operation		Operator's manual
Check Power Take-Off operation		Section 50, Groups 35 & 40
Check differential lock operation		Operator's manual
Check rockshaft and remote cylinder operation		Section 70, Group 30

Inspection Procedure—Continued

Service	Specification	Reference
Check negative stop screw adjustment		
Tractors without Independent PTO	1/4 turn	Section 70, Group 30
Tractors with Independent PTO	1/3 turn	Section 70, Group 30
Mannheim tractors	1/8 turn	Section 70, Group 30
Check steering system operation	Smooth, without excessive freeplay	Section 70, Group 20
Check brakes	Bleed brakes if spongy, check for excessive pedal travel, and even position	Section 70, Group 25
Nuts and Cap Screws		
Tighten accessible nuts and cap screws that seem to require adjustment		

Group 15 TUNE-UP

GENERAL INFORMATION

Before tuning up a tractor, determine whether a tune-up will restore operating efficiency. When there is doubt, the following preliminary tests will help to

determine if the engine can be tuned-up. If the condition is satisfactory, proceed with the tune-up. Choose from the following procedures only those necessary to restore the unit.

Preliminary Engine Testing

Operation	Specification	Section-Group Reference
Dynamometer Test (at 2500 engine rpm, full load)	Compare with previous recorded output; compare with output after tune-up	FOS 30 Manual, Chapter 12
Compression Test (minimum readings)		
Diesel	300 psi at full cranking speed	FOS 30 Manual, Chapter 12
Gasoline	120 psi at full cranking speed	FOS 30 Manual, Chapter 12
Manifold Depression Test (gasoline)	15 to 20 inches Mercury, engine at slow idle	FOS 30 Manual, Chapter 12
Engine Coolant Check Test	No air bubbles or oil film in radiator	FOS 30 Manual, Chapter 12

Engine Tune-Up

Operation	Specification	Section-Group Reference
Air Intake System		
Service air cleaner and check system for leaks		FOS 30 Manual, Chapter 12
Check system for restrictions using water manometer (full-load speed):		
Normal reading with clean filter element (inches of water)	Diesel - 3-1/2 inches Gasoline - 2-1/2 inches	FOS 30 Manual, Chapter 12
Maximum permitted reading	25 in. at 2500 rpm (full load)	FOS 30 Manual, Chapter 12
Exhaust System		
Check system for leaks		FOS 30 Manual, Chapter 12
Check muffler and exhaust pipe for restrictions		FOS 30 Manual, Chapter 12

Engine Tune-Up—Continued

Operation	Specification	Section-Group Reference
Crankcase Ventilating System		
Check system for restrictions		FOS 30 Manual, Chapter 12
Cooling System		
Clean grille screen, radiator core, and oil cooler core		20-35
Clean and flush system; check thermostat opening temperature, if necessary		20-35
Check pressure cap	6.25 to 7.50 psi release pressure	20-35
Cylinder Head and Valves		
Torque cylinder head cap screws	110 ft-lbs in sequence	20-10
Set valve clearance	Intake-0.014 inch Exhaust-0.022 inch (gasoline) 0.018 inch (diesel)	20-10
Ignition System		
Inspect system; install new points, condenser, and plugs		
Points	0.020 in. (66-72 degrees dwell)	40-20
Spark plugs	0.025 in.; 35 ft-lbs torque	40-20
Time distributor	"S" mark, 2500 rpm	40-20
Gasoline Fuel System		
Check fuel tank for water or other foreign material		30-20
Change fuel filter		30-20
Check system for leaks		30-20
Check fuel pump pressure	3-1/2 to 4-1/2 psi	30-20
Clean carburetor inlet screen		30-20
Drain carburetor bowl		30-20
Check choke operation		30-20
Check carburetor load needle adjustment	Engine at high idle, turn in load needle until engine misses, turn load needle out until engine runs smooth, then turn out one extra turn	30-25
Adjust throttle linkage	Foot pedal - 2800 rpm Hand Throttle High idle - 2680 rpm Slow idle - 600 rpm	30-25

Engine Tune-Up—Continued

Operation	Specification	Section-Group Reference
Diesel Fuel System		
Check fuel tank for water or other foreign material
Check fuel pump pressure	3-1/2 - 4-1/2 psi	30-15
Change filter	30-15
Injection Pump:		
Service and check timing	TDC	30-15,30-45*
	4° advance at 1200 rpm (no load)	30-15
Adjust throttle linkage	Foot throttle - 2800 rpm (2650 rpm*) Hand throttle	
	High idle - 2650 rpm	
	Slow idle - 800 rpm (650 rpm*).....	30-25 30-55*
Lubrication System		
Check engine oil pressure	45 - 65 psi at high idle	20-30
Charging System		
Check battery specific gravity	1.240 - 1.260	40-10
Check battery water consumption and electrolyte level	40-10
Clean battery, cables, and box	40-10
Check alternator belt tension	20 lb. with 3/4 in. belt deflection	40-10
Check alternator output	25 amps at 13 to 15 volts (2052 engine rpm, 3000 alternator rpm)	40-10
Check alternator regulated voltage	13.8 - 14.3 volts (operating)	40-10
Starting System		
Check start-safety switch operation	
Check battery voltage when starting	Min. 9 volts (cranking)	40-15
Check starter current draw	Diesel - approx. 400 amps	40-15
	Gasoline - approx. 170 amps	40-15
Check operation of alternator and oil pressure indicator lights	40-25

Final Engine Test

Operation	Specification	Section-Group Reference
Carburetor mixture	Use exhaust gas analyzer and dynamometer	30-20
Dynamometer	Compare with previous recorded	FOS 30 Manual, Chapter 12
	output. Record for future use.	

*Mannheim tractors

Tractor Tune-Up

Operation	Specification	Section-Group Reference
Adjust transmission clutch pedal free travel		
Tractors without reverser	1-inch	50-5,50-6*
Tractors with reverser	5-1/4 inches	50-5
Check transmission shifting		50-20
Check transmission for proper operation without excessive noise		50-20
Check reverser, Hi-Lo operation		50-10&15
Check power take off for proper operation		50-35&40
Check differential lock operation		50-25
Check brake pedal travel and position	Bleed brakes if spongy	70-25
Check front wheel bearing adjustment and lubrication	35 ft-lbs; backoff to nearest hole	
Check front wheel toe-in	1/8 - 3/8 in.	
Check tire inflation	See operator's manual	
Transmission pump	6 gpm at 2500 rpm	70-15
Main hydraulic pump	2200-2300 psi standby; 13.5 gpm (1.4 cu. in.), or 23 gpm (2.4 cu. in.), 2500 rpm and 2000 psi	70-15
Pressure control valve	1700-1800 psi at 1900 engine rpm	70-10
Rockshaft lift cycle time (78 degrees rotation)	1.51 - 2.31 seconds at 2100 rpm	70-5
Check selective control valve and remote cylinder cycle time	Remote cylinder (2-1/2 x 8-in.) extends in 1.5 to 2.0 sec.	70-5

Hydraulic system pressures and flow rates are for conditions specified in Section 70 (tractor at operating temperature, transmission-hydraulic oil at correct temperature, proper test equipment, correct test sequence, etc.)

*Mannheim tractors