

4650 and 4850 Tractors Repair



TECHNICAL MANUAL 4650 and 4850 Tractors Repair

TM1354 (01SEP87) English

John Deere Tractor Works
TM1354 (01SEP87)

LITHO IN U.S.A.
ENGLISH



4650 AND 4850 TRACTORS TECHNICAL MANUAL TM-1354 (SEP-87)

CONTENTS—REPAIR SECTIONS

PUBLICATION NUMBER CHANGE

This technical manual was formerly TM-1258. The number was changed to TM-1354 when engine information was removed. Some pages still carry the old publication number. For engine information, refer to engine component technical manual CTM-1, 6466 Engines. This machine technical manual covers removal and installation of the engine components. The component manual covers basic repair of engine. For main hydraulic pump repair information, refer to component technical manual, CTM-7, Radial Piston Pumps.

SECTION 10—GENERAL

- Group 00—Specifications
- Group 05—Predelivery, Delivery and After-Sale Services
- Group 10—Tune-up
- Group 15—Lubrication

SECTION 15—SEPARATION

- Group 05—Front Axle
- Group 10—Front-End
- Group 15—Front-End and Engine
- Group 20—Engine
- Group 25—SOUND-GARD® body
and Roll-Gard Protective Structure
- Group 30—Power Shift Clutch Housing
- Group 31—QUAD-RANGE™ Clutch Housing
- Group 35—Transmission
- Group 40—Final Drives

SECTION 20—ENGINE

- Group 05—Acquire Access to Cylinder Head, Valves and Camshaft
- Group 10—Acquire Access to Cylinder Block, Liners, Pistons and Rods
- Group 15—Acquire Access to Crankshaft, Main Bearings and Flywheel
- Group 20—Acquire Access to Lubrication System
- Group 25—Remove/Install Cooling System

SECTION 30—FUEL AND AIR SYSTEM

- Group 05—Acquire Access to Air Intake System
- Group 10—Acquire Access to Diesel Fuel System
- Group 15—Speed Control Linkage

SECTION 40—ELECTRICAL

- Group 05—Harness Replacement
- Group 06—Connector Repair
- Group 10—Remove/Install Delco-Remy Charging Circuit
- Group 11—John Deere Charging Circuit
- Group 15—Starting Circuit Replacement
- Group 25—Lighting Circuit Repair
- Group 30—INVESTIGATOR II™ Warning System
And Digital Tachometer Repair
- Group 31—Gauge Cluster Instrumentation Repair
- Group 32—Analog Tachometer Repair
- Group 35—Accessories Circuits Repair

Continued on next page

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT© 1987
DEERE & COMPANY
Moline, Illinois
All rights reserved
A JOHN DEERE ILLUSTRATION
Previous Edition Copyright© 1982, 1983, 1984, 1985
DEERE & COMPANY

U10;010GEN AX4 151087

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

CONTENTS—CONTINUED

SECTION 50—POWER TRAIN—QUAD-RANGE TRANSMISSION

- Group 05—Remove/Install Clutch Pressure Valve Housing
- Group 10—Clutch Oil Pressure Regulating Valve Housing
- Group 15—Clutch Operating Piston Housing
- Group 20—PERMA CLUTCH™
- Group 30—QUAD-RANGE™ Planetary
- Group 35—QUAD-RANGE Transmission & Charge Pump
- Group 40—Shift Lever Assembly
- Group 55—PTO Gear Train
- Group 60—Adjust PTO Clutch Rod
- Group 65—Differential
- Group 70—Remove/Install Differential Lock Valve and Adjust Lock Valve Release Bar
- Group 75—Differential Lock Valve
- Group 80—Final Drive

SECTION 55—POWER TRAIN—POWER SHIFT TRANSMISSION

- Group 05—Remove/Install Traction Clutch Valve Housing
- Group 10—Traction Clutch Valve Housing
- Group 15—Remove/Install Transmission Control Valve Housing
- Group 20—Transmission Control Valves
- Group 25—Remove/Install Traction Clutch
- Group 30—Traction Clutch and Drive Shafts
- Group 35—Input Planetary
- Group 40—Reduction Gear Train
- Group 45—Output Planetary
- Group 50—Speed Selector Assembly
- Group 55—Charge Pump Assembly
- Group 60—PTO Gear Train with MFWD
- Group 61—PTO Gear Train without MFWD
- Group 65—Adjust PTO Clutch Rod
- Group 70—Differential
- Group 75—Remove/Install Differential Lock Valve and Adjust Lock Valve Release Bar
- Group 80—Differential Lock Valve
- Group 85—Final Drive
- Group 95—MFWD Gear Train

- Group 100—MFWD Clutch
- Group 105—MFWD Axle and Final Drive

SECTION 60—STEERING/BRAKES

- Group 05—Remove/Install Power Steering Components
- Group 10—Steering Column
- Group 15—Metering Pump
- Group 20—Steering Valve
- Group 25—Steering Motor
- Group 30—Steering Assist Cylinders (MFWD)
- Group 35—Remove/Install Brake Valve and Brake Accumulator
- Group 40—Brake Valve
- Group 45—Brake Accumulator
- Group 50—Bleeding Brakes and Testing Brake Accumulator
- Group 55—Brake Pistons, Plates and Disks

SECTION 70—HYDRAULICS

- Group 05—Remove/Install Main Hydraulic Pump
- Group 15—Oil Filter Relief Valve Housing (QRT)
- Group 20—Return Oil Filter Relief Valve Housing (PST)
- Group 25—Remove/Install Attenuator
- Group 30—Hydraulic Attenuator
- Group 35—Remove/Install HYDRACUSHIONED™ Seat Valve
- Group 40—Repair Hydra-Cushioned Seat Valve Assembly
- Group 45—Pressure Control Valve
- Group 50—Remove/Install Rockshaft Components and Lift Assist Cylinders
- Group 55—Rockshaft Components
- Group 60—Lift Assist Cylinders
- Group 65—Draft Sensing Cylinders
- Group 70—Hitch Components
- Group 75—Remove/Install SCV Coupler and Levers
- Group 80—SCV and ISO Coupler
- Group 85—Remote Cylinder
- Group 90—Hydraulic Oil Cooler and Thermal Bypass Valve
- Group 95—Transmission-Hydraulic System Clean-up Procedure

Continued on next page

CONTENTS—CONTINUED

SECTION 80—MISCELLANEOUS

Group 05—Rear Wheels

Group 10—Front Axle

SECTION 90—OPERATOR STATION

Group 05—Air Conditioning System

Group 06—Air Conditioning System Service

Group 10—Heating System

Group 15—Seat

Group 20—Miscellaneous Components

SECTION 95—MISCELLANEOUS OPTIONS

Group 40—Auxiliary Lighting and Electrical Components

Group 62—Auxiliary Trailer Brake

Group 63—Secondary Brake

Group 80—Minor Options

SECTION 99—SPECIAL TOOLS

INTRODUCTION

This manual is part of a total service support program.

FOS Manuals—reference


Technical Manuals—machine service

Component Manuals—component service

Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic types of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced technicians.

Technical Manuals are concise service guides for specific machines. Technical manuals are on-the-job guides containing only the vital information needed by an experienced service technician.

Component Technical Manuals are concise service guides for specific components. Component technical manuals are written as stand alone manuals covering multiple machine applications.

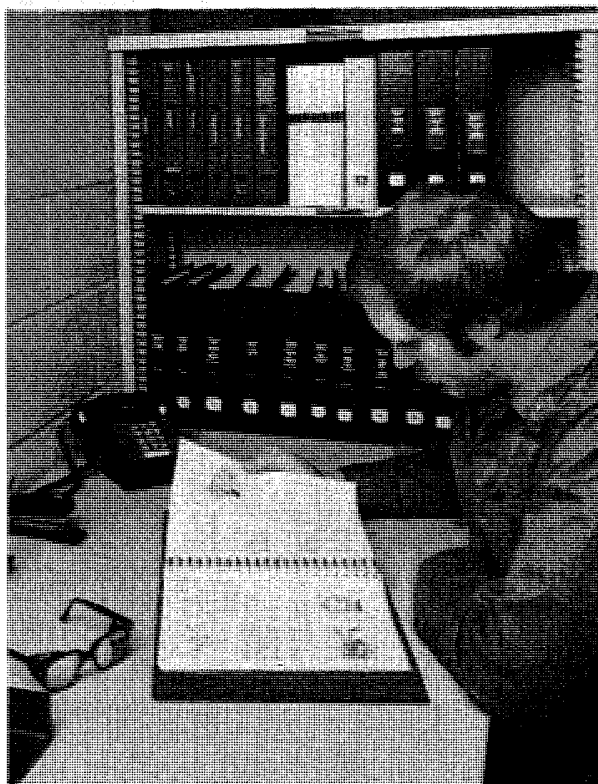

AB6;RW5559 053;INTR02 030785

FEATURES OF THIS TECHNICAL MANUAL

John Deere ILLUSTRATION format emphasizing illustrations and concise instructions in easy-to-use modules.

Emphasis on diagnosis, analysis, and testing so you can understand the problem and correct it.


Diagnostic information presented with the most logical and easiest to isolate problems first to help you identify the majority of routine failures quickly.

Step-by-step instructions for teardown and assembly.

Summary listing at the beginning of each group of all applicable specifications, wear tolerances, torque values, essential tools, and materials needed to do the job.

An emphasis throughout on safety—so you do the job right without getting hurt.

This technical manual was planned and written for you—an experienced service technician. Keep it in a permanent binder in the shop where it is handy. Refer to it when you need to know correct service procedures or specifications.

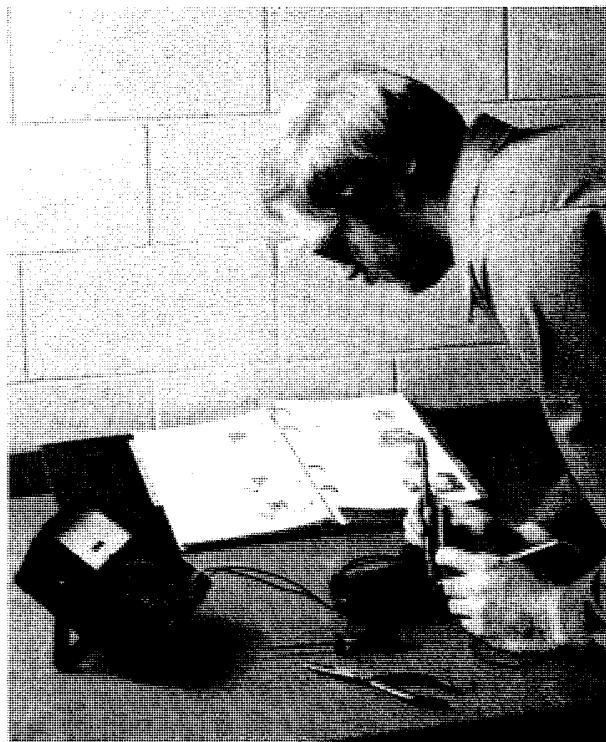

AB6;RW5560 053;INTR03 071085

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



AB6;T81389 053;ALERT 160687

IMPORTANT

The **IMPORTANT** message identifies potential problems which may cause consequential damage to tractor. Following recommended procedure will instruct technician how to avoid problem.

U10;0101NT 3 101282

NOTES

The word *NOTE* is followed by a statement that identifies a qualification or exception to a previous statement. A "NOTE" may also identify nice-to-know information pertinent to, but not directly related to previous statement.

U10;0101NT 5 101283


STAY CLEAR OF MOVING TRACTOR

Always place transmission in PARK (A) before dismounting. Leaving transmission in gear with engine stopped will NOT prevent the tractor from moving.

Be sure everyone is clear of tractor and attached equipment before starting engine. Some movement may occur as engine starts.

Never try to get on or off a moving tractor.

When tractor is left unattended, lower implements to the ground (B), stop the engine, and remove the key.

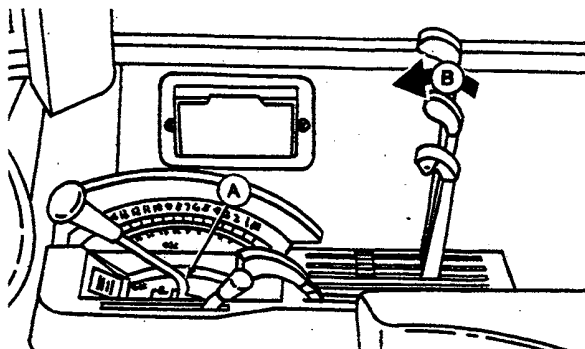



AJ7;RW5696L U01;STAY CLEAR2 200585

SHIFT TO LOW GEAR ON HILLS

Shift to a low gear (B) before descending a steep hill (A), to improve your control of the tractor with little or no braking. Make sure brake pedals are locked together. Never coast downhill.

When driving on icy or graveled surfaces, reduce speed and be sure tractor is properly ballasted to avoid skidding and loss of steering control.

Additional ballast (C) may be needed for transporting heavy integral implements. When implement is raised, drive slowly over rough ground, regardless of how much ballast is used.

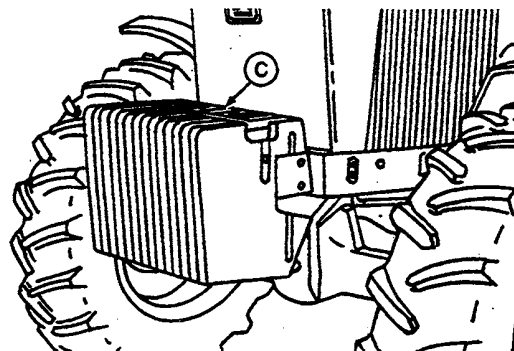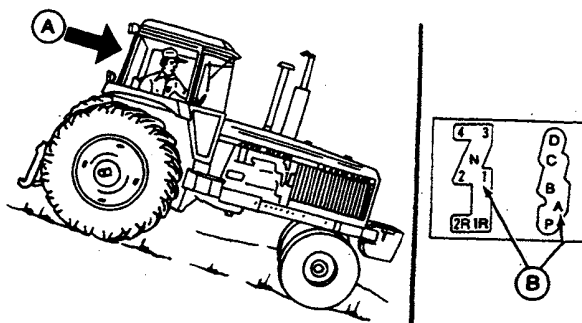

AJ7;RW5692 L,RW5693 L U01;DRIVE SAFE1 281085

KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.




AB6;TS213 053;RIDER 160687

USE SEAT BELT PROPERLY

Use a seat belt when you operate with a roll-over protective structure (ROPS) to minimize chance of injury from an accident such as an overturn.

Do not use a seat belt if operating without a ROPS.

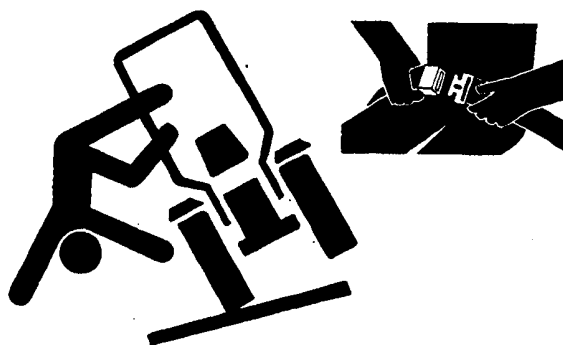


AB6;TS205 053;ROPS1 230487

KEEP ROPS INSTALLED PROPERLY

Make certain all parts are reinstalled correctly if the roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to proper torque.

The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. A damaged ROPS should be replaced, not reused.

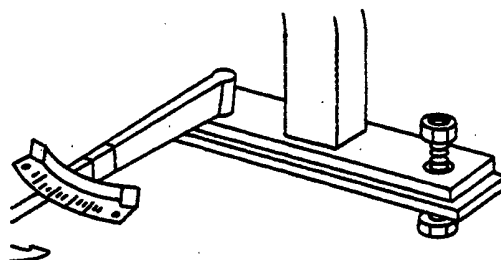


AB6;TS212 053;ROPS3 230487

PREVENT MACHINE RUNAWAY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

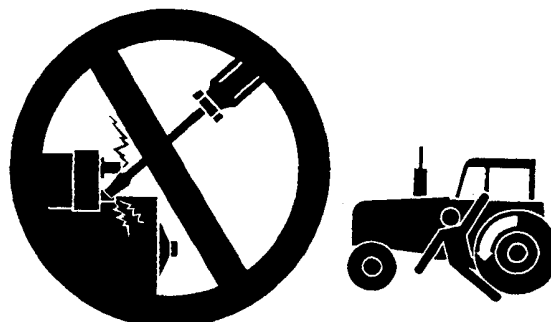

AB6;TS177 053;BYPAS1 210585

TOW EQUIPMENT PROPERLY

Use caution when towing loads at transport speeds. Reduce speed if towed load weighs more than the tractor and is not equipped with brakes. Avoid hard braking applications. (Consult implement operator's manual for recommended transport speeds.)

Use additional caution when transporting towed loads under adverse surface conditions, when turning, or on inclines.


U01;TOW 061284

USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

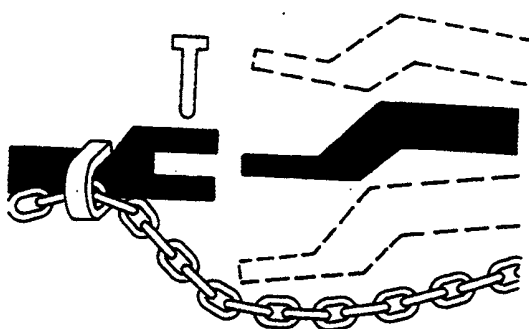

AB6;TS208 053;CHAIN 180987

PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work.

Never lubricate or service machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.


Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



AB6;TS209 053;SERV 160687

AVOID EXHAUST FUMES

Never run engine in a closed building. Make sure service area is adequately ventilated.

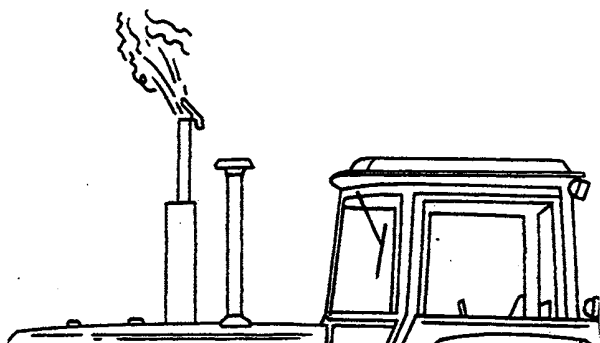


AJ7;RW5703 L U01;AVOID FUMES 090585

WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

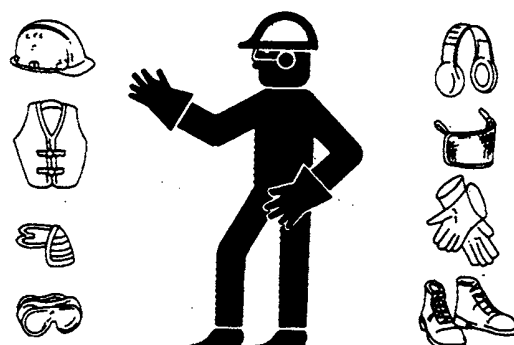

AB6;TS206 053;WEAR 230487


SERVICE TRACTOR SAFELY

Do not service the tractor while it is in motion or while the engine is running.

If servicing front-wheel drive equipped tractor with rear wheels supported off ground and rotating wheels by engine power, always support front wheels in a similar manner. If front wheels are not raised, loss of electrical power or transmission-hydraulic system pressure will engage front driving wheels and pull rear wheels off support. Under these conditions, the front-drive wheels can engage even with switch in disengaged position.

Reinstall all shields removed during service.

The air conditioning system is pressurized. Improper servicing may cause refrigerant to penetrate eyes and skin or cause burns. Special equipment and procedures are required to service air conditioning system. (See your John Deere dealer.)

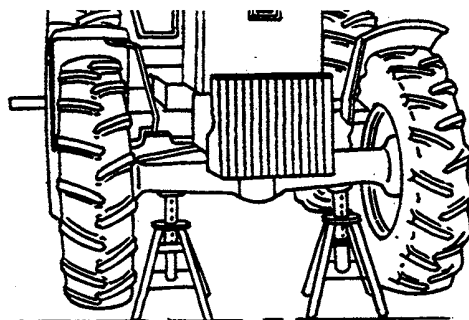


AJ7;RW5700 L U01;WORK SAFE1 090585

SERVICE TIRES SAFELY

Failure to follow proper procedures when mounting a tire on a wheel or rim can produce an explosion which may result in serious injury or death. Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job. Have it done by your John Deere dealer or a qualified tire repair service.

When sealing tire beads on rims, never exceed 35 psi (241 kPa) (2.4 bar) or maximum inflation pressures specified by tire manufacturers for mounting tires. Inflation beyond this maximum pressure may break the bead, or even the rim, with dangerous explosive force. If both beads are not seated when the maximum recommended pressure is reached, deflate, reposition tire, relubricate bead and reinflate.


Detailed tire mounting instructions, including necessary safety precautions, are contained in John Deere Fundamentals of Service (FOS) Manual 55, Tires and Tracks, available through your John Deere dealer. Such information is also available from the Rubber Manufacturers Association and from tire manufacturers.

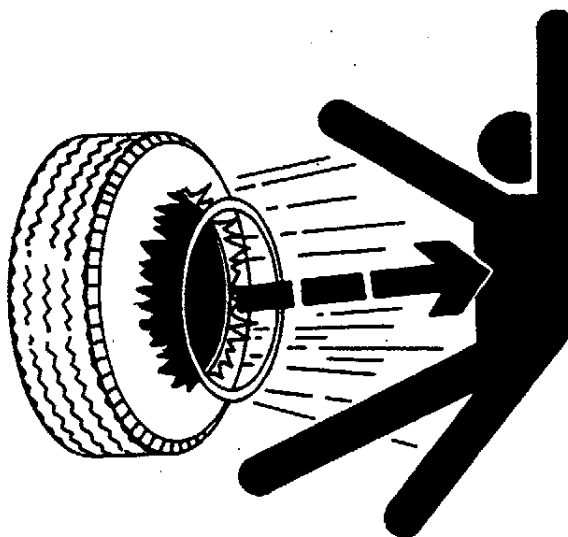

AB6/TS211 U01/TIRE 051087

DO NOT MODIFY TRACTOR

Never modify structural members of the roll-over protective structure (ROPS) (A) of the SOUND-GARD body or ROLL-GARD protective frame by welding, bending, drilling or cutting as this might weaken the structure. If any structural member is damaged, replace the entire structure. Do not attempt repairs.

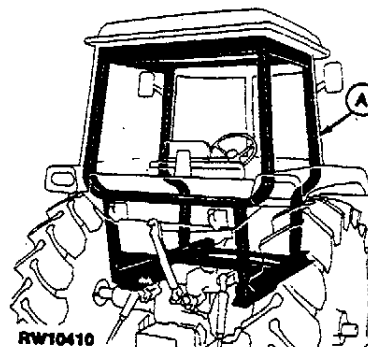


RW10410

AJ7/RW1041 0 U01/MODIFY RC 131285

OBSERVE ELECTRICAL SERVICE PRECAUTIONS

Keep all sparks and flames away from batteries, as gas given off by electrolyte is explosive. To avoid sparks, connect ground cable (A) last and disconnect it first. When using a booster battery, follow instructions in operator's manual.

To avoid shocks and burns, disconnect battery ground cable before servicing any part of electrical system.

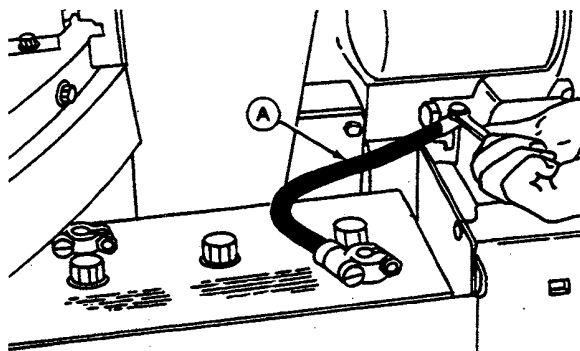

AJ7;RW5701L U10;010INT EX1 210682

AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure. Keep hands and body away from pinholes and nozzles which eject fluids under high pressure. Use a piece of cardboard to search for leaks.


If ANY fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type injury or gangrene may result.



AB6;X9811 053;FLUID 180987

SERVICE COOLING SYSTEM SAFELY

Do not remove radiator cap (A) when engine is hot. Shut the engine off and wait until it cools. Then turn the cap slowly to the first stop to relieve pressure before removing it completely.

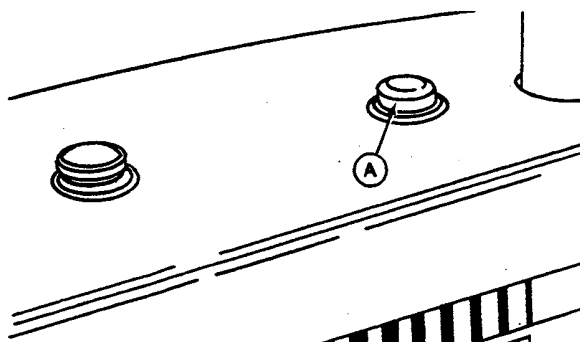


AJ7;RW5702 L U01;COOL IT 090585

SERVICE BRAKE ACCUMULATOR SAFELY

Accumulator contains gas and oil under pressure. To avoid injury from escaping fluid, relieve all pressure from accumulator before disconnecting brake accumulator or brake valve. To do so open bleed screws and pump brake pedal with engine stopped, until pedal easily goes all the way down.

The accumulator is charged with dry nitrogen to a pressure of 500 psi (3450 kPa) (35 bar). If it needs recharging, have job done only by a qualified service person and only with dry nitrogen.

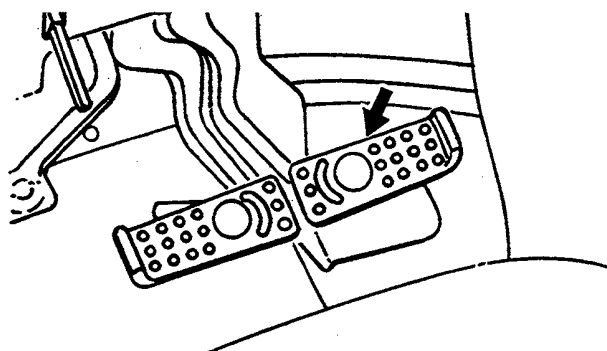

AJ7;RW8630 L U01;FIX BRAKE 311085

AVOID EXPLOSIONS OR FIRE

Batteries produce explosive gas. Before using booster batteries, read instructions in operator's manual.

Before connecting or disconnecting battery charger, turn the charger off to avoid sparks. See instructions in operator's manual.

Be careful with starting fluid or any type of fuel.

Never smoke while handling fuel.



AC3;RW5895 U01;FIRE 091184

PROTECT AGAINST NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.


Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.



AB6;TS207 053;NOISE 230487

HANDLE CHEMICALS PROPERLY

SOUND-GARD body air filters (A) are not designed to filter out harmful chemicals. Follow instructions given in the implement operator's manual and those given by the chemical manufacturer when using agricultural chemicals.

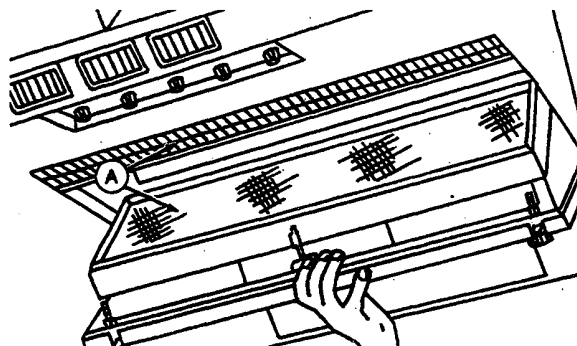

AJ7;RW5704 L U01;HANDLE CHEM 090585

PREVENT BATTERY EXPLOSIONS

Battery gas can explode. Keep sparks and flames away from batteries. Use a flashlight to check battery electrolyte level.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Always remove grounded (-) battery clamp first and replace it last.



AB6;TS204 U01;EXPLO 021087

AVOID ACID BURNS

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:


1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoid breathing fumes when electrolyte is added.
4. Avoid spilling or dripping electrolyte.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 10-15 minutes. Get medical attention immediately.

If acid is swallowed:

1. Drink large amounts of water or milk.
2. Then drink milk of magnesia, beaten eggs, or vegetable oil.
3. Get medical attention immediately.

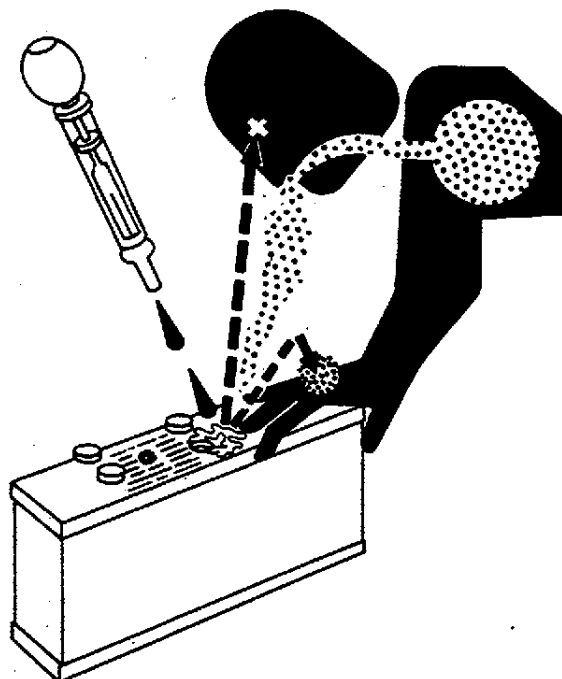

AB6;TS203 U01;ACID 021087

HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.




AB6/TS202 053/FIRE1 230487

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

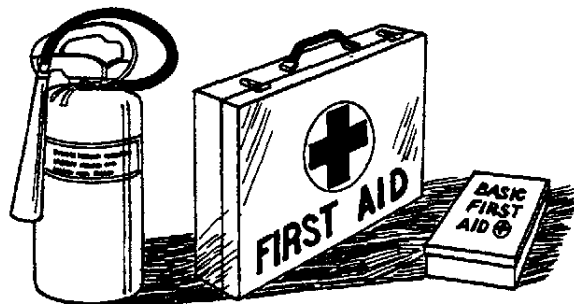

AB6/TS186 053/FIRE2 080785

HANDLE STARTING FLUID SAFELY

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.



AB6/T6098A U 053/FIRE3 160687

Section 10 GENERAL

CONTENTS

GROUP 00 - SPECIFICATIONS

| | |
|--------------------------------------|----------|
| General Tractor Specifications | 10-00-01 |
| QUAD-RANGE™ Ground Speeds | 10-00-04 |
| Power-Shift Ground Speeds | 10-00-05 |

GROUP 05 - PREDELIVERY, DELIVERY AND AFTER-SALE SERVICES

| | |
|---|----------|
| Predelivery, Delivery, And After-Sale Service Specifications | 10-05-01 |
| Lubrication Specifications | 10-05-02 |
| English Torque Specifications | 10-05-03 |
| Metric Torque Specifications | 10-05-03 |
| Dealer Predelivery Service | 10-05-04 |
| Charge Battery(ies) (If Needed) | 10-05-04 |
| Install ROLL-GARD As Per Instructions | 10-05-05 |
| If Equipped, Install Ether Aid Solenoid Wiring | 10-05-05 |
| Tighten Air Intake Hose Clamps | 10-05-05 |
| Adjust All Lamps | 10-05-06 |
| Aim Head Lamps | 10-05-06 |
| Remove SMV Plastic Cover | 10-05-06 |
| Check Tire Pressure | 10-05-07 |
| Adjust Wheel Spacing | 10-05-08 |
| Adjusting Front Fenders | 10-05-08 |
| Adjust Front Wheel Toe-In | 10-05-09 |
| On FWD: (If Equipped), Set Steering Stops | 10-05-09 |
| Torque Wheel Hardware To Specifications | 10-05-10 |
| Lubricate All Grease Fittings | 10-05-10 |
| Follow Break-In Procedure | 10-05-10 |
| Verify Factory Services | 10-05-10 |
| Is Engine Crankcase Oil Level Correct .. | 10-05-10 |
| Is Fuel Injection Sealing Cover (Or Pump Seals) Intact | 10-05-11 |
| Is Air Cleaner Element(s) Installed Correctly | 10-05-11 |
| Is Belt(s) Adjusted Correctly | 10-05-11 |
| Is Engine Coolant Level Correct | 10-05-12 |
| Is Transmission/Hydraulic System Oil Level Correct | 10-05-12 |

| | |
|---|----------|
| Are Shields, Handrails, And Steps Installed Correctly | 10-05-13 |
| Is Clutch Pedal Adjusted Correctly | 10-05-13 |
| Was Battery(ies) Charged As Received From Factory | 10-05-14 |
| If Equipped, Does INVESTIGATOR™ II Warning System Operate Correctly .. | 10-05-14 |
| Are Instrument Panel Gauges And Lights Operating Correctly | 10-05-14 |
| Are All Lights Operating Correctly In All Positions | 10-05-15 |
| Is Neutral Start Switch Operating Correctly | 10-05-15 |
| Is Engine Fast And Slow Idle Adjusted Correctly | 10-05-15 |
| Does Engine Stop Knob Operate Correctly | 10-05-15 |
| Are Brakes Operating Correctly With Engine On/Off | 10-05-16 |
| Does Transmission Operate Correctly In All Gears (And In Park) | 10-05-16 |
| Does Hydraulic System Operate Properly | 10-05-16 |
| Does PTO Operate Correctly | 10-05-17 |
| Are Coolant Lines Free Of Leaks | 10-05-17 |
| Are Engine Oil Lines Free Of Leaks ... | 10-05-17 |
| Are Fuel Lines Free Of Leaks | 10-05-17 |
| Are Hydraulic/Transmission Lines Free Of Leaks | 10-05-18 |
| Are Seat Belts Installed And Operational, If Equipped | 10-05-18 |
| Are Decals Smooth And Neat | 10-05-18 |
| Is Paint Coverage Acceptable | 10-05-18 |
| Is Overall Tractor Appearance Acceptable | 10-05-18 |
| If Equipped, Does SGB Door Operate Properly | 10-05-18 |
| If Equipped, Is SGB Upholstery Neat In Appearance | 10-05-19 |
| If Equipped, Is Interior of SGB Clean | 10-05-19 |

Continued on next page

U10;010GEN MX4 100685

CONTENTS—CONTINUED**GROUP 05 - PREDELIVERY, DELIVERY AND
AFTER-SALE SERVICES - Cont.**

| | |
|---|----------|
| Delivery Service | 10-05-19 |
| After Sale Inspection | 10-05-20 |
| Inspect Engine | 10-05-21 |
| Are There Any Oil, Fuel Or | |
| Coolant Leaks | 10-05-21 |
| Is Fan Belt Tension Correct | 10-05-21 |
| Are Engine Idle Speeds Correct | 10-05-22 |
| Does Fuel Shut-Off | |
| Operate Correctly | 10-05-22 |
| Is Throttle Lever Friction Disk | |
| Adjusted Correctly | 10-05-22 |
| Inspect Electrical System | 10-05-22 |
| Does Neutral Start Switch | |
| Operate Correctly | 10-05-22 |
| Do All Lights Operate Correctly | 10-05-23 |
| Does Air Conditioner Operate | |
| Correctly | 10-05-23 |
| Is Battery At Full Charge | 10-05-24 |
| Inspect Power Train | 10-05-24 |
| Is Transmission Operating In | |
| All Gears And In Park | 10-05-24 |
| Is Differential Lock Operating | |
| Correctly And Adjusted | |
| With Brake Pedal | 10-05-24 |
| Is PTO Operating Correctly And | |
| Are Shields In Place | 10-05-25 |
| Inspect Hydraulic System | 10-05-25 |
| Is Rockshaft Operating Correctly | 10-05-25 |
| Are There Any Visible Oil Leaks | 10-05-26 |
| Inspect Steering And Brakes | 10-05-26 |
| Do Brakes Operate Correctly | |
| With Engine On And Off | 10-05-26 |
| Does Steering Operate Correctly | |
| Both Left And Right | 10-05-27 |
| Inspect Operator Station | 10-05-27 |
| Are SGB Or ROPS Mounting | |
| Tight And Properly Installed | 10-05-27 |
| Is Seat Operating Correctly | 10-05-28 |
| Are All Gauges And Indicator | |
| Lights Operating Correctly | 10-05-28 |
| Are Following Fluid Levels Correct: | 10-05-28 |
| Engine Crankcase | 10-05-28 |
| Engine Coolant | 10-05-29 |
| Hydraulic System | 10-05-29 |
| Battery | 10-05-29 |
| Does Customer Understand | |
| Proper Operation And Maintenance | |
| Of Tractor | 10-05-30 |

GROUP 10 - TUNE-UP

| | |
|--|----------|
| Make Preliminary Engine Tests | 10-10-01 |
| Service Air Cleaner | 10-10-02 |
| Tighten Air Intake Connections | 10-10-02 |
| Clean Crankcase Breather Tube | 10-10-02 |
| Clean Grille Screens | 10-10-02 |
| Clean Radiator And Oil Cooler | 10-10-03 |
| Test Radiator And Cap | 10-10-03 |
| Check Alternator And | |
| Compressor Belt | 10-10-03 |
| Check And Adjust Injection | |
| Pump Timing | 10-10-03 |
| Check And Adjust Idle Speeds | 10-10-03 |
| Replace Fuel Filters | 10-10-04 |
| Bleed Fuel System | 10-10-04 |
| Service Batteries | 10-10-04 |
| Make Yearly Cooling System Flush | 10-10-05 |
| Make Final Engine Test | 10-10-05 |

GROUP 15 - LUBRICATION

| | |
|--|----------|
| Lubricate Tractor Properly | 10-15-01 |
| Engine Oil | 10-15-01 |
| Transmission - Hydraulic Oils | 10-15-02 |
| Use Correct Hydraulic Filter Element | 10-15-02 |
| Grease | 10-15-03 |
| MFWD Gear Lubricant | 10-15-03 |
| Use Approved Alternate Lubricants | 10-15-04 |
| Store Lubricants Correctly | 10-15-04 |
| Lubrication Specifications | 10-15-05 |
| Check Engine Oil Levels | 10-15-06 |
| Change Engine Oil and Oil Filter | 10-15-06 |
| Clean Crankcase Vent Tube | 10-15-06 |
| Check Transmission-Hydraulic | |
| Oil Level | 10-15-07 |
| Replace Transmission Oil Filter | 10-15-07 |
| Replace Hydraulic Oil Filter | 10-15-08 |
| Change Transmission-Hydraulic Oil | 10-15-09 |
| Lubricate Grease Fittings | 10-15-10 |
| Lubricate Axle Bearings | 10-15-10 |
| Lubricate Wide Swing Drawbar | 10-15-10 |
| Lubricate Lift Links | 10-15-10 |
| Lubricate Front Wheel Bearings | |
| On Tractors Without MFWD | 10-15-11 |
| Lubricate Front Axles and Pivot Pins | 10-15-11 |
| Lubricate MFWD Equipped Tractors | 10-15-11 |
| Lubricate MFWD Axle Differential | |
| And Planetary Drive | 10-15-12 |

U10;010GEN NX4 151087