

4555, 4755, 4955 and 4560, 4760, 4960 Tractors Operation and Test

For complete service information also see:

4555-4955 and 4560-4960 Tractors

Repair	TM1460
6076 Engines	CTM6
Radial Piston Pumps	CTM7
Engine Accessories	CTM11
MFWD Axles 1100 Series	CTM17

**John Deere Waterloo Works
TM1461 (21MAY01)**

LITHO IN U.S.A.
ENGLISH

Introduction

FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and diagnostics. Repair sections tell how to repair the components. Diagnostic sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Binders, binder labels, and tab sets can be ordered by John Deere dealers direct from the John Deere Distribution Service Center.

This manual is part of a total product support program.

FOS MANUALS—REFERENCE

TECHNICAL MANUALS—MACHINE SERVICE

COMPONENT MANUALS—COMPONENT SERVICE

Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced technicians.

Technical Manuals are concise guides for specific machines. Technical manuals are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Component Technical Manuals are concise service guides for specific components. Component technical manuals are written as stand-alone manuals covering multiple machine applications.

Notice to Dealers

NOTICE TO THE DEALER 55 SERIES AND 60 SERIES TRACTORS

This technical manual covers diagnosis and theory of operation information for the 4555, 4755, 4955, and 4560, 4760, 4960 tractors for North America. This manual also covers the 4755 and 4955 tractors for the European market.

Diagnosis and theory of operation information will cover all models. Photographs will generally show VERSION A tractors, however, VERSION B tractors will be called out where major differences exist.

NOTE: The changes listed below make your current TM obsolete. Discard TM-1461 dated 13Jul90. Please remove this page and route through your service department.

• Primary changes add coverage of North American 60 Series tractors. Also, coverage of European 55 Series tractors (starting with serial number 010001—) is added. See previous paragraphs explaining Version A and Version B tractors.

Version A

**55 Series Tractors North America
(All)
4755—4955 Tractors European Market
(—010000)**

Version B

**60 Series Tractors North America
(All)
4755—4955 Tractors European Market
(010001—)**

RX,1461,DEALER -19-05DEC91

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

Notice to Dealers

Contents

SECTION 210—GENERAL INFORMATION

- Group 05—Safety
- Group 10—Machine Operational Checkout
- Group 15—General Reference Information
- Group 20—Test Equipment Calibration

SECTION 220—ENGINE OPERATION AND TESTS

- Group 05—General Information
- Group 10—System Diagnosis

SECTION 230—FUEL AND AIR OPERATION AND TESTS

- Group 05—Fuel System

SECTION 240—ELECTRICAL OPERATION AND TESTS

- Group 05—Operational Checks
- Group 10A—Diagnosis Introduction
- Group 10B—Starting Circuit
- Group 10C—Charging Circuit
- Group 10D—INTELLITRAK® System
- Group 10E—Lighting Circuits
- Group 10F—Accessory Circuits
- Group 25—Reference Diagrams and Charts

SECTION 250—QUAD-RANGE TRANSMISSION

- Group 05—Operational Checks
- Group 10—Diagnosis
- Group 25—Theory of Operation

SECTION 255—POWER SHIFT TRANSMISSION

- Group 05—Power Shift Operational Checks
- Group 10—Power Shift Diagnosis
- Group 25—Power Shift Theory Of Operation

SECTION 256—PTO, AXLES AND DIFFERENTIALS

- Group 05—PTO, Axles and Differentials Operational Checks
- Group 10—PTO, Axles and Differential Diagnosis
- Group 15—PTO, Axles and Differentials Tests

- Group 25—PTO, Axles and Differentials Theory of Operation

SECTION 260—STEERING AND BRAKES

- Group 05—Steering/Brakes Operational Checks
- Group 10—Steering/Brakes Diagnosis
- Group 25—Steering/Brakes Theory of Operation

SECTION 270—HYDRAULIC SYSTEM

- Group 05 —Hydraulic System Operational Checks
- Group 05.1—Hitch System Operational Checkout
- Group 10 —Hydraulic System Diagnosis
- Group 10.1—Hitch System Diagnosis
- Group 15 —Hydraulic System Tests
- Group 15.1—Hitch System Tests
- Group 25 —Hydraulic System Theory of Operation
- Group 25.1—Hitch System Theory of Operation

SECTION 290—OPERATOR STATION

- Group 05—Operational Checks
- Group 10—System Diagnosis
- Group 25—Theory of Operation

SECTION 299—DEALER FABRICATED TOOLS

- Group 05—Fabricated Tools

Index

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

TM1461-19-21MAY01

COPYRIGHT© 1991
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright 1990, 1989 Deere & Company

Contents

210

220

230

240

250

255

256

260

270

290

Contents

299

INDX

Contents

299

INDX

Section 210 GENERAL INFORMATION

210

Contents

Page

Group 05—Safety

Safety 210-05-1

Group 10—Machine Operational Checkout

Before You Start 210-10-1

Introduction 210-10-1

Operational Checkout 210-10-2

Group 15—General Reference Information

PST Supplemental Test Kit 210-15-1

Supplemental Pressure Test Kit 210-15-1

Supplemental Flow Test Kit 210-15-2

ORFS Fitting Kit 210-15-2

Master Hyd Flow Test Fitting Kit 210-15-3

CP Hyd Flow Test Kit 210-15-5

Flowmeter Kit 210-15-6

Ag Universal Pressure Test Kit 210-15-7

Required Test Fittings 210-15-8

Diagnostic Adapters Check List 210-15-9

Inch Cap Screw Torque Values 210-15-10

Metric Cap Screw Torque Values 210-15-11

JIC Hydraulic Symbols 210-15-12

Electrical Schematic Symbols 210-15-13

Abbreviations 210-15-14

Group 20—Test Equipment Calibration

JDG282 Temperature Gauge Check 210-20-1

Nuday and OTC Flow Meters 210-20-1


Pressure Gauge Calibration Checker 210-20-5

PREVENT MACHINE RUNAWAY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

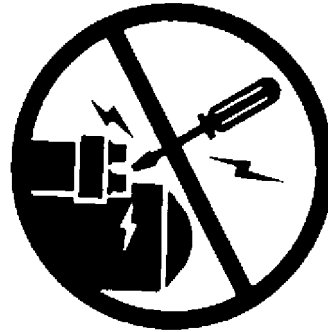

DX,BYPAS1 -19-04JUN90

210
05
1
-UN-11JAN89
TS177

HANDLE FLUIDS SAFELY—AVOID FIRES

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.



DX,FLAME -19-04JUN90

-UN-23AUG88
TS227

PREVENT BATTERY EXPLOSIONS

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).



DX,SPARKS -19-04JUN90

-UN-23AUG88
TS204


210
05
2

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

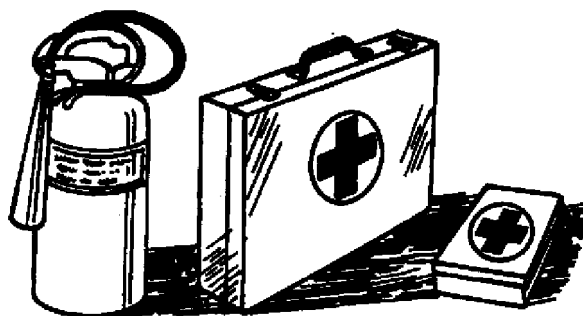

DX,FIRE2 -19-04JUN90

TS291 -UN-23AUG88

PREVENT ACID BURNS

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:


1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 10—15 minutes. Get medical attention immediately.

If acid is swallowed:

1. Drink large amounts of water or milk.
2. Then drink milk of magnesia, beaten eggs, or vegetable oil.
3. Get medical attention immediately.

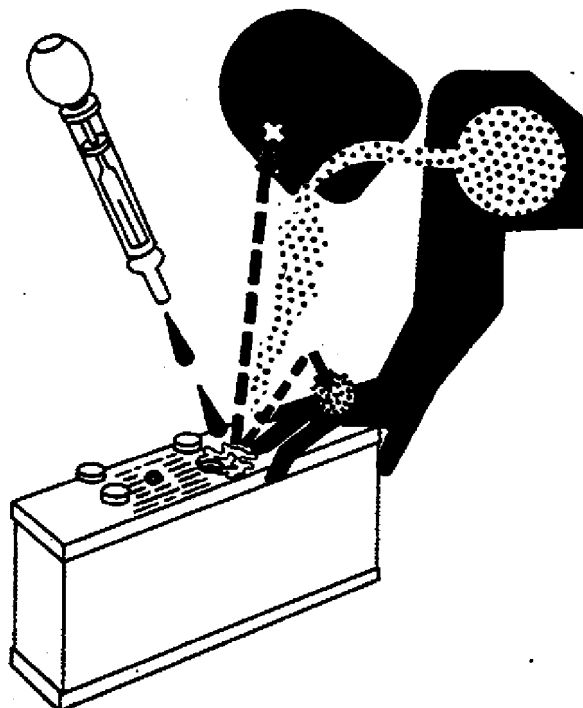


DX,POISON -19-04JUN90

TS203 -UN-23AUG88

SERVICE COOLING SYSTEM SAFELY

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

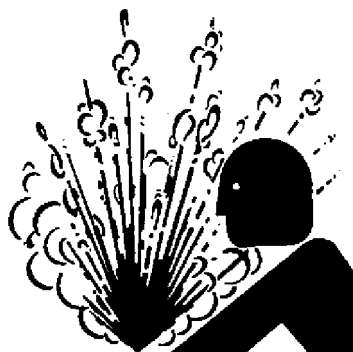

O53,RCAP -19-26JAN90

TS281 -UN-23AUG68

210
05
3

HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)



DX,MSDS,NA -19-15MAR91

TS1132 -UN-26NOV90

210
05
4


AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

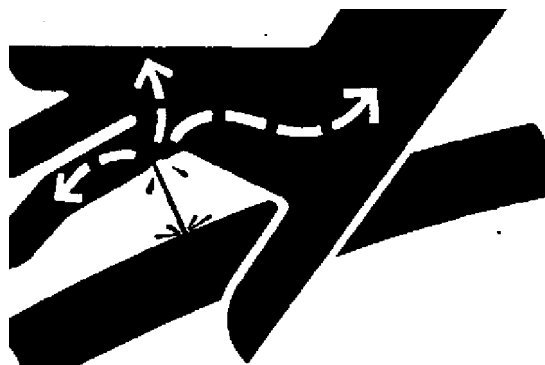


X9811 -JUN-23AUG88

DX,FLUID -19-09AUG91

PARK MACHINE SAFELY

Before working on the machine:

- Lower all equipment to the ground.
- Stop the engine and remove the key.
- Disconnect the battery ground strap.
- Hang a "DO NOT OPERATE" tag in operator station.

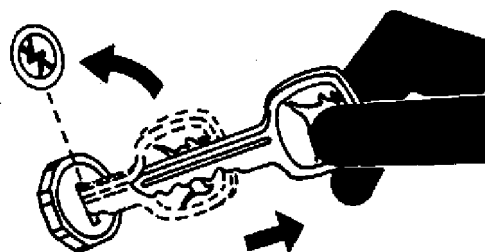


TS230 -JUN-24MAY88

DX,PARK -19-04JUN90

SUPPORT MACHINE PROPERLY

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

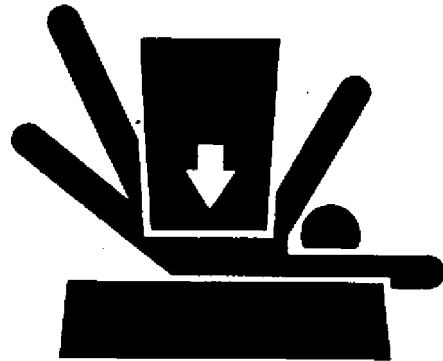

DX,LOWER -19-04JUN90

210
05
-UN-23AUG88
TS229


WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

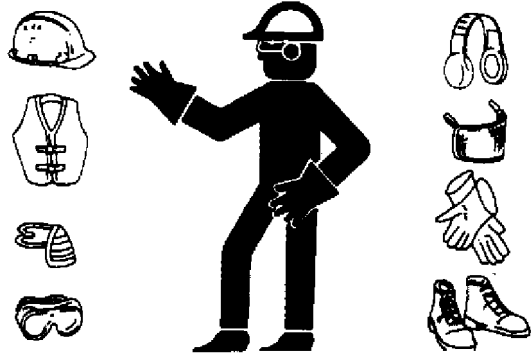


DX,WEAR -19-10SEP90

-UN-23AUG88
TS206

SERVICE MACHINES SAFELY

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

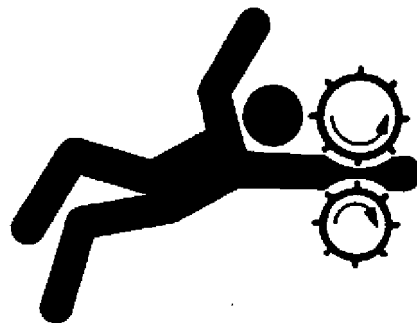

DX,LOOSE -19-04JUN90


-UN-23AUG88
TS228

210
05
6

WORK IN VENTILATED AREA

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

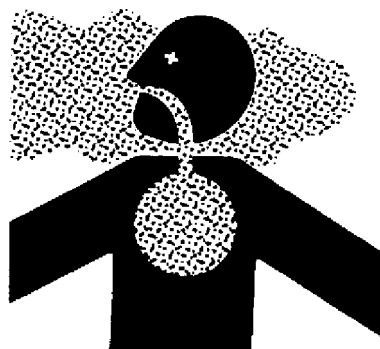


DX,AIR -19-04JUN90

TS220 -UN-23AUG88

WORK IN CLEAN AREA

Before starting a job:

- Clean work area and machine.
- Make sure you have all necessary tools to do your job.
- Have the right parts on hand.
- Read all instructions thoroughly; do not attempt shortcuts.

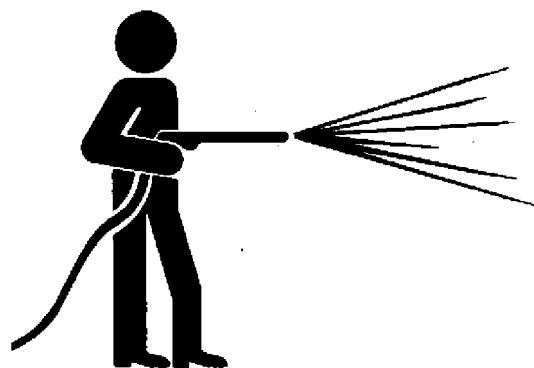

DX,CLEAN -19-04JUN90

T6642EJ -UN-18OCT88

REMOVE PAINT BEFORE WELDING OR HEATING


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

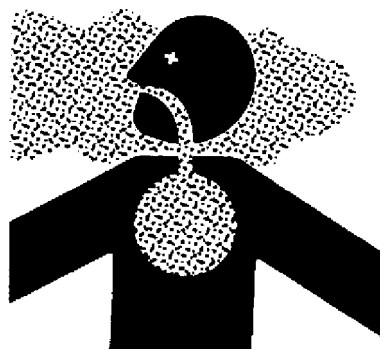

DX,PAINT -19-04JUN90

TS220 -UN-23AUG88

AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



DX,TORCH -19-05OCT90

210
05
7
-UN-15MAY90
TS953

ILLUMINATE WORK AREA SAFELY

Illuminate your work area adequately but safely. Use a portable safety light for working inside or under the machine. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.




DX,LIGHT -19-04JUN90

-UN-23AUG88
TS223

REPLACE SAFETY SIGNS

Replace missing or damaged safety signs. See the machine operator's manual for correct safety sign placement.

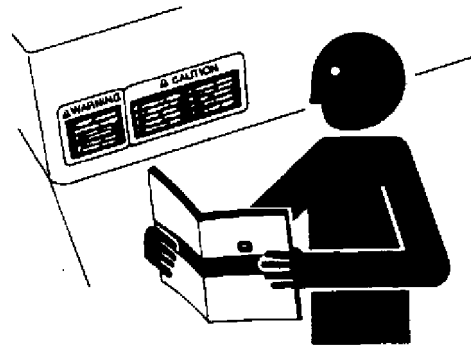


DX,SIGNS1 -19-04JUN90

-UN-23AUG88
TS201

USE PROPER LIFTING EQUIPMENT

Lifting heavy components incorrectly can cause severe injury or machine damage.

Follow recommended procedure for removal and installation of components in the manual.

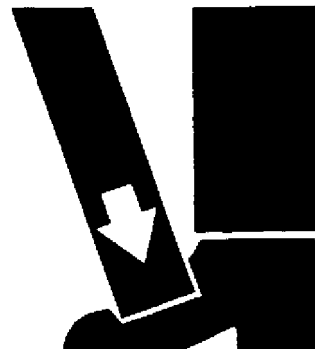

DX,LIFT -19-04JUN90


-UN-23AUG88
TS226

210
05
88

KEEP ROPS INSTALLED PROPERLY

Make certain all parts are reinstalled correctly if the roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to proper torque.

The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. A damaged ROPS should be replaced, not reused.

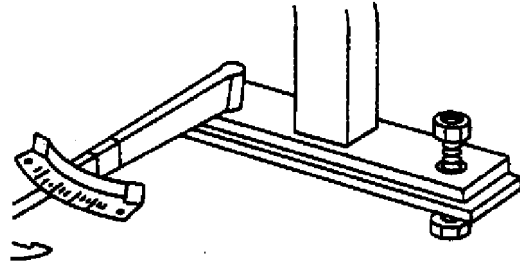

DX,ROPS3 -19-04JUN90

-UN-23AUG88
TS212

SERVICE TIRES SAFELY


Explosive separation of a tire and rim parts can cause serious injury or death.

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job.

Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.

When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims or missing lug bolts and nuts.

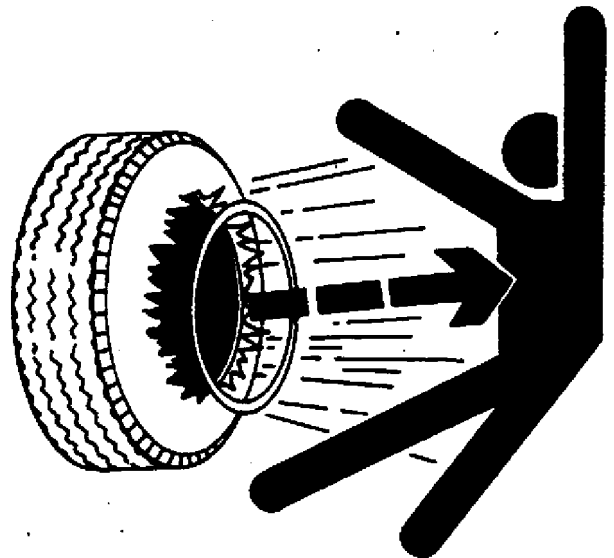

DX,RIM -19-24AUG90

-UN-23AUG88
TS211