


**John Deere
JD740-A Skidder
Grapple Skidder**

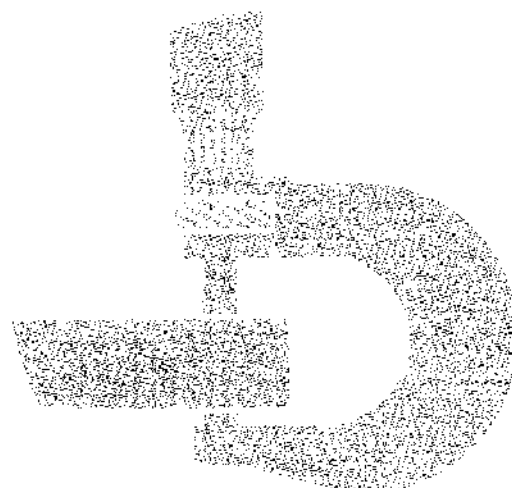

TECHNICAL MANUAL

TM1213
LITHO IN U.S.A. (REVISED)

JD740-A SKIDDER - GRAPPLE SKIDDER

Technical Manual
TM-1213 (Nov-79)

SECTION AND GROUP CONTENTS OF THIS MANUAL

SECTION I - GENERAL INFORMATION

- Group I - Contents, Index and Page List
- Group II - Introduction and Safety Information
- Group III - General Specifications
- Group IV - Predelivery, Delivery and After-Sale Services
- Group V - Lubrication

SECTION 1 - WHEELS

- Group 0110 - Powered Wheels and Fastenings
- Group 0199 - Specifications and Special Tools

SECTION 2 - AXLES AND SUSPENSION SYSTEMS

- Group 0201 - Drive Axle Housing and Support
- Group 0210 - Differential or Bevel Drive
- Group 0225 - Input Drive Shafts and U-Joints
- Group 0250 - Axle Shaft, Bearings, Reduction Gears
- Group 0299 - Specifications and Special Tools

SECTION 3 - TRANSMISSION

- Group 0315 - Controls
- Group 0325 - Input Drive Shafts and U-Joints
- Group 0341 - Housings and Covers
- Group 0342 - Mounting Parts
- Group 0350 - Gears, Shafts, Bearings, and Power Shift Clutch
- Group 0360 - Hydraulic System
- Group 0370 - Clutch Disconnect and Controls
- Group 0399 - Specifications and Special Tools

SECTION 4 - ENGINE

- Group 0400 - Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshaft and Valve Actuating Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block
- Group 0407 - Oiling System
- Group 0408 - Ventilating System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0414 - Intake Manifold
- Group 0416 - Turbocharger
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housings, and Water Piping
- Group 0419 - Oil Cooler
- Group 0420 - Fuel Filter
- Group 0422 - Starting Motor and Fastenings
- Group 0429 - Fan Drive
- Group 0433 - Flywheel, Housing and Fastenings
- Group 0499 - Specifications and Special Tools

SECTION 5 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Cooling Systems
- Group 0515 - Speed Controls
- Group 0520 - Intake System
- Group 0530 - External Exhaust System
- Group 0540 - Mounting Frame
- Group 0560 - External Fuel Supply Systems
- Group 0599 - Specifications and Special Tools

SECTION AND GROUP CONTENTS OF THIS MANUAL—Continued

SECTION 9 - STEERING SYSTEM

- Group 0930 - Emergency Steering
- Group 0960 - Hydraulic System
- Group 0999 - Specifications and Special Tools

SECTION 10 - SERVICE BRAKES

- Group 1011 - Active Elements
- Group 1015 - Controls Linkage
- Group 1060 - Hydraulic System
- Group 1099 - Specifications and Special Tools

SECTION 11 - PARKING-EMERGENCY BRAKES

- Group 1111 - Active Elements
- Group 1115 - Controls Linkage
- Group 1199 - Specifications and Special Tools

SECTION 16 - ELECTRICAL SYSTEMS

- Group 1671 - Batteries, Support and Cables
- Group 1672 - Alternator, Regulator and Charging System Wiring
- Group 1673 - Lighting System
- Group 1674 - Wiring Harness and Switches
- Group 1676 - Instruments and Indicators
- Group 1699 - Specifications and Special Tools

SECTION 17 - FRAME, CHASSIS OR SUPPORTING STRUCTURE

- Group 1740 - Frame Installation
- Group 1746 - Frame Bottom Guards
- Group 1799 - Specifications and Special Tools

SECTION 18 - OPERATOR'S STATION

- Group 1810 - Operator Enclosure
- Group 1821 - Seat and Seat Belt
- Group 1830 - Heating and Air Conditioning

SECTION 19 - SHEET METAL AND STYLING

- Group 1910 - Hood or Engine Enclosure
- Group 1921 - Grille and Grille Housing

The specifications and design information contained in this manual were correct at the time it was printed. It is John Deere's policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice. Wherever applicable, specifications and design information are in accordance with SAE and ICED standards.

SECTION 20 - SAFETY, CONVENIENCE AND MISCELLANEOUS

- Group 2003 - Fire Extinguishers
- Group 2004 - Horn
- Group 2006 - Cigar Lighter

SECTION 21 - MAIN HYDRAULIC SYSTEM

- Group 2160 - Hydraulic System
- Group 2199 - Specifications and Special Tools

SECTION 30 - WINCH

- Group 3015 - Controls Linkage
- Group 3041 - Housing and Mounting Structure
- Group 3050 - Drive and Clutches
- Group 3060 - Hydraulic System
- Group 3099 - Specifications and Special Tools

SECTION 32 - BULLDOZER

- Group 3201 - Blade
- Group 3215 - Controls Linkage
- Group 3260 - Hydraulic System
- Group 3299 - Specifications and Special Tools

SECTION 37 - ARCH OR BOOM

- Group 3740 - Frames
- Group 3799 - Specification and Special Tools

SECTION 38 - GRAPPLE

- Group 3803 - Grapple Mechanism
- Group 3815 - Controls Linkage
- Group 3860 - Hydraulic System
- Group 3899 - Specifications and Special Tools

SECTION 40 - PTO OR WINCH DRIVE

- Group 4025 - Input Drive Shaft
- Group 4099 - Specifications and Special Tools

SECTION 90 - SYSTEM TESTING

- Group 9005 - General Information
- Group 9010 - Engine
- Group 9015 - Electrical System
- Group 9020 - Power Train
- Group 9025 - Hydraulic System (Flow Meter)
- Group 9030 - Miscellaneous Components
- Group 9035 - Specifications and Special Tools

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

ALPHABETICAL INDEX

A

Accelerator, pedal and linkage 0515-4
Accumulator, brake 1060-3
Accumulator, C1, C2 0360-12
Accumulator, emergency steering 0930-3
Accumulator, hydraulic brake 9025-32
Accumulator, hydraulic system 2160-47
Accumulator, system 9025-31
After-sale inspection I-IV-20
Air conditioning 1830-1
Air restriction indicator 1676-2
Alternator 1672-1
Alternator component test 1672-4
Axle and suspension systems 0201-3
Axle housing 0250-2, 0250-4
Axle shaft, bearings, reduction gears 0250-1

B

Batteries 1671-3
Bearing, drive end frame 1672-2
Bearing, slip ring end 1672-3
Bearings, main 0401-1
Bearings, thrust 0401-4
Bevel drive 0210-1
Blade control valve 3260-1
Blade lift control valve 9025-35
Blade lift cylinders 3260-4
Blade tilt control valve 9025-36
Blade tilt cylinder 3260-8
Blade, trail 3201-3
Boom and arch cylinders 3860-19
Boom, grapple skidder 3740-8
Brake accumulator 1060-3
Brake accumulator, hydraulic 9025-32
Brake caliper 1111-5
Brake, parking-emergency 1111-3
Brake valve 1060-1
Brake valve, hydraulic 9025-33
Bypass valve 0419-2

C

Cab 1810-5
Cab door 1810-8
Cab liners 1810-6
Cable, shut-off 0515-1
Camshaft 0402-1, 0402-3
Canopy 1810-3
Canopy with operator protection 1810-12
Check valve assembly 2160-51
Cigar lighter 2006-1
Circuit breakers 1674-2
Circuit protectors 1674-2

Clutch carrier assembly and elements 0370-1
Clutch disconnect and controls 0370-1
Clutch linkage 0370-7
Clutch pack, transmission 0350-1, 0350-20
Clutch valve linkage, transmission 0315-3
Clutch valve, transmission 0360-8
Cold weather starting aids 0505-3
Cone point adjustment 0210-23
Connecting rods and pistons 0403-1
Control linkage, winch 3015-3
Control valve shift linkage, transmission 0315-5
Control valve, transmission 0360-4
Controls linkage, bulldozer 3215-1
Controls linkage, grapple 3815-1
Controls, transmission 0315-4
Cooler, oil 0419-1
Cooling systems 0510-1
Countershaft, powershaft 0350-42
Crankshaft 0401-1, 0401-5
Crankshaft gear 0401-4
Crankshaft rear oil sleeve, housing, and
wear sleeve 0401-4, 0401-6
Crossover relief valve 3860-14, 9025-42
Cylinder, blade tilt 3260-8
Cylinder block 0404-1, 0404-7
Cylinder, grapple 3860-23
Cylinder head and valves 0409-1
Cylinder liner 0404-2, 0404-7
Cylinders, blade lift 3260-4
Cylinders, boom and arch 3860-19
Cylinders, steering 0960-10

D

Damper, vibration 0401-8
Delivery service I-IV-20
Differential 0210-1
Differential backlash 0210-25
Differential case and cover 0210-1
Differential case replacement 0210-3
Differential drive shaft, front 0225-1
Differential, front 0210-1
Differential housing with lock 0210-4
Differential lock valve 0210-32, 9025-26
Differential preload 0210-25
Differential, rear 0210-1
Differential spiral bevel pinion shaft and
quill 0210-16
Door, cab 1810-8
Drive axle housing and support 0201-3
Drive end frame bearing 1672-2
Drive, fan 0429-1
Drive shaft, rear differential 0225-2

Drive support, fan	0429-3
Drive, winch	0350-44
Driven shaft gear and bearings	3050-11

E

Electrical system testing:	
Diagnosing malfunctions	9015-7
Introduction	9015-1
Precautions	9015-9
Preliminary testing and adjustment	9015-10
Visual inspection	9015-10
Emergency steering	0930-3
Emergency steering accumulator	0930-3
Emergency steering low pressure warning switch	0930-6
Engine	0400-1
Engine auxiliary systems	0505-3
Engine coolant heater	0505-5
Engine coolant temperature gauge	1676-3
Engine disconnect clutch-to-transmission drive shaft	0325-1
Engine frame	1740-4
Engine installation	0400-6
Engine oil pressure gauge	1676-2
Engine removal	0400-3
Engine side shields	1910-4
Engine system testing:	
Diagnosing malfunctions	9010-9
General information	9010-7
Introduction	9010-1
Testing and adjustment	9010-14
Visual inspection	9010-12
Equipment frame	1740-6
Exhaust manifold	0410-1
Exhaust system, external	0530-1
External exhaust system	0530-1
External fuel supply systems	0560-1
Extinguisher, hand-held fire	2003-3

F

Fan and fan shroud	0510-5
Fan belt tightener	0429-1
Fan drive	0429-1
Fan drive support	0429-3
Filter, fuel	0420-1
Filter, system return	2160-42
Filter, transmission suction screen	0350-1
Fire extinguisher	2003-1
Fire suppression system	2003-5
Flywheel, housing and fastenings	0433-1
Frame bottom guards	1746-1
Frame, engine	1740-4
Frame, equipment	1740-6
Frame installation	1740-3
Frame locking bar	1740-7

Frame, mounting	0540-1
Frames, cable skidder	3740-3
Front differential	0210-1
Front differential and axle assembly	0201-4, 0210-29
Front differential drive shaft	0225-1
Front mounts	0342-1
Front oil seal	0401-5, 0401-7
Front oscillating support	0210-20
Fuel filter	0420-1
Fuel injection nozzles	0413-9
Fuel injection pump	0413-5
Fuel injection system	0413-1
Fuel supply systems, external	0560-1
Fuel transfer pump	0413-1

G

Gear, crankshaft	0401-4
Gears, shaft, bearing and power shift clutch, transmission	0350-1
General specifications	I-III-1
Grapple arch valve	9025-37
Grapple boom valve	9025-38
Grapple control valve	3860-1, 9025-39
Grapple controls linkage	3815-1
Grapple cylinder	3860-23
Grapple head	3803-3
Grapple mechanism	3803-3
Grapple rotate motor	9025-40
Grapple rotate valve	9025-39
Grille	1921-1
Guides, valve	0409-3

H

Hand-held fire extinguisher	2003-3
Hand-operated speed control	0515-2
Heater	1830-1
Heater, engine coolant	0505-5
Hood	1910-3
Horn	2004-1
Housing and cover, transmission	0341-1
Housing and mounting structure, winch	3041-1
Housing, pump	2160-9
Hydraulic charge pump	2160-3
Hydraulic fitting installation and service recommendations	2160-37, 3860-27
Hydraulic pump	2160-8, 2160-19
Hydraulic pump, main	9025-17
Hydraulic reservoir	2160-40
Hydraulic steering system	0960-1
Hydraulic system accumulator	2160-47
Hydraulic system (flow meter) testing:	
Component location	9025-3
Cycle times	9025-70
Diagnosing malfunctions	9025-63

Hydraulic system (flow meter) testing—Continued:

Hydraulic oil warm-up procedure	9025-6
Main hydraulic system	9025-10
Special procedure	9025-67
Testing and adjustment	9025-71
Transmission hydraulic system	9025-44
Transmission visual inspection	9025-66
Hydraulic system, main	2160-6
Hydraulic system testing	9035-9
Hydraulic system, transmission	9025-44

I

Idler shaft, final drive gears and bearings ..	3050-13
Input drive shaft	4025-3
Input drive shafts and U-joints	0225-1, 0325-1
Input shaft, gear and clutch assembly	3050-5
Instrument panel	1676-1
Instruments and indicators	1676-1
Intake manifold	0414-1
Intake system	0520-1

K

Key switch	1674-3
------------------	--------

L

Lighting system	1673-1
Liner, cylinder	0404-2, 0404-7
Liners, cab	1810-6
Linkage, grapple controls	3815-1
Linkage, parking brake	1115-1
Log arch, cable skidder	3740-3
Log arch, grapple skidder	3740-7
Lubrication	I-V-1

M

Main bearings	0401-1, 0401-5
Main hydraulic pump	9025-17
Main hydraulic system	2160-6
Main winch drive shaft	4025-3
Manifold, exhaust	0410-1
Manifold, intake	0414-1
Manifold, rotary	3860-16
Miscellaneous components testing:	
Log arch	9030-2
Seat	9030-2
Windshield wiper	9030-1
Motor, grapple rotate	9025-40
Motor, rotate	3860-7
Mounting frame	0540-1
Mounting parts, transmission	0342-1
Mounts, front	0342-1
Mounts, rear	0342-1

N

Neutral start switch	1674-4
Nozzles, fuel injection	0413-9

O

Oil cooler	0419-1
Oil filter and housing	0407-1, 0407-2, 0407-5
Oil filter, transmission	0360-13
Oil pressure gauge, engine	1676-2
Oil pressure indicator, transmission	1676-3
Oil pressure regulating valve assembly	9025-48
Oil pump	0407-2
Oil pump, transmission	0360-1, 9025-48
Oil seal, front	0401-5, 0401-7
Oil temperature gauge, transmission	1676-3
Oiling system	0407-1
Orifices, piston cooling	0404-6, 0404-7

P

Parking brake linkage	1115-1
Parking emergency brake	1111-3
Pinion shaft adjustment	0210-24
Piston cooling orifices	0404-6, 0404-7
Planet pinion carrier	0250-2, 0250-4
Planetary pack	0350-27
Power shaft countershaft	0350-42
Power shift transmission	0341-1, 0350-5
Power train system testing:	
Diagnosing malfunctions	9020-14
Introduction	9020-1
Testing and adjustments	9020-17
Transmission test	9020-23
Visual inspection	9020-16
Powered wheels	0110-3
Predelivery service	I-IV-1
Pressure control valve	2160-44, 9025-24
Pump drive and support assembly	2160-35
Pump, fuel injection	0413-5
Pump, fuel transfer	0413-1
Pump housing	2160-9
Pump, hydraulic	2160-8, 2160-19
Pump, hydraulic charge	2160-3
Pump, water	0417-1

R

Radiator	0510-1
Rear differential	0210-1
Rear differential drive shaft	0225-2
Rear mounts	0342-1
Reduction shaft	0350-43
Relief valves	9025-28
Reservoir, hydraulic	2160-40
Rocker arm assembly	0402-3, 0402-5

Rollers, cable skidder	3740-4
Rotary manifold	3860-16
Rotate motor	3860-7

S

Safety	I-II-2
Seat	1821-1
Seat belt	1821-1
Seats, valve	0409-3
Sensors	2003-5
Service brakes	1011-3
Service brake pedal and lock linkage	1015-1
Shaft, reduction	0350-43
Shaft, transmission output	0350-45
Shut-off cable	0515-1
Side shields, engine	1910-4
Slip ring end bearing	1672-3
Solenoid	0422-8
Special tools:	
Alternator, regulator and charging system	
wiring	1699-6
Batteries, support and cables	1699-4
Bulldozers hydraulic system	3299-4
Camshaft and valve actuating means	0499-29
Clutch disconnect and controls	0399-25
Connecting rods and pistons	0499-31
Crankshaft and main bearings	0499-28
Cylinder block	0499-32
Cylinder head and valves	0499-34
Electrical system testing	9035-7
Emergency steering	0999-6
Engine removal and installation	0499-25
Engine system testing	9035-3
Fuel injection system	0499-36
Gears, shafts, bearings and power shift	
clutch	0399-22
Grapple hydraulic system	3899-7
Hydraulic steering system	0999-7
Hydraulic system testing	9035-15
Main hydraulic system	2199-12
Parking brake	1199-1
Powered wheels and fastenings	0199-2
Service brakes hydraulic system	1099-3
Starting motor and fastenings	0499-40
Turbocharger	0499-38
Water pump	0499-39
Winch drive and clutches	3099-7
Specifications:	
Alternator, regulator and charging system	
wiring	1699-1
Axle shaft, bearings, reduction gears	0299-10
Batteries, supports and cables	1699-1
Blade	3299-1
Camshaft and valve actuating means	0499-3

Specifications—Continued:

Clutch disconnect and controls	0399-20
Cold weather starting aids	0599-1
Connecting rods and pistons	0499-5
Cooling systems	0599-1
Crankshaft and main bearings	0499-2
Cylinder block	0499-8
Cylinder head and valves	0499-12
Differential or bevel drive	0299-2
Drive axle housing and support	0299-1
Electrical system testing	9035-5
Engine break-in	0499-1
Engine system testing	9035-1
Exhaust manifold	0499-14
External fuel supply system	0599-3
Fan drive	0499-24
Flywheel, housing and fastenings	0499-24
Frame bottom guards	1799-2
Frame installation	1799-1
Fuel injection system	0499-15
Gears, shafts, bearings and power shift	
clutch	0399-3
Grapple controls linkage	3899-2
Grapple hydraulic system	3899-4
Grapple mechanism	3899-1
Hydraulic steering system	0999-1
Hydraulic system	0399-14
Hydraulic system bulldozers	3299-1
Input drive shaft	4099-1
Input drive shafts and U-joints	0299-9, 0399-1
Instruments and indicators	1699-3
Intake manifold	0499-17
Intake system	0599-2
Lighting system	1699-2
Log arch	3799-1
Main hydraulic system	2199-1
Miscellaneous components testing	9035-17
Mounting frame	0599-3
Mounting parts	0399-2
Oil cooler	0499-21
Oiling system	0499-10
Parking brake	1199-1
Powered wheels and fastenings	0199-1
Service brakes hydraulic system	1099-1
Speed controls	0599-2
Starting motor and fastenings	0499-22
Thermostats, housings and water piping	0499-20
Turbocharger	0499-18
Water pump	0499-19
Winch drive and clutches	3099-2
Winch housing and mounting structure	3099-1
Winch hydraulic system	3099-6
Wiring harness and switches	1699-2
Specifications, general	I-III-1

Speed control, hand-operated	0515-2
Speed controls	0515-1
Start circuit relay	1674-3
Start switch	1674-3
Starting aid adapter, line and nozzle	0505-4
Starting fluid system	0505-4
Starting motor and fastenings	0422-1
Steering cylinders	0960-10
Steering, emergency	0930-3
Steering system	0930-3
Steering valve	0960-1, 9025-8
Storage	I-IV-1
Stroke control valve	2160-8, 2160-19
Stroke control valve assembly [98.3 cm ³ (6 in. ³) pump]	9025-20
Surge relief valve	9025-43
System accumulator	9025-31
System return filters	2160-42
System testing	9005-3

T

Thermostats, housings and water piping	0418-1
Thrust bearings	0401-4
Tilt control valve	3260-2
Tooth bearing pattern	0210-26
Trail blade	3201-3
Transmission assembly, power shift	0350-5
Transmission case and clutch housing	0341-4, 0350-15
Transmission clutch pack	0350-1, 0350-20
Transmission clutch valve	0360-8
Transmission clutch valve linkage	0315-3
Transmission control valve	0360-4
Transmission control valve assembly	9025-48
Transmission control valve shift linkage	0315-5
Transmission controls	0315-4
Transmission gears, shafts, bearing and power shift clutch	0350-1
Transmission housings and covers	0341-1
Transmission hydraulic control system operation	9025-50
Transmission hydraulic system	9025-44
Transmission mounting parts	0342-1
Transmission oil cooler	0360-16
Transmission oil filter	0360-13
Transmission oil pressure indicator	1676-3
Transmission oil pressure regulating valve	0360-10
Transmission oil pump	0360-1
Transmission oil pump, hydraulic	9025-48
Transmission oil temperature gauge	1676-3
Transmission output shaft	0350-45
Transmission, power-shift	0341-1
Transmission suction screen filter	0350-1
Tubes and nozzles, fire suppression	2003-7
Turbocharger	0416-1

V

Valve, blade control	3260-1
Valve, blade lift control	9025-35
Valve, blade tilt control	9025-36
Valve, brake	1060-1, 9025-33
Valve, bypass	0419-2
Valve, crossover relief	3860-14, 9025-42
Valve, differential lock	0210-32, 9025-26
Valve, grapple arch	9025-37
Valve, grapple boom	9025-38
Valve, grapple control	9025-39
Valve, grapple rotate	9025-39
Valve guides	0409-3
Valve, pressure control	2160-44, 9025-24
Valve seats	0409-3
Valve, steering	0960-1, 9025-28
Valve, stroke control	2160-8, 2160-19
Valve, surge relief	9025-43
Valve, tilt control	3260-2
Valve, transmission oil pressure regulating	0360-10
Valve, winch control	3060-1
Valve, winch pressure reducing	3060-4
Valves, relief	9025-28
Ventilating system	0408-1
Vibration damper	0401-8

W

Warning switch, emergency steering low pressure	0930-6
Water pump	0417-1
Wheels, powered	0110-3
Winch control linkage	3015-3
Winch control valve	3060-1, 9025-59
Winch drive	0350-44
Winch drive shaft, main	4025-3
Winch housing and mounting structure	3041-1
Winch housing cover and brake assembly	3050-1
Winch pressure reducing valve	3060-4
Windows	1810-7
Windshield	1810-7
Windshield wiper	1810-10
Wiring harness and switches	1674-1

COMPLETE PAGE LISTING WITH LATEST DATE LINES

I-I-1,2	(Nov-79)	2-0201-1,2	(Nov-79)	3-0350-1,2	(Nov-79)
I-I-3,4	(Nov-79)	2-0201-3,4	(Nov-79)	3-0350-3,4	(Nov-79)
I-I-5,6	(Nov-79)	2-0201-5,6	(Nov-79)	3-0350-5,6	(Nov-79)
I-I-7,8	(Nov-79)	2-0210-1,2	(Nov-79)	3-0350-7,8	(Nov-79)
I-I-9,10	(Nov-79)	2-0210-3,4	(Nov-79)	3-0350-9,10	(Nov-79)
I-I-11,12	(Nov-79)	2-0210-5,6	(Nov-79)	3-0350-11,12	(Nov-79)
I-II-1,2	(Nov-79)	2-0210-7,8	(Nov-79)	3-0350-13,14	(Nov-79)
I-II-3,4	(Nov-79)	2-0210-9,10	(Nov-79)	3-0350-15,16	(Nov-79)
I-II-5,6	(Nov-79)	2-0210-11,12	(Nov-79)	3-0350-17,18	(Nov-79)
I-II-7,8	(Nov-79)	2-0210-13,14	(Nov-79)	3-0350-19,20	(Nov-79)
I-III-1,2	(Nov-79)	2-0210-15,16	(Nov-79)	3-0350-21,22	(Nov-79)
I-III-3,4	(Nov-79)	2-0210-17,18	(Nov-79)	3-0350-23,24	(Nov-79)
I-III-5,6	(Nov-79)	2-0210-19,20	(Nov-79)	3-0350-25,26	(Nov-79)
I-IV-1,2	(Nov-79)	2-0210-21,22	(Nov-79)	3-0350-27,28	(Nov-79)
I-IV-3,4	(Nov-79)	2-0210-23,24	(Nov-79)	3-0350-29,30	(Nov-79)
I-IV-5,6	(Nov-79)	2-0210-25,26	(Nov-79)	3-0350-31,32	(Nov-79)
I-IV-7,8	(Nov-79)	2-0210-27,28	(Nov-79)	3-0350-33,34	(Nov-79)
I-IV-9,10	(Nov-79)	2-0210-29,30	(Nov-79)	3-0350-35,36	(Nov-79)
I-IV-11,12	(Nov-79)	2-0210-31,32	(Nov-79)	3-0350-37,38	(Nov-79)
I-IV-13,14	(Nov-79)	2-0210-33,34	(Nov-79)	3-0350-39,40	(Nov-79)
I-IV-15,16	(Nov-79)	2-0225-1,2	(Nov-79)	3-0350-41,42	(Nov-79)
I-IV-17,18	(Nov-79)	2-0225-3,4	(Nov-79)	3-0350-43,44	(Nov-79)
I-IV-19,20	(Nov-79)	2-0250-1,2	(Nov-79)	3-0350-45,46	(Nov-79)
I-IV-21,22	(Nov-79)	2-0250-3,4	(Nov-79)	3-0350-47,48	(Nov-79)
I-IV-23,24	(Nov-79)	2-0250-5,6	(Nov-79)	3-0350-49,50	(Nov-79)
I-IV-25,26	(Nov-79)	2-0299-1,2	(Nov-79)	3-0350-51,52	(Nov-79)
I-IV-27,28	(Nov-79)	2-0299-3,4	(Nov-79)	3-0350-53,54	(Nov-79)
I-IV-29,30	(Nov-79)	2-0299-5,6	(Nov-79)	3-0350-55,56	(Nov-79)
I-IV-31,32	(Nov-79)	2-0299-7,8	(Nov-79)	3-0350-57,58	(Nov-79)
I-IV-33,34	(Nov-79)	2-0299-9,10	(Nov-79)	3-0350-59,60	(Nov-79)
I-IV-35,36	(Nov-79)			3-0360-1,2	(Nov-79)
I-IV-37,38	(Nov-79)	3-0315-1,2	(Nov-79)	3-0360-3,4	(Nov-79)
I-IV-39,40	(Nov-79)	3-0315-3,4	(Nov-79)	3-0360-5,6	(Nov-79)
I-V-1,2	(Nov-79)	3-0315-5,6	(Nov-79)	3-0360-7,8	(Nov-79)
I-V-3,4	(Nov-79)	3-0325-1,2	(Nov-79)	3-0360-9,10	(Nov-79)
		3-0341-1,2	(Nov-79)	3-0360-11,12	(Nov-79)
1-0110-1,2	(Nov-79)	3-0341-3,4	(Nov-79)	3-0360-13,14	(Nov-79)
1-0110-3,4	(Nov-79)	3-0341-5,6	(Nov-79)	3-0360-15,16	(Nov-79)
1-0199-1,2	(Nov-79)	3-0342-1,2	(Nov-79)	3-0370-1,2	(Nov-79)
				3-0370-3,4	(Nov-79)
				3-0370-5,6	(Nov-79)
				3-0370-7,8	(Nov-79)

COMPLETE PAGE LISTING—Continued

3-0399-1,2	(Nov-79)	4-0413-1,2	(Nov-79)	4-0499-25,26	(Nov-79)
3-0399-3,4	(Nov-79)	4-0413-3,4	(Nov-79)	4-0499-27,28	(Nov-79)
3-0399-5,6	(Nov-79)	4-0413-5,6	(Nov-79)	4-0499-29,30	(Nov-79)
3-0399-7,8	(Nov-79)	4-0413-7,8	(Nov-79)	4-0499-31,32	(Nov-79)
3-0399-9,10	(Nov-79)	4-0413-9,10	(Nov-79)	4-0499-33,34	(Nov-79)
3-0399-11,12	(Nov-79)	4-0413-11,12	(Nov-79)	4-0499-35,36	(Nov-79)
3-0399-13,14	(Nov-79)	4-0413-13,14	(Nov-79)	4-0499-37,38	(Nov-79)
3-0399-15,16	(Nov-79)	4-0413-15,16	(Nov-79)	4-0499-39,40	(Nov-79)
3-0399-17,18	(Nov-79)	4-0413-17,18	(Nov-79)	4-0499-41,42	(Nov-79)
3-0399-19,20	(Nov-79)	4-0413-19,20	(Nov-79)		
3-0399-21,22	(Nov-79)	4-0414-1,2	(Nov-79)	5-0505-1,2	(Nov-79)
3-0399-23,24	(Nov-79)	4-0414-3,4	(Nov-79)	5-0505-3,4	(Nov-79)
3-0399-25,26	(Nov-79)	4-0416-1,2	(Nov-79)	5-0505-5,6	(Nov-79)
		4-0416-3,4	(Nov-79)	5-0510-1,2	(Nov-79)
4-0400-1,2	(Nov-79)	4-0416-5,6	(Nov-79)	5-0510-3,4	(Nov-79)
4-0400-3,4	(Nov-79)	4-0416-7,8	(Nov-79)	5-0510-5,6	(Nov-79)
4-0400-5,6	(Nov-79)	4-0417-1,2	(Nov-79)	5-0515-1,2	(Nov-79)
4-0401-1,2	(Nov-79)	4-0417-3,4	(Nov-79)	5-0515-3,4	(Nov-79)
4-0401-3,4	(Nov-79)	4-0417-5,6	(Nov-79)	5-0515-5,6	(Nov-79)
4-0401-5,6	(Nov-79)	4-0417-7,8	(Nov-79)	5-0520-1,2	(Nov-79)
4-0401-7,8	(Nov-79)	4-0418-1,2	(Nov-79)	5-0530-1,2	(Nov-79)
4-0402-1,2	(Nov-79)	4-0419-1,2	(Nov-79)	5-0540-1,2	(Nov-79)
4-0402-3,4	(Nov-79)	4-0420-1,2	(Nov-79)	5-0560-1,2	(Nov-79)
4-0402-5,6	(Nov-79)	4-0422-1,2	(Nov-79)	5-0599-1,2	(Nov-79)
4-0402-7,8	(Nov-79)	4-0422-3,4	(Nov-79)	5-0599-3,4	(Nov-79)
4-0403-1,2	(Nov-79)	4-0422-5,6	(Nov-79)		
4-0403-3,4	(Nov-79)	4-0422-7,8	(Nov-79)	9-0930-1,2	(Nov-79)
4-0403-5,6	(Nov-79)	4-0422-9,10	(Nov-79)	9-0930-3,4	(Nov-79)
4-0403-7,8	(Nov-79)	4-0429-1,2	(Nov-79)	9-0930-5,6	(Nov-79)
4-0403-9,10	(Nov-79)	4-0429-3,4	(Nov-79)	9-0960-1,2	(Nov-79)
4-0404-1,2	(Nov-79)	4-0433-1,2	(Nov-79)	9-0960-3,4	(Nov-79)
4-0404-3,4	(Nov-79)	4-0499-1,2	(Nov-79)	9-0960-5,6	(Nov-79)
4-0404-5,6	(Nov-79)	4-0499-3,4	(Nov-79)	9-0960-7,8	(Nov-79)
4-0404-7,8	(Nov-79)	4-0499-5,6	(Nov-79)	9-0960-9,10	(Nov-79)
4-0404-9,10	(Nov-79)	4-0499-7,8	(Nov-79)	9-0960-11,12	(Nov-79)
4-0407-1,2	(Nov-79)	4-0499-9,10	(Nov-79)	9-0999-1,2	(Nov-79)
4-0407-3,4	(Nov-79)	4-0499-11,12	(Nov-79)	9-0999-3,4	(Nov-79)
4-0407-5,6	(Nov-79)	4-0499-13,14	(Nov-79)	9-0999-5,6	(Nov-79)
4-0408-1,2	(Nov-79)	4-0499-15,16	(Nov-79)	9-0999-7,8	(Nov-79)
4-0409-1,2	(Nov-79)	4-0499-17,18	(Nov-79)		
4-0409-3,4	(Nov-79)	4-0499-19,20	(Nov-79)		
4-0409-5,6	(Nov-79)	4-0499-21,22	(Nov-79)		
4-0410-1,2	(Nov-79)	4-0499-23,24	(Nov-79)		

COMPLETE PAGE LISTING—Continued


10-1011-1,2	(Nov-79)	18-1810-1,2	(Nov-79)	21-2160-33,34	(Nov-79)
10-1011-3,4	(Nov-79)	18-1810-3,4	(Nov-79)	21-2160-35,36	(Nov-79)
10-1015-1,2	(Nov-79)	18-1810-5,6	(Nov-79)	21-2160-37,38	(Nov-79)
10-1060-1,2	(Nov-79)	18-1810-7,8	(Nov-79)	21-2160-39,40	(Nov-79)
10-1060-3,4	(Nov-79)	18-1810-9,10	(Nov-79)	21-2160-41,42	(Nov-79)
10-1060-5,6	(Nov-79)	18-1810-11,12	(Nov-79)	21-2160-43,44	(Nov-79)
10-1099-1,2	(Nov-79)	18-1810-13,14	(Nov-79)	21-2160-45,46	(Nov-79)
10-1099-3,4	(Nov-79)	18-1821-1,2	(Nov-79)	21-2160-47,48	(Nov-79)
		18-1830-1,2	(Nov-79)	21-2160-49,50	(Nov-79)
11-1111-1,2	(Nov-79)			21-2160-51,52	(Nov-79)
11-1111-3,4	(Nov-79)	19-1910-1,2	(Nov-79)	21-2199-1,2	(Nov-79)
11-1111-5,6	(Nov-79)	19-1910-3,4	(Nov-79)	21-2199-3,4	(Nov-79)
11-1115-1,2	(Nov-79)	19-1921-1,2	(Nov-79)	21-2199-5,6	(Nov-79)
11-1199-1,2	(Nov-79)			21-2199-7,8	(Nov-79)
		20-2003-1,2	(Nov-79)	21-2199-9,10	(Nov-79)
16-1671-1,2	(Nov-79)	20-2003-3,4	(Nov-79)	21-2199-11,12	(Nov-79)
16-1671-3,4	(Nov-79)	20-2003-5,6	(Nov-79)	21-2199-13,14	(Nov-79)
16-1671-5,6	(Nov-79)	20-2003-7,8	(Nov-79)	21-2199-15,16	(Nov-79)
16-1671-7,8	(Nov-79)	20-2003-9,10	(Nov-79)		
16-1672-1,2	(Nov-79)	20-2003-11,12	(Nov-79)	30-3015-1,2	(Nov-79)
16-1672-3,4	(Nov-79)	20-2004-1,2	(Nov-79)	30-3015-3,4	(Nov-79)
16-1672-5,6	(Nov-79)	20-2006-1,2	(Nov-79)	30-3041-1,2	(Nov-79)
16-1672-7,8	(Nov-79)			30-3041-3,4	(Nov-79)
16-1673-1,2	(Nov-79)	21-2160-1,2	(Nov-79)	30-3050-1,2	(Nov-79)
16-1674-1,2	(Nov-79)	21-2160-3,4	(Nov-79)	30-3050-3,4	(Nov-79)
16-1674-3,4	(Nov-79)	21-2160-5,6	(Nov-79)	30-3050-5,6	(Nov-79)
16-1676-1,2	(Nov-79)	21-2160-7,8	(Nov-79)	30-3050-7,8	(Nov-79)
16-1676-3,4	(Nov-79)	21-2160-9,10	(Nov-79)	30-3050-9,10	(Nov-79)
16-1676-5,6	(Nov-79)	21-2160-11,12	(Nov-79)	30-3050-11,12	(Nov-79)
16-1699-1,2	(Nov-79)	21-2160-13,14	(Nov-79)	30-3050-13,14	(Nov-79)
16-1699-3,4	(Nov-79)	21-2160-15,16	(Nov-79)	30-3050-15,16	(Nov-79)
16-1699-5,6	(Nov-79)	21-2160-17,18	(Nov-79)	30-3050-17,18	(Nov-79)
		21-2160-19,20	(Nov-79)	30-3060-1,2	(Nov-79)
17-1740-1,2	(Nov-79)	21-2160-21,22	(Nov-79)	30-3060-3,4	(Nov-79)
17-1740-3,4	(Nov-79)	21-2160-23,24	(Nov-79)	30-3060-5,6	(Nov-79)
17-1740-5,6	(Nov-79)	21-2160-25,26	(Nov-79)	30-3099-1,2	(Nov-79)
17-1740-7,8	(Nov-79)	21-2160-27,28	(Nov-79)	30-3099-3,4	(Nov-79)
17-1746-1,2	(Nov-79)	21-2160-29,30	(Nov-79)	30-3099-5,6	(Nov-79)
17-1799-1,2	(Nov-79)	21-2160-31,32	(Nov-79)	30-3099-7,8	(Nov-79)
				30-3099-9,10	(Nov-79)

COMPLETE PAGE LISTING—Continued

32-3201-1,2	(Nov-79)	90-9005-1,2	(Nov-79)	90-9025-23,24	(Nov-79)
32-3201-3,4	(Nov-79)	90-9005-3,4	(Nov-79)	90-9025-25,26	(Nov-79)
32-3215-1,2	(Nov-79)	90-9010-1,2	(Nov-79)	90-9025-27,28	(Nov-79)
32-3260-1,2	(Nov-79)	90-9010-3,4	(Nov-79)	90-9025-29,30	(Nov-79)
32-3260-3,4	(Nov-79)	90-9010-5,6	(Nov-79)	90-9025-31,32	(Nov-79)
32-3260-5,6	(Nov-79)	90-9010-7,8	(Nov-79)	90-9025-33,34	(Nov-79)
32-3260-7,8	(Nov-79)	90-9010-9,10	(Nov-79)	90-9025-35,36	(Nov-79)
32-3260-9,10	(Nov-79)	90-9010-11,12	(Nov-79)	90-9025-37,38	(Nov-79)
32-3299-1,2	(Nov-79)	90-9010-13,14	(Nov-79)	90-9025-39,40	(Nov-79)
32-3299-3,4	(Nov-79)	90-9010-15,16	(Nov-79)	90-9025-41,42	(Nov-79)
		90-9010-17,18	(Nov-79)	90-9025-43,44	(Nov-79)
37-3740-1,2	(Nov-79)	90-9010-19,20	(Nov-79)	90-9025-45,46	(Nov-79)
37-3740-3,4	(Nov-79)	90-9015-1,2	(Nov-79)	90-9025-47,48	(Nov-79)
37-3740-5,6	(Nov-79)	90-9015-3,4	(Nov-79)	90-9025-49,50	(Nov-79)
37-3740-7,8	(Nov-79)	90-9015-5,6	(Nov-79)	90-9025-51,52	(Nov-79)
37-3740-9,10	(Nov-79)	90-9015-7,8	(Nov-79)	90-9025-53,54	(Nov-79)
37-3740-11,12	(Nov-79)	90-9015-9,10	(Nov-79)	90-9025-55,56	(Nov-79)
37-3799-1,2	(Nov-79)	90-9015-11,12	(Nov-79)	90-9025-57,58	(Nov-79)
		90-9015-13,14	(Nov-79)	90-9025-59,60	(Nov-79)
38-3803-1,2	(Nov-79)	90-9015-15,16	(Nov-79)	90-9025-61,62	(Nov-79)
38-3803-3,4	(Nov-79)	90-9015-17,18	(Nov-79)	90-9025-63,64	(Nov-79)
38-3803-5,6	(Nov-79)	90-9015-19,20	(Nov-79)	90-9025-65,66	(Nov-79)
38-3803-7,8	(Nov-79)	90-9015-21,22	(Nov-79)	90-9025-67,68	(Nov-79)
38-3815-1,2	(Nov-79)	90-9015-23,24	(Nov-79)	90-9025-69,70	(Nov-79)
38-3860-1,2	(Nov-79)	90-9015-25,26	(Nov-79)	90-9025-71,72	(Nov-79)
38-3860-3,4	(Nov-79)	90-9015-27,28	(Nov-79)	90-9025-73,74	(Nov-79)
38-3860-5,6	(Nov-79)	90-9020-1,2	(Nov-79)	90-9025-75,76	(Nov-79)
38-3860-7,8	(Nov-79)	90-9020-3,4	(Nov-79)	90-9025-77,78	(Nov-79)
38-3860-9,10	(Nov-79)	90-9020-5,6	(Nov-79)	90-9025-79,80	(Nov-79)
38-3860-11,12	(Nov-79)	90-9020-7,8	(Nov-79)	90-9025-81,82	(Nov-79)
38-3860-13,14	(Nov-79)	90-9020-9,10	(Nov-79)	90-9025-83,84	(Nov-79)
38-3860-15,16	(Nov-79)	90-9020-11,12	(Nov-79)	90-9025-85,86	(Nov-79)
38-3860-17,18	(Nov-79)	90-9020-13,14	(Nov-79)	90-9025-87,88	(Nov-79)
38-3860-19,20	(Nov-79)	90-9020-15,16	(Nov-79)	90-9025-89,90	(Nov-79)
38-3860-21,22	(Nov-79)	90-9020-17,18	(Nov-79)	90-9025-91,92	(Nov-79)
38-3860-23,24	(Nov-79)	90-9020-19,20	(Nov-79)	90-9025-93,94	(Nov-79)
38-3860-25,26	(Nov-79)	90-9020-21,22	(Nov-79)	90-9025-95,96	(Nov-79)
38-3860-27,28	(Nov-79)	90-9020-23,24	(Nov-79)	90-9025-97,98	(Nov-79)
38-3860-29,30	(Nov-79)	90-9025-1,2	(Nov-79)	90-9025-99,100	(Nov-79)
38-3899-1,2	(Nov-79)	90-9025-3,4	(Nov-79)	90-9025-101,102	(Nov-79)
38-3899-3,4	(Nov-79)	90-9025-5,6	(Nov-79)	90-9025-103,104	(Nov-79)
38-3899-5,6	(Nov-79)	90-9025-7,8	(Nov-79)	90-9025-105,106	(Nov-79)
38-3899-7,8	(Nov-79)	90-9025-9,10	(Nov-79)	90-9030-1,2	(Nov-79)
		90-9025-11,12	(Nov-79)	90-9035-1,2	(Nov-79)
40-4025-1,2	(Nov-79)	90-9025-13,14	(Nov-79)	90-9035-3,4	(Nov-79)
40-4025-3,4	(Nov-79)	90-9025-15,16	(Nov-79)	90-9035-5,6	(Nov-79)
40-4099-1,2	(Nov-79)	90-9025-17,18	(Nov-79)	90-9035-7,8	(Nov-79)
		90-9025-19,20	(Nov-79)	90-9035-9,10	(Nov-79)
		90-9025-21,22	(Nov-79)	90-9035-11,12	(Nov-79)
				90-9035-13,14	(Nov-79)
				90-9035-15,16	(Nov-79)
				90-9035-17,18	(Nov-79)

Group II INTRODUCTION AND SAFETY INFORMATION

INTRODUCTION

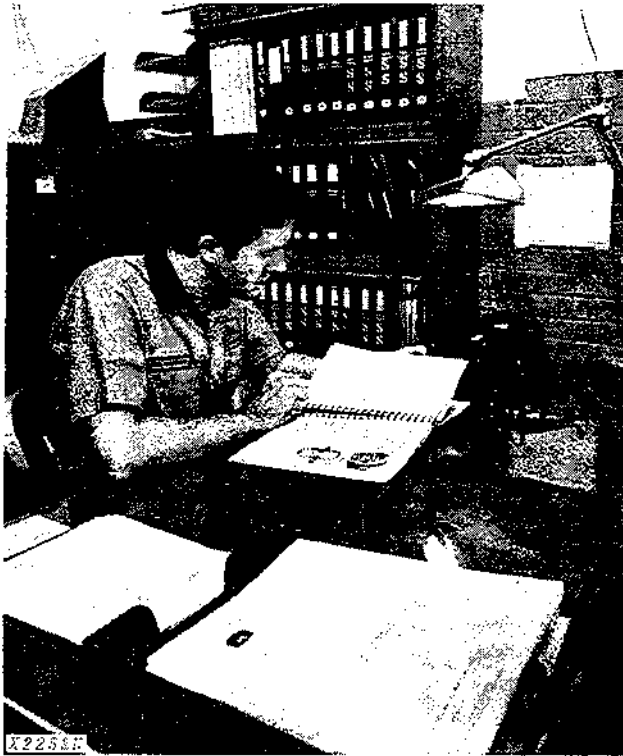

Use FOS Manuals for Reference

This technical manual is part of a twin concept of service:

The two kinds of manuals work as a team to give you both the general background and technical details of shop service.

•FOS Manuals—for reference

Fundamentals of Service (FOS) Manuals cover basic theory of operation, *fundamentals* of trouble shooting, *general* maintenance, and *basic* types of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced service technicians.



When a service technician should refer to a FOS Manual for more information, a FOS symbol like the one at the left is used in the TM to identify the reference.

•Technical Manuals—for actual service

Technical Manuals are concise service guides for a specific machine. Technical manuals are on-the-job guides containing only the vital information needed by an experienced service technician.



Use Technical Manuals for Actual Service

This technical manual was planned and written for you—an experienced service technician. Keep it in a permanent binder in the shop where it is handy. Refer to it whenever in doubt about correct service procedures or specifications.


Some features of this manual:

- Inside front cover - "Table of Contents".
- Section I - Contents, safety information, general specifications and general services.
- Sections 1 through 40 - Removal, repair, testing (components removed), installation, and adjustment.
- Section 90 - Detailed explanation of system operation, diagnosis, visual inspection, testing, and adjustments.
- Specifications grouped and illustrated at the end of each section.


MAINTENANCE WITHOUT ACCIDENT WORK SAFELY



T27295H

 This safety alert symbol is used for important safety messages. When you see this symbol, the possibility of personal injury exists if safety message is not followed.

**EVERY EMPLOYER HAS A
SAFETY PROGRAM. KNOW
WHAT IT IS!**

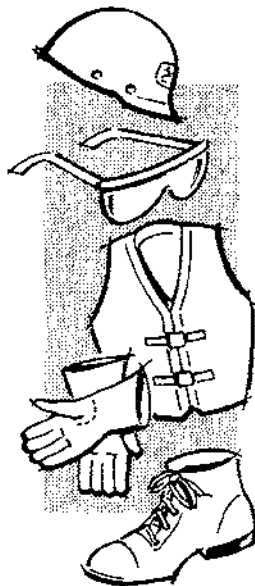


T27501N

Consult your shop supervisor for specific instructions on a job, and the safety equipment required.


For instance, you may need: Hard hat, safety shoes, safety goggles, heavy gloves, reflector vests, ear protectors, respirators.

Litho in U.S.A.

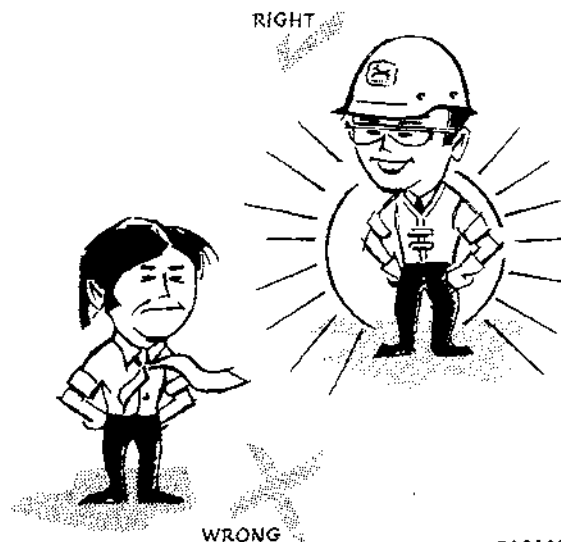

T27602N

ALWAYS AVOID loose clothing or any accessory—flopping cuffs, dangling neckties and scarves, or rings and wrist watches—that can catch in moving parts and put you out of work.

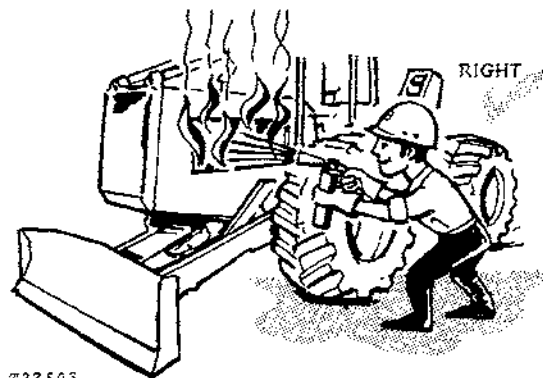

T27503

BE ALERT!

Plan ahead—work safely—avoid accidental damage and injury. If a careless moment does cause an accident or fire, react quickly with the tools and skills at hand—know how to use a first aid kit and a fire extinguisher—and where to get aid and assistance. In an emergency, split-second action is the key to safety.

MAINTENANCE WITHOUT ACCIDENT

Specific safety procedures should always be observed, whether servicing or making repairs on the skidder. Remembering these—in time!—can prevent an injury...or save your life....

AVOID FIRE HAZARDS—


Fuel Is Dangerous!

Don't smoke while refueling.

Don't smoke while handling highly flammable material.

Engine should be shut off when refueling.

Use care in refueling if the engine is hot.

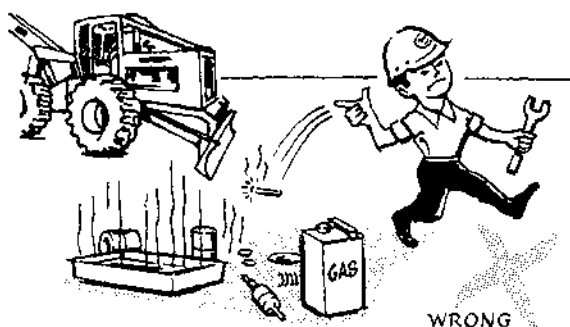

T33257N

Don't use open pans of gasoline or diesel fuel for cleaning parts. Good commercial, nonflammable solvents are preferred.

Battery Gas Is Highly Flammable!

Provide adequate ventilation when charging batteries.



T27506N

Don't check battery charge by placing metal objects across the posts.

Don't allow sparks or open flame near batteries.

Don't smoke near battery.

Flame Is Not a Flashlight!

Never check fuel, battery electrolyte or coolant levels with an open flame.

Never use an open flame to look for leaks anywhere on the equipment.


Never use an open flame as a light anywhere on or around the equipment.

KNOW WHERE FIRE EXTINGUISHERS ARE KEPT!

UNDER ALL MAINTENANCE CONDITIONS—

Do not perform any work on the skidder unless authorized to do so. Then be sure you understand the services required. Follow recommended procedures.

Never service the equipment while it is being operated.

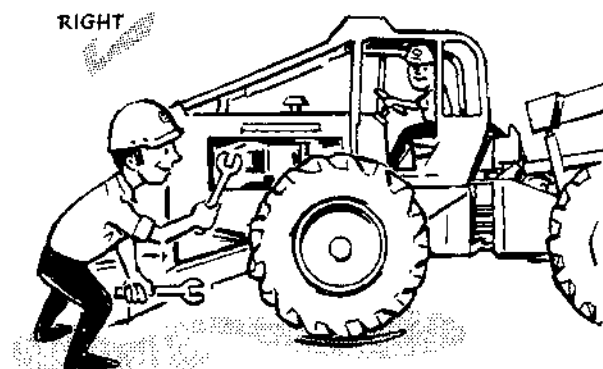

T33258N


Avoid working on equipment with the engine running. If it is necessary to make checks with the engine running, **ALWAYS USE TWO SERVICE TECHNICIANS**—one, the operator, at the controls, the other checking in view of the operator. Also, put the transmission in neutral, set the brake, and apply any safety locks provided. **KEEP HANDS AWAY FROM MOVING PARTS.**



MAINTENANCE WITHOUT ACCIDENT

Before servicing, adjusting, or repairing skidders which have attachments such as blades, grapple tongs, etc.—**LOWER** equipment to the ground—or, if necessary to raise them for access to certain parts, **SECURELY SUPPORT** by external means. **DO NOT** rely on controls to support or position equipment for maintenance.

Never allow **ANYONE** to walk under equipment that is raised and not properly blocked.

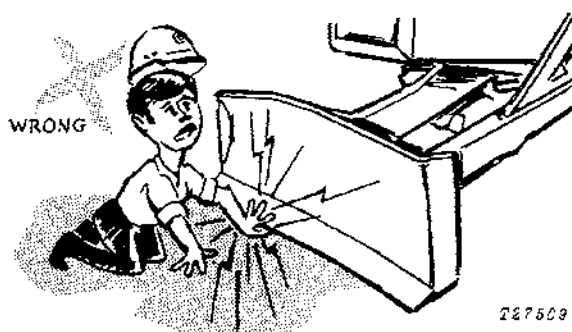


Avoid working directly under raised and blocked equipment unless absolutely necessary.

If the skidder is on an incline, block it securely.

Use hoisting equipment for lifting heavy parts. **TAKE CARE! WATCH OUT FOR OTHER PEOPLE IN THE VICINITY.**

Use extreme caution in removing radiator caps, drain plugs, grease fittings, or hydraulic pressure caps.

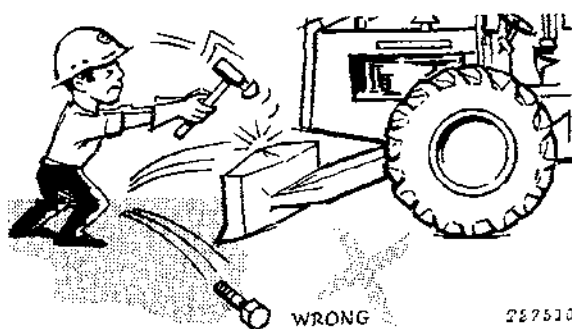

Wear safety glasses when drilling, grinding, or hammering metal.

Make sure the maintenance area is adequately vented.


Keep maintenance area **CLEAN AND DRY**. Oily and wet floors are slippery; greasy rags are a fire hazard; wet spots are dangerous when working with electrical equipment.

Store starting aids in a cool and well-ventilated place, out of the reach of unauthorized personnel.

SERVICING PRECAUTIONS

Stop the engine before cleaning or lubricating the skidder.

Lower blade and grapple to the ground *carefully*.

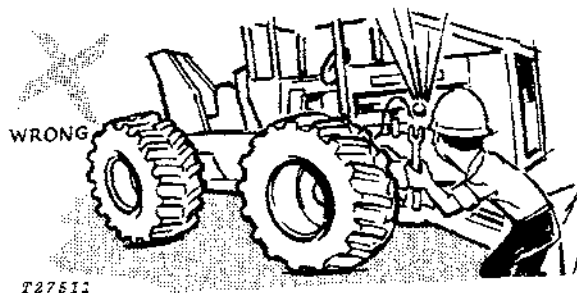

Engine coolant gets hot! Don't remove the radiator cap until coolant temperature is below the boiling point. Then turn cap slightly to relieve pressure before removing.

Exhaust gases are dangerous! Periodically check exhaust system for excessive leakage.


Don't forget a hydraulic system may be pressurized! To relieve system pressure, stop engine, lower blade and boom and operate blade, boom or grapple controls until system fails to respond.

When checking hydraulic pressure, be sure to use the correct test gauge for the pressure in the particular system.

The skidder is equipped with a brake accumulator—recharge by using only dry nitrogen. To discharge brake accumulator apply the brake pedal about 30 times.

MAINTENANCE WITHOUT ACCIDENT

When preparing engine for storage, remember that inhibitor is volatile and therefore dangerous. Seal and tape openings after adding inhibitor. Keep container tightly closed when not in use.

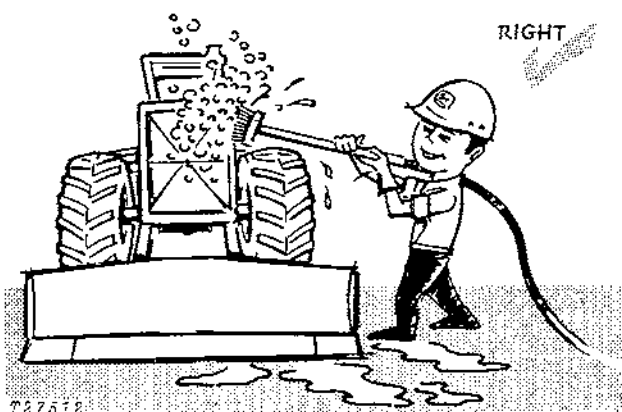


Keep ALL components free of dirt and oil. This attention will minimize fire hazards and facilitate spotting of loose or defective parts.


ADJUSTING PRECAUTIONS

...for Operating Adjustments

Keep clutch and brake control units properly adjusted at all times. Before making adjustments, stop engine.

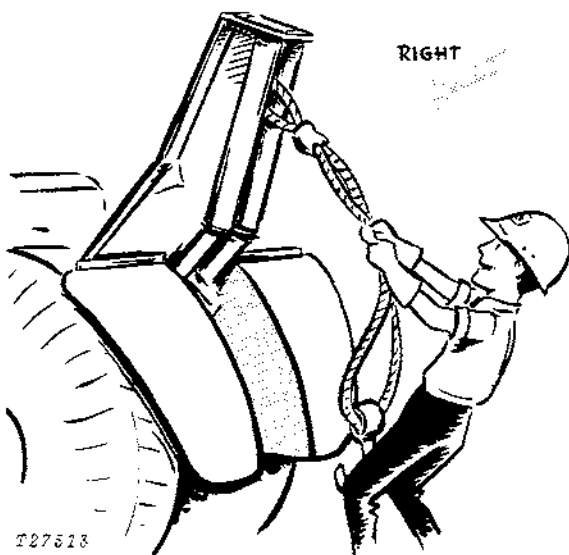


Always wear gloves when handling cable.

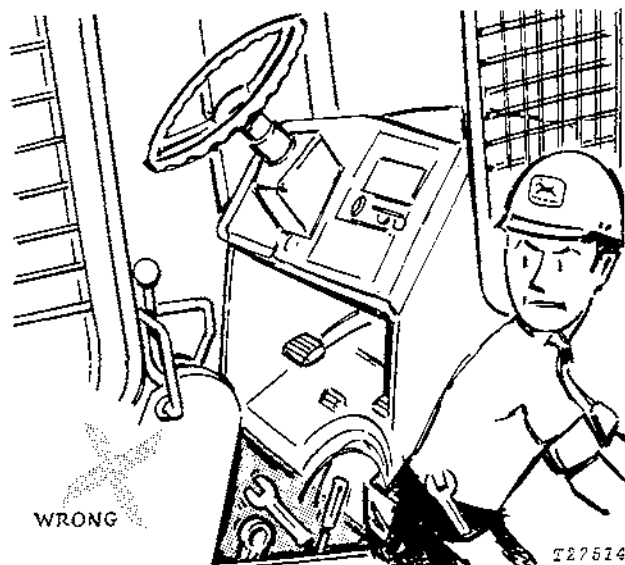

Before removing any housing covers, stop engine. Take all objects from your pockets which could fall into the opened housings. Don't let adjusting wrenches fall into opened housings.

...for Maintenance Adjustments

Don't attempt to check belt tension while the engine is running.

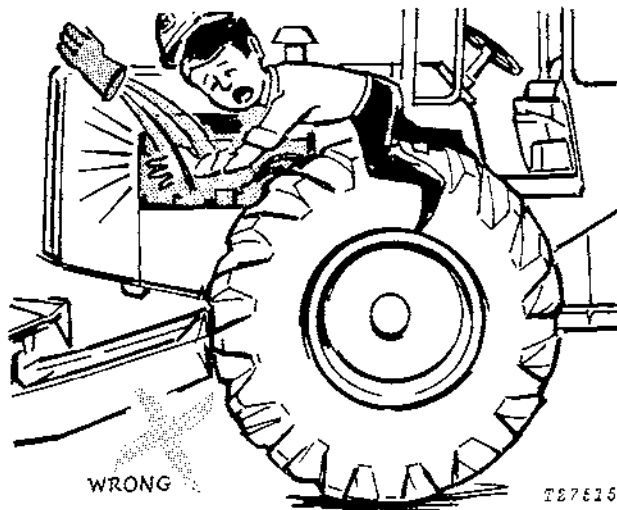

Don't adjust the fuel system while the machine is in motion.