

PARTS MANUAL

**S135FT, S155FT
(G024)**

CUSTOMER EDITION

HYSTER

SECTIONS

| | |
|-----------|---|
| 1 | FRAME |
| 2 | ENGINE GASOLINE/LPG |
| 3 | ENGINE DIESEL |
| 4 | FUEL SYSTEM |
| 5 | ELECTRICAL SYSTEM |
| 6 | TRANSMISSION |
| 7 | DRIVE AXLE |
| 8 | STEERING SYSTEM |
| 9 | BRAKE SYSTEM |
| 10 | HYDRAULIC SYSTEM |
| 11 | MAST-TWO STAGE LIMITED FREE-LIFT |
| 12 | MAST-THREE STAGE FULL FREE-LIFT |
| 13 | OPTIONS |
| 14 | FIELD CONVERSION KITS |
| 15 | NUMERICAL INDEX |

This Parts Manual is divided into 15 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

TABLE OF CONTENTS

| DESCRIPTION | PAGE |
|--|-------|
| A | |
| ACCUMULATOR | 13-8 |
| ADD ON OPTION KITS | 14-2 |
| ADD ON OPTIONS | |
| ADD ON TELEMETRY KITS | 14-8 |
| AIR FILTER | |
| 4.3L LPG | 4-4 |
| AIR FILTER ASSEMBLY | |
| KUBOTA DIESEL | 4-24 |
| AIR INTAKE | |
| KUBOTA DIESEL | 4-22 |
| AIR INTAKE AND FILTER | |
| 4.3L, GASOLINE AND LPG | 4-2 |
| ALTERNATOR | |
| SEALED - GM 4.3L GASOLINE AND LPG | 5-24 |
| SEALED - KUBOTA 3.8L DIESEL | 5-25 |
| ALTERNATOR AND MOUNTING | |
| GM 4.3L GASOLINE AND LPG | 5-26 |
| ALTERNATOR AND PULLEY | |
| KUBOTA DIESEL - 3.8L | 3-54 |
| ARMREST ASSEMBLY | |
| MINI-LEVER MODULES - SEMI-SUSPENSION SEAT WITH HIP RESTRAINTS | 1-20 |
| MINI-LEVER MODULES - FULL SUSPENSION SEAT | 1-22 |
| ATTACHMENT | |
| HANG-ON SIDE-SHIFT ASSEMBLY - WITHOUT FORK POSITIONER | 13-16 |
| ATTACHMENT CARRIAGE | |
| HANG-ON SIDE-SHIFT - WITH FORK POSITIONER AND BACKREST | 13-24 |
| VALVE AND HOSES | 13-26 |
| AUDIBLE ALARM KITS | 14-7 |
| AUXILIARY FUNCTION HOSES | |
| TWO AND THREE STAGE MASTS | 13-12 |
| AUXILIARY ONE AND TWO SECTIONS | |
| MANUAL CONTROL VALVE - THREE AND FOUR FUNCTION | 10-34 |
| AUXILIARY ONE SECTION | |
| ELECTRONIC CONTROLLER - THREE, FOUR AND FIVE FUNCTION | 10-48 |
| AUXILIARY TUBE EXTENSIONS | |
| THREE STAGE FULL FREE LIFT WITH SIDE SHIFT FORK POSITIONER CARRIAGE - WITHOUT QUICK DISCONNECT FITTINGS | 13-46 |
| THREE STAGE FULL FREE LIFT WITH SIDE SHIFT FORK POSITIONER CARRIAGE - MANUAL HYDRAULICS WITH QUICK DISCONNECT FITTINGS | 13-48 |
| THREE STAGE FULL FREE-LIFT - WITHOUT QUICK DISCONNECT FITTINGS | 13-40 |
| THREE STAGE FULL FREE-LIFT - MANUAL HYDRAULICS WITH QUICK DISCONNECT FITTINGS | 13-42 |
| THREE STAGE FULL FREE-LIFT - E-HYDRAULICS WITH QUICK DISCONNECT FITTINGS | 13-44 |
| TWO STAGE LIMITED FREE-LIFT - WITHOUT QUICK DISCONNECT FITTINGS | 13-34 |
| TWO STAGE LIMITED FREE-LIFT - MANUAL HYDRAULICS WITH QUICK DISCONNECT FITTINGS | 13-36 |
| TWO STAGE LIMITED FREE-LIFT - E-HYDRAULICS WITH QUICK DISCONNECT FITTINGS | 13-38 |

TABLE OF CONTENTS (continued)

| DESCRIPTION | PAGE |
|---|-------|
| AUXILIARY TWO SECTION | |
| ELECTRONIC CONTROL VALVE - FOUR AND FIVE FUNCTION | 10-50 |
| AXLE HOUSING | |
| LEFT HAND | 7-6 |
| B | |
| BACKREST | |
| WITH FORK POSITIONER | 13-32 |
| BACK-UP ALARM | 13-2 |
| BATTERY CABLES | |
| GM 4.3L GASOLINE AND LPG | 5-18 |
| KUBOTA DIESEL | 5-20 |
| BRAKE COOLING SYSTEM | |
| SINGLE AND DUAL PEDAL | 9-10 |
| BRAKE LINKAGE | |
| DUAL PEDAL - WET BRAKE | 9-4 |
| SINGLE PEDAL - WET BRAKE | 9-2 |
| BRAKE MASTER CYLINDER ASSEMBLY | 9-7 |
| BREATHER AND SEPARATOR PIPES | |
| KUBOTA DIESEL - 3.8L | 3-48 |
| C | |
| CAMSHAFT AND IDLE GEAR SHAFT | |
| KUBOTA DIESEL - 3.8L | 3-53 |
| CAMSHAFT AND OIL PAN | |
| GM 4.3L GASOLINE AND LPG | 2-32 |
| CARRIAGE | |
| THREE STAGE FULL FREE-LIFT | 12-18 |
| TWO STAGE LIMITED FREE-LIFT | 11-12 |
| CARRIER ASSEMBLY | 13-30 |
| CHARGE PUMP | 6-32 |
| CONTROL MODULE | |
| DIESEL INTERFACE | 5-32 |
| CONTROL VALVE | |
| THREE SPEED TRANSMISSION | 6-18 |
| TWO SPEED TRANSMISSION | 6-30 |
| CONTROL VALVE AND STEERING UNIT ASSEMBLY | |
| ELECTRO-HYDRAULIC - THREE FUNCTION | 10-38 |
| ELECTRO-HYDRAULIC - FOUR AND FIVE FUNCTION | 10-40 |
| MANUAL CONTROL - THREE FUNCTION | 10-26 |
| MANUAL CONTROL - FOUR FUNCTION | 10-28 |
| CONTROL VALVE LOCKOUT GROUP | |
| MANUAL CONTROL VALVE | 10-30 |
| CONVERSION KIT | |
| CONVERSION KITS | |
| COOLING | |
| GM 4.3L GASOLINE AND LPG | 2-2 |
| SQUARE WAVE RADIATOR - KUBOTA DIESEL | 3-12 |
| COUNTERWEIGHT | 1-2 |

TABLE OF CONTENTS (continued)

| DESCRIPTION | PAGE |
|---|-------------|
| COUNTERWEIGHT EXHAUST 3.8L KUBOTA DIESEL WITH DPF | 3-6 |
| COVER BEARING CASE KUBOTA DIESEL - 3.8L | 3-23 |
| COWL ELECTRICAL ELECTRIC HYDRAULIC | 5-12 |
| MANUAL HYDRAULIC | 5-14 |
| COWL MOUNT | 1-34 |
| CRANKSHAFT PULLEY GM 4.3L GASOLINE AND LPG | 2-26 |
| CYLINDER BLOCK GM 4.3L GASOLINE AND LPG | 2-30 |
| KUBOTA DIESEL - 3.8L | 3-20 |
| CYLINDER HEAD GM 4.3L GASOLINE AND LPG | 2-28 |
| KUBOTA DIESEL - 3.8L | 3-30 |
| CYLINDER HEAD COVER KUBOTA DIESEL - 3.8L | 3-28 |
| D | |
| DASH AND STEERING COLUMN COVERS | 1-32 |
| DIESEL PARTICULATE FILTER ATTACHING PARTS - 3.8L | 3-8 |
| MUFFLER ASSEMBLY - 3.8L | 3-10 |
| DIFFERENTIAL | 7-8 |
| DIPSTICK KUBOTA DIESEL - 3.8L | 3-26 |
| DISTRIBUTOR AND COIL GM 4.3L GASOLINE AND LPG | 2-41 |
| DISTRIBUTOR ASSEMBLY GM 4.3L LPG AND GASOLINE | 5-38 |
| DPF DISPLAY 3.8L KUBOTA DIESEL | 5-42 |
| DRIVE AXLE AND ATTACHING PARTS WET BRAKE | 7-2 |
| DRIVE AXLE HOUSING AND HUB | 7-4 |
| DRIVE TIRE AND WHEEL | 7-12 |
| E | |
| EGR COOLER KUBOTA DIESEL - 3.8L | 3-45 |
| EGR VALVE KUBOTA DIESEL - 3.8L | 3-44 |
| E-HYDRAULIC CONTROL CONVERSION KITS | 14-6 |
| ELECTRICAL MOUNTING PLATE AND LIFTING EYE GM 4.3L GASOLINE | 2-14 |
| GM 4.3L LPG | 2-16 |
| ELECTRICAL SYSTEM RIGHT HAND CHASSIS | 5-10 |

TABLE OF CONTENTS (continued)

| DESCRIPTION | PAGE |
|---|-------|
| ELECTRO HYDRAULIC POPPET VALVE | |
| ELECTRONIC CONTROL VALVE - THREE, FOUR, AND FIVE FUNCTION | 10-46 |
| ENGINE CONTROL MODULE AND SENSORS | |
| GM 4.3L LPG | 5-28 |
| GM 4.3L GASOLINE | 5-30 |
| ENGINE ELECTRICAL SYSTEM | |
| GM 4.3L GASOLINE | 5-8 |
| GM 4.3L LPG | 5-6 |
| KUBOTA 3.8L DIESEL | 5-4 |
| ENGINE MOUNTING | |
| GM 4.3L GASOLINE AND LPG | 2-12 |
| ENGINE MOUNTING AND TORQUE CONVERTER | |
| KUBOTA 3.8L DIESEL | 3-16 |
| EXHAUST MANIFOLD | |
| KUBOTA DIESEL - 3.8L | 3-46 |
| EXHAUST MANIFOLDS | |
| GM 4.3L LPG AND GASOLINE | 2-38 |
| EXHAUST SYSTEM | |
| GM 4.3L GASOLINE AND LPG - OVERHEAD EXHAUST | 2-6 |
| GM 4.3L GASOLINE AND LPG - COUNTERWEIGHT EXHAUST | 2-8 |
| EXHAUST WRAPS | |
| GM 4.3L GASOLINE AND LPG | 2-10 |
| F | |
| FAN ASSEMBLY | |
| GM 4.3L GASOLINE AND LPG | 2-20 |
| FAN MOUNT ASSEMBLY | |
| GM 4.3L LPG AND GASOLINE | 2-18 |
| FAN PULLY | |
| KUBOTA DIESEL - 3.8L | 3-19 |
| FIRE EXTINGUISHER | 13-6 |
| FLOORPLATES AND COVERS | 1-28 |
| FLYWHEEL AND HOUSING | |
| GM 4.3L GASOLINE AND LPG | 2-22 |
| KUBOTA DIESEL - 3.8L | 3-18 |
| FORK POSITIONER ASSEMBLY | 13-28 |
| FORKS | |
| STANDARD TAPER - CLASS IV | 1-38 |
| FORWARD CLUTCH HIGH AND OUTPUT SHAFT | |
| THREE SPEED TRANSMISSION - FWD2 | 6-14 |
| FORWARD CLUTCH LOW | |
| TWO SPEED TRANSMISSION | 6-26 |
| FORWARD CLUTCH LOW AND SECOND SHAFT | |
| THREE SPEED TRANSMISSION - FWD1, RANGE2 | 6-12 |
| FREE-LIFT | |
| THREE STAGE FULL FREE-LIFT | 12-14 |
| FREE-LIFT CYLINDER | |
| THREE STAGE FULL FREE-LIFT | 12-16 |
| FUEL CAP | 4-20 |

TABLE OF CONTENTS (continued)

| DESCRIPTION | PAGE |
|---|-------------|
| FUEL INJECTION PUMP | |
| KUBOTA DIESEL - 3.8L | 3-40 |
| FUEL RAIL | |
| KUBOTA DIESEL - 3.8L | 3-36 |
| FUEL SENDER AND ATTACHING PARTS | |
| 4.3L GASOLINE | 4-8 |
| FUEL SYSTEM | |
| 4.3L GASOLINE | 4-6 |
| GM 4.3L LPG (→ 4/2014) | 4-12 |
| GM 4.3L LPG (4/2014 →) | 4-14 |
| KUBOTA DIESEL | 4-26 |
| FULL SUSPENSION SEAT | |
| MANUAL AND ELECTRO-HYDRAULIC — SWIVEL AND NON SWIVEL - SHEET 1 OF 4 | 1-10 |
| MANUAL AND ELECTRO-HYDRAULIC — SWIVEL AND NON SWIVEL - SHEET 2 OF 4 | 1-12 |
| NOT INCLUDED WITH SEAT - SHEET 4 OF 4 WITH MANUAL HYDRAULICS | 1-16 |
| NOT INCLUDED WITH SEAT - SHEET 4 OF 4 WITH ELECTRO-HYDRAULICS | 1-18 |
| SERVICE KITS FOR NON SWIVEL AND SWIVEL - SHEET 3 OF 4 | 1-14 |
| FUSE BOX | |
| GM 4.3L LPG | 5-35 |
| G | |
| GEAR CASE | |
| KUBOTA DIESEL - 3.8L | 3-52 |
| GEAR PUMP ASSEMBLY | |
| 41.3 CC | 10-14 |
| H | |
| HAND LEVERS | |
| FOUR FUNCTION - WITH DETENTED LEVERS | 10-22 |
| FOUR FUNCTION - WITHOUT DETENTED LEVERS | 10-24 |
| THREE FUNCTION - WITH DETENTED LEVERS | 10-18 |
| THREE FUNCTION - WITHOUT DETENTED LEVERS | 10-20 |
| HANG-ON SIDE-SHIFT CARRIAGE AND HOSES | |
| WITH BACKREST AND FORK POSITIONER | 13-22 |
| WITHOUT BACKREST AND FORK POSITIONER | 13-20 |
| HEADER HOSE AND ATTACHING PARTS | |
| THREE STAGE FULL FREE-LIFT - 147.2 INCH LIFT-HEIGHT (→ 4/2014) | 12-20 |
| THREE STAGE FULL FREE-LIFT - 147.2 INCH LIFT-HEIGHT (4/2014 →) | 12-24 |
| THREE STAGE FULL FREE-LIFT - 182.7-218.1 INCH LIFT-HEIGHT | 12-28 |
| HEADER HOSE CONVERSION KITS | |
| HEADER HOSES | |
| TWO STAGE LIMITED FREE-LIFT | 11-14 |
| HOIST HOSE AND ATTACHING PARTS | 10-8 |
| HOOD ASSEMBLY | 1-24 |
| HYDRAULIC FILTER | 10-6 |
| HYDRAULIC HOSES | |
| STEERING | 10-5 |
| HYDRAULIC SUPPLY AND RETURN | 10-2 |

TABLE OF CONTENTS (continued)

| DESCRIPTION | PAGE |
|--|-------|
| I | |
| IDLE GEAR | |
| PUMP DRIVE | 6-34 |
| IMPACT SENSOR | 5-44 |
| INJECTION PIPE | |
| KUBOTA DIESEL - 3.8L | 3-37 |
| INJECTOR HARNESS | |
| KUBOTA DIESEL - 3.8L | 3-39 |
| INLET AND EXHAUST VALVES | |
| KUBOTA DIESEL - 3.8L | 3-31 |
| INLET MANIFOLD | |
| KUBOTA DIESEL - 3.8L | 3-42 |
| INNER MAST | |
| THREE STAGE FULL FREE-LIFT | 12-6 |
| TWO STAGE LIMITED FREE-LIFT | 11-4 |
| INSTRUMENT CLUSTER | 5-40 |
| INTAKE AIR FUEL MODULE | |
| GM 4.3L GASOLINE | 2-36 |
| INTERMEDIATE MAST | |
| THREE STAGE FULL FREE-LIFT | 12-4 |
| L | |
| LABELS | |
| CONTROL LEVER LENS - MANUAL HYDRAULICS | 1-44 |
| EXTERIOR | 1-40 |
| INTERIOR | 1-42 |
| MINI LEVER MODULES - SINGLE FUNCTION | 1-46 |
| MINI-LEVER MODULES - DUAL FUNCTION | 1-48 |
| LIGHT KITS | 14-7 |
| LIGHTS | |
| WORK, REAR DRIVE, AND BRAKE/TAIL | 5-16 |
| LOAD BACKREST EXTENSION | 1-36 |
| LOAD WEIGH ELECTRICAL | 5-46 |
| LPG CONVERTER | |
| GM 4.3L LPG | 4-19 |
| LPG LOCK OFF | |
| GM 4.3L | 4-18 |
| LPG REGULATOR AND MIXER | |
| GM 4.3L | 4-17 |
| LPG TANK BRACKET | |
| SWING OUT | 4-30 |
| SWING OUT/ DROP DOWN | 4-32 |
| M | |
| MAIN LIFT | |
| THREE STAGE FULL FREE-LIFT | 12-8 |
| TWO STAGE LIMITED FREE-LIFT | 11-6 |
| MAIN LIFT CYLINDER | |
| THREE STAGE FULL FREE-LIFT | 12-12 |

TABLE OF CONTENTS (continued)

| DESCRIPTION | PAGE |
|---|-------------|
| TWO STAGE LIMITED FREE-LIFT | 11-10 |
| MAST ELECTRICAL | 5-54 |
| MID INLET SECTION | |
| MANUAL AND ELECTRONIC CONTROL VALVE - THREE, FOUR AND FIVE FUNCTION | 10-37 |
| MINI-LEVER CONTROLS | |
| WITH ARMREST - THREE FUNCTION | 5-48 |
| WITH ARMREST - FOUR FUNCTION | 5-50 |
| WITH ARMREST - FIVE FUNCTION | 5-52 |
| MIRRORS | 13-4 |
| MISCELLANEOUS CONVERSION KITS | 14-2 |
| N | |
| NON SUSPENSION SEAT | |
| WITHOUT ELECTRONIC CONTROLS | 1-6 |
| O | |
| OIL COOLER | |
| KUBOTA DIESEL - 3.8L | 3-24 |
| OIL PAN | |
| KUBOTA DIESEL - 3.8L | 3-51 |
| OIL PUMP | |
| GM 4.3L GASOLINE AND LPG | 2-42 |
| OIL SEPARATOR | |
| KUBOTA DIESEL - 3.8L | 3-25 |
| OUTER MAST | |
| THREE STAGE FULL FREE-LIFT | 12-2 |
| TWO STAGE LIMITED FREE-LIFT | 11-2 |
| OUTLET SECTION | |
| ELECTRONIC CONTROL VALVE - THREE, FOUR, AND FIVE FUNCTION WITH ANTI-STALL SOLENOID | 10-52 |
| MANUAL CONTROL VALVE - THREE AND FOUR FUNCTION | 10-36 |
| OUTPUT SHAFT | |
| TWO SPEED TRANSMISSION | 6-28 |
| OVERHEAD EXHAUST | |
| 3.8L KUBOTA DIESEL WITH DPF | 3-4 |
| OVERHEAD GUARD | 1-4 |
| P | |
| PARK BRAKE ASSEMBLY | 9-8 |
| PISTON AND CRANKSHAFT | |
| KUBOTA DIESEL - 3.8L | 3-34 |
| POWER DISTRIBUTION MODULE | 5-36 |
| PRE-CLEANER AND MOUNT | |
| DIESEL | 4-21 |
| PRESSURE REGULATOR | 13-14 |
| PULLEY AND TENSIONER | |
| GM 4.3L GASOLINE AND LPG | 2-24 |
| R | |
| RADIATOR AND COUNTERWEIGHT COVERS | 1-30 |

TABLE OF CONTENTS (continued)

| DESCRIPTION | PAGE |
|---|-------|
| RADIATOR ASSEMBLY | |
| GM 4.3L GASOLINE AND LPG | 2-4 |
| KUBOTA DIESEL 3.8L T4F | 3-22 |
| SQUARE WAVE RADIATOR - KUBOTA 3.8L DIESEL | 3-14 |
| RELAY | |
| KUBOTA DIESEL | 5-34 |
| REMOTE KEY SWITCH | 5-45 |
| REPLACEMENT KITS | |
| REVERSE CLUTCH | |
| TWO SPEED TRANSMISSION | 6-24 |
| REVERSE CLUTCH AND FIRST SHAFT | |
| THREE SPEED TRANSMISSION - REV1, RANGE 1 | 6-16 |
| ROCKER ARM SHAFT | |
| KUBOTA DIESEL - 3.8L | 3-32 |
| S | |
| SEAT BELT SWITCH ADAPTER | |
| 4/2014 → | 5-55 |
| SEMI SUSPENSION SEAT | |
| MANUAL AND ELECTRO-HYDRAULIC | 1-8 |
| SENSORS | |
| KUBOTA DIESEL - 3.8L | 3-55 |
| SIDESHIFT CYLINDER | |
| WITH AND WITHOUT FORK POSITIONER | 13-18 |
| SPARK PLUGS AND WIRES | |
| GM 4.3L GASOLINE AND LPG | 5-27 |
| STARTER | |
| GM 4.3L GASOLINE AND LPG | 5-22 |
| KUBOTA DIESEL - 3.8L | 3-58 |
| STATIC STRAP INSTALLATION | 1-39 |
| STEER AXLE | 8-12 |
| STEER CONTROL UNIT | 8-8 |
| STEER CYLINDER | 8-15 |
| STEER TIRE AND WHEEL | 8-10 |
| STEERING COLUMN AND ATTACHING PARTS | |
| DIESEL | 8-3 |
| GASOLINE AND LPG | 8-2 |
| STEERING COLUMN ASSEMBLY | |
| DIESEL | 8-6 |
| GASOLINE AND LPG | 8-4 |
| STROBE LIGHT (LED) | 13-10 |
| T | |
| THERMOSTAT AND WATER OUTLET HOUSING | |
| GM 4.3L GASOLINE | 2-40 |
| GM 4.3L LPG | 2-39 |
| THROTTLE BODY | |
| GM 4.3L LPG | 4-16 |
| GM 4.3L GASOLINE | 4-10 |

TABLE OF CONTENTS (continued)

| DESCRIPTION | PAGE |
|--|-------------|
| THROTTLE PEDAL ASSEMBLY AND ATTACHING PARTS | |
| MONOTROL | 4-36 |
| STANDARD PEDAL | 4-34 |
| TILT CYLINDER AND MAST INSTALLATION | 10-54 |
| TILT CYLINDERS | 10-56 |
| TILT HYDRAULICS | 10-10 |
| TILT SECTION | |
| ELECTRONIC CONTROL VALVE - THREE, FOUR AND FIVE FUNCTION | 10-44 |
| TORQUE CONVERTER | 6-4 |
| TRANSMISSION ASSEMBLY | |
| THREE SPEED - SHEET 1 OF 2 | 6-8 |
| THREE SPEED - SHEET 2 OF 2 | 6-10 |
| TWO SPEED - SHEET 1 OF 2 | 6-20 |
| TWO SPEED - SHEET 2 OF 2 | 6-22 |
| TRANSMISSION COOLING LINES | |
| GM 4.3L GASOLINE AND LPG | 6-3 |
| KUBOTA DIESEL | 6-2 |
| TRANSMISSION ELECTRICAL SYSTEM | |
| THREE SPEED TRANSMISSION | 5-60 |
| TWO SPEED TRANSMISSION - WITHOUT INPUT SPEED SENSOR | 5-56 |
| TWO SPEED TRANSMISSION - WITH INPUT SPEED SENSOR (8/2014 →) | 5-58 |
| TRANSMISSION MOUNT | 6-6 |
| TURBO INLET PIPE | |
| KUBOTA DIESEL - 3.8L | 3-49 |
| TURBOCHARGER | |
| KUBOTA DIESEL - 3.8L | 3-47 |
| TURBOCHARGER OIL PLUMBING | |
| KUBOTA DIESEL - 3.8L | 3-50 |
| V | |
| VALVE ASSEMBLY, LIFT AND LOWER | |
| ELECTRONIC CONTROL VALVE - THREE, FOUR AND FIVE FUNCTION | 10-42 |
| VALVE ASSEMBLY, LIFT AND TILT | |
| MANUAL CONTROL VALVE - THREE AND FOUR FUNCTION | 10-32 |
| VALVE COVER AND INLET MANIFOLD | |
| GM 4.3L GASOLINE AND LPG | 2-34 |
| VENT LINES | 10-12 |
| W | |
| WATER BYPASS | |
| GM 4.3L GASOLINE | 2-44 |
| WATER PUMP | |
| KUBOTA DIESEL - 3.8L | 3-57 |
| WATER PUMP FLANGE AND THERMOSTAT | |
| KUBOTA DIESEL - 3.8L | 3-56 |
| WET BRAKE ASSEMBLY | 7-10 |
| WIRE HARNESS | |
| ADAPTER - LOW FUEL PRESSURE | 5-62 |
| ALTERNATOR TO BATTERY DISCONNECT SWITCH - KUBOTA 3.8L DIESEL | 5-64 |

TABLE OF CONTENTS (continued)

| DESCRIPTION | PAGE |
|--|-------------|
| ALTERNATOR TO STARTER - KUBOTA 3.8L DIESEL | 5-66 |
| COWL - MANUAL HYDRAULICS WITH MONOTROL PEDAL | 5-106 |
| COWL - MANUAL HYDRAULICS WITH FORWARD/REVERSE | 5-110 |
| COWL - ELECTRO-HYDRAULICS WITH MONOTROL PEDAL | 5-114 |
| COWL - ELECTRO-HYDRAULICS WITH FORWARD/REVERSE | 5-118 |
| DPF DISPLAY | 5-83 |
| ELECTRONIC CONTROL VALVE - THREE FUNCTION | 5-68 |
| ELECTRONIC CONTROL VALVE - FOUR FUNCTION | 5-70 |
| ELECTRONIC CONTROL VALVE - FIVE FUNCTION | 5-72 |
| ENGINE - KUBOTA 3.8L DIESEL | 5-78 |
| LIGHTS - WITH OVERHEAD GUARD | 5-86 |
| RH CHASSIS (→ 4/2014) | 5-88 |
| RH CHASSIS (4/2014 →) | 5-94 |
| RH CHASSIS WITH SEAT BELT SEQUENCE MODULE | 5-100 |
| SEALED ALTERNATOR - GM 4.3L GASOLINE AND LPG | 5-84 |
| TRANSMISSION - TWO SPEED (→ 4/2015) | 5-122 |
| TRANSMISSION - THREE SPEED (→ S/N G024V02047N) | 5-126 |
| TRANSMISSION-THREE SPEED - GM 4.3L LPG AND KUBOTA DIESEL (S/N G024N02048N →) | 5-130 |
| TRANSMISSION-TWO SPEED WITH TISS SENSOR - GM 4.3L LPG AND KUBOTA DIESEL (4/2015 →) | 5-124 |
| WIRE HARNESS (ENGINE) | |
| GM 4.3L LPG | 5-74 |

ABBREVIATIONS QUICK REFERENCE SHEET

Listed below are abbreviations used in parts manuals to denote the following expressions:

| TERM | DEFINITION | TERM | DEFINITION |
|-------------|---|-------------|------------------------------------|
| Amp | Amperes | FRE | Freezer Environment |
| AR | As Required | in. | inches |
| BDI | Battery Discharge Indicators | LPG | Liquefied Petroleum Gas |
| BWI | Brush Wear Indicator | MAP | Manifold Absolute Pressure |
| CE | Communicator End | mm | millimeters |
| CRE | Corrosive Environment | MSTS | Microprocessor Spark Timing System |
| D/B | Date Break | NPT | National Pipe Threads |
| dbA | Decibel "A" Scale | O/S | Oversize |
| DE | Drive End | PTO | Power Take Off |
| ECH | Empty Container Handler | RPM | Revolutions per Minute |
| ECH-3 | Empty Container Handler - 3 High Stacking | S/N | Serial Number |
| ECH-4 | Empty Container Handler - 4 High Stacking | TMM | Truck Management Module |
| ECH-5 | Empty Container Handler - 5 High Stacking | UL Type D | Diesel-Powered Safety Rating |
| ECH-6 | Empty Container Handler - 6 High Stacking | UL Type DS | Diesel-Powered Safety Rating |
| ECH-7 | Empty Container Handler - 7 High Stacking | UL Type E | Battery-Powered Safety Rating |
| ECM | Electronic Control Module | UL Type EE | Battery-Powered Safety Rating |
| ECN | Engineering Change Notice | UL Type ES | Battery-Powered Safety Rating |
| EEPROM | Electrically Erasable Programmable Read Only Memory | UL Type G | Gasoline-Powered Safety Rating |
| EPA | US Environmental Protection Agency | UL Type GS | Gasoline-Powered Safety Rating |
| EPROM | Electrically Programmable Read Only Memory | UL Type LP | Gas-Powered Safety Rating |
| | | UL Type LPS | LP Gas-Powered Safety Rating |
| | | U/S | Undersize |
| | | UL | Underwriters Laboratory |
| | | V | Volts |

HOW TO USE THE ILLUSTRATED PARTS MANUAL

This parts manual describes and illustrates assemblies, subassemblies, and detail parts needed for service replacement.

The different constructions are indicated by keys and footnotes. The callouts correspond to descriptions found on the next page.

HYSTER UNIT CODE D001 NORTH AMERICA 06/2001

TABLE OF CONTENTS

| DESCRIPTION | PAGE |
|--|------|
| AIR INTAKE AND FILTER DIESEL (⇒ D/B 11/98) | 3-22 |
| AIR INTAKE AND FILTER DIESEL (D/B 11/96 ⇒) | |
| AIR INTAKE AND FILTER GASOLINE AND LPG | |
| ALTERNATOR GASOLINE, LPG, AND DIESEL | |
| ALTERNATOR TYPES GS, LPS, AND DS | |
| AUXILIARY FUNCTION TUBE TWO AND THREE STAGE FULL F | |

SECTION 13 NUMERICAL INDEX

| PART NO. | PAGE NO. | ITEM NO. | PART NO. | PAGE NO. | ITEM NO. | PART NO. | PAGE NO. | ITEM NO. | PART NO. | PAGE NO. | ITEM NO. |
|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|
| 142 | 3-4 | 19 | 10-13 | 25 | | 11-27 | 29 | 12-31 | 12 | | |
| 12445 | 3-32 | 19 | 10-17 | 6 | | 11-31 | 25 | 16719 | 3-36 | 5 | |
| | 3-34 | 1 | 10-27 | 11 | | 11-32 | 37 | 16751 | 3-16 | 27 | |
| | | | 11-11 | 6 | 16485 | 8-4 | 29 | 16849 | 3-34 | 21 | |
| | | | 12-21 | 11 | | 8-4 | 45 | | 3-38 | 20 | |
| | | | 14 | 13 | | 8-8 | 34 | 16863 | 3-28 | 17 | |
| | | | 12 | 6 | | 9-7 | 9 | 16865 | 3-6 | 18 | |
| | | | 3 | 17 | | 9-7 | 19 | | 4-27 | 41 | |
| | | | 9 | 10 | | 9-11 | 9 | 16882 | 9-7 | 30 | |
| | | | 23 | 46 | | 9-11 | 17 | | 9-11 | 27 | |
| | | | 27 | 46 | | 10-9 | 21 | | 10-10 | 36 | |
| | | | 26 | 14 | | 10-9 | 28 | | 10-13 | 32 | |
| | | | 28 | 14 | | 10-13 | 16 | | 11-7 | 24 | |
| | | | 50 | 14 | | 11-7 | 19 | | 11-9 | 17 | |

SECTIONS

- 1
- 2
- 3
- 4
- 5 BRAKE/ACC
- 6
- 7 MAST-TWO STAG
- 8 MAST-THREE ST
- 9 MAST-TWO ST
- 10
- 11

TRANSMISSION HOUSING ⇒ S/N D001H-2628

KEY:
A: Diesel
B: Gasoline and LPG

| ITEM | PART NO. | DESCRIPTION | QTY | |
|------|----------|-------------------------------------|-----|----|
| | | | A | B |
| 1 | 202547 | Transmission | 1 | 1 |
| 2 | 2023329 | Transmission | 1 | 1 |
| 3 | 2021670 | Case | 2 | 2 |
| 4 | 2023418 | Bearing Cap | 4 | 4 |
| 5 | 296429 | Washer | 4 | 4 |
| 6 | 293947 | Bolt | 1 | 1 |
| 7 | 2021390 | Cover | 2 | 2 |
| 8 | 1371656 | Colter Pin | 4 | 4 |
| 9 | 2021915 | O-Ring | 1 | 1 |
| 10 | 2021329 | Plug | 4 | 4 |
| 11 | 2021675 | Housing | 22 | 22 |
| 12 | 2021336 | Pin | 39 | 39 |
| 13 | 287860 | Lockwasher | 1 | 1 |
| 14 | 292682 | Hydraulic Pump ⇒ Figure 5-3 | 1 | 1 |
| 15 | 2021345 | Gasket | 1 | 1 |
| 16 | 214364 | Bolt | 8 | 8 |
| 17 | 296418 | Washer | 1 | 1 |
| 18 | 2021388 | Temperature Switch | 1 | 1 |
| 19 | 2021389 | Breather | 9 | 9 |
| 20 | 2021383 | Dipstick | 9 | 9 |
| 21 | 292515 | Bolt | 2 | 2 |
| 22 | 136692 | Nut | 3 | 3 |
| 23 | 292527 | Bolt | 3 | 2 |
| 24 | 292531 | Capscrew | 4 | 4 |
| 25 | 292583 | Lockwasher | 4 | 4 |
| 26 | 293637 | Bolt | 4 | 4 |
| | 296420 | Washer | 1 | 1 |
| | 996403 | Transmission Kit (Includes Item 7) | 1 | 1 |
| | 996405 | Transmission Kit (Includes Item 14) | 1 | 1 |

This Parts Manual is divided into 11 major sections which are listed above. Quick be made by placing the right thumb on the tab of the desired section, bending the pages to the corresponding tab.

©Copy Right Date HYSTER COMPANY See Service Manual for service procedures. 5-15

HP990004

HOW TO FIND THE DESIRED PART NUMBER

WHEN THE PART NUMBER AND THE NEXT HIGHER ASSEMBLY IS NOT KNOWN:

1. Determine the function and application of the part required. Turn to the Sections Page. Choose the general area of reference most likely to include the part.
2. Turn to the section you chose. Use the Section Table of Contents to determine the assembly which would normally contain the part required. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS NOT KNOWN AND THE NEXT HIGHER ASSEMBLY IS KNOWN:

3. Determine the assembly the required part is used on. Turn to the Table of Contents (Page i).
4. Locate the assembly the required part is used on and turn to the page indicated for that assembly. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS KNOWN:

5. Use the Numerical Index (Page 15-1) to find the part number. Turn to the page listed and locate the part as indicated by the item number.

GENERAL:

The assembly breakdowns include part numbers, descriptions, quantities required, keys and footnotes to help in selecting correct parts.

6. Parts Supersession Information. Part numbers that have this history will be displayed in the parts list in the order that they were superseded (from oldest to newest). The superseded part numbers will be shown with a line through them.

Five periods in the PART NO. column (.) indicate that the part is either *Not Serviced Separately* or there is a reference to another figure. A figure reference is denoted by a pointing hand followed by a figure number in the DESCRIPTION column (☞ Figure 10)

7. Keys are used to show two or more similar assemblies, RH and LH assembly parts, etc. Select the appropriate key, "A", "B", "C", "D", or "E" and the corresponding quantity column to find the required parts. Two periods in the QTY column (..) indicate that the part is not used for that assembly.
8. Indented descriptions under the DESCRIPTION column are used to indicate assemblies and

subparts of assemblies. In the example on the previous page, *BEARING CAP* (Item 2) is a subpart of the major assembly *CASE*.

9. Quantities shown are for one assembly. The quantities of the subpart *BEARING CAP* are indicated as two and two. This means two per *CASE* assembly.
10. Serial number breaks identify the most current parts information and are shown as follows:
 - **S/N D001H2628**
Indicates last serial number affected.
 - S/N D001H2629** →
Indicates the first serial number affected.
 - S/N D001H1553** ↔ **S/N D001H3291**
Indicates a range of serial numbers affected.

ECN numbers for pending serial numbers are shown to allow for the inclusion of the most current parts information and are identified as follows:

→ **S/N Pending Per ECN 63243**

Indicates a pending serial number for last unit affected.

S/N Pending Per ECN 63243 →

Indicates a pending serial number for first unit affected.

Date breaks are used to indicate when a change occurred but a subsequent serial number break was not recorded. This is an arbitrary date usually based on the ECN release and are identified as follows:

→ **D/B 3/00**

Indicates that a change occurred sometime within that month for the item affected.

D/B 3/00 →

Indicates that a change occurred sometime within that month for the item affected.

D/B 3/00 ↔ **D/B 4/00**

Indicates a range of production dates of the item affected.


Contact your local dealer for Hyster lift trucks for serial number information for items with a ECN or a date break.

ORDERING PARTS:

When ordering replacement parts, give the unit serial number, part number, name of part and quantity required.


For any further information on parts, service, or ordering, consult your local dealer for Hyster lift trucks.

IDENTIFICATION OF TRUCK SERIAL NUMBERS

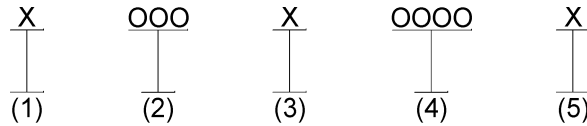


- (1) and (2) The first letter and three numbers indicate the truck unit code.
- (3) The second letter indicates the plant of manufacture.
- (4) The four or five digit number indicates the production sequence number of the truck.
- (5) The final letter indicates the year of manufacture starting with "A" in 1957, 1980, and 2003.
The letters "I", "O", and "Q" will not be used.

For pending serial numbers contact your local dealer for Hyster lift trucks.

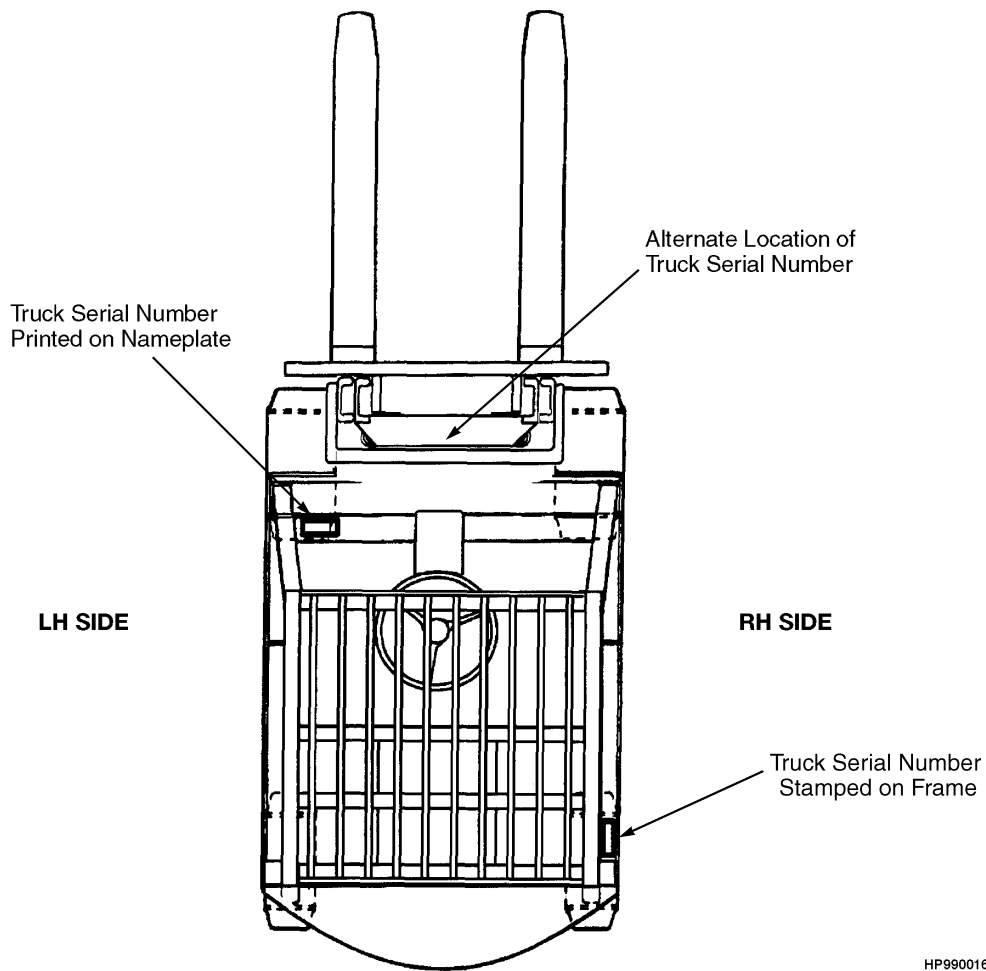

Parts referred to in this book as right or left hand parts are in accordance with the illustration above.

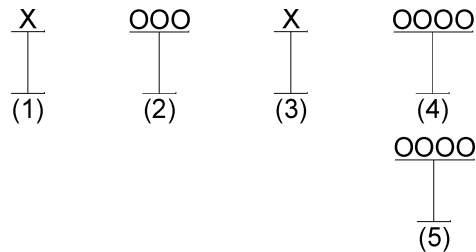IDENTIFICATION OF MAST SERIAL NUMBERS

- (1) and (2) The first letter and number indicates the mast unit code.
- (3) The second letter indicates the plant of manufacture.
- (4) The four or five digit number indicates the production sequence number of the mast.
- (5) Carriage travel in millimeters stamped just below the serial number.

Mast Group identification consists of mast unit code (1) and (2) plus carriage travel (5).


For pending production sequence numbers contact your local dealer for Hyster lift trucks.

LIFT EQUIPMENT IDENTIFICATION

1. Fork part number, capacity rating, plant code letter, and date of manufacture are stamped approximately six inches below the top of most forks.
2. The carriage group number is stamped on the right hand side of the top crossmember (pin type) or on the back of the right hand end of the bottom crossmember (hook type). A date code has two letters in line with or below the carriage group number.
3. The mast identification number has a unit code, a letter indicating the plant of manufacture, and a serial number. Underneath the production sequence number is a four digit number that indicates the carriage travel in millimeters.
4. Tilt and lift cylinder group numbers are stamped on the cylinder shell.

Always refer to the group, serial, or part number when ordering service parts.

Modification of masts and carriages by SPED (Special Products Engineering Department) are identified by a model prefix code beginning with the letter "S". contact your dealer for Hyster lift trucks for information on these assemblies.

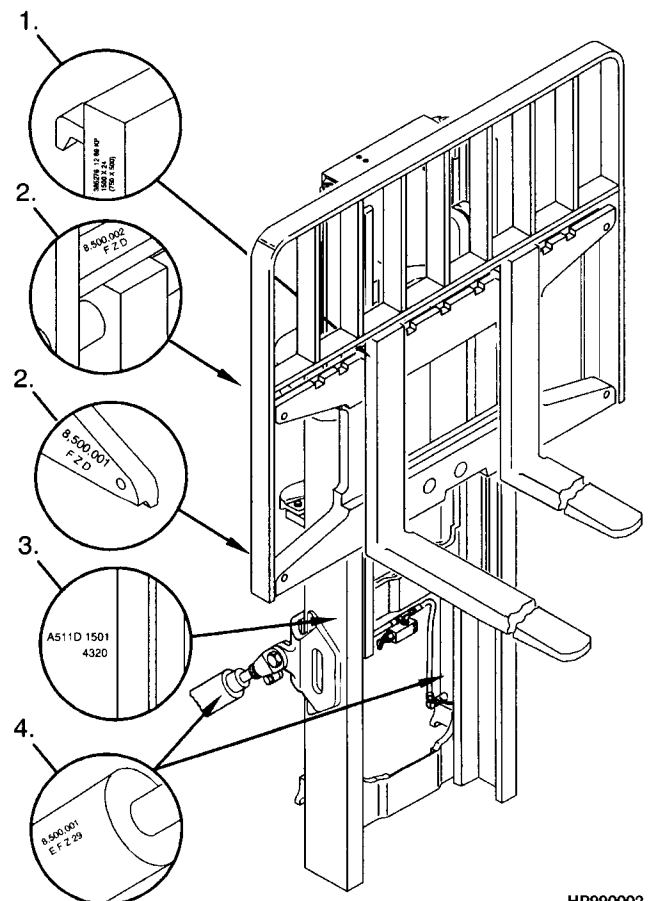

HP990002