

**450J, 550J, 650J  
Crawler Dozer  
Operation and Test**  
(Serial No. 141667 - 159986)

**TECHNICAL MANUAL  
450J, 550J, 650J Crawler Dozer  
Operation and Test**


**TM10292 24APR19 (ENGLISH)**

# Introduction

## Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX, TMIFC -19-15APR14-1/1





# Contents

## Section 9000—General Information

Group 01—Safety

## Section 9001—Diagnostic Trouble Codes

Group 10—Standard Display Monitor (SDM) Diagnostic Trouble Codes

Group 20—Engine Control Unit (ECU) Diagnostic Trouble Codes

Group 30—Transmission Control Unit (TCU) Diagnostic Trouble Codes

Group 40—Electrohydraulic Controller (EHC) Diagnostic Trouble Codes

Group 50—Blade Control Joystick (BCJ) Diagnostic Trouble Codes

## Section 9005—Operational Checkout Procedure

Group 10—System Operational Checks

## Section 9010—Engine

Group 05—Theory Of Operation

Group 15—System Diagnostic Information

Group 25—Tests

## Section 9015—Electrical System

Group 05—System Information

Group 10—System Diagrams

Group 15—Sub-System Diagnostics

Group 20—References

## Section 9025—Hydraulic System

Group 05—Theory of Operation

Group 15—Diagnostic Information

Group 20—Adjustments

Group 25—Tests

## Section 9026—Hydrostatic System

Group 05—Theory of Operation

Group 15—Diagnostic Information

Group 25—Test

## Section 9031—Heating and Air Conditioning

Group 05—Theory of Operation

Group 15—Diagnostic Information

Group 25—Test

*Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication.*

*The right is reserved to make changes at any time without notice.*

COPYRIGHT © 2019  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved.  
A John Deere ILLUSTRATION™ Manual  
Previous Editions  
Copyright © 2007, 2008, 2009, 2010, 2011, 2012, 2013, 2014, 2015, 2018

**Thanks very much for your reading,  
Want to get more information,  
Please click here, Then get the complete  
manual**

**JustClickHere** 

**NOTE:**

**If there is no response to click on the link above,  
please download the PDF document first, and then  
click on it.**

**Have any questions please write to me:  
[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**



**Section 9000  
General Information**

**Contents**

**Page**

**Group 01—Safety**

Recognize Safety Information ..... 9000-01-1

Follow Safety Instructions..... 9000-01-1

Operate Only If Qualified ..... 9000-01-1

Wear Protective Equipment..... 9000-01-2

Avoid Unauthorized Machine

    Modifications..... 9000-01-2

Inspect Machine ..... 9000-01-2

Stay Clear of Moving Parts..... 9000-01-2

Avoid High-Pressure Fluids ..... 9000-01-3

Avoid High-Pressure Oil ..... 9000-01-3

Beware of Exhaust Fumes ..... 9000-01-4

Prevent Fires ..... 9000-01-4

Prevent Battery Explosions ..... 9000-01-4

Handle Chemical Products Safely..... 9000-01-5

Dispose of Waste Properly ..... 9000-01-5

Prepare for Emergencies..... 9000-01-5

Add Cab Guarding For Special

    Uses ..... 9000-01-6

Start Only From Operator's Seat..... 9000-01-6

Prevent Unintended Machine

    Movement..... 9000-01-6

Avoid Work Site Hazards..... 9000-01-7

Keep Riders Off Machine ..... 9000-01-7

Avoid Backover Accidents ..... 9000-01-8

Avoid Machine Tip Over ..... 9000-01-8

Prevent Unintended Detonation of

    Explosive Devices ..... 9000-01-9

Park And Prepare For Service

    Safely..... 9000-01-9

Service Cooling System Safely ..... 9000-01-9

Remove Paint Before Welding or

    Heating ..... 9000-01-10

Make Welding Repairs Safely ..... 9000-01-10

Drive Metal Pins Safely ..... 9000-01-10





## Recognize Safety Information

This is the safety alert symbol. When you see this symbol on your machine or in this manual, be alert for the potential of personal injury.

Follow the precautions and safe operating practices highlighted by this symbol.

A signal word — DANGER, WARNING, or CAUTION — is used with the safety alert symbol. DANGER identifies the most serious hazards.

On your machine, DANGER signs are red in color, WARNING signs are orange, and CAUTION signs are yellow. DANGER and WARNING signs are located near specific hazards. General precautions are on CAUTION labels.



T133555—UN—15APR13

T133588—19—28AUG00

TX03679,00016CC -19-08JAN18-1/1

## Follow Safety Instructions

Read the safety messages in this manual and on the machine. Follow these warnings and instructions carefully. Review them frequently. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Be sure all operators of this machine understand every safety message. Replace operator's manual and safety labels immediately if missing or damaged.



T133556—UN—24AUG00

TX03679,00016F9 -19-14JAN08-1/1

## Operate Only If Qualified

Do not operate this machine unless the operator's manual has been read carefully, and you have been qualified by supervised training and instruction.

Operator should be familiar with the job site and surroundings before operating. Try all controls and

machine functions with the machine in an open area before starting to work.

Know and observe all safety rules that may apply to every work situation and work site.


TX03679,00016FA -19-03JAN07-1/1

### Wear Protective Equipment

Guard against injury from flying pieces of metal or debris; wear goggles or safety glasses.

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing. Wear suitable hearing protection such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

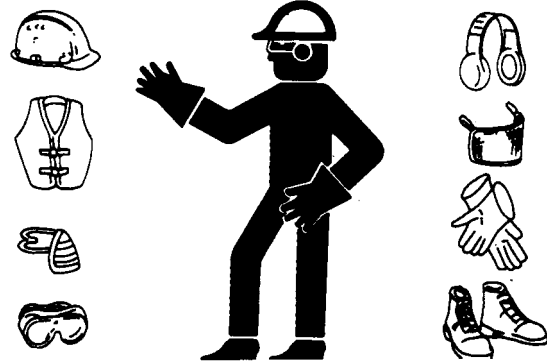

TS206—UN—15APR13

TX03679,00016D0 -19-05MAY10-1/1

### Avoid Unauthorized Machine Modifications

John Deere recommends using only genuine John Deere replacement parts to ensure machine performance. Never substitute genuine John Deere parts with alternate parts not intended for the application as these can create hazardous situations or hazardous performance. Non-John Deere Parts, or any damage or failures resulting from their use, are not covered by any John Deere warranty.

Modifications of this machine, or addition of unapproved products or attachments, may affect machine stability or

reliability, and may create a hazard for the operator or others near the machine. The installer of any modification which may affect the electronic controls of this machine is responsible for establishing that the modification does not adversely affect the machine or its performance.

Always contact an authorized John Deere dealer before making machine modifications that change the intended use, weight, or balance of the machine, or that alter machine controls, performance, or reliability.

AM40430,00000A9 -19-02JUN15-1/1

### Inspect Machine

Inspect machine carefully each day by walking around it before starting.

Keep all guards and shields in good condition and properly installed. Fix damage and replace worn or broken parts immediately. Pay special attention to hydraulic hoses and electrical wiring.



T6607AQ—UN—15APR13


TX03679,0001734 -19-08JAN08-1/1

### Stay Clear of Moving Parts

Entanglements in moving parts can cause serious injury.

Stop engine before examining, adjusting or maintaining any part of machine with moving parts.

Keep guards and shields in place. Replace any guard or shield that has been removed for access as soon as service or repair is complete.

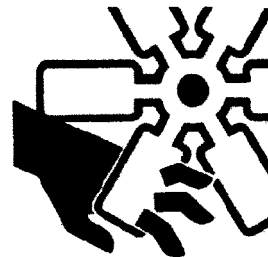

T133592—UN—15APR13

TX03679,00016D2 -19-08JAN08-1/1

### Avoid High-Pressure Fluids

Inspect hydraulic hoses periodically – at least once per year – for leakage, kinking, cuts, cracks, abrasion, blisters, corrosion, exposed wire braid or any other signs of wear or damage.


Replace worn or damaged hose assemblies immediately with John Deere approved replacement parts.

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high-pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar

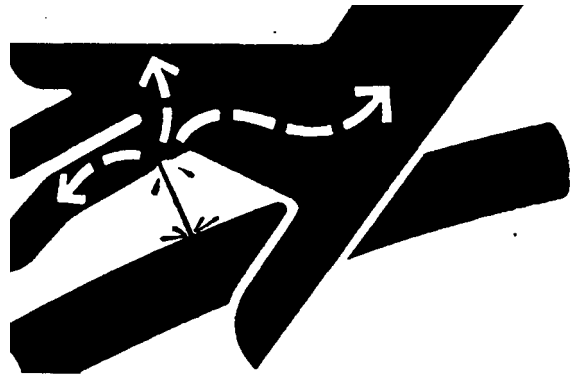

with this type of injury should reference a knowledgeable medical source. Such information is available in English from Deere & Company Medical Department in Moline, Illinois, U.S.A., by calling 1-800-822-8262 or +1 309-748-5636.

DX,FLUID -19-12OCT11-1/1


X9811 —UN—23AUG88

### Avoid High-Pressure Oil

This machine uses a high-pressure hydraulic system. Escaping oil under pressure can penetrate the skin causing serious injury.

**Never search for leaks with your hands.** Protect hands. Use a piece of cardboard to find location of escaping oil. Stop engine and relieve pressure before disconnecting lines or working on hydraulic system.

**If hydraulic oil penetrates your skin, see a doctor immediately. Injected oil must be removed surgically within hours or gangrene may result.** Contact a knowledgeable medical source or the Deere & Company Medical Department in Moline, Illinois, U.S.A.

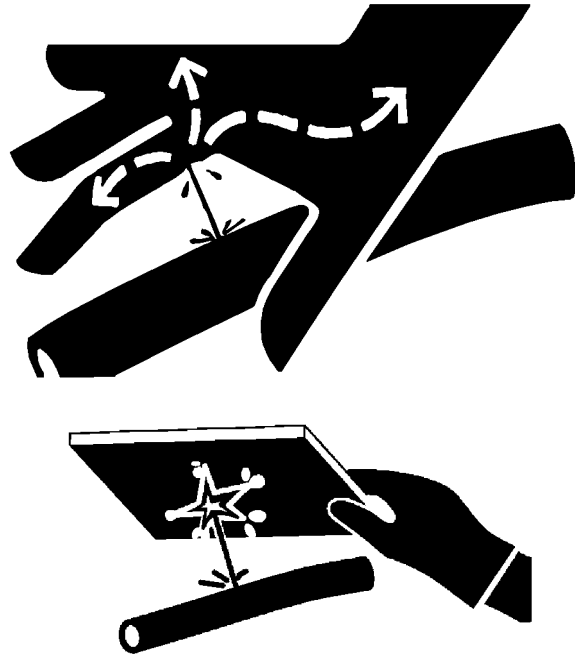

VD76477,00013A1 -19-14JAN08-1/1


T133509 —UN—15APR13

T133840 —UN—20SEP00

### Beware of Exhaust Fumes

Prevent asphyxiation. Engine exhaust fumes can cause sickness or death.

If you must operate in an enclosed space, provide adequate ventilation. Use an exhaust pipe extension to remove the exhaust fumes or open doors and windows to bring outside air into the area.

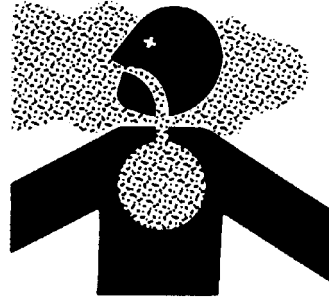

T133546 —UN—24AUG00

TX03679,00016D4 -19-23JUN08-1/1

### Prevent Fires

**Handle Fuel Safely:** Store flammable fluids away from fire hazards. Never refuel machine while smoking or when near sparks or flame.


**Clean Machine Regularly:** Keep trash, debris, grease and oil from accumulating in engine compartment, around fuel lines, hydraulic lines, exhaust components and electrical wiring. Never store oily rags or flammable materials inside a machine compartment.

**Maintain Hoses and Wiring:** Replace hydraulic hoses immediately if they begin to leak, and clean up any oil spills. Examine electrical wiring and connectors frequently for damage.


**Keep A Fire Extinguisher Available:** Always keep a multi-purpose fire extinguisher on or near the machine. Know how to use extinguisher properly.



T133553 —UN—07SEP00

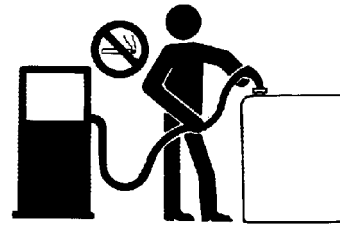

T133554 —UN—07SEP00

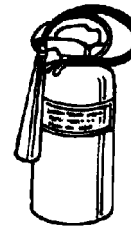

T133552 —UN—15APR13

TX03679,00016F5 -19-26JUN09-1/1

### Prevent Battery Explosions

Battery gas can explode. Keep sparks, lighted matches, and open flame away from the top of battery.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).




TS204 —UN—15APR13

TX03679,000174A -19-08JAN08-1/1

### Handle Chemical Products Safely

Exposure to hazardous chemicals can cause serious injury. Under certain conditions, lubricants, coolants, paints and adhesives used with this machine may be hazardous.

If uncertain about safe handling or use of these chemical products, contact your authorized dealer for a Material Safety Data Sheet (MSDS) or go to internet website <http://www.jdmsds.com>. The MSDS describes physical and health hazards, safe use procedures, and emergency response techniques for chemical substances. Follow MSDS recommendations to handle chemical products safely.

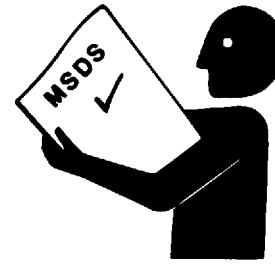

T133580 —UN—25AUG00

TX03679,00016D7 -19-03JAN07-1/1


### Dispose of Waste Properly

Improper disposal of waste can threaten the environment. Fuel, oils, coolants, filters and batteries used with this machine may be harmful if not disposed of properly.

Never pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants can damage the atmosphere. Government regulations may require using a certified service center to recover and recycle used refrigerants.

If uncertain about the safe disposal of waste, contact your local environmental or recycling center or your authorized dealer for more information.

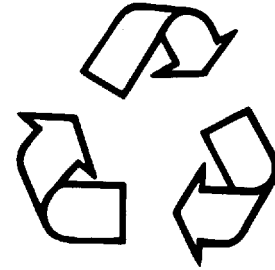

T133567 —UN—25AUG00


TX03679,0001733 -19-08JAN08-1/1

### Prepare for Emergencies

Be prepared if an emergency occurs or a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

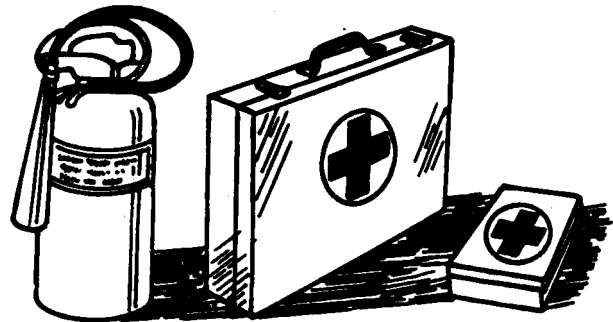


TS291 —UN—15APR13

TX03679,000174B -19-08JAN08-1/1

### Add Cab Guarding For Special Uses

Special work situations or machine attachments may expose the operator to intruding or flying objects. Using this machine in a forestry application or woods environment, or with attachments such as a winch, requires added guarding to protect the operator.

Forestry protection packages or special screens should be installed when working in areas where logs or branches may strike the operator. A rear screen should always be used with a winch to protect against a snapping cable. Contact your authorized dealer for information on protective guarding before operating in any hazardous environment.

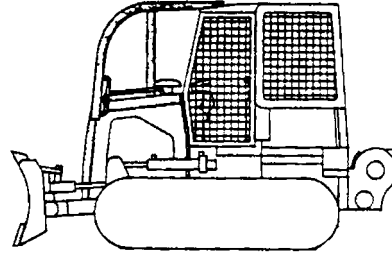

T139005—UN—05MAR01

TX03768,0000B77 -19-14JAN08-1/1

### Start Only From Operator's Seat

Avoid unexpected machine movement. Before starting engine, sit in operator's seat. Ensure park lock lever is in "lock" position.

Never attempt to start engine from the ground or tracks. Do not attempt to start engine by shorting across the starter solenoid terminals.




T133715—UN—15APR13

TX03768,0000B71 -19-03NOV08-1/1

### Prevent Unintended Machine Movement

**Always move the park lock lever to the "lock" position before leaving the operator's seat for any reason.**

Be careful not to accidentally actuate controls when co-workers are present. Engage park lock and lower work equipment to the ground during work interruptions. Stop the engine before allowing anyone to approach the machine. Follow these same precautions before standing up, leaving the operator's seat, or exiting the machine.

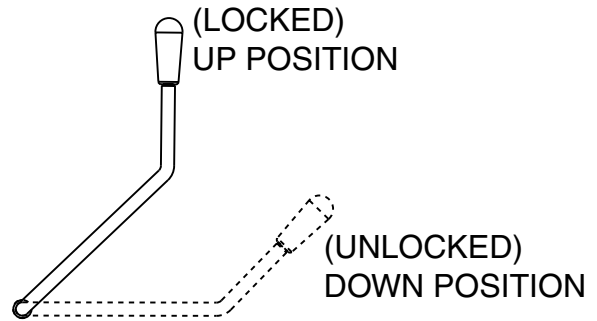

T159027—19—30AUG02

TX03768,0000B72 -19-14JAN08-1/1

## Avoid Work Site Hazards

**Avoid contact with gas lines, buried cables and water lines. Call utility line location services to identify all underground utilities before starting work.**

**Prepare work site properly.** Avoid operating near structures or objects that could fall onto the machine. Clear away debris that could move unexpectedly if run over.



**Avoid boom or attachment contact with overhead obstacles or overhead electrical lines.** Never move machine closer than 3 m (10 ft) plus twice the line insulator length to overhead wires.

**Keep bystanders clear at all times.** Keep bystanders away from raised booms, attachments, and unsupported loads. Avoid swinging or raising booms, attachments, or loads over or near personnel. Use barricades or a signal person to keep vehicles and pedestrians away. Use a signal person if moving machine in congested areas or where visibility is restricted. Always keep signal person in view. Coordinate hand signals before starting machine.

**Operate only on solid footing** with strength sufficient to support machine. Be especially alert working near embankments or excavations.

**Avoid working under over-hanging embankments or stockpiles** that could collapse under or on machine.

**Reduce machine speed** when operating with tool on or near ground when obstacles may be hidden (e.g., during snow removal or clearing mud, dirt, etc.). At high speeds

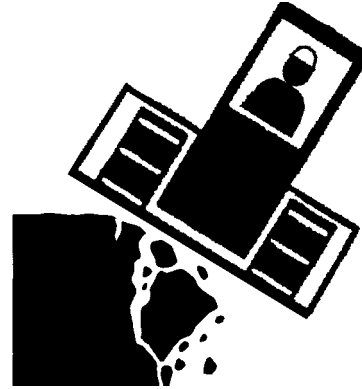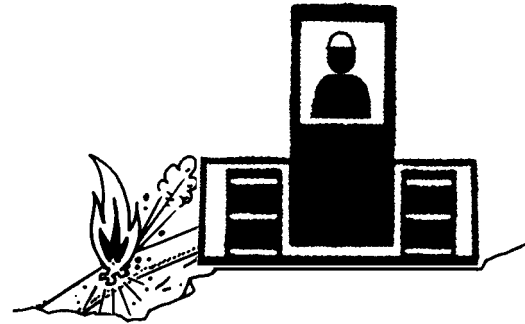

hitting obstacles (rocks, uneven concrete or manholes) can cause a sudden stop. Always wear your seat belt.

VD76477,00013A2 -19-11SEP09-1/1

T139002—UN—05MAR01

T139003—UN—05MAR01

## Keep Riders Off Machine

Only allow operator on machine.

Riders are subject to injury. They may fall from machine, be caught between machine parts, or be struck by foreign objects.

Riders may obstruct operator's view or impair the operator's ability to operate machine safely.



Keep Riders Off Machine

TX03768,0000B73 -19-03JUN15-1/1

T137580—UN—22FEB01



## Avoid Backover Accidents

**Before moving machine, be sure all persons are clear of the machine path.** Turn around and look directly for best visibility. Use mirror to assist in checking behind the machine. Keep windows and mirror clean and in good repair.

**Be certain backup warning alarm is working properly.**

**Use a signal person when backing if view is obstructed or when in close quarters.** Keep signal person in view at all times. Use prearranged hand signals to communicate.



T138441—UN—22FEB01

TX03768,0000B69 -19-14JUN11-1/1

## Avoid Machine Tip Over

**Use seat belt at all times.**

**Do not jump if the machine tips.** You will be unlikely to jump clear and the machine may crush you.


**Load and unload from trucks or trailers carefully.** Be sure truck is wide enough and secured on a firm level surface. Use loading ramps and attach them properly to truck bed. Avoid trucks with steel beds because tracks slip more easily on steel.

**Be careful on slopes.** Use extra care on soft, rocky or frozen ground because machine may slip sideways in these conditions. When traveling up or down steep slopes, keep the bucket or blade on uphill side and just above ground level.

**Ensure solid footing.** Use extra care when operating on stockpile materials, or near banks or excavations that may cave-in and cause machine to tip or fall.



**USE  
SEAT  
BELT**

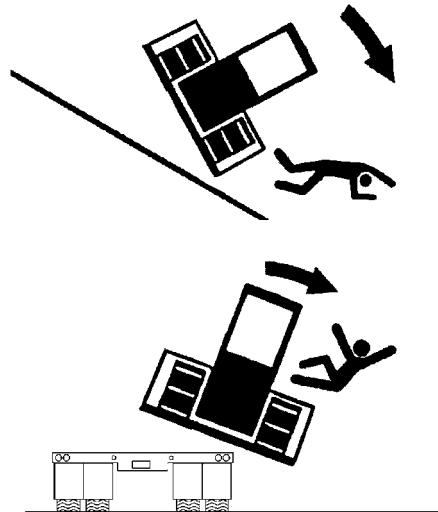

T133716—19—17APR13


T138416—UN—22FEB01

T138415—UN—22FEB01

TX03768,0000B6B -19-03NOV08-1/1

## Prevent Unintended Detonation of Explosive Devices

Avoid serious injury or death from an explosion hazard. Deactivate all cellular or radio frequency devices on equipment stored or operating in an area, such as a blasting zone, where the use of radio transmitting devices are prohibited.

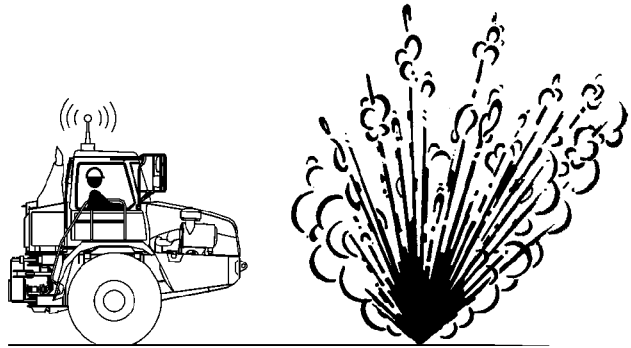

TX1023216—UN—07MAY07

VD76477,0001543 -19-08JAN08-1/1

## Park And Prepare For Service Safely


**Warn others of service work.** Always park and prepare your machine for service or repair properly.

- Park machine on a level surface and lower blade/bucket and attachments to the ground.
- Place park lock lever in “lock” position. Stop engine and remove key.
- Attach a “Do Not Operate” tag in an obvious place in the operator’s station.

Securely support machine or attachment before working under it.

- Do not support machine with blade/bucket or attachments.
- Do not support machine with cinder blocks or wooden pieces that may crumble or crush.
- Do not support machine with a single jack or other devices that may slip out of place.

Understand service procedures before beginning repairs. Keep service area clean and dry. Use two people whenever the engine must be running for service work.

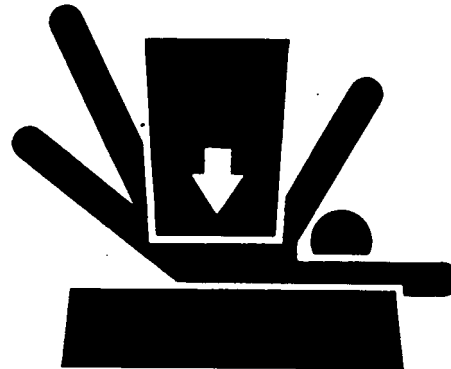

T133332—19—17APR13

TS229—UN—23AUG88

TX03768,0000B6A -19-19OCT09-1/1

## Service Cooling System Safely

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.



TS281—UN—15APR13

DX,RCAP -19-04JUN90-1/1

## Remove Paint Before Welding or Heating


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Remove paint before heating:

- Remove paint a minimum of 100 mm (4 in.) from area to be affected by heating. If paint cannot be removed, wear an approved respirator before heating or welding.
- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

Do not use a chlorinated solvent in areas where welding will take place.

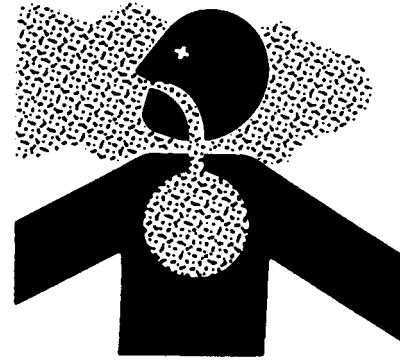

Do all work in an area that is well ventilated to carry toxic fumes and dust away.

Dispose of paint and solvent properly.

DX,PAINT -19-24JUL02-1/1

TS220—UN—15APR13

## Make Welding Repairs Safely

**IMPORTANT: Disable electrical power before welding. Turn off main battery switch or disconnect positive battery cable. Separate harness connectors to engine and vehicle microprocessors.**

Avoid welding or heating near pressurized fluid lines. Flammable spray may result and cause severe burns if pressurized lines fail as a result of heating. Do not let heat go beyond work area to nearby pressurized lines.

Remove paint properly. Do not inhale paint dust or fumes. Use a qualified welding technician for structural repairs.



Make sure there is good ventilation. Wear eye protection and protective equipment when welding.


TX03679,00016D5 -19-11SEP09-1/1

T133547—UN—15APR13

## Drive Metal Pins Safely

Always wear protective goggles or safety glasses and other protective equipment before striking hardened parts. Hammering hardened metal parts such as pins and bucket teeth may dislodge chips at high velocity.

Use a soft hammer or a brass bar between hammer and object to prevent chipping.

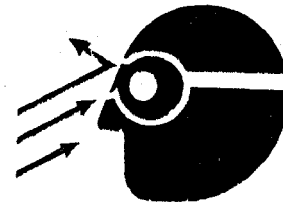

*Hardened Metal Parts*

OOU1065,0000090 -19-06JAN16-1/1

T133738—UN—15APR13

# Section 9001 Diagnostic Trouble Codes

## Contents

	Page		Page
<b>Group 10—Standard Display Monitor (SDM)</b>			
<b>Diagnostic Trouble Codes</b>			
Standard Display Monitor (SDM)		Hydraulic Oil Temperature Sensor	
Diagnostic Trouble Codes .....	9001-10-1	Short to Ground Diagnostic	
000096.03 — Fuel Level Sender Open		Procedure.....	9001-10-10
or Short .....	9001-10-1	001713.31 — Hydraulic Oil Filter	
Fuel Level Sensor Open or Diagnostic		Restricted .....	9001-10-11
Procedure.....	9001-10-1	Hydraulic Oil Filter Restricted	
000096.04 — Fuel Level Sender Short		Diagnostic Procedure.....	9001-10-11
to Gnd .....	9001-10-2	002000.09 — CAN Comm No ECU	
Fuel Level Sensor Open or		Config.....	9001-10-11
Short.....	9001-10-3	CAN Communication Error (No ECU	
000107.03 — Eng Air Filter Short to		Configuration).....	9001-10-11
Power .....	9001-10-3	003156.09 — CAN Blade Mode	
Engine Air Filter Restriction Switch		Missing From EHC .....	9001-10-12
Short to Power Diagnostic		SDM Not Receiving Blade Mode	
Procedure.....	9001-10-3	Signal From EHC Diagnostic	
000107.04 — Eng Air Filter		Procedure.....	9001-10-12
Restricted .....	9001-10-4	003359.31 — Trans Oil Filter	
Engine Air Filter Restricted Diagnostic		Restricted .....	9001-10-13
Procedure.....	9001-10-4	Transmission Oil Filter Restricted	
000177.03 — Trans Oil Temp Short to		Diagnostic Procedure.....	9001-10-13
Power .....	9001-10-5		
Transmission Oil Temperature		<b>Group 20—Engine Control Unit (ECU)</b>	
Sensor Short to Power Diagnostic		<b>Diagnostic Trouble Codes</b>	
Procedure.....	9001-10-5	Engine Control Unit (ECU)	
000177.04 — Trans Oil Temp Short to		Diagnostic Trouble Codes .....	9001-20-1
Gnd .....	9001-10-6	000091.09 — CAN Throttle Missing	
Transmission Oil Temperature Sensor		from TCU.....	9001-20-1
Short to Ground Diagnostic		No Throttle Sensor Signal from TCU	
Procedure.....	9001-10-6	Diagnostic Procedure.....	9001-20-1
000177.16 — Transmission Oil			
Temperature High.....	9001-10-7	<b>Group 30—Transmission Control Unit (TCU)</b>	
Transmission Oil Temperature		<b>Diagnostic Trouble Codes</b>	
High.....	9001-10-7	Transmission Control Unit (TCU)	
000609.09 — CAN Comm No TCU		Diagnostic Trouble Codes .....	9001-30-1
Msg .....	9001-10-7	!CAL — Calibrate TCU .....	9001-30-1
CAN Communication Error (No		Transmission Control Unit	
TCU Message) Diagnostic		Not Calibrated Diagnostic	
Procedure.....	9001-10-7	Procedure.....	9001-30-1
001638.00 — Hydraulic Oil High		F311 — Sensor Supply Short to	
Temp .....	9001-10-8	Gnd .....	9001-30-1
Hydraulic Oil Temperature High		Sensor Supply Short to Ground	
Diagnostic Procedure.....	9001-10-8	Diagnostic Procedure.....	9001-30-1
001638.03 — Hydraulic Oil Temp Short		F314 — Sensor Supply Short to	
to Power .....	9001-10-9	Power .....	9001-30-2
Hydraulic Oil Temperature Sensor		Sensor Supply Short to Power	
Short to Power Diagnostic		Diagnostic Procedure.....	9001-30-2
Procedure.....	9001-10-9	F321 — TCU System Volts Too	
001638.04 — Hydraulic Oil Temp Short		Low.....	9001-30-3
to Gnd .....	9001-10-10	Transmission Control Unit System	
		Voltage Is Too Low Diagnostic	
		Procedure.....	9001-30-3

Continued on next page

Page	Page		
F324 — TCU System Volts Too High.....	9001-30-4	F345 — Steer Sensor Short to Power .....	9001-30-14
Transmission Control Unit System Voltage Is Too High Diagnostic Procedure.....	9001-30-4	Steer Sensor Short to Power Diagnostic Procedure.....	9001-30-14
F330 — FNR Sensor Open or Short.....	9001-30-5	F346 — Steer Sensor Min Cal Too Low.....	9001-30-15
TCL Sensor Open or Short Diagnostic Procedure.....	9001-30-5	Steer Sensor Minimum Calibration Value Too Low Diagnostic Procedure.....	9001-30-15
F331 — FNR Input Less Than Min Cal.....	9001-30-6	F347 — Steer Sensor Min Cal Too High.....	9001-30-15
FNR Sensor Input Less Than Minimum Calibration Value Diagnostic Procedure.....	9001-30-6	Right Steer Sensor Minimum Calibration Value Too High Diagnostic Procedure.....	9001-30-15
F334 — FNR Input Greater Than Max Cal.....	9001-30-6	F348 — Steer Sensor Max Cal Too Low.....	9001-30-16
TCL Sensor Input Greater Than Maximum Calibration Value Diagnostic Procedure.....	9001-30-7	Steer Sensor Maximum Calibration Value Too Low Diagnostic Procedure.....	9001-30-16
F335 — FNR Sensor Short to Power.....	9001-30-7	F349 — Steer Sensor Max Cal Too High.....	9001-30-17
TCL Sensor Short to Power Diagnostic Procedure.....	9001-30-7	Steer Sensor Maximum Calibration Value Too High Diagnostic Procedure.....	9001-30-17
F336 — FNR Sensor Min Cal Too Low.....	9001-30-8	F350 — Decelerator Sensor Open or Short.....	9001-30-18
TCL Sensor Minimum Calibration Value Too Low Diagnostic Procedure.....	9001-30-8	Decelerator Sensor Voltage Is Open or Short Diagnostic Procedure .....	9001-30-18
F337 — FNR Sensor Min Cal Too High.....	9001-30-9	F351 — Decelerator Sensor Input Less Than Min Cal.....	9001-30-19
TCL Sensor Minimum Calibration Value Too High Diagnostic Procedure.....	9001-30-9	Decelerator Sensor Input Voltage Is Less Than Minimum Calibration Value Diagnostic Procedure.....	9001-30-19
F338 — FNR Sensor Max Cal Too Low.....	9001-30-9	F354 — Decelerator Sensor Input Greater Than Max Cal.....	9001-30-20
TCL Sensor Maximum Calibration Value Too Low Diagnostic Procedure.....	9001-30-9	Decelerator Sensor Input Voltage Is Greater Than Maximum Calibration Value Diagnostic Procedure.....	9001-30-20
F339 — FNR Sensor Max Cal Too High.....	9001-30-10	F355 — Decelerator Sensor Short to Power .....	9001-30-21
TCL Sensor Maximum Calibration Value Too High Diagnostic Procedure.....	9001-30-10	Decelerator Sensor Voltage Short to Power Diagnostic Procedure.....	9001-30-21
F340 — Steer Sensor Open or Short.....	9001-30-11	F356 — Decelerator Sensor Min Cal Too Low.....	9001-30-21
Steer Sensor Open or Short Diagnostic Procedure.....	9001-30-11	Decelerator Sensor Minimum Calibration Is Too Low Diagnostic Procedure.....	9001-30-22
F341 — Steer Sensor Input Less Than Min Cal.....	9001-30-12	F357 — Decelerator Sensor Min Cal Too High.....	9001-30-22
Steer Sensor Input Less Than Minimum Calibration Value Diagnostic Procedure.....	9001-30-12	Decelerator Sensor Minimum Calibration Is Too High Diagnostic Procedure.....	9001-30-22
F344 — Steer Sensor Input Greater Than Max Cal.....	9001-30-13	F358 — Decelerator Sensor Max Cal Too Low.....	9001-30-23
Left Steer Sensor Input Greater Than Maximum Calibration Value Diagnostic Procedure.....	9001-30-13	Decelerator Sensor Maximum Calibration Is Too Low Diagnostic Procedure.....	9001-30-23

Continued on next page

Page	Page
F359 — Decelerator Sensor Max Cal Too High.....9001-30-24	Left Forward Pump Threshold Calibration Value Too High Diagnostic Procedure.....9001-30-36
Decelerator Sensor Maximum Calibration Value Is Too High Diagnostic Procedure.....9001-30-24	F3A8 — Left Fwd Pump Max Spd Cal Low.....9001-30-36
F370 — Left Speed Sensor Short.....9001-30-25	Left Forward Pump Max Speed Calibration Value Too Low Diagnostic Procedure.....9001-30-37
Left Speed Sensor Short Diagnostic Procedure.....9001-30-25	F3A9 — Left Fwd Pump Max Spd Cal High.....9001-30-37
F372 — Left Speed Sensor Open .....9001-30-26	Left Forward Pump Max Speed Calibration Value Too High Diagnostic Procedure.....9001-30-37
Left Speed Sensor Open Diagnostic Procedure.....9001-30-26	F3B3 — Brake Solenoid No Response.....9001-30-37
F373 — Left Speed Sensor No Response.....9001-30-27	Park Brake Solenoid No Response Diagnostic Procedure.....9001-30-37
Left Speed Sensor No Response Diagnostic Procedure.....9001-30-27	F3B8 — Decelerator Sensor Brake Cal Too Low.....9001-30-38
F375 — Left Speed Sensor Short to Power.....9001-30-28	Decelerator Sensor Brake Calibration Is Too Low Diagnostic Procedure.....9001-30-39
Left Speed Sensor Short to Power Diagnostic Procedure.....9001-30-28	F3B9 — Decelerator Sensor Brake Cal Too High.....9001-30-39
F380 — Right Speed Sensor Short.....9001-30-28	Decelerator Sensor Brake Calibration Is Too High Diagnostic Procedure.....9001-30-39
Right Speed Sensor Short Diagnostic Procedure.....9001-30-29	F3C0 — Right Fwd Pump Coil Short.....9001-30-40
F382 — Right Speed Sensor Signal Open .....9001-30-29	Right Forward Pump Coil Short Diagnostic Procedure.....9001-30-40
Right Speed Sensor Open Diagnostic Procedure.....9001-30-29	F3C5 — Right Fwd Pump Coil Open .....9001-30-41
F383 — Right Speed Sensor No Response.....9001-30-30	Right Forward Pump Coil Open Diagnostic Procedure.....9001-30-41
Right Speed Sensor No Response Diagnostic Procedure.....9001-30-30	F3C6 — Right Fwd Pump Thresh Cal Low.....9001-30-42
F385 — Right Speed Sensor Short to Power.....9001-30-31	Right Forward Pump Threshold Calibration Value Too Low Diagnostic Procedure.....9001-30-42
Right Speed Sensor Short to Power Diagnostic Procedure.....9001-30-31	F3C7 — Right Fwd Pump Thresh Cal High.....9001-30-43
F393 — CAN Comm No Engine Speed.....9001-30-32	Right Forward Pump Threshold Calibration Value Too High Diagnostic Procedure.....9001-30-43
CAN Communication Error, No Engine Speed Message Received from ECU Diagnostic Procedure.....9001-30-32	F3C8 — Right Fwd Pump Max Spd Cal Low.....9001-30-44
F3A0 — Left Fwd Pump Coil Short.....9001-30-33	Right Forward Pump Max Speed Calibration Value Too Low Diagnostic Procedure.....9001-30-44
Left Forward Pump Coil Short Diagnostic Procedure.....9001-30-33	F3C9 — Right Fwd Pump Max Spd Cal High.....9001-30-44
F3A5 — Left Fwd Pump Coil Open .....9001-30-34	Right Forward Pump Max Speed Calibration Value Too High Diagnostic Procedure.....9001-30-44
Left Forward Pump Coil Open Diagnostic Procedure.....9001-30-34	F3D0 — Right Rev Pump Coil Short.....9001-30-45
F3A6 — Left Fwd Pump Thresh Cal Low.....9001-30-35	
Left Forward Pump Threshold Calibration Value Too Low Diagnostic Procedure.....9001-30-35	
F3A7 — Left Fwd Pump Thresh Cal High.....9001-30-36	

Continued on next page

Page	Page		
Right Reverse Pump Coil Short Diagnostic Procedure.....	9001-30-45	F3H4 — FNR Neut Switch Open Circuit.....	9001-30-54
F3D5 — Right Rev Pump Coil Open .....	9001-30-46	Neutral Start Switch Open Circuit Diagnostic Procedure.....	9001-30-54
Right Reverse Pump Coil Open Diagnostic Procedure.....	9001-30-46	F3H6 — FNR Neut Switch Min Cal Too Low.....	9001-30-55
F3D6 — Right Rev Pump Thresh Cal Low.....	9001-30-46	Neutral Start Switch Minimum Calibration Value Too Low Diagnostic Procedure.....	9001-30-55
Right Reverse Pump Threshold Calibration Value Too Low Diagnostic Procedure.....	9001-30-47	F3H7 — FNR Neut Switch Min Cal Too High.....	9001-30-56
F3D7 — Right Rev Pump Thresh Cal High.....	9001-30-47	Neutral Start Switch Minimum Calibration Value Too High Diagnostic Procedure.....	9001-30-56
Right Reverse Pump Threshold Calibration Value Too High Diagnostic Procedure.....	9001-30-47	F3H8 — FNR Neut Switch Max Cal Too Low.....	9001-30-57
F3D8 — Right Rev Pump Max Spd Cal Low.....	9001-30-48	Neutral Start Switch Maximum Calibration Value Too Low Diagnostic Procedure.....	9001-30-57
Right Reverse Pump Max Speed Calibration Value Too Low Diagnostic Procedure.....	9001-30-48	F3H9 — FNR Neut Switch Max Cal Too High .....	9001-30-58
F3D9 — Right Rev Pump Max Spd Cal High.....	9001-30-48	Neutral Start Switch Maximum Calibration Value Too High Diagnostic Procedure.....	9001-30-58
Right Reverse Pump Max Speed Calibration Value Too High Diagnostic Procedure.....	9001-30-48	F3K3 — Right Motor Sol No Response .....	9001-30-59
F3E0 — Left Rev Pump Coil Short.....	9001-30-49	Right Motor Solenoid No Response Diagnostic Procedure.....	9001-30-59
Left Reverse Pump Coil Open Diagnostic Procedure.....	9001-30-49	F3K8 — Right Motor Max Cal Too Low.....	9001-30-60
F3E5 — Left Rev Pump Coil Open .....	9001-30-49	Right Motor Maximum Calibration Value Too Low Diagnostic Procedure.....	9001-30-60
Left Reverse Pump Coil Open Diagnostic Procedure.....	9001-30-50	F3K9 — Right Motor Max Cal Too High.....	9001-30-61
F3E6 — Left Rev Pump Thresh Cal Low.....	9001-30-50	Right Motor Maximum Calibration Value Too High Diagnostic Procedure.....	9001-30-61
Left Reverse Pump Threshold Calibration Value Too Low Diagnostic Procedure.....	9001-30-50	F3L3 — Left Motor Sol No Response .....	9001-30-61
F3E7 — Left Rev Pump Thresh Cal High.....	9001-30-51	Left Motor Solenoid No Response Diagnostic Procedure.....	9001-30-61
Left Reverse Pump Threshold Calibration Value Too High Diagnostic Procedure.....	9001-30-51	F3L8 — Left Motor Max Cal Too Low.....	9001-30-62
F3E8 — Left Rev Pump Max Spd Cal Low.....	9001-30-52	Left Motor Maximum Calibration Value Too Low Diagnostic Procedure.....	9001-30-62
Left Reverse Pump Max Speed Calibration Value Too Low Diagnostic Procedure.....	9001-30-52	F3L9 — Left Motor Max Cal Too High.....	9001-30-63
F3E9 — Left Rev Pump Max Spd Cal High.....	9001-30-52	Left Motor Maximum Calibration Value Too High Diagnostic Procedure.....	9001-30-63
Left Reverse Pump Max Speed Calibration Value Too High Diagnostic Procedure.....	9001-30-52	F3P0 — Park Lock Lever Inputs Both On .....	9001-30-63
F3H1 — FNR Neut Switch Short Circuit.....	9001-30-53	Park Lock Lever Inputs Both On Diagnostic Procedure.....	9001-30-63
Neutral Start Switch Open Circuit Diagnostic Procedure.....	9001-30-53	F3P5 — Park Lock Lever Inputs Both Off .....	9001-30-64

Continued on next page