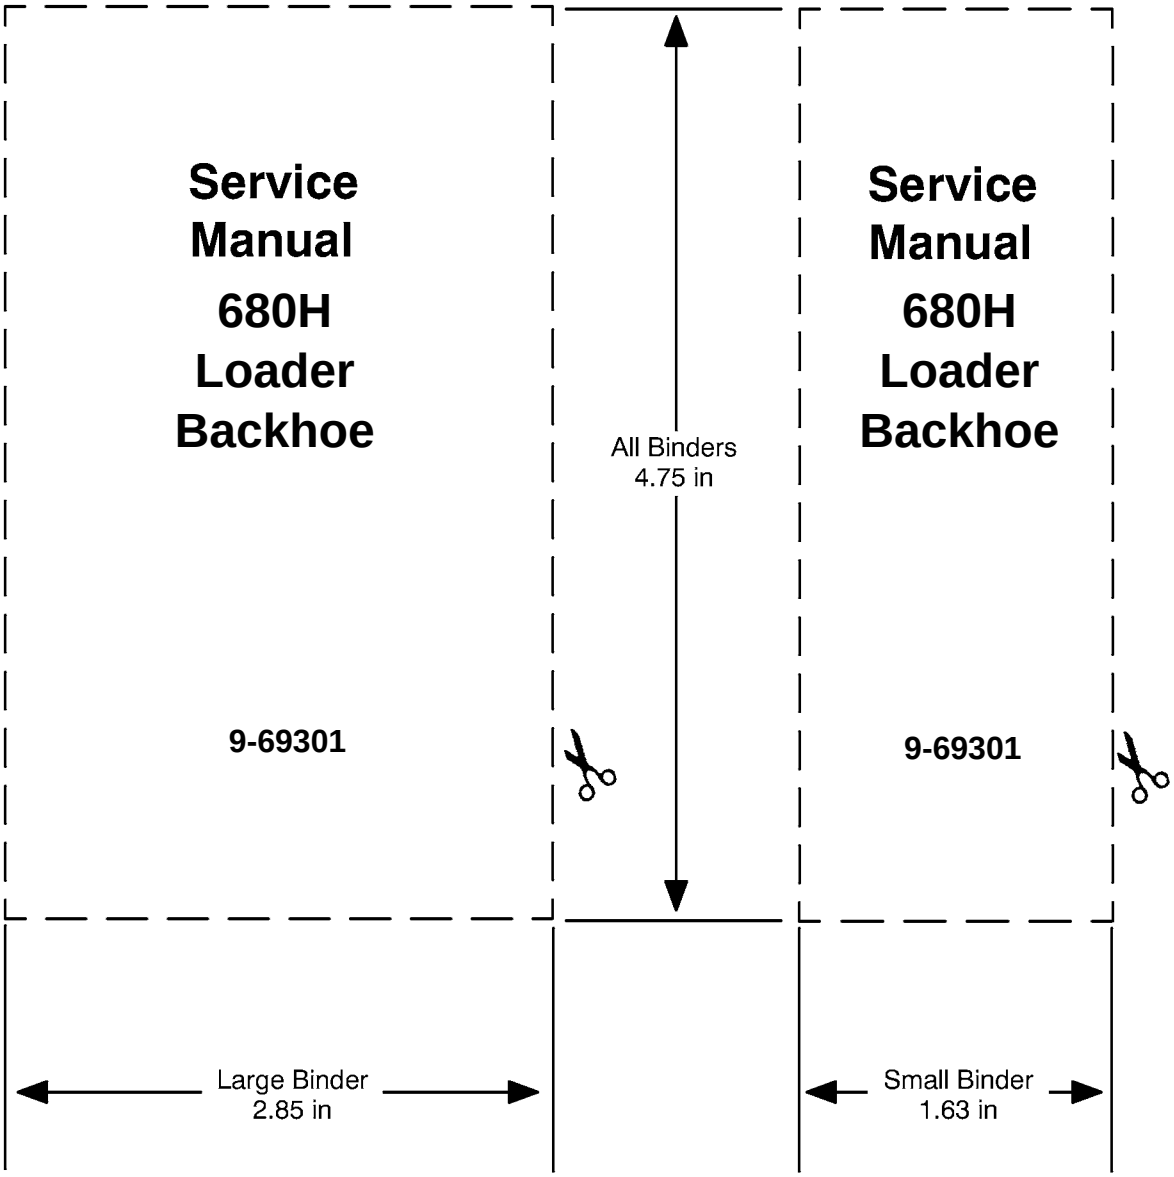
Service
Manual
680H
Loader
Backhoe
9-69301
All Binders
4.75 in
Service
Manual
680H
Loader
Backhoe
9-69301
Large Binder
2.85 in
Small Binder
1.63 in

680H LOADER BACKHOE

TABLE OF CONTENTS

DIVISION/SECTION	SECTION NO.	FORM NO.
1 - GENERAL		
Safety Rules, Service Manual Introduction, and Torque Specifications	1001	9-69300
Maintenance and Lubrication	1002	9-69300
General Engine Specifications	1010	8-23130
Detailed Engine Specifications - 336BD Engines	1023	9-78647
2 - ENGINES		
Engine Diagnosis - See Section 2201		
Engine Tune-Up	2002	8-23140
Engine Stall Tests	2003	9-69300
Engine Removal and Installation	2004	9-69301
Engine Accessories (Air cleaner, muffler, exhaust pipe, radiator, cold start system)	2005	9-69300
Cylinder Head, Valve Train, and Camshaft	2015	8-23150
Cylinder Block, Sleeves, Pistons, and Rods	2025	8-23160
Crankshaft, Main Bearings, Flywheel, and Oil Seals	2035	8-23170
Lubrication System with Two Gear Balancer and Oil Pump	2047	8-23180
Cooling System	2055	8-23190
Engine Diagnosis	2201	8-20110
Reconditioning Engine Cylinder Block	2290	8-21170
3 - FUEL SYSTEM		
Fuel System and Filters	3010	9-75297
Robert Bosch Fuel Injection Pumps	3012	9-74937
17 mm Fuel Injectors	3213	8-20240
Fuel Lines, Fuel Tank, and Engine Controls	3052	9-69300
Electric Fuel Pump	3053	9-69300
4 - ELECTRICAL		
Electrical System Troubleshooting	4002	9-69301
Wiring Diagrams	4003	9-69301
Batteries	4005	9-69301
Starter	4006	9-69300
Alternator	4007	9-69300
Instrument Cluster and Instrument Panel	4009	9-69300
5 - STEERING		
Steering System Troubleshooting	5002	9-69300
Steering Control Valve and Steering Column	5007	9-69300
Steering Cylinders	5010	9-69300
Relief Valve and Check Valve	5011	9-69300
Front Axle	5021	9-69300

Printed in U.S.A.
Issued September 1981
Revised April 1982

DIVISION/SECTION	SECTION NO.	FORM NO.
6 - POWER TRAIN		
General Transmission Information and Troubleshooting	6202	9-69301
Transmission	6210	9-69301
Transmission Controls	6211	9-69300
Drive Shaft	6222	9-69300
Differential and Planetaries	6226	9-69301
Wheels and Tires	6229	9-69300
7 - BRAKES		
Troubleshooting and General Information for the Air System	7102	9-69300
Air Compressor and Governor	7103	9-69301
Air Reservoir and Relief Valve	7104	9-69300
Brake Valves (Treadles)	7105	9-69300
Brake Actuators	7107	9-69300
Alcohol Evaporator	7111	9-69300
Pressure Reducer Valve, Pressure Protection Valve, Double Check Valve, Control Valves for Clutch Cutout and Stoplamp Switch	7113	9-69300
Brakes and Brake Adjusters	7123	9-69300
Parking Brake Control Valve and Quick Release Valve	7126	9-69300
8 - HYDRAULICS		
Hydraulic System Diagrams, Maintenance, Troubleshooting, and Pressure Checks	8002	9-69300
Cleaning the Hydraulic System	8003	9-69300
Hydraulic Pump	8005	9-69300
Flow Control Valve	8006	9-69300
Loader Control Valve	8007	9-69300
Loader and Backhoe Cylinders	8090	9-69300
Backhoe Relief Valve	8106	9-69301
Backhoe Control Valve	8107	9-69300
Stabilizer Control Valve	8109	9-69300
Boom Lock System	8121	9-69300
9 - MOUNTED EQUIPMENT		
Air Conditioning Troubleshooting	9002	9-69300
Air Conditioning System	9003	9-69301
Loader	9010	9-69300
Cab and Canopy	9061	9-69300
Operators Seat and Seat Belts	9064	9-69300
Backhoe	9100	9-69301
Decals and Painting	9201	9-69300
Noise Control	9203	9-69300

Section
1001

SAFETY RULES
SERVICE MANUAL INTRODUCTION
AND
TORQUE SPECIFICATIONS

Written In *Clear*
And
Simple
English

CASE CORPORATION

9-69300
September 1981

PRINTED IN U.S.A.

Thanks very much for your reading,

Want to get more information,

Please click here, Then get the complete manual

JustClickHere

NOTE:

If there is no response to click on the link above, please download the PDF document first, and then click on it.

Have any questions please write to me:
admin@servicemanualperfect.com

SAFETY RULES

This Symbol Shows Important Information About Safety In This Manual. When You See This Symbol, Carefully Read The Information That Follows and Understand The Possible Causes of Injury Or Death. 1-1-A

IMPORTANT: *To prevent injury on job, follow the Warning, Caution, and Danger notes in this section and other sections throughout this manual. Follow the instructions carefully.*

The procedures recommended and shown in this manual are good, effective service methods. However, all possible procedures and service hazards may not be covered. Therefore, if you use a tool or procedure not recommended, you must make sure that the method you select is a safe method.

Put the warning tag shown below on the key for the key switch when you are servicing or repair- ing this machine. One warning tag is on every new machine. You can buy additional warning tags, part number 331-4614, from Service Parts Supply.

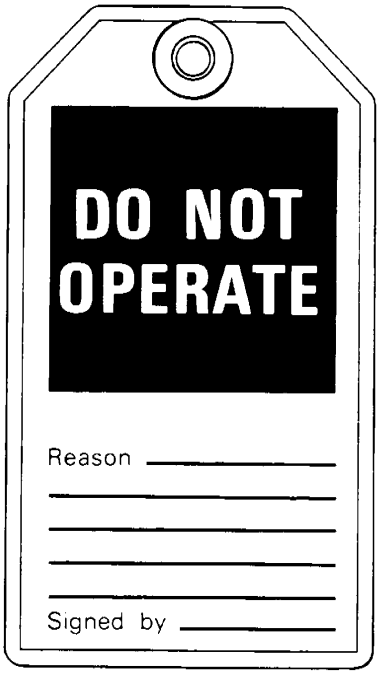

780449

DANGER: *Engine exhaust fumes can cause death. If it is necessary to start the engine in a closed place, remove the exhaust fumes from the area with an exhaust pipe extension. If you do not have an exhaust pipe extension, open the doors and get outside air into the area.* 48-56

DANGER: *Before you move the backhoe boom to either side, make sure that all persons are out of the way. A swinging boom can crush.* 48-54

WARNING: *Read operator's manual to familiarize yourself with control lever functions.* 46-27

WARNING: *Operate tractor and equipment controls from the seat position only. Any other method could result in serious injury.* 48-55

WARNING: *This is a one man machine, no riders allowed.* 35-8

WARNING: *If you wear clothing that is too loose or do not use the correct safety equipment for your job, you can be injured. Always wear clothing that will not catch on objects. Extra safety equipment that can be required includes hard hat, safety shoes, ear protection, eye or face protection, heavy gloves and reflector clothing.* 45-3-A

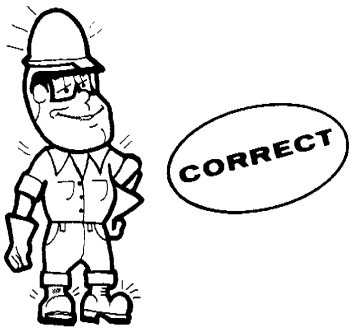

WARNING: *When working in the area of the fan belt with the engine running, avoid loose clothing if possible, and use extreme caution.* 35-4

WARNING: *Operate controls from the operator's seat only.* 35-7

WARNING: *Whenever the bucket must be raised to aid in servicing, block the loader arms in place with lift cylinder safety strut or a suitable safety stand.* 23-7-A

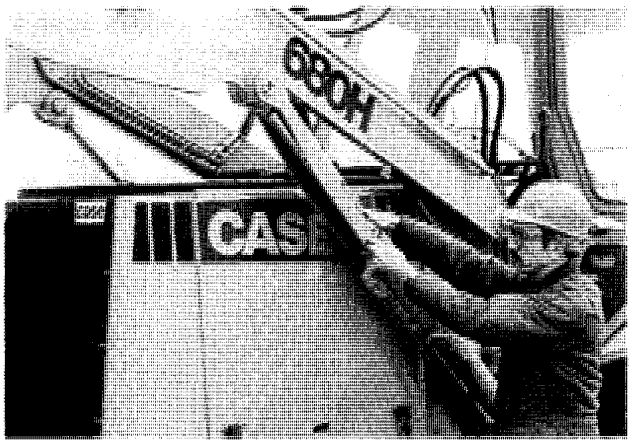

Lift Cylinder Safety Strut

WARNING: *When doing checks and tests on the equipment hydraulics, follow the procedures as they are written. DO NOT change the procedure.* 47-44

WARNING: *When putting the hydraulic cylinders on this machine through the necessary cycles to check operation or to remove air from a circuit, make sure all people are out of the way.* 47-45

WARNING: *Locate the machine on level ground and block the wheels securely before working under the machine. Failure to follow the above procedure can result in personal injury.* 46-77

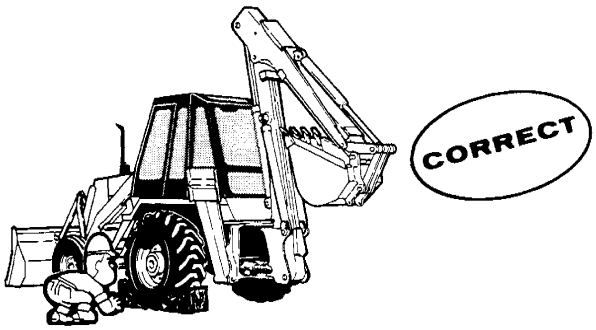

WARNING: *Use insulated gloves or mittens when working with hot parts.* 47-41A

CAUTION: *Pin sized and smaller streams of hydraulic oil under pressure can penetrate the skin and result in serious infection. If hydraulic oil under pressure does penetrate the skin, seek medical treatment immediately. Maintain all hoses and tubes in good condition. Make sure all connections are tight. Make a replacement of any tube or hose that is damaged or thought to be damaged. DO NOT use your hand to check for leaks; use a piece of cardboard or wood.* 40-6-A

CAUTION: *When removing hardened pins such as a pivot pin, or a hardened shaft, use a soft head (brass or bronze) hammer or use a driver made from brass or bronze and a steel head hammer.* 46-17

CAUTION: *When using a hammer to remove and install pivot pins or separate parts, using compressed air or using a grinder, wear eye protection that completely encloses the eyes (approved goggles or other approved eye protectors).* 46-13

CAUTION: *When servicing or repairing the machine, keep the shop floor and operator's compartment and steps free of oil, water, grease, tools, etc. Use an oil absorbing material and/or shop cloths as required. Use safe practices at all times.* 40-8

CAUTION: *Use suitable floor (service) jacks or chain hoists to raise wheels off the floor. Always block machine in place with suitable safety stands.* 40-7

CAUTION: *Some components of this machine are very heavy. Use suitable lifting equipment or additional help as instructed in this service manual.* 40-10

SERVICE MANUAL INTRODUCTION

This service manual has been prepared with the latest service information available. Troubleshooting, removal, disassembly, inspection and installation procedures, and complete specifications and tightening references can be found in most sections. Some sections have drawings with a written procedure because the job is so easily done. This service manual is one of the most important tools available to the service technician.

Right-Hand and Left-Hand

The terms right-hand and left-hand and front and rear as used in this manual indicate the right and left sides, and front and rear of the machine as seen from the operator's seat for correct operation of the machine or attachment.

Text

If the service manual is for more than one machine or different models of components (planetary axles, gear boxes, control valves, etc.) the procedures have the steps necessary to service each model.

Table of Contents

A Table of Contents is in the front of this manual. The Table of Contents shows the main divisions and the sections that are in each division. The individual sections, where necessary, have a Table of Contents on the second page of that section.

Page Numbers

All page numbers are made of two numbers separated by a dash, such as 4002-9. The number before the dash is the section number. The number following the dash is the page number in that section. Page numbers will be found at the upper right or left of each page.

Illustrations

Illustrations are put as near as possible to the text and are to be used as part of the text.

Torque Specifications

The most common grades of fasteners (bolts, nuts, and screws) used on Case machines are grade 5 and grade 8. See page 1001-6 for torque specifications and identification marks.

The specifications in this section are standard torque values and are to be used on all fasteners during assembly and installation unless special torque values are shown in a section.

P.I.N., Serial and Model Numbers

When replacement parts are needed, it can be necessary to give the parts department one or all of the numbers. The model number is normally found on the Product Identification Number plate or Serial Number plate.

The Product Identification Number (P.I.N.) and serial numbers will be found in the following locations.

Machine - The Product Identification Number plate is above the foot brake pedals.

Engine - A serial number plate is on the right-hand side of the engine above the starter.

Components - A serial number plate is on many components such as starters, alternators, pumps, etc.

Classification of Lubricants

The SAE number is the viscosity of engine oils; for example, SAE 30, a single viscosity oil. SAE 10W30 is a variable viscosity oil.

The API classification (SD, CD, etc.) is the oil performance in terms of engine usage. Only oil specified in Section 1002 can be used. These oils have the needed chemical additives to give maximum engine protection. Both the SAE grade and API classification must be found on the container.

Gear Lubricant and Grease

Gear lubricant and grease for each application is specified in Section 1002.

Special Tools

Special tools are needed to remove and install, disassemble and assemble, check and adjust some component parts of this machine. Some special tools can be easily made locally and the necessary information to make the tool is in this service manual. Other special tools are more difficult to make locally and are available from Service Tools in the U.S. and from Jobborn Manufacturing in Canada. Use these tools according to the instructions in this service manual for your personal safety and to do the job correctly.

Order special tools from either of the following companies:

Service Tools
P.O. Box 314
Owatonna, Minnesota 55060

Jobborn Manufacturing Co.
97 Frid Street
Hamilton, Ontario L8P 4M3
Canada

TORQUE SPECIFICATIONS - U.S. HARDWARE

Use the following torques when special torques are not given.

These torques apply to fasteners as received from suppliers, dry, or when lubricated with engine oil. These torques do not apply if special graphites, moly-disulfide greases or other extreme pressure lubricants are used. These torques apply to both UNC and UNF threads.

Grade 2 Bolts, Nuts, and Studs

Size	Pound-Feet	Newton metres	Kilogram metres
1/4 in 6.4 mm	5-6	7-8	0.7-0.8
5/16 in 7.9 mm	10-12	14-16	1.4-1.7
3/8 in 9.5 mm	20-23	27-31	2.8-3.2
7/16 in 11.1 mm	30-35	41-47	4.1-4.8
1/2 in 12.7 mm	45-52	61-71	6.2-7.2
9/16 in 14.3 mm	65-75	88-102	9.0-10.4
5/8 in 15.9 mm	95-105	129-142	13.1-14.5
3/4 in 19.0 mm	150-185	203-251	20.7-25.6
7/8 in 22.2 mm	160-200	217-271	22.1-27.7
1.0 in 25.4 mm	250-300	339-407	34.6-41.5

Grade 5 Bolts, Nuts, and Studs

Size	Pound-Feet	Newton metres	Kilogram metres
1/4 in 6.4 mm	9-11	12-15	1.2-1.5
5/16 in 7.9 mm	17-21	23-28	2.4-2.9
3/8 in 9.5 mm	35-42	48-57	4.8-5.8
7/16 in 11.1 mm	54-64	73-87	7.5-8.8
1/2 in 12.7 mm	80-96	109-130	11.1-13.3
9/16 in 14.3 mm	110-132	149-179	15.2-18.2
5/8 in 15.9 mm	150-180	203-244	20.8-24.9
3/4 in 19.0 mm	270-324	366-439	37.3-44.8
7/8 in 22.2 mm	400-480	542-651	55.3-66.4
1.0 in 25.4 mm	580-696	787-944	80.2-96.2
1-1/8 in 28.6 mm	800-880	1085-1193	111-122
1-1/4 in 31.8 mm	1120-1240	1519-1681	155-171
1-3/8 in 34.9 mm	1460-1680	1980-2278	202-232
1-1/2 in 38.1 mm	1940-2200	2631-2983	268-304

811360

Grade 8 Bolts, Nuts, and Studs

Size	Pound-Feet	Newton metres	Kilogram metres
1/4 in 6.4 mm	12-15	16-20	1.7-2.1
5/16 in 7.9 mm	24-29	33-39	3.3-4.0
3/8 in 9.5 mm	45-54	61-73	6.2-7.5
7/16 in 11.1 mm	70-84	95-114	9.7-11.6
1/2 in 12.7 mm	110-132	149-179	15.2-18.2
9/16 in 14.3 mm	160-192	217-260	22.1-26.5
5/8 in 15.9 mm	220-264	298-358	30.4-36.5
3/4 in 19.0 mm	380-456	515-618	52.5-63.0
7/8 in 22.2 mm	600-720	814-976	83.0-99.5
1.0 in 25.4 mm	900-1080	1220-1465	124-149
1-1/8 in 28.6 mm	1280-1440	1736-1953	177-199
1-1/4 in 31.8 mm	1820-2000	2468-2712	252-277
1-3/8 in 34.9 mm	2380-2720	3227-3688	329-376
1-1/2 in 38.1 mm	3160-3560	4285-4827	437-492

NOTE: Use thick nuts with Grade 8 bolts.

Split Flange Mounting Bolts

Size	Pound-Feet	Newton metres	Kilogram metres
5/16-18	15-20	20-27	2.1-2.8
3/8-16	20-25	26-33	2.8-3.5
7/16-14	34-45	47-61	4.7-6.2
1/2-13	55-65	74-88	7.6-9.0
5/8-11	140-150	190-203	19.4-20.7

Steel Hydraulic Fittings

Tube OD Hose ID	Thread Size	Pound-Feet	Newton metres	Kilogram metres
37 Degree Flare Fittings				
1/4 in 6.4 mm	7/16-20	6-12	8-16	0.8-1.7
5/16 in 7.9 mm	1/2-20	8-16	11-21	1.1-2.2
3/8 in 9.5 mm	9/16-18	10-25	14-33	1.4-3.5
1/2 in 12.7 mm	3/4-16	15-42	20-56	2.1-5.8
5/8 in 15.9 mm	7/8-14	25-58	34-78	3.5-8.0
3/4 in 19.0 mm	1-1/16-12	40-80	54-108	5.5-11.1
7/8 in 22.2 mm	1-3/16-12	60-100	81-135	8.3-13.9
1.0 in 25.4 mm	1-5/16-12	75-117	102-158	10.4-16.2
1-1/4 in 31.8 mm	1-5/8-12	125-165	169-223	17.3-22.8
1-1/2 in 38.1 mm	1-7/8-12	210-250	285-338	29.0-34.6
Straight Threads with O-ring				
1/4 in 6.4 mm	7/16-20	12-19	16-25	1.7-2.6
5/16 in 7.9 mm	1/2-20	16-25	22-33	2.2-3.5
3/8 in 9.5 mm	9/16-18	25-40	34-54	3.5-5.5
1/2 in 12.7 mm	3/4-16	42-67	57-90	5.8-9.3
5/8 in 15.9 mm	7/8-14	58-92	79-124	8.0-12.7
3/4 in 19.0 mm	1-1/16-12	80-128	108-174	11.1-17.8
7/8 in 22.2 mm	1-3/16-12	100-160	136-216	13.8-22.1
1.0 in 25.4 mm	1-5/16-12	117-187	159-253	16.2-25.9
1-1/4 in 31.8 mm	1-5/8-12	165-264	224-357	22.8-36.5
1-1/2 in 38.1 mm	1-7/8-12	250-400	339-542	34.6-55.3

Section 1002

MAINTENANCE AND LUBRICATION

Written In *Clear And Simple English*

CASE CORPORATION

9-69300
September 1981

PRINTED IN U.S.A.

FLUIDS AND LUBRICANTS

Component	Capacity		Specifications
	U.S.	Metric	
Fuel tank	33 gallons	125 litres	Diesel Fuel, See Operators Manual
Engine crankcase Without filter change With filter change	 15 quarts 16 quarts	 14 litres 15 litres	Case HDM Oil Alternate engine oil: CD-Commercial class D Above 32° F (0° C) ..... SAE 30 -10 - 50° F (-12 - 10° C) ..... SAE 20 Below 32° F (0° C) ..... SAE 10W
Hydraulic reservoir Total system Refill capacity With filter change Without filter change	 40.8 gallons 14.2 gallons 13.6 gallons	 154 litres 54 litres 52 litres	Case TCH Fluid Alternate oils: Automatic transmission fluid (ATF) such as Dexron II
Transmission oil	16 quarts	15.1 litres	Case TCH Fluid
Axle Center Bowl Planetary (each)	 8 quarts 2 quarts	 7.5 litres 1.9 litres	Case FDL multipurpose gear lubricant (API-GL-4) Above 40° F (4° C) ..... SAE 140 -15 to 70° F (-26 to 21° C) ..... SAE 80W -40 to 35° F (-40 to 2° C) ..... SAE 75W
Engine cooling system With heater Without heater	 37 quarts 36 quarts	 35 litres 34 litres	Mix an ethylene glycol coolant with water for the lowest outside temperature that is expected. The mixture must be at least 50/50.
Batteries	As needed		Add drinking water or distilled water
Alcohol evaporator	1 pint	0.5 litres	Clean methyl alcohol
Grease fittings	As needed		Number 2 molydisulfide grease
Wheel bearings	As needed		Number 2 wheel bearing grease

MAINTENANCE CHART

This chart shows maximum service intervals for the correct maintenance of the machine. Some operating conditions will make it necessary to increase the service intervals.

INTERVAL	SERVICE	INSTRUCTIONS
After the first 2 hours of operation, new machine only	Tighten the wheel nuts and bolts.	See Section 6229.
	Tighten the mounting bolts for the rear axle.	See Section 6226.
	Tighten the mounting bolts for the swing cylinders.	See Section 9100.
	Tighten the nut on the upper pivot pin for the swing tower.	See Section 9100.
After the first 20 hours of operation, new machine only	Do the After Delivery Check.	See the Operators Manual.
Every 10 hours of operation or each day, whichever comes first	Lubricate the loader and backhoe pivot points.	
	Lubricate the front axle pivot points.	
	Check the level of the engine oil.	
	Check the level of the coolant in the radiator.	
	Check the level of the hydraulic oil.	See Section 8002.
	Clean the dust cup for the air cleaner, if equipped.	
	Clean or replace all safety and instruction decals that cannot be read.	See Section 9201.
	Remove water from the air reservoir.	
	Check the sediment bowl of the fuel transfer pump. If you see water or sediment, clean the sediment bowl.	
After every 50 hours of operation or each week, whichever comes first	Lubricate the front axle king pins.	
	Lubricate the three grease fittings of the driveshaft	See Section 6222.
	Lubricate the four grease fittings of the brake shafts and brake adjusters	See Section 7123.
	Check the transmission oil level	
	Lubricate the anti-rollback pivots	
Every 100 Hours of Operation	Lubricate the seat post	
	Change the engine oil	
	Lubricate the boom release pivot.	

INTERVAL	SERVICE	INSTRUCTIONS
Every 125 Hours of Operation	If equipped, clean the spark arresting muffler	See Section 2005
Every 200 Hours of Operation	Replace the engine oil filter	
After Every 250 Hours of Operation or Each Month, Whichever Comes First	Lubricate the 4-in-1 loader control pivot, (if equipped)	
	Lubricate the backhoe control pivots	
	Check the oil level in the rear axle planetaries	
	Check the oil level in the rear axle center bowl	
	Replace the transmission oil filter	See Section 6202.
	Clean the screen in the alcohol evaporator	See Section 7111.
Every 500 Hours of Operation	Lubricate the drive coupling for the hydraulic pump	See Section 8005.
	Replace the fuel filters	See Section 3010.
	Lubricate the front wheel bearings	See Section 5021.
	Inspect the ROPS cab or ROPS canopy	See Section 9021.
	Replace the hydraulic filter	See Section 8002.
	Check the engine valve adjustment	See Section 2015.
	Check the drive belt(s) tension	See Section 4007.
	Change the transmission oil	See Section 6202.
	Clean the transmission screen	See Section 6202.
After every 1000 hours of operation or two times a year, whichever comes first	Change the hydraulic oil	See Section 8002.
	Clean the hydraulic oil suction screen.	See Section 8002.
	Change the oil for the rear axle - center bowl	See Section 6226.
	Change the oil for the rear axle - planetaries.	See Section 6226.
	Check the battery fluid level.	See Section 4005.
	Clean the cab air filter (if equipped).	See Section 9061.

INTERVAL	SERVICE	INSTRUCTIONS
After every 2000 hours of operation or each year, whichever comes first	Change the coolant in the radiator. Clean the cooling system.	See Fluids and Lubricants Chart.
	Drain water and sediment from fuel tank.	See Section 3052.
	Replace filter in the air cleaner	See Section 2005
	Disassemble, clean, and replace gaskets in the alcohol evaporator	See Section 7111.
As necessary	Service the air cleaner filters when the air filter warning lamp is illuminated	See Section 2007.
	Replace the hydraulic filter when the warning lamp for the hydraulic filter is illuminated during operation	See Section 8002.
	When a wheel is removed and installed, tighten the bolts for the wheel every two hours until the torque does not change.	See Section 6229.
	Replace the ether can for the ether injection system.	
	Adjust the parking brake	See Section 7106.

Section

1010

GENERAL ENGINE SPECIFICATIONS

680 CK Series H Loader

Written In *Clear*
And
Simple
English

CASE CORPORATION

Rac 8-23130

Printed in U.S.A.
March, 1981

DIESEL ENGINES

General

Type	4 Cylinder, 4 Stroke Cycle, Valve-In-Head
Firing Order	1-3-4-2
Bore	4-5/8 Inches (117.5mm)
Stroke	5 Inches (127mm)
Piston Displacement	336 Cubic Inches (8 259cm³)
Compression Ratio	16.0 to 1
No Load Governed Speed	2300 to 2400 RPM
Rated Engine Speed	2200 RPM
Engine Idling Speed	725 to 775 RPM
Valve Tappet Clearance (Exhaust)	(Cold) 0.025 Inch (0.635mm)
(Intake)	(Cold) 0.015 Inch (0.381mm)
Thermostat Operating Range	175°F to 202°F (79°C to 94°C)

Piston and Connecting Rods

Rings per Piston	3
Number of Compression Rings	2
Number of Oil Rings	1
Type Pins	Full Floating Type
Type Bearing	Steel Back With Copper-Lead or Aluminum Alloy Liners. Replacement Bearings Available.

Main Bearings

Number of Bearings	5
Type Bearings	Steel Back With Copper-Lead or Aluminum Alloy Liners. Replacement Bearings Available.

Engine Lubricating System

Oil Pressure	45 to 60 PSI (310 to 414 kPa) With Engine Warm and Operating at Rated Engine Speed
Type System	Pressure and Spray Circulation
Oil Pump	Gear Type
Oil Filter	Full Flow Turn on Type
Oil Capacity With Filter	15 U.S. Quarts (14.2 litre)
Without Filter	14 U.S. Quarts (13.2 litre)

Fuel System

Fuel Injection Pump	Robert Bosch, Type PES Multiple Plunger
Pump Timing	27 Degrees Before Top Center (Port Closing)
Fuel Injectors	17 mm, Opening Pressure 3950 to 4100 PSI (27 234 to 28 268 kPa)
Fuel Transfer Pump	Plunger Type, Part of Injection Pump
Governor	Variable Speed, Fly-Weight Centrifugal Type, Part of Injection Pump
1st Stage Fuel Filter	Full Flow Turn on Type
2nd Stage Fuel Filter	Full Flow Turn on Type
Hand Primer Pump	Located Top of Fuel Transfer Pump
Primary Fuel Filter	Located Bottom of Fuel Transfer Pump

NOTE: The CASE CORPORATION reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

Section

1023

SPECIFICATION DETAILS

336BD AND 336BDT ENGINE

Written In *Clear And Simple English*

CASE CORPORATION

Rac 9-78647

Printed in U.S.A.
March, 1981

FRACTION to DECIMAL to MILLIMETER CONVERSION TABLE

Fraction	Decimal	MM	Fraction	Decimal	MM	Fraction	Decimal	MM
1/64	.0156	0.397	23/64	.3593	9.128	45/64	.7031	17.859
1/32	.0312	0.794	3/8	.3750	9.525	23/32	.7187	18.256
3/64	.0468	1.191	25/64	.3906	9.922	47/64	.7343	18.653
1/16	.0625	1.587	13/32	.4062	10.319	3/4	.7500	19.050
5/64	.0781	1.984	27/64	.4218	10.716	49/64	.7656	19.447
3/32	.0937	2.381	7/16	.4375	11.113	25/32	.7812	19.844
7/64	.1093	2.778	29/64	.4531	11.509	51/64	.7968	20.240
1/8	.1250	3.175	15/32	.4687	11.906	13/16	.8125	20.637
9/64	.1406	3.572	31/64	.4843	12.303	53/64	.8281	21.034
5/32	.1562	3.969	1/2	.5000	12.700	27/32	.8437	21.431
11/64	.1718	4.366	33/64	.5156	13.097	55/64	.8593	21.828
3/16	.1875	4.762	17/32	.5312	13.494	7/8	.8750	22.225
13/64	.2031	5.159	35/64	.5468	13.890	57/64	.8906	22.622
7/32	.2187	5.556	9/16	.5625	14.287	29/32	.9062	23.019
15/64	.2343	5.953	37/64	.5781	14.684	59/64	.9218	23.415
1/4	.2500	6.350	19/32	.5937	15.081	15/16	.9375	23.812
17/64	.2656	6.747	39/64	.6093	15.478	61/64	.9531	24.209
9/32	.2812	7.144	5/8	.6250	15.875	31/32	.9687	24.606
19/64	.2968	7.541	41/64	.6406	16.272	63/64	.9843	25.003
5/16	.3125	7.937	21/32	.6562	16.669	1	1.0000	25.400
21/64	.3281	8.334	43/64	.6718	17.065			
11/32	.3437	8.731	11/16	.6875	17.462			

INCH to MILLIMETER CONVERSION TABLE

Inch	MM	Inch	MM	Inch	MM	Inch	MM
1	25.400	6	152.000	10	254.000	60	1,524.000
2	50.800	7	177.800	20	508.000	70	1,778.000
3	76.200	8	203.200	30	762.000	80	2,032.000
4	101.600	9	228.600	40	1,016.000	90	2,286.000
5	127.000	10	254.000	50	1,270.000	100	2,540.000

Issued 3-81 Printed in U.S.A.