# W170C

#### Loader

47373612B

Use for Service Manual

### W170C Wheel Loader Service Manual 47373612B

# **Table of Contents**

	Description	Section No.
General		Tab 1
Section Index - General		
Standard Torque Specifications		1001
Fluids and Lubricants		1002
Metric Conversion Chart		1003

Engines	Tab 2
Section Index - Engines	
Engine and Radiator Removal and Installation	2000
Stall Tests	2002
After Cooler	2003
For Engine Repair, See the Engine Service Manual - Sold Separately	604.13.689

Fuel System	Tab 3
Section Index - Fuel System	
For Engine Repair, See the Engine Service Manual - Sold Separately	604.13.689

Electrical	Tab 4
Section Index - Electrical	
Removal and Installation of Starter and Alternator	4001
Electrical Specifications and Troubleshooting	4002
Batteries	4003
Jump Post Option	4003a
Instrument Cluster	4005

#### W170C Wheel Loader Service Manual 47373612B

#### **Table of Contents**

Description	Section No.
Steering	Tab 5
Section Index - Steering	
Removal and Installation of Steering Components	5001
Steering Specifications, Pressure Checks, and Troubleshooting	5002
Steering Cylinders	5005
Center Pivot	5006
Auxiliary Steering Motor and Pump	5008
Joystick Steering System (JSS)	5009

Power Train	Tab 6
Section Index - Power Train	
Removal and Installation of Power Train Components	6001
Transmission Specifications, Pressure Checks, and Troubleshooting	6002
Transmission	6003
Multitrac MT-L 3075 II/3085 II/3095 II Axles	6004
Drive Shafts, Center Bearing, and Universal Joints	6005
Wheels and Tires	6006

Brakes	Tab 7
Section Index - Brakes	
Removal and Installation of Brake Components	7001
Hydraulic Brake Troubleshooting	7002
Brake Pump	7003
Brake Accumulators	7004
Parking Brake	7008

#### W170C Wheel Loader Service Manual 47373612B

#### **Table of Contents**

Description	Section No.
Hydraulics	Tab 8
Section Index - Hydraulics	
Removal and Installation of Hydraulic Components	8001
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002
Cleaning the Hydraulic System	8003
Hydraulic Pump	8004
Loader Control Valve	8005
Cylinders	8006
Coupler Solenoid Locking Valve	8007
Ride Control Accumulator	8013
Ride Control Valve	8014

Mounted Equipment	Tab 9
Section Index - Mounted Equipment	
Air Conditioning Troubleshooting and System Checks For Systems with HFC-134a Refrigerant	9002
Air Conditioner System Service	9003
Removal And Installation Of Air Conditioning And Heater Components	9004
Loader	9006
Roll Over Protective Structure (ROPS), Cab Structural Frame (CSF)	9007
Cab Glass Installation	9010
Rear View Camera Installation and Removal	9020

**Electrical Schematic Foldouts and Hydraulic Schematic Foldout** 

In Rear Pocket

#### **SECTION INDEX**

#### **GENERAL**

Section Title	Section Number
Standard Torque Specifications	1001
Fluids and Lubricants	1002
Metric Conversion Chart	

# Section 1001

**GENERAL TORQUE SPECIFICATIONS** 

# **TABLE OF CONTENTS**

TORQUE SPECIFICATIONS - DECIMAL HARDWARE	3
TORQUE SPECIFICATIONS - METRIC HARDWARE	4
TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS	5
TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS	6

#### **TORQUE SPECIFICATIONS - DECIMAL HARDWARE**

Use the torques in this chart when special torques are not given. These torques apply to fasteners with both UNC and UNF threads as received from suppliers dry, or when lubricated with engine oil. Not applicable if special graphities, Molydisulfide greases, or other extreme pressure lubricants are used.

Grade 5 Bolts, Nuts, and Studs				
$\bigcirc$ $\bigcirc$ $\bigcirc$				
Size	Pound- Inches	Newton metres		
1/4 inch	108 to 132	12 to 15		
5/16 inch	204 to 252	23 to 28		
3/8 inch	420 to 504	48 to 57		
Size	Pound- Feet	Newton metres		
7/16 inch	54 to 64	73 to 87		
1/2 inch	80 to 96	109 to 130		
9/16 inch	110 to 132	149 to 179		
5/8 inch	150 to 180	203 to 244		
3/4 inch	270 to 324	366 to 439		
7/8 inch	400 to 480	542 to 651		
1.0 inch	580 to 696	787 to 944		
1-1/8 inch	800 to 880 1085 to 1193			
1-1/4 inch	1120 to 1240	1519 to 1681		
1-3/8 inch	1460 to 1680 1980 to 2278			
1-1/2 inch 1940 to 2200 2631 to 2983		2631 to 2983		

Grade 8 Bolts, Nuts, and Studs				
€	$\rightarrow$ $\times$			
Size	Pound- Inches	Newton metres		
1/4 inch	144 to 180	16 to 20		
5/16 inch	288 to 348	33 to 39		
3/8 inch	540 to 648	61 to 73		
Size	Pound- Feet	Newton metres		
7/16 inch	70 to 84	95 to 114		
1/2 inch	110 to 132	149 to 179		
9/16 inch	160 to 192	217 to 260		
5/8 inch	220 to 264	298 to 358		
3/4 inch	380 to 456	515 to 618		
7/8 inch	600 to 720	814 to 976		
1.0 inch	900 to 1080	1220 to 1465		
1-1/8 inch	1280 to 1440	1736 to 1953		
1-1/4 inch	1820 to 2000	2468 to 2712		
1-3/8 inch	2380 to 2720	3227 to 3688		
1-1/2 inch 3160 to 3560 4285 to 4827				
NOTE: Use thick nuts with Grade 8 bolts.				

#### **TORQUE SPECIFICATIONS - METRIC HARDWARE**

Use the following torques when specifications are not given.

These values apply to fasteners with coarse threads as received from supplier, plated or unplated, or when lubricated with engine oil. These values do not apply if graphite or Molydisulfide grease or oil is used.

Grade 8.8 Bolts, Nuts, and Studs			
8.8			
Size	Pound- Inches	Newton metres	
M4	24 to 36	3 to 4	
M5	60 to 72	7 to 8	
M6	96 to 108	11 to 12	
M8	228 to 276	26 to 31	
M10	456 to 540	52 to 61	
Size	Pound- Feet	Newton metres	
M12	66 to 79	90 to 107	
M14	106 to 127	144 to 172	
M16	160 to 200	217 to 271	
M20	320 to 380	434 to 515	
M24	500 to 600	675 to 815	
M30	920 to 1100	1250 to 1500	
M36	1600 to 1950	2175 to 2600	

Grade 10.9 Bolts, Nuts, and Studs			
(10.9)			
Size	Pound- Inches	Newton metres	
M4	36 to 48	4 to 5	
M5	84 to 96	9 to 11	
M6	132 to 156	15 to 18	
M8	324 to 384	37 to 43	
Size	Pound- Feet	Newton metres	
M10	54 to 64	73 to 87	
M12	93 to 112	125 to 150	
M14	149 to 179	200 to 245	
M16	230 to 280	310 to 380	
M20	450 to 540	610 to 730	
M24	780 to 940	1050 to 1275	
M30	1470 to 1770	2000 to 2400	
M36	2580 to 3090	3500 to 4200	

Grade 12.9 Bolts, Nuts, and Studs



Usually the torque values specified for grade 10.9 fasteners can be used satisfactorily on grade 12.9 fasteners.

# **TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS**

37 Degree Flare Fitting				
Tube OD Hose ID	Thread Size	Pound- Inches	Newton metres	
1/4 inch 6.4 mm	7/16-20	72 to 144	8 to 16	
5/16 inch 7.9 mm	1/2-20	96 to 192	11 to 22	
3/8 inch 9.5 mm	9/16-18	120 to 300	14 to 34	
1/2 inch 12.7 mm	3/4-16	180 to 504	20 to 57	
5/8 inch 15.9 mm	7/8-14	300 to 696	34 to 79	
Tube OD Hose ID	Thread Size	Pound- Feet	Newton metres	
3/4 inch 19.0 mm	1-1/16-12	40 to 80	54 to 108	
7/8 inch 22.2 mm	1-3/16-12	60 to 100	81 to 135	
1.0 inch 25.4 mm	1-5/16-12	75 to 117	102 to 158	
1-1/4 inch 31.8 mm	1-5/8-12	125 to 165	169 to 223	
1-1/2 inch 38.1 mm	1-7/8-12	210 to 250	285 to 338	

Straight Threads with O-ring				
Tube OD Hose ID	Thread Size	Pound- Inches	Newton metres	
1/4 inch 6.4 mm	7/16-20	144 to 228	16 to 26	
5/16 inch 7.9 mm	1/2-20	192 to 300	22 to 34	
3/8 inch 9.5 mm	9/16-18	300 to 480	34 to 54	
1/2 inch 12.7 mm	3/4-16	540 to 804	57 to 91	
Tube OD Hose ID	Thread Size	Pound- Feet	Newton metres	
5/8 inch 15.9 mm	7/8-14	58 to 92	79 to 124	
3/4 inch 19.0 mm	1-1/16-12	80 to 128	108 to 174	
7/8 inch 22.2 mm	1-3/16-12	100 to 160	136 to 216	
1.0 inch 25.4 mm	1-5/16-12	117 to 187	159 to 253	
1-1/4 inch 31.8 mm	1-5/8-12	165 to 264	224 to 357	
1-1/2 inch 38.1 mm	1-7/8-12	250 to 400	339 to 542	

Split Flange Mounting Bolts					
Size	Pound- Inches	Newton metres			
5/16-18	180 to 240	20 to 27			
3/8-16	240 to 300	27 to 34			
7/16-14	420 to 540	47 to 61			
Size	Pound- Feet	Newton metres			
1/2-13	55 to 65	74 to 88			
5/8-11	140 to 150	190 to 203			

# **TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS**

O-ring Face Seal End			O-ring Boss End Fitting or Lock Nut				
Nom. SAE Dash Size	Tube OD	Thread Size 9/16-18	Pound- Inches	Newton metres 14 to 16	Thread Size 7/16-20	Pound- Inches 204 to 240	Newton metres 23 to 27
-6	6.4 mm 3/8 inch 9.5 mm	11/16-16	216 to 240	24 to 27	9/16-18	300 to 360	34 to 41
-8	1/2 inch 12.7 mm	13/16-16	384 to 480	43 to 54	3/4-16	540 to 600	61 to 68
					Thread Size	Pound- Feet	Newton metres
-10	5/8 inch 15.9 mm	1-14	552 to 672	62 to 76	7/8-14	60 to 65	81 to 88
Nom. SAE Dash Size	Tube OD	Thread Size	Pound- Feet	Newton metres	1-1/16-12	85 to 90 95 to 100	115 to 122 129 to 136
-12	3/4 inch 19.0 mm	1-3/16-12	65 to 80	90 to 110	1-5/16-12	115 to 125	156 to 169
-14	7/8 inch 22.2 mm	1-3/16-12	65 to 80	90 to 110	1-5/8-12	150 to 160	203 to 217
-16	1.0 inch 25.4 mm	1-7/16-12	92 to 105	125 to 140	1-7/8-12	190 to 200	258 to 271
-20	1-1/4 inch 31.8 mm	1-11/16-12	125 to 140	170 to 190			
-24	1-1/2 inch 38.1 mm	2-12	150 to 180	200 to 254			

# Section 1002

**FLUIDS AND LUBRICANTS** 

# **TABLE OF CONTENTS**

CAPACITIES AND LUBRICANTS	3
ENGINE OIL RECOMMENDATIONS	4
TRANSMISSION TEMPERATURE CHART	5
DIESEL FUEL SYSTEM	6
Fuel Storage	6
Specifications for Acceptable No. 2 Diesel Fuel	6
MAINTENANCE SCHEDULE	7
MAINTENANCE POINTS	9

# **CAPACITIES AND LUBRICANTS**

Engine Oil Capacity with Filter Change Total system capacity Type of oilAMBRA Unitek CJ-4 Engine Oil (SAE 15W-40) - see	
Engine Cooling System CapacityType of Coolant	
Fuel Tank Capacity	
Hydraulic System Hydraulic Reservoir Refill Capacity Total System Capacity Type of Oil	177.8 liters (47 U.S. Gallons)
Transmission Refill Capacity with Filter ChangeAMBRA MULTI G 134 <sup>TM</sup> H	34 litres (35.9 U.S. quarts) ydraulic Transmision Oil (SAE 10W-30)
Axles Capacity	
Standard Front Standard Rear Optional Front Optional Rear Type of Lubricant  Standard Front AMBRA MU	
NOTE: DO NOT use an alternate oil in the axles. The brake components in of using an alternate oil. Machines are shipped from the factory with break-	
Brake System Type of Fluid (Same as Hydraulic System)	AMBRA Hydrosystem 46HV®
Grease Fittings Grease fittings as required by maintenance schedule	AMBRA GR 75 MD

#### **ENGINE OIL RECOMMENDATIONS**


AMBRA Unitek CJ-4 Engine Oil (SAE 15W-40) engine oil is recommended for use in your engine. AMBRA Unitek CJ-4 Engine Oil (SAE 15W-40) engine oil will lubricate your engine correctly under all operating conditions.

If AMBRA Unitek CJ-4 Engine Oil (SAE 15W-40) Multi-Viscosity Oil is not available, use only oil meeting API engine oil service category CH-4 (preferred) or CG-4.




See the chart below for recommended viscosity at ambient air temperature ranges.

NOTE: Do not put performance additives or other oil additive products in the engine crankcase. The oil change intervals given in this manual are according to tests with AMBRA Mastergold (SAE 15W-40) lubricants.

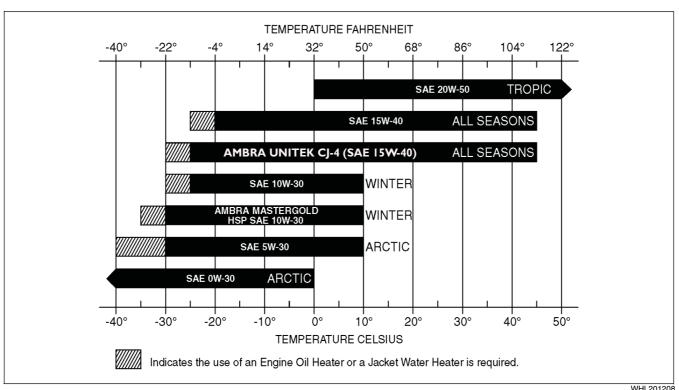

WHL201208

#### TRANSMISSION TEMPERATURE CHART

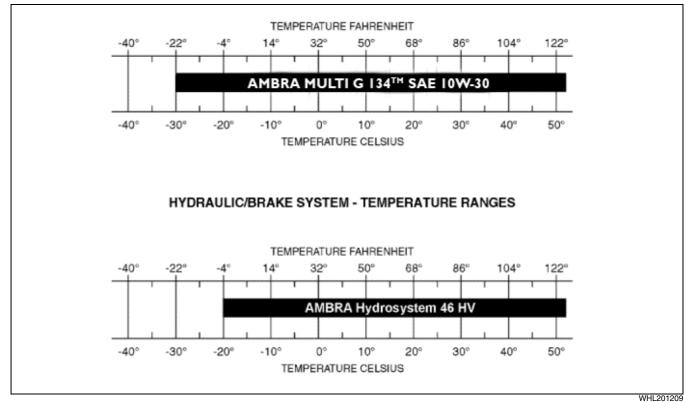

Thanks very much for your reading,

Want to get more information,

Please click here, Then get the complete
manual



# **NOTE:**

If there is no response to click on the link above, please download the PDF document first, and then click on it.

Have any questions please write to me: admin@servicemanualperfect.com