

CASE

PROFESSIONAL PARTNER

SERVICE MANUAL

4HK1-6HK1 ISUZU ENGINES

9-44061 NA
Replaces 9-44060 NA

Revised 05-2006
Issued 02-2006



SERVICE MANUAL

**4HK1-6HK1
ISUZU ENGINES**

CNH America, LLC reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

All data given in this publication is subject to production variations. Dimensions and weights are only approximate. Illustrations do not necessarily show products in standard condition. For exact information about any particular product, please consult your Dealer

| REVISION HISTORY | | | |
|------------------|------------|--------------------------|------------|
| Issue | Issue Date | Applicable Machines | Remarks |
| First Edition | 02-2006 | 4HK1- 6HK1 ISUZU ENGINES | 9-44060 NA |
| Revision 1 | 05-2006 | 4HK1- 6HK1 ISUZU ENGINES | 9-44061 NA |

INDEX OF CHAPTERS

| | |
|--------------------------------------|----|
| GENERAL INFORMATION | 0A |
| ENGINE MECHANICAL | 1A |
| COOLING SYSTEM | 1B |
| FUEL SYSTEM..... | 1C |
| ENGINE ELECTRICAL..... | 1D |
| EXHAUST SYSTEM AND TURBOCHARGER..... | 1F |

NOTE: CNH Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

IN-2 Introduction

UNITS OF MEASURE

This manual adopts the units of measure based on International System.

The MKSA system units of measure are indicated within brackets after the units of measure of the International System.

Example: 24.5 MPa (250 kgf/cm²)

The following table converts the International System units of measure in some of the main units belonging to other system.

| Quantity | To convert from (IS) | Into (Others) | Multiply by | Quantity | To convert from (IS) | Into (Others) | Multiply by |
|----------|----------------------|-----------------|-------------|-------------|----------------------|---------------------|---------------|
| Lenght | mm | in | 0.03937 | Pressure | MPa | kgf/cm ² | 10.197 |
| | mm | ft | 0.003281 | | MPa | psi | 145.0 |
| Volume | L | US gal | 0.2642 | Power | kW | CV-PS | 1.360 |
| | L | US qt | 1.057 | | kW | HP | 1.341 |
| | m ³ | yd ³ | 1.308 | Temperature | °C | °F | °C x 1.8 + 32 |
| Mass | kg | lb | 2.205 | Speed | km/h | mph | 0.6214 |
| Force | N | kgf | 0.10197 | | min ⁻¹ | rpm | 1.0 |
| | N | lbf | 0.2248 | Capacity | L/min | US gpm | 0.2642 |
| Torque | N.m | kgf.m | 0.10197 | | mL/rev | cc/rev | 1.0 |
| | N.m | lbf.ft | 0.7375 | | | | |

GENERAL INFORMATION

General Information

Contents


| | |
|---------------------------|------|
| General Information | 0A-2 |
| Service Precautions | 0A-2 |
| Reading the model | 0A-6 |
| General information | 0A-7 |

General Information


Service Precautions

In order to carry out work safely


1. Always use an engine stand when taking the engine down from the vehicle.
Do not place the engine directly onto the ground, or place in a manner that interferes with the oil pan.
2. If you are working together with others, always pay attention to each other's safety.
3. If you are repairing any part of the electrical system, always remove the minus side cable from the battery terminal before starting work. If you are removing the battery cover, always remove the cover in a place that is away from sources of fire/heat.

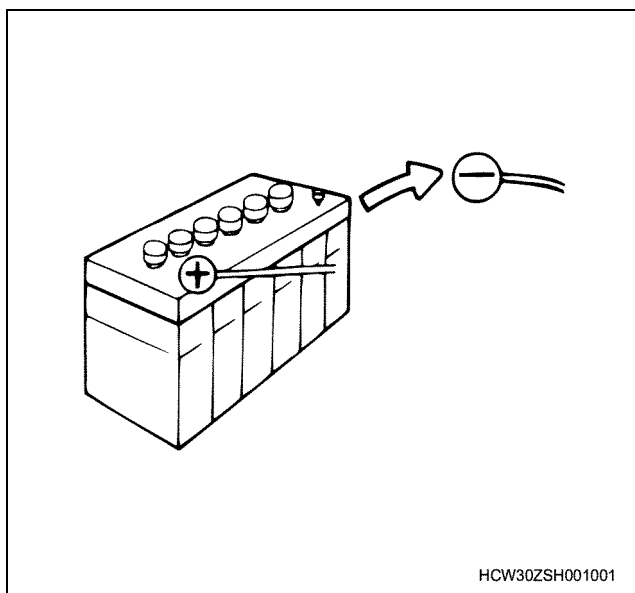


4. Do not perform painting work or leave the engine running for long periods of time in an enclosed or badly ventilated indoor workshop.
5. Always use the correct specialized tool indicated in the instructions. Using the incorrect tool may cause damage to the parts or injury to the person using the tool.

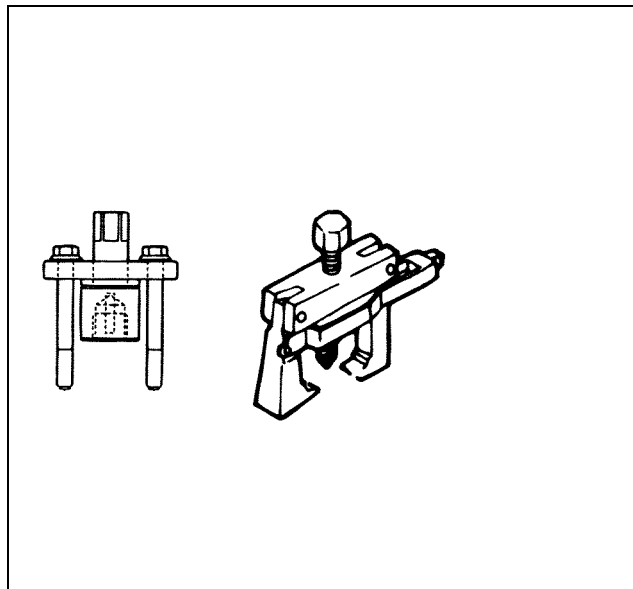


6. All regular tools, gauges and special tools should be regularly inspected, and prepared before starting work. Do not use bent spanners, hammers with damaged edges, chipped chisels, or any other faulty or damaged tools.

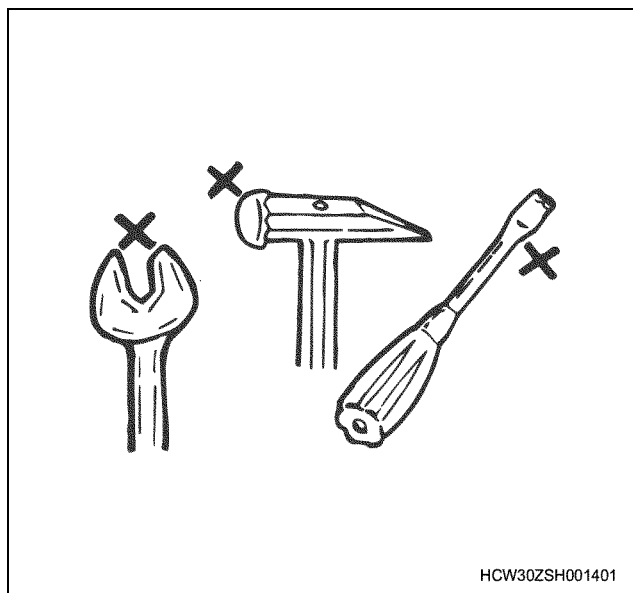

7. Always pay close attention to safety and handling requirements when using grinders, cranes, welders, and other such equipment. Moreover, always wear the correct protective garments and use the necessary safety tools for the job in hand.

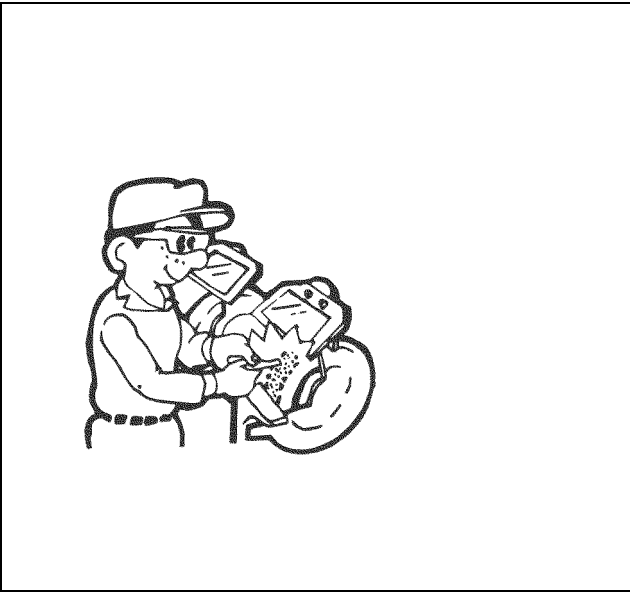


8. Always check that there are no fuel leaks when performing maintenance work on the fuel system. (It may cause a fire.)

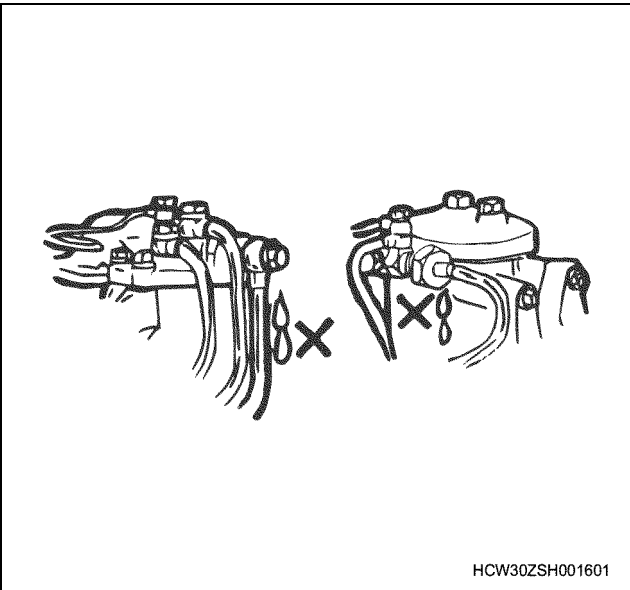

HCW30ZSH001601

9. Pay close attention to the risk of ignition if you are handling parts that carry a high voltage. Furthermore, any oil or fat spilt onto rubber parts must be wiped off immediately, as it will cause deterioration of the rubber.

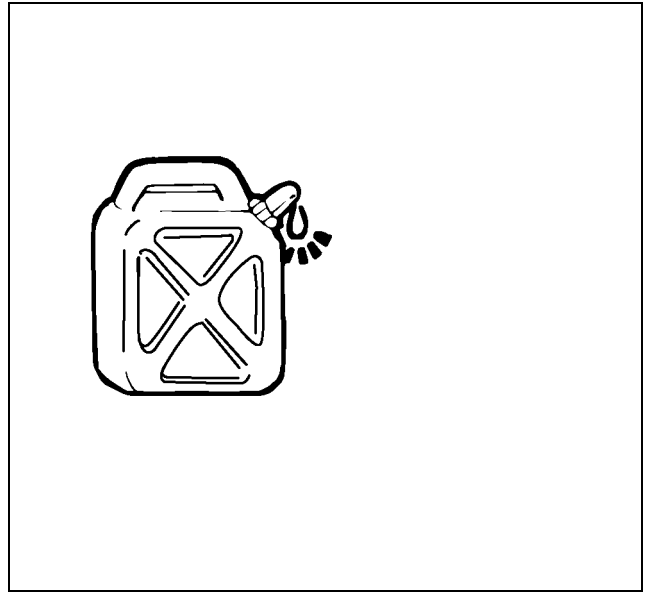

Replacement parts and part numbers.

1. Always replace packing, oil seals, o-rings, caulking lock nuts, folding lock plates, split pins and other such parts with brand new parts.
2. The parts numbers contained in this manual may not represent the supply condition of the parts, and the part numbers may be changed due to revisions. Therefore, parts should always be checked against a parts catalogue before use.

Liquid gasket

1. Each time you disassemble parts that use liquid gasket, completely remove the old gasket residue from each of the parts and matching sections using a scraper, then clean each of the parts to completely remove oil, water, and dirt etc. from the various surfaces. Using the specified type of liquid gasket, apply new liquid gasket to each of the surfaces before reassembling the parts.
2. In order to make it easier to clean liquid gasket surfaces, apply gasket remover liquid (Pando-391D made by Three Bond Co., Ltd.) and leave the part to stand for approximately 10 minutes, after which the old liquid gasket residue will be easier to remove.
However, this should not be used on resin components or painted components.
3. Please take care not to apply too much or too little liquid gasket.
Also, you should always re-apply the liquid gasket upon itself when you start and finish application.
4. Make sure that there are no gaps when re-installing the liquid gasket parts to each other. If there are gaps between the two parts, re-apply the liquid gasket. Some parts, especially the oil pan, use the same size studs as a guide to eliminate the need for knock pin positioning etc.
5. Re-install these parts within 7 minutes of applying the liquid gasket.

0A-4 General Information

If more than 7 minutes passes, remove the previous liquid gasket and re-apply it.

- Please wait for at least 30 minutes since the last part is installed before starting the engine.

Liquid gasket

| Seal section | Product name | Manufacturer's name |
|---|--------------|---------------------|
| Between cylinder block and – Flywheel housing | 1207B | Three Bond |
| Between cylinder block and – Flywheel housing and – Crankcase | 1207B | Three Bond |
| Between cylinder block and – Crank case | 1207B | Three Bond |
| Between cylinder block and – Front cover | 1207B | Three Bond |
| Cylinder block, head plug nipple, unit, switches | 262 | Loctite |

- Always use the liquid gasket products listed above, or a liquid gasket identical to the ones listed above.
- Use the correct quantity of liquid gasket. Always follow the handling instructions for each product.

Application procedure


- Wipe the contact surfaces clean of all water, fat or oil. The contact surfaces should be dry.
- Apply a regular bead width of liquid gasket to one of the contact surfaces. Make sure that the bead does not break at this point.

Notes:

If there are special regulations concerning the application procedure in the repair document, please follow those regulations.

Work procedure

- Wipe the joint surfaces of the bolt, bolt hole, and screw thread section clean of water, fat, and oil. The contact surfaces should be dry.
- Apply Loctite to the top 1/3 of the screw.
- Tighten the bolt to the correct tightening torque.

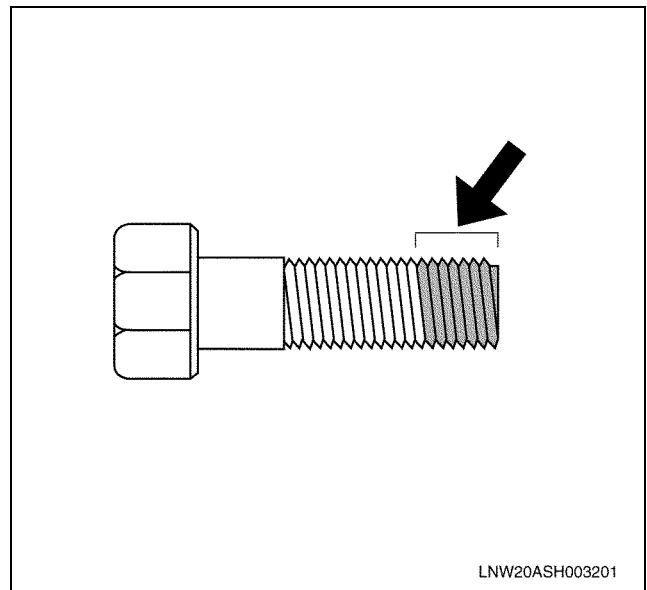

LNW20ASH003201

Important:

After tightening the bolt, do not apply excessive torque or try to rotate the bolt until at least one hour has passed, and the Loctite has hardened.

Procedure for using the Plastiguage

| Type | Measurable range mm (in) |
|--------------|-------------------------------|
| PG-1 (Green) | 0.025 – 0.076 (0.001 – 0.003) |
| PR-1 (Red) | 0.051 – 0.152 (0.002 – 0.006) |
| PB-1 (Blue) | 0.102 – 0.229 (0.004 – 0.009) |

Example: Procedure for measuring the clearance between the connecting rod bearing and crank pin.



- Clean the connecting rod and bearing, and install the bearing to the rod.
- Cut the plastiguage to the same width as the crank pin, and while avoiding the oil pore of the crank pin lay the gauge parallel to the pin.

- Line up the marks on the connecting rod and cap and install the crank pin, apply molybdenum disulphide to the thread section and bearing surface of the fastening bolt, and rotate both cap and bolt to the correct torque.

Important:

Do not move the connecting rod while using the plastiguage.

- Gently remove the cap and connecting rod, and measure the crushed width of the plastiguage (clearance between rod and pin) using the scale printed on the bag.

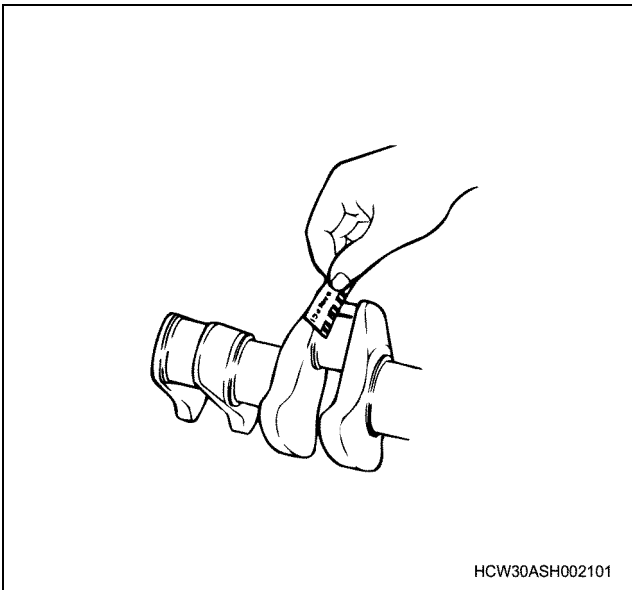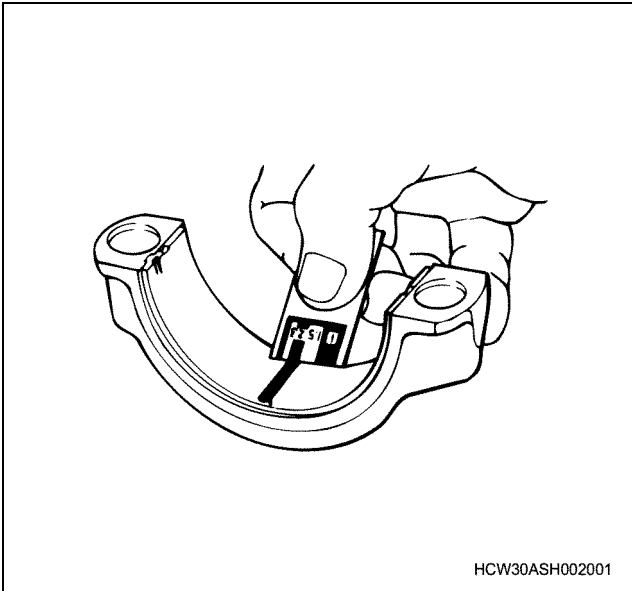

Example: Measuring the clearance between the crank bearing and crank journal



- Clean the clamp face of the cylinder block and crankcase bearing, and also the bearing, and install the cylinder block to the crankcase.
- Gently rest the crankshaft on the cylinder block, and rotate it approximately 30 degree to stabilize it.

- Cut the plastiguage to the same size as the journal width, and while avoiding the oil pore of the journal lay the gauge parallel to the journal.
- Gently rest the crank case on the cylinder block, apply molybdenum disulphide to the thread section and bearing surface of the fastening bolt, and tighten in sequence to the correct torque.

Important:

Do not rotate the crankshaft while using the plastiguage.


- Gently remove the crankcase, and measure the crushed width of the plastiguage (clearance between bearing and journal) using the scale printed on the bag.

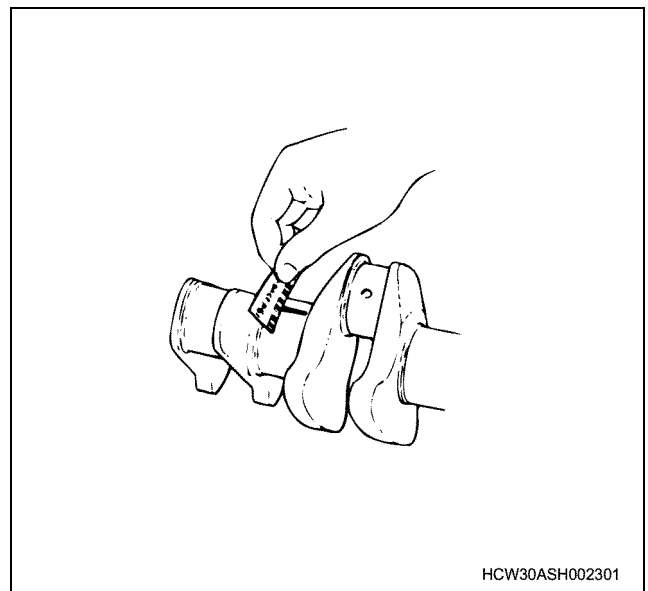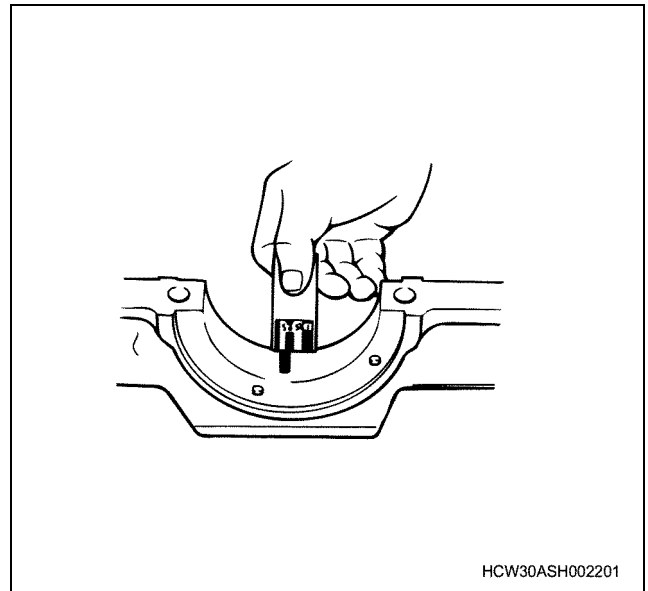


Reading the model

Engine number stamping position

4HK1

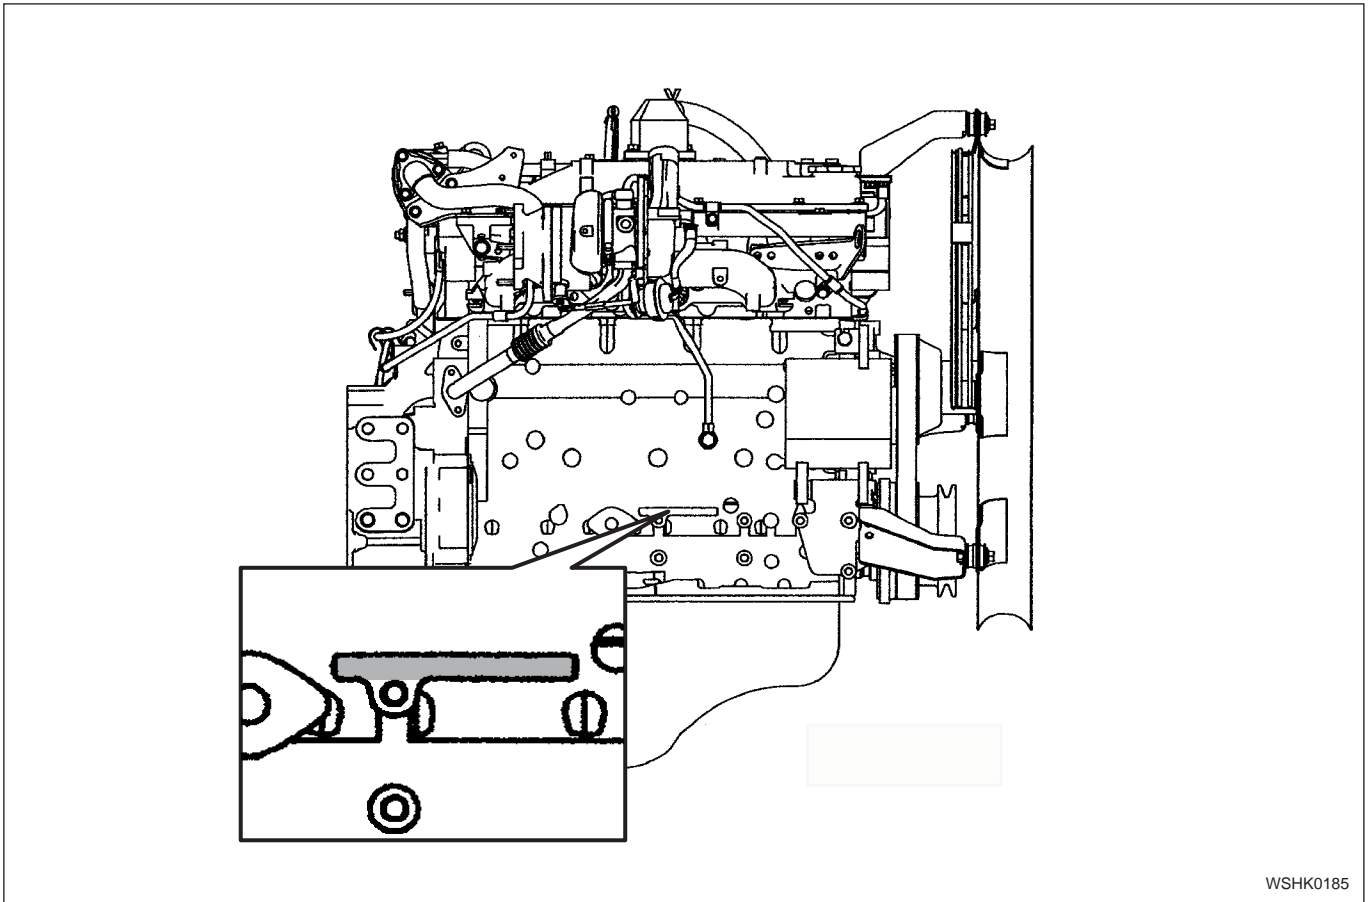

6HK1

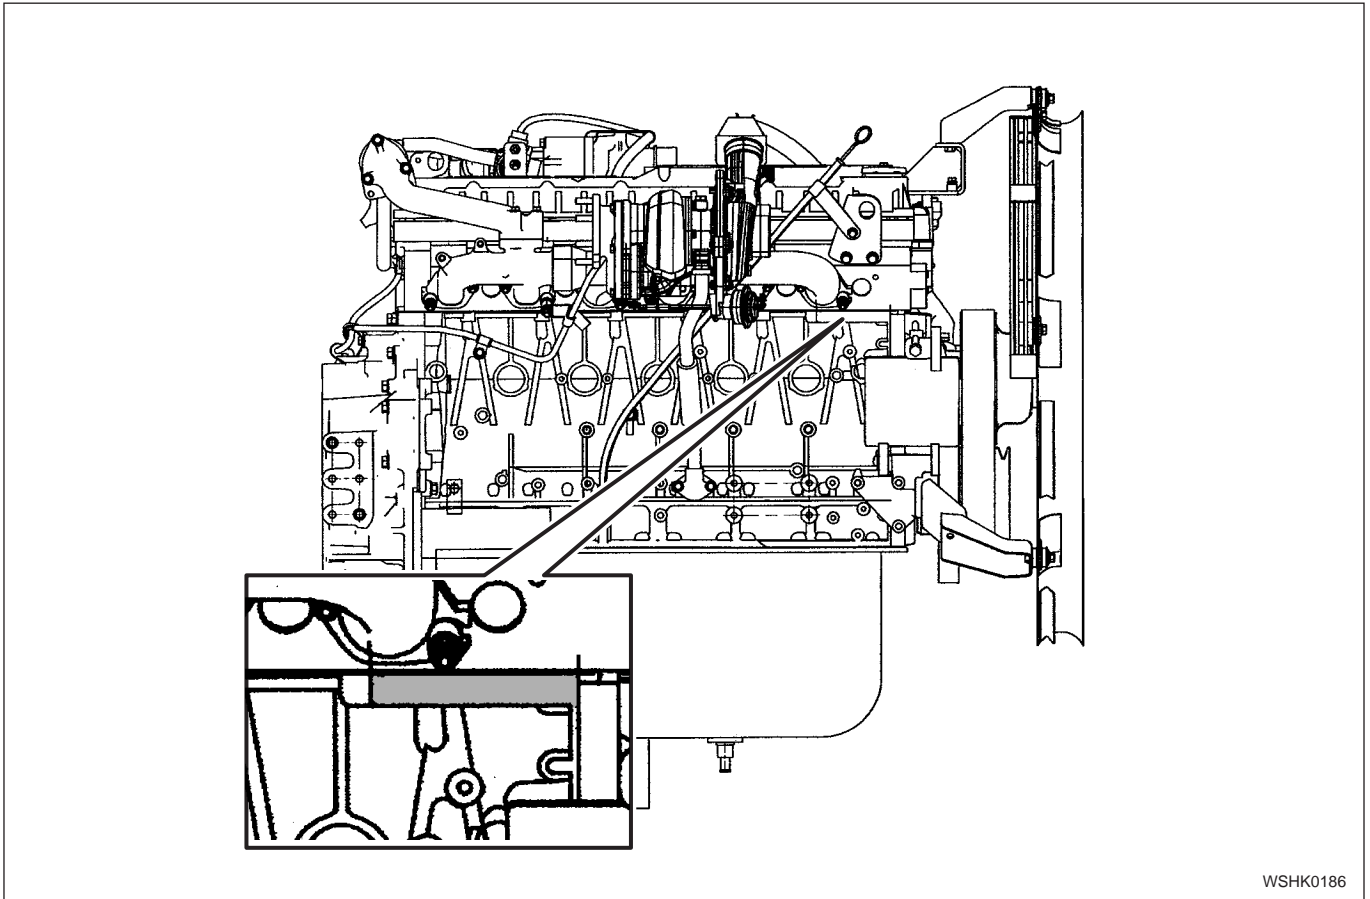

WSHK0186

General information

Terminology, description of abbreviations

Terminology definitions

| Term | Explanation |
|---|--|
| Maintenance standard | The generic name for reference values required for maintenance, such as nominal dimension, selection of a reference point, and limit. |
| Nominal dimension | Shows the standard value at the point of manufacture that does not include the common difference. |
| Selection of a reference point | Shows the standard value after assembling, repairing, or adjusting. |
| Limit | When this value (dimensions) is reached, it shows that the part has reached its full limit and must be replaced or repaired. |
| Front · rear, left · right, upper · lower | These show each orientations of parts installed to the vehicle when looking from the vehicle's forward direction. |
| Unit | Units written to SI conventions (mainly torque, pressure, force) [Example] Length: mm, Torque: N·m {kgf·m} |
| Warning | Items that carry the warning mark pose a danger to life or threat of serious injury if not strictly observed. |
| Caution | Items that carry the caution mark may cause injury or lead to accidents if not strictly observed. |
| Important | Items that carry the important mark may cause the vehicle to break down, or may prevent the guaranteed normal operation of the system or related parts if not strictly observed. |

0A-8 General Information

| Term | Explanation |
|-------|--|
| Notes | Items that should receive special mention within a work procedure. |

Description of abbreviations

| Abbreviation | Description |
|--------------|---|
| AC | Alternating Current Alternating Current |
| ACC | Accessory Accessory |
| ACG | Alternating Current Generator Alternating current generator |
| API | American Petrol Institute American Petroleum Institute |
| ASM (Assy) | Assembly Assembly |
| ATDC | After Top Dead Center After Top Dead Center |
| BAT, BATT | Battery Battery |
| BRG, Brg | Bearing Bearing |
| BKT, BRKT | Bracket Bracket |
| BTDC | Before Top Dead Center Before Top Dead Center |
| CO | Carbon Oxide Carbon Monoxide |
| CONN | Connector Connector |
| CPU | Central Processing Unit Central processing unit |
| C/U | Control Unit Control unit |
| DC | Direct Current Direct current |
| DI | Direct Injection Direct injection |
| ECU | Engine Control Unit / Electronic Control Unit Engine control unit / control unit |
| ECM | Engine Control Module Engine control module |
| EGR | Exhaust Gas Recirculation Exhaust gas recirculation |
| Exh, EXH | Exhaust Exhaust |
| Ft, FRT | Front Front |

| Abbreviation | Description |
|--------------|--|
| FWD | Forward Forward |
| F/C | Fuel Cut Fuel Cut |
| GND | Ground Earth |
| IC | Integrated Circuit Integrated circuit |
| ID Plate | Identification plate Identification plate, ID plate |
| IN | Intake, Intake Intake |
| ISO | International Organization for Standardization International Organization for Standardization |
| I/PUMP | Injection Pump Injection Pump |
| JIS | Japanese Industrial Standard Japanese Industrial Standard |
| L/H, LH | Left Hand Left hand side |
| M/V | Magnetic Valve Magnetic valve |
| NOx | Nitrogen Oxide Nitrogen Oxide |
| N-TDC | Number - Top Dead Center Top dead center rotational frequency |
| OPT | Option Option |
| P | Pole(S) Pole |
| PCV | Pump Control Valve/ Positive Crankcase Ventilation Pump control valve/ Positive crankcase ventilation |
| PM | Particulate Matter Particulate matter |
| PS | Pre-Stroke Pre-stroke |
| PTO | Power Take Off Power take off |
| QOS | Quick On System Rapid preheating system |
| Rr, RR | Rear Rear |

| Abbreviation | Description |
|--------------|---|
| R/H, RH | Right Hand Right hand side |
| R/L | Relay Relay |
| STD | Standard Standard |
| SW | Switch Switch |
| TICS | Timing & Injection rate Control System A type of injection system |
| VGS Turbo | Variable Geometry turbocharger System Adjustable turbo, VGS turbo |
| W/L | Warning Lamp Warning lamp |

SI (International System of Units)

With regards the conversion to SI (International System of Units)

The introduction of the SI systems aims to internationally unify the metric system and the various units used by different countries (traditional weights and measures, the foot pound method etc.), and to curb the confusion that occurs between the different units (conversion calculations etc.).

The new calculating method which adopted SI units was completely adopted in Japan in 1992, and is standardized by JIS-Z-8203.

All of the units in this manual are written in line with the International System of Units SI units, and conventional units are written in { } brackets.

SI

French) Abbreviated name of Le Systeme International d'Unites

Connection between main SI units and conventional units

| | SI | Conventional Unit | Item, unit conversion |
|-----------------------------------|----------------|----------------------------|--|
| Length | m | m | Same as the conventional unit |
| Weight (Mass) | kg | kg | Same as the conventional unit |
| Force | N | * kg, kgf | 1 kgf = 9.80665 N |
| Torque | N·m | * kg·m, gf·m | 1 kgf·m = 9.80665 N·m |
| Pressure | Pa | *kg/cm ² , mmHg | 1 kgf/cm ² = 9.80665 kPa, 1 mmHg = 133.3 Pa |
| Dynamic force, horsepower | W | PS | 1 PS = 0.74 kW |
| Capacity, air volume displacement | m ³ | Litre, L, cc | 1 Litre = 1 dm ³ , 1 cc = 1 mLitre = 1cm ³ |
| Fuel consumption | g/(kW·h) | g/(PS·h) | 1 g/(PS·h) = 1.360 g/(kW·h) |

*1 Published service data may conveniently use kg for force and mass (weight) instead of kgf.

*2 Some conversion results may be rounded off to 1 or 2 decimal places.

Converting expressions of quantity

When converting, prefixes such as k (kilo) or m (mili) are used.

| | | | |
|---|-------|------------------|-----------|
| M | Mega | 10 ⁶ | 1,000,000 |
| k | Kilo | 10 ³ | 1,000 |
| h | Hecto | 10 ² | 100 |
| d | Deci | 10 ⁻¹ | 0.1 |
| c | Centi | 10 ⁻² | 0.01 |
| m | Milli | 10 ⁻³ | 0.001 |
| μ | Micro | 10 ⁻⁶ | 0.000001 |

- 200 kgf/cm² = 19,620 kPa = 19.6 MPa
- 40 mmHg = 5,332 Pa = 5.3 kPa

0A-10 General Information

Table of standard Isuzu tightening torque

The tightening torque values in the table below apply to all situations unless a special tightening torque is specified.

Isuzu standard bolts, nuts


| N·m {kgf·m} | | | | |
|-------------------------|-----------------------------|-----------------------------|-----------------------------|-----------------------------|
| Strength classification | 4.8 4T | | 7T | |
| | Hexagon head bolt | Flange bolt | Hexagon head bolt | Flange bolt |
| * M10 × 1.5 | 19.6 ~ 33.3 {2.0 ~ 3.4} | 22.3 ~ 37.2 {2.3 ~ 3.8} | 27.5 ~ 45.1 {2.8 ~ 4.6} | 30.3 ~ 50.4 {3.1 ~ 5.1} |
| M12 × 1.25 | 49.0 ~ 73.5 {5.0 ~ 7.5} | 54.9 ~ 82.3 {5.6 ~ 8.4} | 60.8 ~ 91.2 {6.2 ~ 9.3} | 68.1 ~ 102.1 {6.9 ~ 10.4} |
| * M12 × 1.75 | 45.1 ~ 68.6 {4.6 ~ 7.0} | 51.0 ~ 76.5 {5.2 ~ 7.8} | 56.9 ~ 84.3 {5.8 ~ 8.6} | 62.7 ~ 94.0 {6.4 ~ 9.6} |
| M14 × 1.5 | 76.5 ~ 114.7 {7.8 ~ 11.7} | 83.0 ~ 124.5 {8.5 ~ 12.7} | 93.2 ~ 139.3 {9.5 ~ 14.2} | 100.8 ~ 151.1 {10.3 ~ 15.4} |
| * M14 × 2 | 71.6 ~ 106.9 {7.3 ~ 10.9} | 77.2 ~ 115.8 {7.9 ~ 11.8} | 88.3 ~ 131.4 {9.0 ~ 13.4} | 94.9 ~ 142.3 {9.7 ~ 14.5} |
| M16 × 1.5 | 104.0 ~ 157.0 {10.6 ~ 16.0} | 115.6 ~ 173.3 {11.8 ~ 17.7} | 135.3 ~ 204.0 {13.8 ~ 20.8} | 150.1 ~ 225.2 {15.3 ~ 23.0} |
| * M16 × 2 | 100.0 ~ 149.1 {10.2 ~ 15.2} | 109.4 ~ 164.2 {11.2 ~ 16.7} | 129.4 ~ 194.2 {13.2 ~ 19.8} | 142.5 ~ 213.8 {14.5 ~ 21.8} |
| M18 × 1.5 | 151.0 ~ 225.6 {15.4 ~ 23.0} | — | 195.2 ~ 293.2 {19.9 ~ 29.9} | — |
| * M18 × 2.5 | 151.0 ~ 225.6 {15.4 ~ 23.0} | — | 196.1 ~ 294.2 {20.0 ~ 30.0} | — |
| M20 × 1.5 | 206.0 ~ 310.0 {21.0 ~ 31.6} | — | 269.7 ~ 405.0 {27.5 ~ 41.3} | — |
| * M20 × 2.5 | 190.2 ~ 286.4 {19.4 ~ 29.2} | — | 249.1 ~ 374.6 {25.4 ~ 38.2} | — |
| M22 × 1.5 | 251.1 ~ 413.8 {25.6 ~ 42.2} | — | 362.8 ~ 544.3 {37.0 ~ 55.5} | — |
| * M22 × 2.5 | 217.7 ~ 327.5 {22.2 ~ 33.4} | — | 338.3 ~ 507.0 {34.5 ~ 51.7} | — |
| M24 × 2 | 358.9 ~ 539.4 {36.6 ~ 55.0} | — | 430.5 ~ 711.0 {43.9 ~ 72.5} | — |
| * M24 × 3 | 338.3 ~ 507.0 {34.5 ~ 51.7} | — | 406.0 ~ 608.0 {41.4 ~ 62.0} | — |

The * mark indicates where soft materials have been used for internal thread sections, such as castings.

| N·m {kgf·m} | | | | |
|-------------------------|-----------------------------|-----------------------------|-----------------------------|-----------------------------|
| Strength classification | 8.8 | | 9.8 9T | |
| Bolt head section shape | Hexagon head bolt | Flange bolt | Hexagon head bolt | Flange bolt |
| M6 × 1 | 5.6 ~ 11.2 {0.6 ~ 1.1} | 6.6 ~ 12.2 {0.6 ~ 1.2} | — | — |
| M8 × 1.25 | 13.4 ~ 25.7 {1.4 ~ 2.6} | 15.3 ~ 28.4 {1.6 ~ 2.9} | 16.7 ~ 30.4 {1.7 ~ 3.1} | 18.1 ~ 33.6 {1.9 ~ 3.4} |
| M10 × 1.25 | 31.3 ~ 52.5 {3.2 ~ 5.4} | 35.4 ~ 58.9 {3.6 ~ 6.1} | 37.3 ~ 62.8 {3.8 ~ 6.4} | 42.3 ~ 70.5 {4.3 ~ 7.2} |
| * M10 × 1.5 | 31.3 ~ 51.4 {3.2 ~ 5.2} | 34.5 ~ 57.5 {3.5 ~ 5.8} | 36.3 ~ 59.8 {3.7 ~ 6.1} | 40.1 ~ 66.9 {4.1 ~ 6.8} |
| M12 × 1.25 | 69.3 ~ 104.0 {7.1 ~ 10.6} | 77.7 ~ 116.5 {7.9 ~ 11.9} | 75.5 ~ 113.8 {7.7 ~ 11.6} | 85.0 ~ 127.5 {8.7 ~ 13.0} |
| * M12 × 1.75 | 64.8 ~ 96.1 {6.6 ~ 9.8} | 71.4 ~ 107.2 {7.3 ~ 10.9} | 71.6 ~ 106.9 {7.3 ~ 10.9} | 79.5 ~ 119.2 {8.1 ~ 12.2} |
| M14 × 1.5 | 106.2 ~ 158.8 {10.8 ~ 16.2} | 114.9 ~ 172.3 {11.7 ~ 17.6} | 113.8 ~ 170.6 {11.6 ~ 17.4} | 123.4 ~ 185.1 {12.6 ~ 18.9} |
| * M14 × 2 | 100.6 ~ 149.8 {10.3 ~ 15.3} | 108.2 ~ 162.2 {11.1 ~ 16.6} | 106.9 ~ 160.0 {10.9 ~ 16.3} | 115.5 ~ 173.3 {11.8 ~ 17.7} |
| M16 × 1.5 | 154.3 ~ 232.5 {15.7 ~ 23.7} | 171.1 ~ 256.7 {17.4 ~ 26.2} | 160.0 ~ 240.3 {16.3 ~ 24.5} | 176.9 ~ 265.3 {18.0 ~ 27.1} |
| * M16 × 2 | 147.6 ~ 221.4 {15.0 ~ 22.6} | 162.5 ~ 243.8 {16.6 ~ 24.9} | 153.0 ~ 229.5 {15.6 ~ 23.4} | 168.5 ~ 252.7 {17.2 ~ 25.8} |
| M18 × 1.5 | 222.5 ~ 334.3 {22.7 ~ 34.1} | — | 229.5 ~ 345.2 {23.4 ~ 35.2} | — |
| * M18 × 2.5 | 223.6 ~ 335.4 {22.8 ~ 34.2} | — | 230.5 ~ 346.2 {23.6 ~ 35.3} | — |
| M20 × 1.5 | 307.4 ~ 461.7 {31.4 ~ 47.1} | — | 316.8 ~ 475.6 {32.3 ~ 48.5} | — |
| * M20 × 2.5 | 284.0 ~ 472.1 {29.0 ~ 43.5} | — | 293.2 ~ 440.3 {29.2 ~ 44.9} | — |
| M22 × 1.5 | 413.6 ~ 620.5 {42.2 ~ 63.3} | — | 424.6 ~ 636.5 {43.3 ~ 64.9} | — |
| * M22 × 2.5 | 385.7 ~ 578.0 {39.3 ~ 58.9} | — | 394.2 ~ 592.3 {40.0 ~ 60.4} | — |
| M24 × 2 | 490.8 ~ 810.5 {50.0 ~ 82.7} | — | 554.1 ~ 830.6 {56.5 ~ 84.7} | — |
| * M24 × 3 | 462.8 ~ 693.1 {47.2 ~ 70.7} | — | 520.7 ~ 781.6 {53.1 ~ 79.7} | — |

The * mark indicates where soft materials have been used for internal thread sections, such as castings.

Designations for Isuzu standard bolt heads

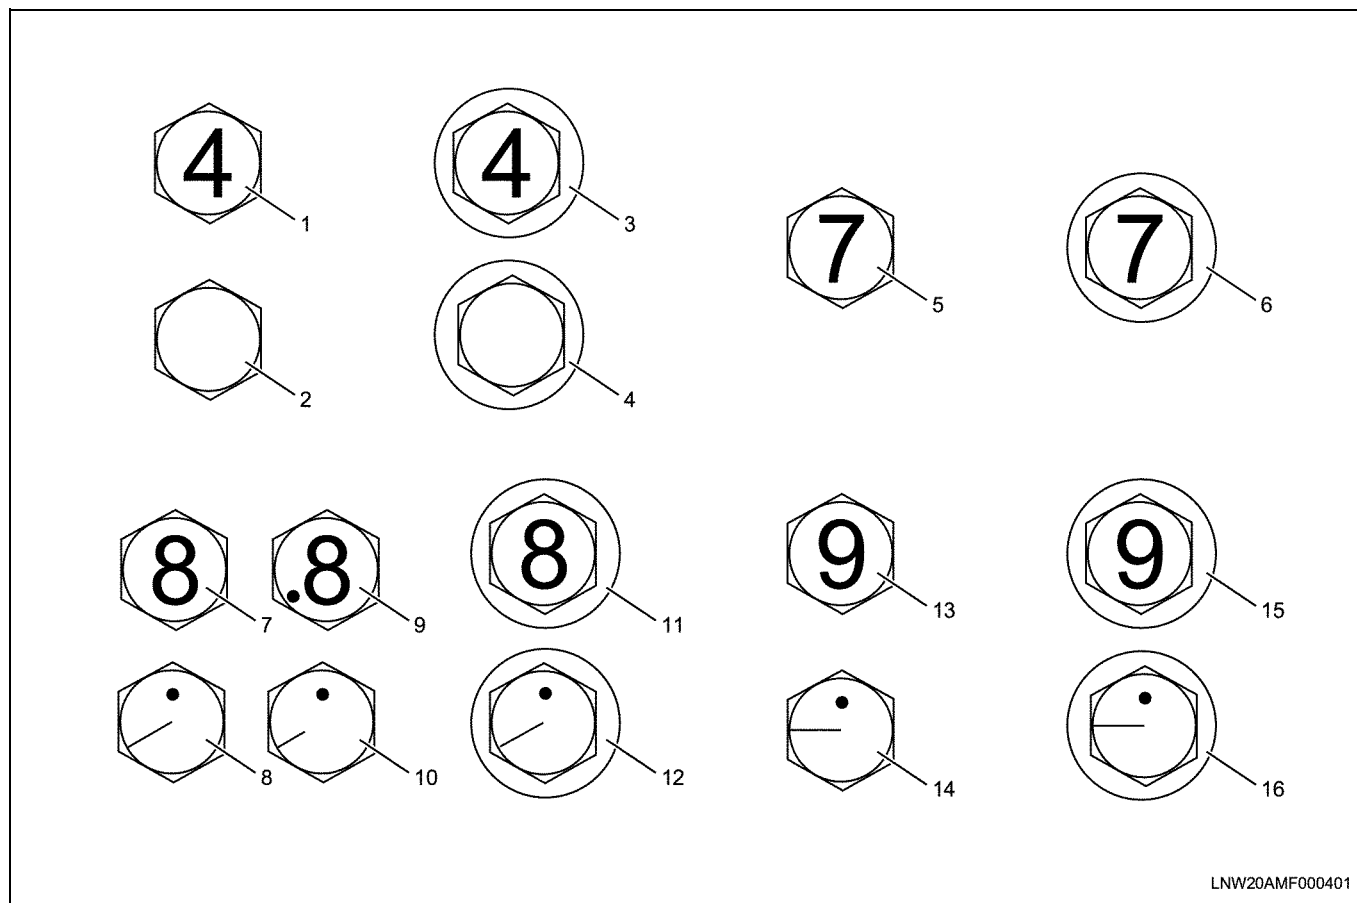

LNW20AMF000401

Legend

- | | |
|------------------------------------|---------------------------------------|
| 1. Hexagon head bolt(4.8, 4T) | 9. Hexagon head bolt(Un-refined 8.8) |
| 2. Hexagon head bolt(4.8, 4T) | 10. Hexagon head bolt(Un-refined 8.8) |
| 3. Flange bolt(4.8, 4T) | 11. Flange bolt(8.8) |
| 4. Flange bolt(4.8, 4T) | 12. Flange bolt(8.8) |
| 5. Hexagon head bolt(7T) | 13. Hexagon head bolt(9.8, 9T) |
| 6. Flange bolt(7T) | 14. Hexagon head bolt(9.8, 9T) |
| 7. Hexagon head bolt (refined 8.8) | 15. Flange bolt(9.8, 9T) |
| 8. Hexagon head bolt (refined 8.8) | 16. Flange bolt(9.8, 9T) |

Flare nut

| | Pipe diameter | tightening torque (for medium and large size vehicles) | Flare nut 2 side width (mm) | |
|---|---------------|--|-----------------------------|-----|
| | | | Old | New |
| Flare nut tightening torque (service standard value) N·m {kgf·m} | φ4.76 mm | 12.8 ~ 18.6 {1.3 ~ 1.9} | 14 | 14 |
| | φ6.35 mm | 23.5 ~ 49 {2.4 ~ 5.0} | 17 | 17 |
| | φ8.0 mm | 23.5 ~ 49 {2.4 ~ 5.0} | 19 | 17 |
| | φ10.0 mm | 44.1 ~ 93.2 {4.5 ~ 9.5} | 22 | 19 |
| | φ12.0 mm | 58.8 ~ 137.3 {6.0 ~ 14.0} | 27 | 24 |
| | φ15.0 mm | 78.5 ~ 156.9 {8.0 ~ 16.0} | 30 | 30 |

Taper screw from connectors (brass)

| | | | | N·m {kgf·m} |
|------------|---------------------------|---------------------------|---------------------------|---------------------------|
| Screw size | PT(R) 1/8 | PT(R) 1/4 | PT(R) 3/8 | PT(R) 1/12 |
| — | 2.0 ~ 14.7 (0.2 ~ 1.5) | 4.9 ~ 15.7 (0.5 ~ 1.6) | 9.8 ~ 16.7 (1.0 ~ 1.7) | 9.8 ~ 17.7 (1.0 ~ 1.8) |

ENGINE

ENGINE MECHANICAL (4HK1, 6HK1)

TABLE OF CONTENTS

| | | | |
|---|-------|-----------------------------------|--------|
| ISUZU DIESEL ENGINE (4HK1, 6HK1) | 1A-3 | Inspection | 1A-82 |
| Precautions on Service Work | 1A-3 | Reassembly | 1A-88 |
| Main Data and Specifications | 1A-11 | Installation | 1A-94 |
| Cylinder Head Cover | 1A-14 | Torque Specifications | 1A-101 |
| Components | 1A-14 | Special Tool | 1A-101 |
| Removal | 1A-15 | Piston, Connecting Rod | 1A-103 |
| Installation | 1A-16 | Components | 1A-103 |
| Torque Specifications | 1A-18 | Removal | 1A-103 |
| Inlet Cover | 1A-20 | Disassembly | 1A-104 |
| Components | 1A-20 | Reassembly | 1A-110 |
| Removal | 1A-21 | Installation | 1A-112 |
| Installation | 1A-22 | Torque Specifications | 1A-114 |
| Torque Specifications | 1A-24 | Special Tool | 1A-114 |
| Turbocharger and Exhaust Manifold | 1A-25 | Flywheel | 1A-115 |
| Components | 1A-25 | Components | 1A-115 |
| Removal | 1A-26 | Removal | 1A-115 |
| Inspection | 1A-27 | Inspection | 1A-117 |
| Installation | 1A-28 | Installation | 1A-117 |
| Torque Specifications | 1A-32 | Torque Specifications | 1A-119 |
| Timing Gear Train | 1A-35 | Special Tool | 1A-119 |
| Components | 1A-35 | Front Cover | 1A-120 |
| Removal | 1A-36 | Components | 1A-120 |
| Inspection | 1A-38 | Removal | 1A-121 |
| Installation | 1A-40 | Installation | 1A-122 |
| Torque Specifications | 1A-51 | Torque Specifications | 1A-124 |
| Special Tool | 1A-52 | Crankshaft Front Oil Seal | 1A-126 |
| Rocker Arm Shaft ASM | 1A-53 | Components | 1A-126 |
| Components | 1A-53 | Removal | 1A-126 |
| Removal | 1A-53 | Installation | 1A-128 |
| Disassembly | 1A-54 | Torque Specifications | 1A-133 |
| Reassembly | 1A-56 | Special Tool | 1A-133 |
| Installation | 1A-57 | Crankshaft Rear Oil Seal | 1A-134 |
| Torque Specifications | 1A-59 | Components | 1A-134 |
| Camshaft ASM | 1A-60 | Removal | 1A-134 |
| Components | 1A-60 | Installation | 1A-135 |
| Removal | 1A-61 | Special Tool | 1A-138 |
| Disassembly | 1A-62 | Crankshaft | 1A-139 |
| Reassembly | 1A-64 | Components | 1A-139 |
| Fixing torque | 1A-66 | Removal | 1A-139 |
| Special Tool | 1A-66 | Disassembly | 1A-141 |
| Installation | 1A-67 | Reassembly | 1A-141 |
| Torque Specifications | 1A-69 | Inspection | 1A-141 |
| Valve Stem Seal, Valve Spring | 1A-70 | Installation | 1A-146 |
| Components | 1A-70 | Torque Specifications | 1A-150 |
| Removal | 1A-70 | Special Tool | 1A-150 |
| Inspection | 1A-71 | Cylinder Block | 1A-152 |
| Installation | 1A-72 | Components | 1A-152 |
| Special Tool | 1A-74 | Removal | 1A-152 |
| Cylinder Head | 1A-75 | Inspection | 1A-153 |
| Components | 1A-75 | Installation | 1A-154 |
| Removal | 1A-75 | Lubrication System | 1A-157 |
| Disassembly | 1A-79 | Precautions on Service Work | 1A-157 |

1A-2 ENGINE MECHANICAL (4HK1, 6HK1)

| | |
|---------------------------|--------|
| Function Check | 1A-158 |
| Special Tool | 1A-159 |
| Oil Port Cover ASM | 1A-160 |
| Components | 1A-160 |
| Removal | 1A-160 |
| Installation | 1A-160 |
| Oil Cooler | 1A-162 |
| Components | 1A-162 |
| Removal | 1A-163 |
| Disassembly | 1A-164 |
| Reassembly | 1A-164 |
| Installation | 1A-165 |
| Oil Pan | 1A-168 |
| Components | 1A-168 |
| Removal | 1A-168 |
| Installation | 1A-169 |
| Oil Pump | 1A-171 |
| Components | 1A-171 |
| Removal | 1A-171 |
| Disassembly | 1A-172 |
| Reassembly | 1A-172 |
| Inspection | 1A-173 |
| Installation | 1A-174 |
| Oil Pressure Switch | 1A-178 |
| Inspection | 1A-178 |

ISUZU DIESEL ENGINE (4HK1, 6HK1)

Precautions on Service Work

Matters that require attention in terms of maintenance

To prevent damage to the engine and ensure reliability of its performance, pay attention to the following in maintaining the engine: When taking down the engine on the ground, do not make the bearing surface of the oil pan touch directly the ground. Use a wood frame, for example, to support the engine with the engine foot and the flywheel housing.

Because there is only a small clearance between the oil pan and the oil pump strainer, it can damage the oil pan and the oil strainer.

- When the air duct or air cleaner is removed, cover the air intake opening to prevent foreign matter from getting into the cylinder. If it gets into it, it can considerably damage the cylinder and others while the engine is operating.
- When maintaining the engine, never fail to remove the battery ground cable. If not, it may damage the wire harness or electrical parts. If you need electricity on for the purpose of inspection, for instance, watch out for short circuits and others.
- Apply engine oil to the sliding contact surfaces of the engine before reassembling it. This ensures adequate lubrication when the engine is first started.
- When valve train parts, pistons, piston rings, connecting rods, connecting rod bearings or crankshaft journal bearings are removed, put them in order and keep them.
- When installing them, put them back to the same location as they were removed.
- Gaskets, oil seals, O-rings, etc. must be replaced with new ones when the engine is reassembled.
- As for parts where a liquid gasket is used, remove an old liquid gasket completely and clean it up thoroughly so that no oil, water or dust may be clung to them. Then, apply the designated liquid gasket to each place anew before assembly.
- Surfaces covered with liquid gasket must be assembled within 7 minutes of gasket application. If more than 7 minutes have elapsed, remove the existing liquid gasket and apply new liquid gasket.
- When assembling or installing parts, fasten them with the specified tightening torque so that they may be installed properly.

Matters that require attention in specifically dealing with this engine.

Holes or clearances in the fuel system, which serve as a passage of fuel, including the inside of the injector, are made with extreme precision. For this reason, they are highly sensitive to foreign matter and if it gets in, it can lead to an accident on the road, for instance; thus, make sure that foreign matter will be prevented from getting in.

When servicing the fuel system, every precaution must be taken to prevent the entry of foreign material into the system.

- Before beginning the service procedure, wash the fuel line and the surrounding area.
- Perform the service procedures with clean hands. Do not wear work gloves.
- Immediately after removing the fuel hose and/or fuel pipe, carefully tape vinyl bags over the exposed ends of the hose or pipe.
- If parts are to be replaced (fuel hose, fuel pipe, etc.) do not open the new part packaging until installation.

Work procedure

- The fuel opening must be quickly sealed when removing the fuel pipe, injection pipe, fuel injector, fuel supply pump, and common rail.
- The eyebolts and gasket must be stored in a clean parts box with a lid to prevent adhesion of foreign matter.
- Fuel leakage could cause fires. Therefore, after finishing the work, wipe off the fuel that has leaked out and make sure there is no fuel leakage after starting the engine.