

60 Series Tractor



SERVICE MANUAL 60 Series Tractor

SM2008 01JUN52 English

SM2008 01JUN52

LITHO IN U.S.A. (REVISED)
ENGLISH



**SERVICE MANUAL FOR
JOHN DEERE DEALERS**

MODEL  **SERIES**

TRACTOR

TABLE OF CONTENTS

	<i>Page</i>	
INDEX	1-2	
		<i>Section</i>
Description and Specifications	10	
Preparing the Tractor for Delivery to the Customer	20	
Tractor Tune-Up and Adjustments	40	
Engine	60	
Governor and Fanshaft Assembly	70	
Ignition and Electrical Systems	80	
Cooling System	90	
Engine Lubrication System	100	
Fuel System	110	
Pulley, Clutch, and Pulley Brake	120	
Transmission and Transmission-Driven Power Shaft	130	
Engine-Driven Power Shaft	135	
Differential and Final Drive	140	
Brakes	150	
Wheels and Tires	160	
Steering Mechanism and Front Axle	170	
Powr-Trol	180	

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

INTRODUCTION

This Unit of the Service Manual contains maintenance instructions for the Model "60" Tractor. Included are complete instructions for removal, disassembly, inspection, repair, assembly, and installation of all parts and assemblies.


In addition, the manual contains a brief description of the more complicated systems of the tractor and tells how they operate. Dimensions of many new wearing parts are given as an aid in determining when parts replacement is necessary. Tests and adjustments required to keep the tractor operating at full efficiency are explained in detail. Full instructions on preparing a new tractor for delivery to the customer are included.

Complete instructions for testing, repairing, and adjusting the carburetor, generator, starter, distributor, and Powr-Trol Valve mechanism are given in the "Tractors and Engines (General)" Unit of the Service Manual.

If tractor design changes or improved methods of maintenance are found, new pages with the latest information will be supplied for your Service Manual. When these pages are sent to you, insert them in your manual immediately. Keep your book up-to-date at all times and you will profit by the suggestions given.

The Service Manual was planned and written for the Service Department; its place is in the shop. Use the manual whenever in doubt about correct maintenance procedures. Use it as a text book for new Service Department personnel who are unfamiliar with John Deere Tractors.

Daily use of the Service Manual as a guide for any and all service problems will reduce error and costly delay to the minimum and assure you the best in finished service work.

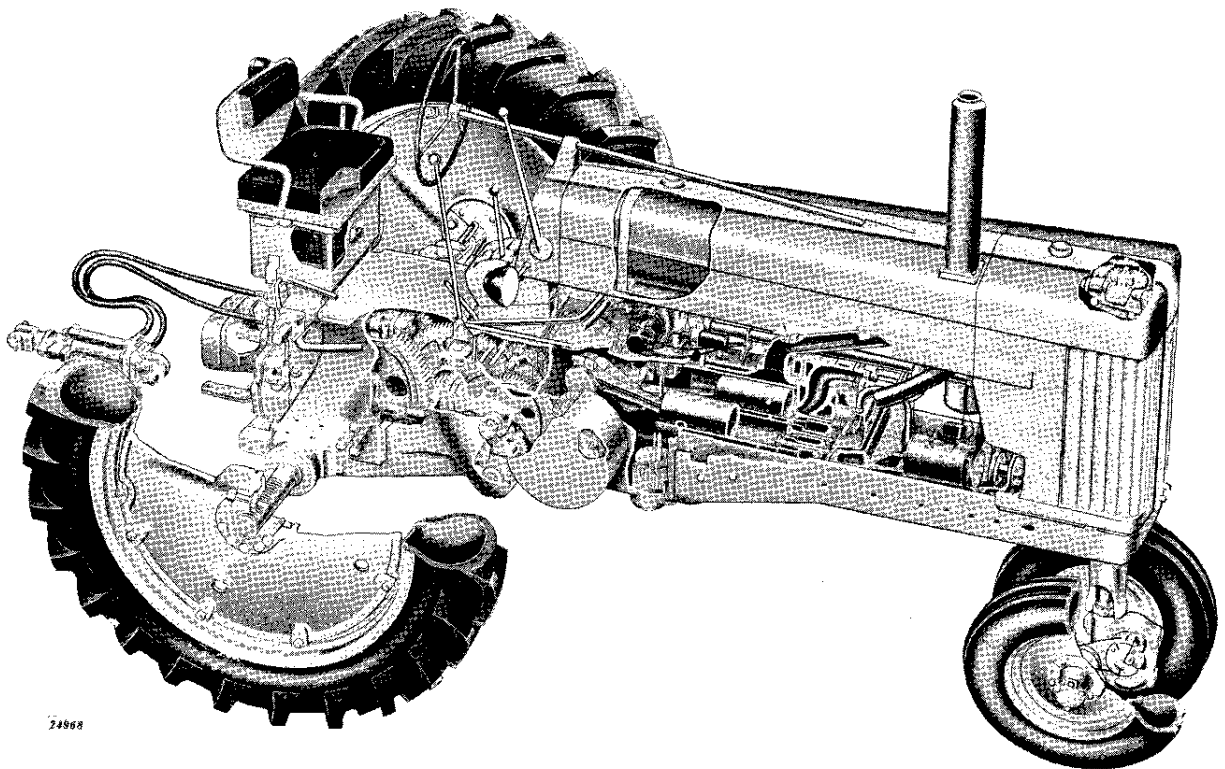

24868

Cut-Away View of John Deere Model "60" Tractor

INDEX

A	Page	Page	
Air Cleaner	110-15-1	Differential Adjustment	140-5-5
Air Cleaner Bracket	110-15-1	Distributor	80-5-1
Axle, Front, Wide Adj.-Tread	170-15-1	Distributor Adjustment	80-5-1
		Distributor, Timing	40-5-4
		Drive Gear and Shaft, Transmission	130-15-1
		Drive Gear, Oil Pump	60-25-1
B		E	
Batteries	80-20-1	Engine	60-5-1
Bevel Gear, Fan Shaft	70-15-2, 70-15-4	Engine Specifications	60-30-1
Bevel Pinion, Governor	70-5-3, 70-15-4		
Brakes	150-5-1		
Brakes, Adjusting	150-5-4		
Brake, Pulley	120-5-1, 120-10-1		
Brake Shoes	150-5-3		
Bearings, Camshaft	60-25-1		
Bearings, Main	60-20-1		
		F	
		Fan Shaft	70-5-1, 70-15-1
		Fast Idle Speed Adjustment	40-5-8
		Felt Washers, Rear Axle Housing	140-10-1
		Filter, Fuel	40-5-6, 110-10-1
		Filter, Oil	100-10-1
		Final Drive	140-10-1
		Final Drive Adjustment	140-10-4
		First Reduction Gear Cover	170-10-1
		Flywheel	60-20-1
		Followers, Cam	60-25-1
		Front Wheels	160-5-1
		Front Wheel Adjustment	160-5-3, 160-5-4
		Front Wheel, Single	160-5-3
		Fuel Filter	40-5-6, 110-10-1
		Fuel System	110-5-1
		Fuel Tanks	110-10-1
		Fuel Valve, Three-Way	110-10-1
		G	
		Gauge, Oil Pressure	110-15-1
		Generator	80-15-1
		Governor	70-5-1, 70-10-1
		Governor Shaft	70-5-2
		Guide, Cam Follower	60-25-1
		I	
		Ignition System	80-5-1
		J	
		Journals, Crankshaft	60-15-5
		K	
		Knee, Front Axle	170-15-2
		Knuckle, Front Axle	170-15-4
		Knuckle, Roll-O-Matic	170-10-2
C			
Camshaft	60-25-1		
Cam Followers	60-25-1		
Cam Follower Guides	60-25-1		
Camshaft, Timing	60-20-5		
Carburetors	110-5-1		
Carburetor Adjustment	40-5-7		
Carburetor Control Linkage	110-5-2		
Case, Governor	70-5-4		
Choke Adjustment	40-5-8		
Cleaning, Radiator	40-5-6		
Clutch	120-5-1		
Clutch Adjustment	120-5-5		
Clutch Facings	120-5-1, 120-5-3		
Clutch Operating Parts	120-10-1		
Clutch, Power Shaft	135-10-1		
Clutch, Power Shaft, Adj.	135-10-6, 135-10-7		
Coil	80-5-1		
Compression Test	40-5-2		
Connecting Rods	60-15-1		
Countershaft Adjustment	130-15-2		
Countershaft, Transmission	130-15-1		
Cover, Reduction Gear	120-10-1		
Crankcase Ventilation	60-5-2		
Crankshaft	60-20-1		
Crankshaft End Play	60-20-6		
Crankshaft Journals	60-15-5		
Current-Voltage Regulator	80-15-1		
Cylinder Block	60-15-1		
Cylinder Head	60-10-1		
Cylinder Measurements	60-15-3		
D			
Description of Model "60" Tractor	10-5-1		
Differential	140-5-1		



L	<i>Page</i>		<i>Page</i>
Lights.....	80-20-1	Rings, Piston.....	60-15-2
Linkage, Speed Control.....	40-5-8	Rockshaft Housing.....	180-10-1
Linkage, Starter Control.....	40-5-10	Roll-O-Matic.....	160-5-1, 170-10-1
Lock, Roll-O-Matic.....	170-10-1		
Lubrication System.....	100-5-1	S	
		Shaft, Governor.....	70-5-2
M		Shifters.....	130-10-2
Main Bearings.....	60-20-1	Shifter Adjustment.....	130-10-4
Main Bearing Measurements.....	60-20-5	Shifter Lever, Power Shaft.....	130-20-1
Manifold.....	60-10-1	Shifter Shafts.....	130-10-2
Master Gauge, Use of.....	40-5-8	Shutter.....	90-15-1
Motor, Starting.....	80-10-1	Single Front Wheel.....	160-5-3
		Sliding Gear Shaft.....	130-15-1
		Slow Idle Speed Adjustment.....	40-5-7
O		Spark Plugs.....	80-5-2
Oil Pressure Adjustment.....	40-5-8, 100-15-1	Speed Control Lever, Adjustment.....	40-5-8
Oil Filter.....	100-10-1	Speed Control Linkage.....	40-5-8
Oil Pressure Gauge.....	100-15-1	Spindle, Front Wheel, Roll-O-Matic...	170-10-3
Oil Pump, Engine.....	100-5-1	Spindle, Wheel, Adj. Front End.....	170-15-4
Oil Pump, Power Shaft.....	135-10-2	Starter Control Linkage.....	40-5-10
		Starting Motor.....	80-10-1
P		Steering Shaft.....	170-5-1
Pedal, Brake.....	150-5-3	Steering Shaft and Worn End Play Adj.	170-5-6
Pedestal.....	170-5-1	Steering Shaft Backlash Adj.....	170-5-6
Pistons.....	60-15-1	Steering Spindle.....	170-5-2
Piston Measurements.....	60-15-2	Steering Spindle End Play Adj.....	170-5-5
Piston Pins.....	60-15-2		
Piston Rings.....	60-15-2	T	
Power Shaft Clutch.....	135-10-1	Tappet Adjustment.....	60-10-6
Power Shaft Clutch Adj.....	135-10-6, 135-10-7	Tappet Clearance.....	40-5-5
Power Shaft, Engine-Driven.....	135-5-1	Thermostat.....	90-15-1
Power Shaft, Trans.-Driven.....	135-5-1, 135-20-1	Throttle Control Linkage.....	110-5-2
Powr-Trol Adjustment.....	40-5-11	Timing Distributor.....	40-5-4
Powr-Trol Cracking Pressure.....	40-5-11	Timing Light.....	40-5-4
Powr-Trol Pump.....	180-5-1	Tires.....	160-15-1
Powr-Trol Relief Valve.....	40-5-12	Toe-In Adjustment.....	170-15-6
Powr-Trol Valve Housing.....	180-10-1	Tractor, Model "60," Description.....	10-5-1
Preparing the Tractor for Delivery.....	20-5-1	Tractor, Model "60," Specifications...	10-10-1
Pressure Regulator, Oil.....	110-10-1	Transmission.....	130-5-1
Pulley.....	120-5-1	Tread Adjustment.....	160-10-1
Pulley Brake.....	120-5-1, 120-10-1	Tune-Up.....	40-5-1
Pulley Brake Adjustment.....	120-10-3		
Pump, Oil, Engine.....	110-5-1	V	
Pump, Oil, Power Shaft.....	135-10-2	Valves.....	60-10-1
Pump, Powr-Trol.....	180-5-1	Valve Timing.....	40-5-5
Pump, Ventilator.....	70-5-1, 70-15-1	Valve, Fuel, Three-Way.....	110-10-1
Pump, Water.....	90-10-1	Valve Housing, Powr-Trol.....	180-10-1
		Ventilator Pump.....	70-5-1, 70-15-1
R			
Radiator.....	90-5-1	W	
Radiator, Cleaning.....	40-5-6	Water Pump.....	90-10-1
Radiator, Core.....	90-5-2	Wheels, Front.....	160-5-1
Rear Axles.....	140-10-1	Wheels, Rear.....	160-10-1
Rear Wheels.....	160-10-1	Wheel Weights.....	160-15-2
Rear Wheel Tread Adjustment.....	160-10-1	Wide Adjustable-Tread Front Axle...	170-15-1
Reduction Gear Cover.....	120-10-1	Wiring Diagram.....	80-20-1
Regulator, Current-Voltage.....	80-15-1	Worm, Steering Shaft.....	170-5-1
Relief Valve, Powr-Trol.....	40-5-12		

Section 10

Description and Specifications

Group 5 DESCRIPTION

The John Deere Model "60" Tractor is a general purpose tractor with sufficient power to pull two 16-inch plow bottoms or the equivalent under normal conditions, or three 14-inch plow bottoms under favorable conditions. The tractor has six forward speeds and one reverse speed.

The features of the tractor are described briefly in the paragraphs which follow. Full descriptions of each of the components or assemblies are contained in the various Sections throughout this manual.

Serial Numbers.

Each tractor bears a serial number located on top of the main case just under the distributor (Figure 10-5-1).

The distributor and the Powr-Trol valve hous-

ing also bear serial numbers.

Engine.

The tractor is powered by a two-cylinder, cast-in-block, valve-in-head engine with a displacement of 321 cubic inches. Rotation is counterclockwise when viewed from the fly-wheel side.

The engine has aluminum alloy, sleeve-type main bearings and replaceable, precision-type connecting rod bearings. All bearings and other parts of the engine are pressure lubricated by a full force feed pressure system with a full flow oil filter. The system includes a replaceable Purolator filter element. The crankcase is ventilated by a pump located on the rear end of the fan shaft. Engine speeds are controlled by a fly-ball type governor driven by the camshaft.

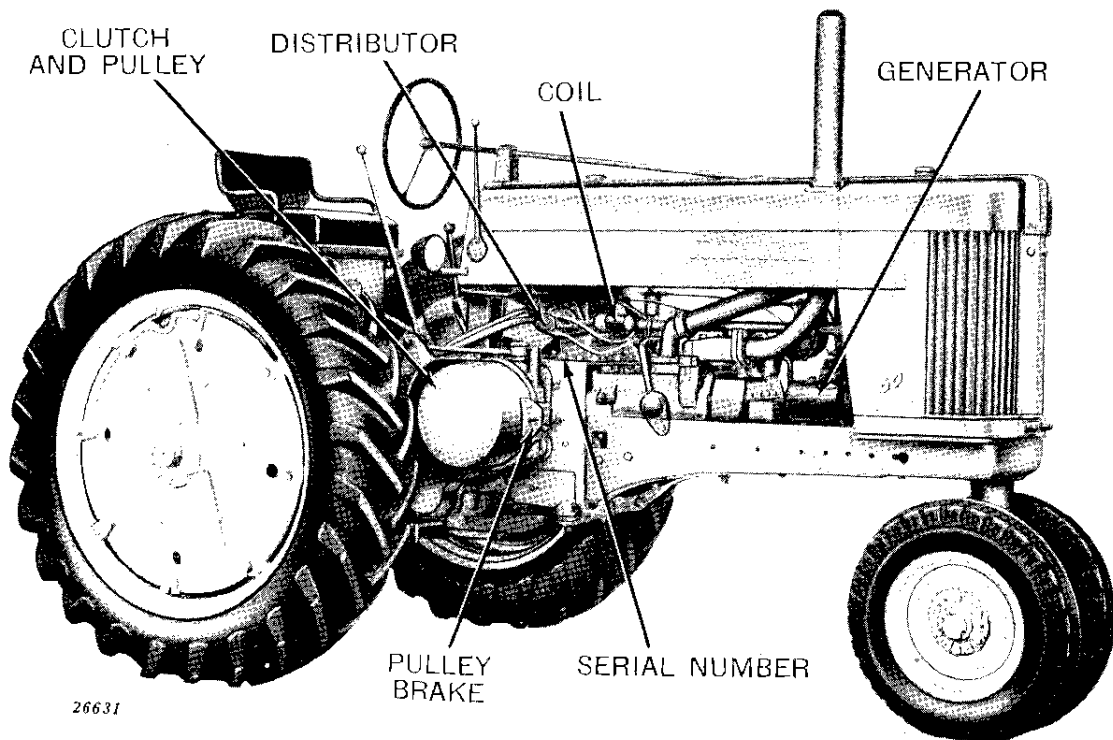


Figure 10-5-1—John Deere Model "60" Tractor—Pulley Side

Fuel System.

Both gasoline and All-Fuel tractors are available.

Gasoline tractors are equipped with a dual-induction carbureting system using a gravity-fed, natural-draft, double-barrel carburetor and individually ported valves. The All-Fuel tractor uses a natural-draft, single-barrel carburetor. This tractor has two fuel tanks—a large tank for fuel and a small auxiliary tank for gasoline which is used when starting the All-Fuel engine.

An oil-wash air cleaner assures clean air for the engine.

Ignition.

The tractor has a battery-distributor type ignition system with automatic spark advance. A 12-volt battery, generator, starter and lights are standard equipment. The lights consist of two front lights which can be made bright or dim, and a rear combination white and red warning light.

Cooling System.

The engine is water cooled. The cooling system includes a centrifugal-type water pump and a thermostatically controlled shutter.

Clutch.

A dry disk, hand-operated clutch is enclosed within the belt pulley. The clutch contains four 10-inch dry disks. The belt pulley is engaged by the clutch lever and rotates at crankshaft speed whenever the clutch is engaged. When the clutch is disengaged, an adjustable pulley brake prevents pulley rotation.

Transmission and Differential.

The transmission lies crosswise in the main case. Shifting through the entire range of six forward speeds and one reverse speed is accomplished by one shift lever.

The differential is of the conventional type with a ring gear and spider driven directly by a spur gear in the transmission.

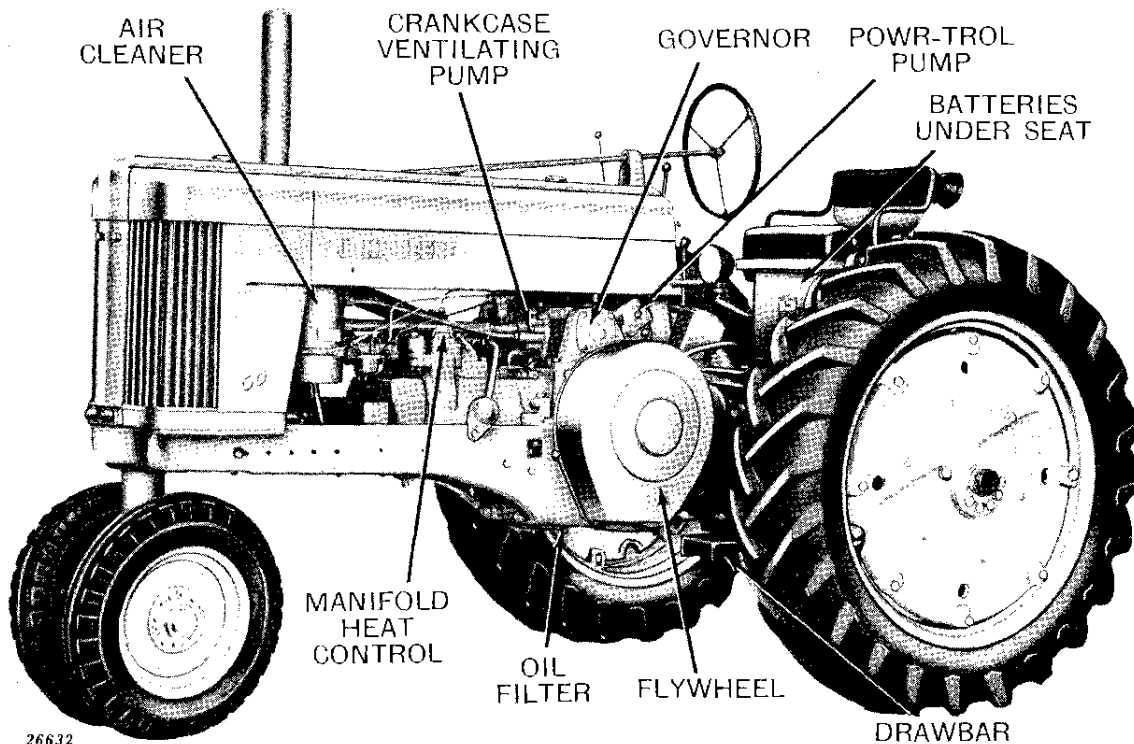


Figure 10-5-2—John Deere Model "60" Tractor—Flywheel Side

Brakes.

Two individually operated foot brakes are provided to stop the tractor or hold it on inclines. Each brake has two internal-expanding brake-lined shoes and a drum with a shaft and gear which meshes with the final drive gear on either side.

Front Wheel Assemblies.

The tractor may be equipped with a variety of front wheel assemblies. These include the Roll-O-Matic, standard dual front wheel, wide adjustable front axle, single front wheel, and 38-inch fixed tread. The wide adjustable front axle provides a tread range from 56 to 80 inches in 4-inch steps.

Rear Wheels.

Rear wheel tread adjustment is made by a pinion located in the wheel hub which engages a rack on the axle. Extreme adjustments are made by changing the position of the rim and tire on the wheel.

The tractor may be equipped with *regular-*

length rear axles or *long* rear axles. With regular axles and 38-inch tires the tread range is 56 to 88 inches. With long axles and 38-inch tires the tread range is 62½ to 97¾ inches. If the tractor has long axles and 42-inch tires the tread can be adjusted from 56 to 104 inches.

Power-Take-Off Shaft.

Two types of power take-off shaft are available: the conventional transmission-driven type, and optional, engine-driven "live" type with self-contained clutch permitting operation of P.T.O. equipment independently of tractor ground travel. Both types of shaft conform to A.S.A.E. standards.

Hydraulic System.

The tractor may be equipped with Powr-Trol which raises, lowers, or sets integral implements at any desired depths. An implement-mounted remote cylinder may be used with Powr-Trol. The gear type hydraulic pump is mounted on the rear of the governor case and is driven through an idler gear by the camshaft.

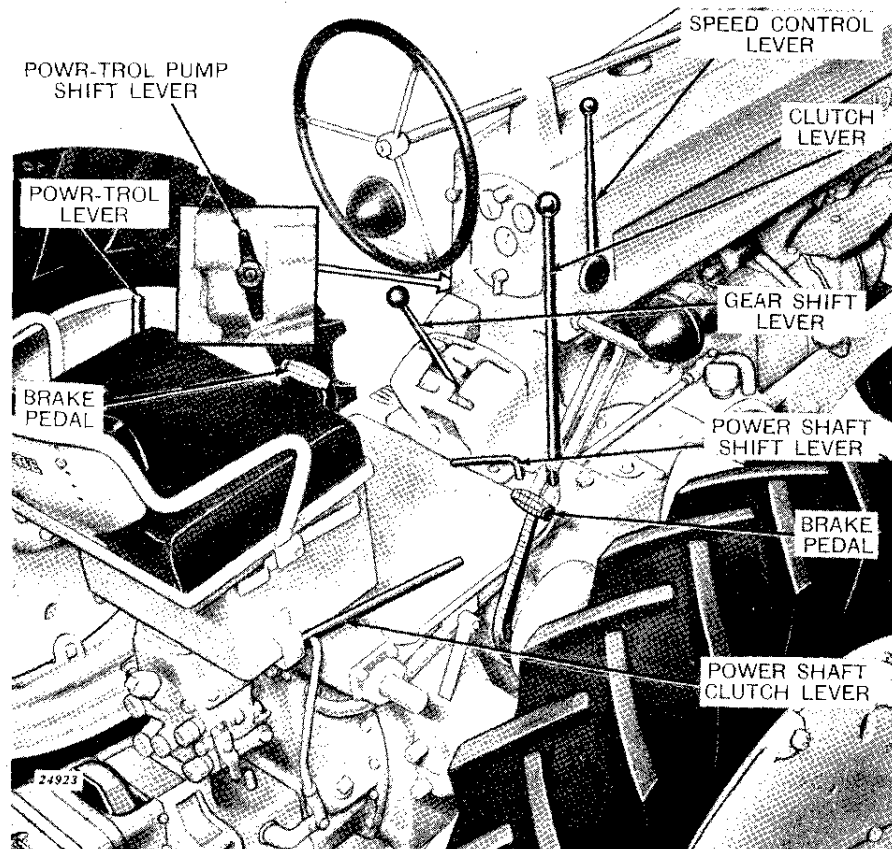


Figure 10-5-3—Operating Controls

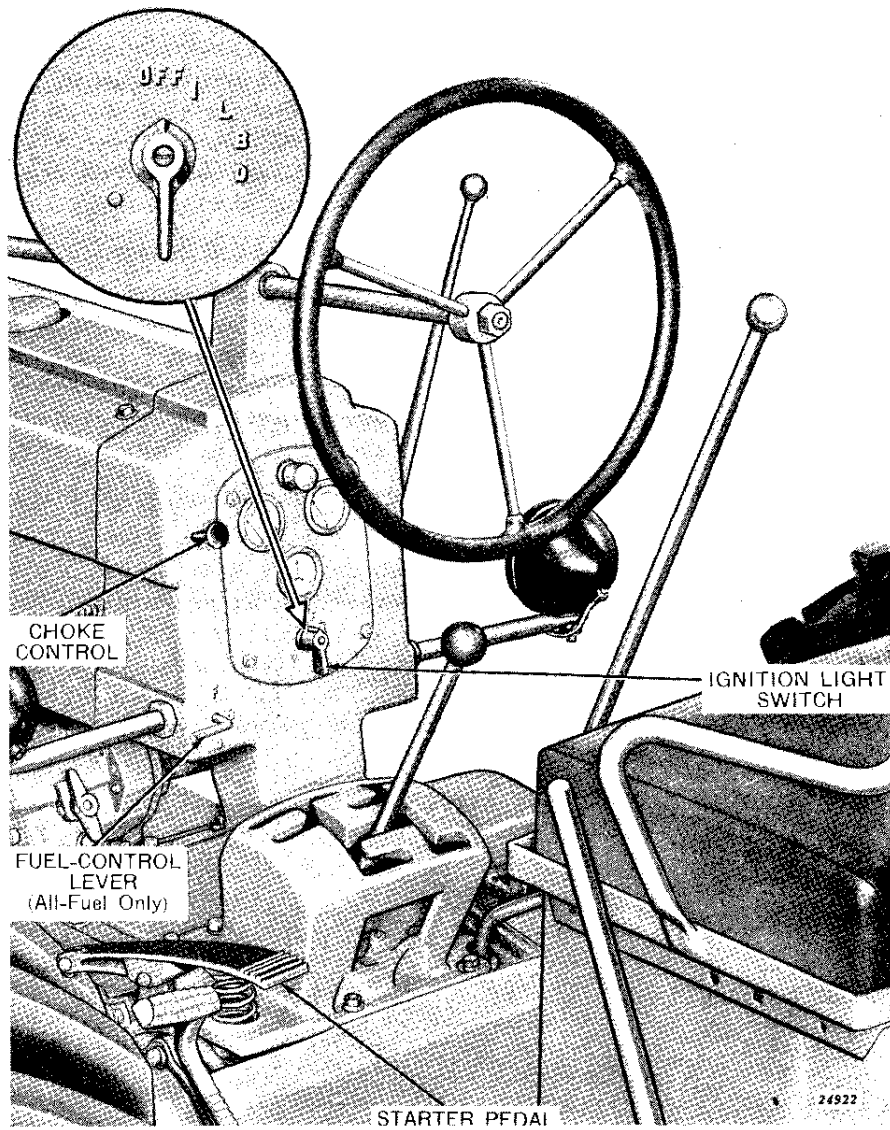


Figure 10-5-4—Starting Controls

Group 10 SPECIFICATIONS

PERFORMANCE:

Capacity for Work:

Two 16-inch plow bottoms or a two-bottom bedder under normal conditions. Three 14-inch plow bottoms or a four-bottom bedder under favorable soil conditions.

Maximum Belt Horsepower:

Gasoline.....
All-Fuel.....

Maximum Drawbar Horsepower:

Gasoline.....
All-Fuel.....

Maximum Pull:

(2nd Gear)
Gasoline.....
All-Fuel.....

(Tractor not tested at Nebraska.)

CAPACITIES (U. S. MEASUREMENTS):

Gasoline Tank:
Gasoline Tractor..... 20-1/2 Gals.
All-Fuel Tractor..... 1 Gal.
Fuel Tank (All-Fuel)..... 20-1/2 Gals.
Crankcase..... 8 Qts.
Transmission..... 7 Gals.
Power-Trol..... 6 Qts.
Power Shaft Clutch..... 1-3/4 Qts.
Remote Cylinder..... 1 Qt.
Cooling System..... 8-1/4 Gals.

SPEEDS:

Gear	11-38 Tires	11-42 Tires
1	1-1/2 mph	1-1/2 mph
2	2-1/2 mph	2-3/4 mph
3	3-1/2 mph	3-3/4 mph
4	4-1/2 mph	4-3/4 mph
5	6-1/4 mph	6-3/4 mph
6	11 mph	11-3/4 mph
Reverse	3 mph	3-1/4 mph

ENGINE:

Type..... Two-cylinder, cast-in-block, valves-in-head.

Engine Speeds:

Load..... 975 rpm
Idle..... 1115 rpm

Bore and Stroke..... 5-1/2" x 6-3/4"

Displacement..... 321 cubic inches

Compression Ratio:

Gasoline..... 6.1 to 1
All-Fuel..... 4.50 to 1

LUBRICATION SYSTEM:

Type..... Full force-feed pressure system with Purolator oil filter element.

FUEL SYSTEM:

Type..... Gravity feed
Carburetor:
Gasoline..... Natural-draft duplex type
All-Fuel..... Natural-draft type
Air Cleaner..... Oil-wash type

COOLING SYSTEM:

Type..... Centrifugal pump and thermostatically controlled shutter.

IGNITION SYSTEM:

Type..... Battery-Distributor
Distributor Point Gap..... .022"
Spark Plugs:
Size..... 18 mm.
Spark Plug Gap..... .030"

ELECTRICAL SYSTEM:

Battery Voltage..... 12 Volts
Generator Regulation..... Current Voltage Regulator.
Battery..... Group I

CLUTCH:

Type..... Hand-operated, four 10-inch dry disks.

BELT PULLEY:

Diameter..... 12-13/16"
Width..... 7-3/8"
Rpm (Load)..... 975
Belt Speed..... 3270 feet per minute

TRANSMISSION:

Type..... Six speeds forward and one in reverse.
Gears..... Selective-type, straight spur-cut gears, forged and heat-treated.
Bearings..... Shafts operate on three roller bearings, four tapered roller bearings, and five ball bearings.

(Continued on next page)

Section 20

PREPARING THE TRACTOR FOR DELIVERY TO THE CUSTOMER

(Off the Car or Truck)

Group 5

Each Model "60" Tractor is manufactured with care and precision. Before it leaves the factory it is thoroughly inspected, adjusted, and tested.

However, during shipment and storage, many situations exist which may affect the general condition of the tractor. It is therefore important that the tractor be inspected thoroughly, and adjusted if necessary, before it is delivered to the customer.

By following the procedures given in this Section, you can be certain that the tractor is delivered in tip-top condition—ready to perform the work for which it was built. You will save time and money by avoiding after-delivery com-

plaints and service calls which will result if the tractor is not correctly adjusted when it leaves your shop. Above all, you can be sure of a satisfied customer when he puts the tractor to work.

Instructions pertaining to the preparation of tractors for temporary or permanent storage, and steps required to remove tractors from storage can be found under "Tractor Storage" in the "Tractors and Engines (General)" Unit of the Service Manual.

The chart below is a quick reminder of all points which should be checked or inspected prior to delivery. Detailed instructions for the less experienced serviceman follow the chart.

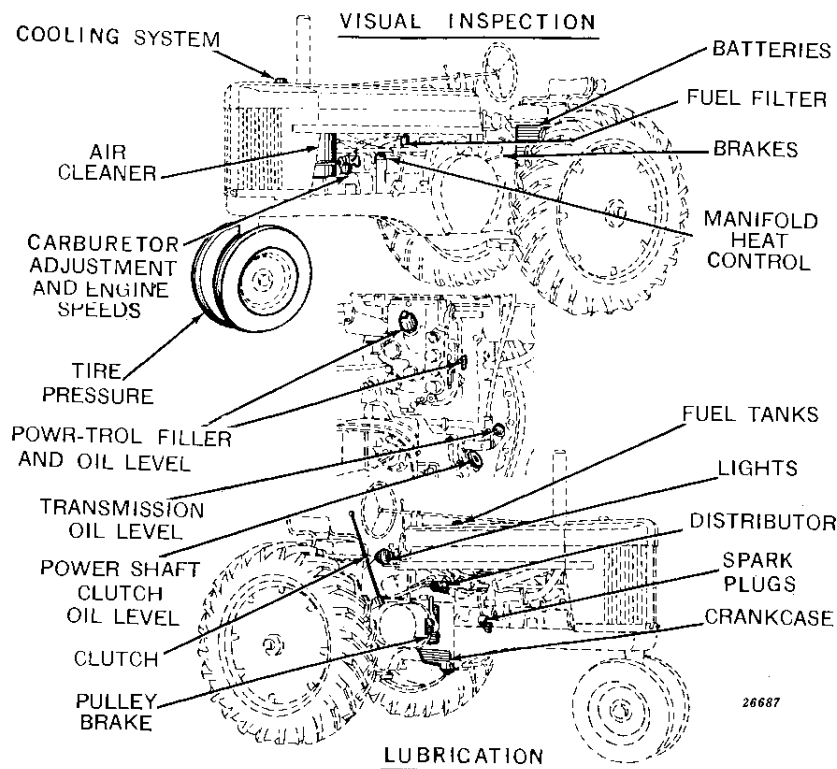


Figure 20-5-1—Pre-Delivery Check Points

VISUAL INSPECTION.

When the tractor is received, inspect it carefully, tightening all bolts, nuts, and cap screws. Note any dents, scratches, or other damage which may have occurred in transit. Repair or replace all damaged parts before the tractor is delivered.

COOLING SYSTEM.

Be sure that drain plug is installed in bottom of cylinder head and fill radiator with clean soft water or anti-freeze solution. Capacity of the cooling system is 8-1/4 U. S. gallons.

TIRES.

When tractors are shipped from the factory the tires are overinflated to prevent possible damage to the tractors while in transit. Check the pressure in the tires and deflate them to the correct operating pressure as shown in the chart below.

RUBBER TIRE INFLATION CHART

Rear Tires

Tire Size	Ply	*Inflation Pressure Without Added Wheel Weight	Maximum Permissible Additional Weight per Wheel at Maximum Recommended Inflation Pressure
11-38	6	12 lbs.	500 at 16 lbs.
12-38	6	12 lbs.	800 at 14 lbs.
9-42	6	20 lbs.	300 at 24 lbs.
11-42	6	12 lbs.	500 at 16 lbs.

Front Tires

6.00 x 16, 4-Ply—28 lbs.
6.00 x 16, 6-Ply—36 lbs.
7.50 x 16, 8-Ply—36 lbs.
9.00 x 10, 8-Ply—44 lbs.

**If the tractor is to be used for plowing advise the operator to increase the pressure in the furrow rear tire 4 pounds.*

and check the specific gravity of the electrolyte. It should be checked with an accurate hydrometer before adding water (Figure 20-5-2).

If liquid level is too low to check, add distilled water and run the engine for a few minutes permitting the water and electrolyte to mix; then check. Specific gravity should not go below 1.225 which is half charge. When fully charged the reading will be 1.240 to 1.255. Grease the terminal posts to reduce corrosion.

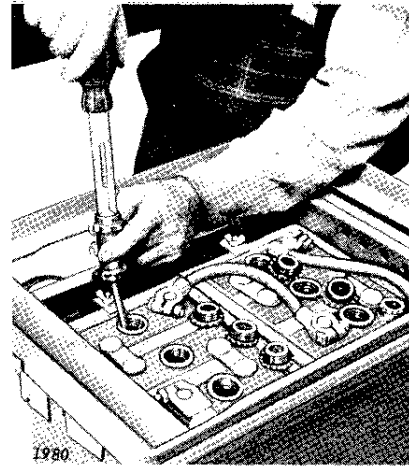


Figure 20-5-2—Checking Specific Gravity of Battery with a Hydrometer

AIR CLEANER.

Remove the air cleaner cup (Figure 20-5-3) and note oil level. If it is low, add clean SAE 10-W oil until the level is even with the oil level mark on the cup.



CRANKCASE OIL LEVEL.

Check the crankcase oil level by opening the test cock (Figure 20-5-4). If oil does not run out, add a good grade of SAE 10-W oil until it runs out of the test cock.

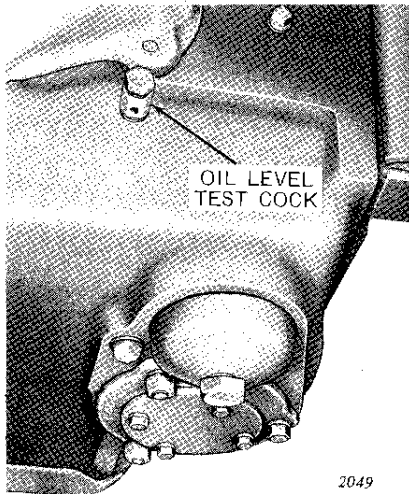


Figure 20-5-4—Crankcase Oil Level Test Cock

TRANSMISSION OIL LEVEL.

The transmission should be full of oil up to the filler plug (Figure 20-5-5). If necessary, add a good grade of SAE 90 transmission oil until its level is satisfactory. (Use SAE 80 oil if prevailing temperatures are below 0° F.)

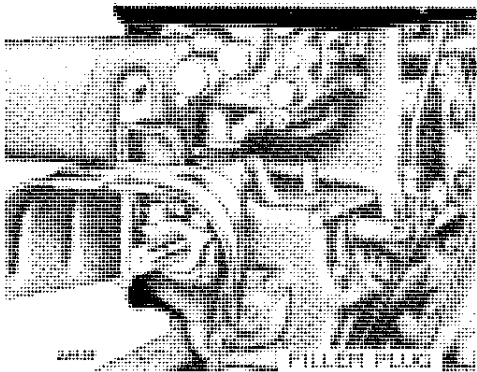


Figure 20-5-5—Transmission Filler Plug

POWR-TROL OIL LEVEL.

If the tractor is equipped with Powr-Trol, open the oil level cock (Figure 20-5-6) and see if oil runs out. If it does not, add good clean SAE 10-W oil at the filler plug until it runs out at the test cock.

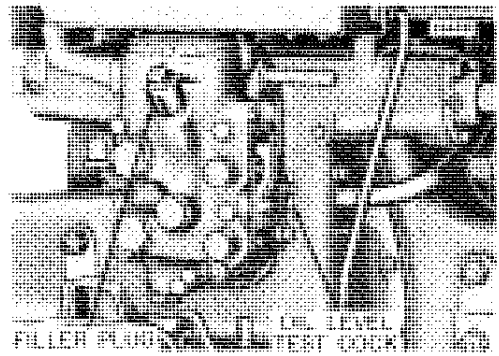


Figure 20-5-6—Powr-Trol Oil Level Test Cock and Filler Plug

POWER SHAFT CLUTCH OIL LEVEL.

If the tractor is equipped with an engine-driven "live" power shaft, check the oil level in the clutch by removing the filler plug (Figure 20-5-7). If oil does not run out, add good clean SAE 10-W oil until it does.

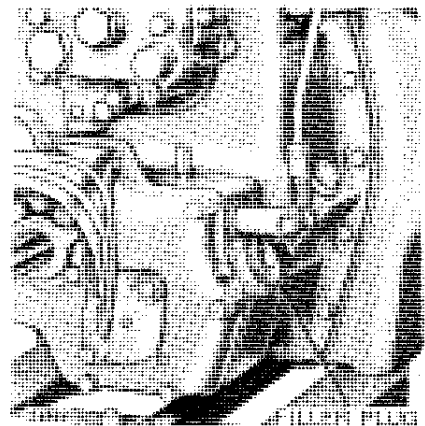


Figure 20-5-7—Power Shaft Clutch Filler Plug

MANIFOLD HEAT CONTROL.

When preparing a gasoline-burning tractor for delivery, check position of the manifold heat control valve (Figure 20-5-8). If the prevailing temperature is above 32° F. turn the valve to the "COLD" position by loosening the clamp which holds it in place. If the prevailing temperature is below 32° F. turn the valve to the "HOT" position. *Be sure "V" marks on valve and side of manifold line up before tightening clamp. Since the manifold heat control valve is a two-position valve only, do not set it in any intermediate position; otherwise damage to the engine may result. Never attempt to change the control with the engine running.* Advise the operator to set the valve in the "COLD" position regardless of temperature if the tractor is to be used continuously under full load.

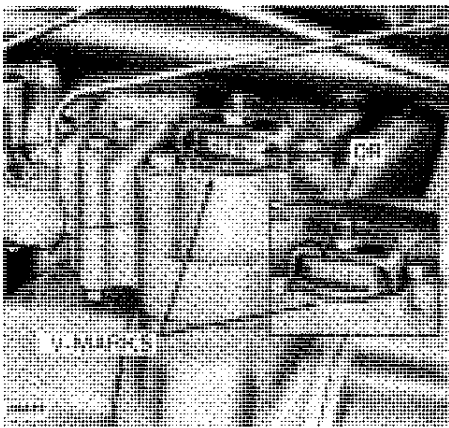


Figure 20-5-8—Manifold Heat Control Valve


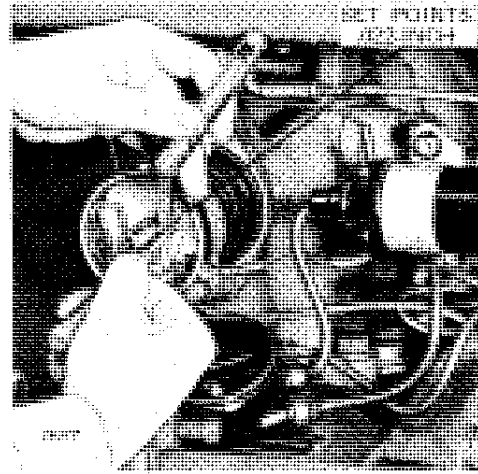


Figure 20-5-9—Adjusting Distributor Point Gap

Reinstall all distributor parts. Upper cap terminal wire goes to spark plug on flywheel side of tractor.

SPARK PLUGS.

Remove each spark plug and check the gap for .030-inch between electrodes. Adjust the gap if it is not set properly (Figure 20-5-10).

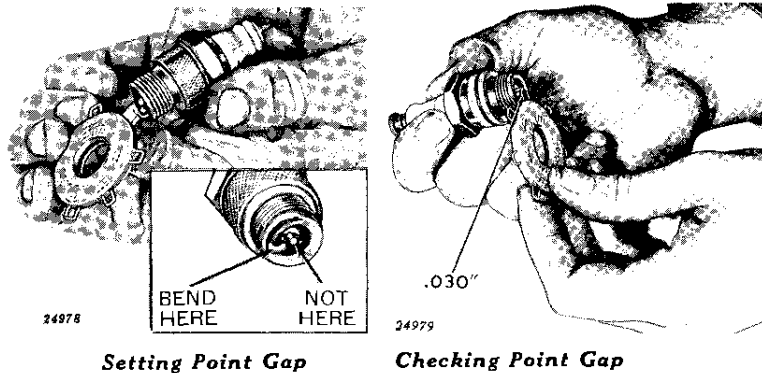

Setting Point Gap

Checking Point Gap

Figure 20-5-10—Adjusting Spark Plug Gap

DISTRIBUTOR.

Remove distributor cap, arm, and cover (Figure 20-5-9). Turn flywheel until cam opens points to widest position. Using a feeler gauge measure point gap and adjust to .022-inch if gap is not correct.

FUEL TANKS.

Use only good clean fuel in the tractor. Capacity of the main tank for both gasoline and All-Fuel tractors is 20-1/2 U.S. gallons. Capacity of the auxiliary tank on All-Fuel tractors is 1 U.S. gallon.