

586H
588H
Tier 4B (final)
Rough Terrain Forklift

SERVICE MANUAL

Part number 47821916
1st edition English
April 2015





SERVICE MANUAL

586H Four-Wheel Drive (4WD) TIER 4B (FINAL)

586H Two-Wheel Drive (2WD) TIER 4B (FINAL)

588H Four-Wheel Drive (4WD) TIER 4B (FINAL)

588H Two-Wheel Drive (2WD) TIER 4B (FINAL)

Link Product / Engine

| Product | Market Product | Engine |
|--|-----------------------|----------------|
| 586H Two-Wheel Drive (2WD) TIER 4B (FINAL) | North America | F5HFL463D*F005 |
| 586H Four-Wheel Drive (4WD) TIER 4B (FINAL) | North America | F5HFL463D*F005 |
| 588H Two-Wheel Drive (2WD) TIER 4B (FINAL) | North America | F5HFL463A*F001 |
| 588H Four-Wheel Drive (4WD) TIER 4B (FINAL) | North America | F5HFL463A*F001 |

Contents

INTRODUCTION

| | |
|--|-----------|
| Engine | 10 |
| [10.001] Engine and crankcase | 10.1 |
| [10.202] Air cleaners and lines | 10.2 |
| [10.216] Fuel tanks | 10.3 |
| [10.206] Fuel filters | 10.4 |
| [10.218] Fuel injection system..... | 10.5 |
| [10.220] Throttle linkage..... | 10.6 |
| [10.254] Intake and exhaust manifolds and muffler | 10.7 |
| [10.304] Engine lubrication system..... | 10.8 |
| [10.400] Engine cooling system | 10.9 |
| [10.414] Fan and drive | 10.10 |
| [10.501] Exhaust Gas Recirculation (EGR) - Diesel Particulate Filter (DPF) exhaust treatment | 10.11 |
| Transmission | 21 |
| [21.109] Transmission cooler and lines..... | 21.1 |
| [21.112] Power shuttle transmission..... | 21.2 |
| Front axle system | 25 |
| [25.100] Powered front axle | 25.1 |
| [25.102] Front bevel gear set and differential | 25.2 |
| [25.108] Final drive hub, steering knuckles, and shafts | 25.3 |
| Rear axle system | 27 |
| [27.100] Powered rear axle..... | 27.1 |
| [27.106] Rear bevel gear set and differential | 27.2 |
| [27.120] Planetary and final drives | 27.3 |
| [27.550] Non-powered rear axle..... | 27.4 |
| Brakes and controls | 33 |

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

| | |
|--|-----------|
| [33.110] Parking brake or parking lock | 33.1 |
| [33.202] Hydraulic service brakes | 33.2 |
| Hydraulic systems..... | 35 |
| [35.000] Hydraulic systems..... | 35.1 |
| [35.102] Pump control valves..... | 35.2 |
| [35.104] Fixed displacement pump..... | 35.3 |
| [35.300] Reservoir, cooler, and filters..... | 35.4 |
| [35.322] Regulated/Low pressure system | 35.5 |
| [35.359] Main control valve..... | 35.6 |
| [35.728] Telescopic arm control | 35.7 |
| [35.740] Telescopic arm hydraulic system..... | 35.8 |
| Frames and ballasting | 39 |
| [39.140] Ballasts and supports | 39.1 |
| Steering..... | 41 |
| [41.101] Steering control | 41.1 |
| [41.200] Hydraulic control components..... | 41.2 |
| [41.216] Cylinders | 41.3 |
| Wheels..... | 44 |
| [44.511] Front wheels..... | 44.1 |
| [44.520] Rear wheels..... | 44.2 |
| Electrical systems..... | 55 |
| [55.100] Harnesses and connectors..... | 55.1 |
| [55.201] Engine starting system..... | 55.2 |
| [55.301] Alternator..... | 55.3 |
| [55.302] Battery..... | 55.4 |
| [55.408] Warning indicators, alarms, and instruments | 55.5 |
| [55.991] Telematics | 55.6 |
| [55.DTC] FAULT CODES..... | 55.7 |

| | |
|---|------|
| Telescopic single arm | 83 |
| [83.122] Telescopic arm | 83.1 |
| Platform, cab, bodywork, and decals | 90 |
| [90.100] Engine hood and panels | 90.1 |
| [90.114] Operator protections | 90.2 |
| [90.116] Fenders and guards | 90.3 |
| [90.120] Mechanically-adjusted operator seat..... | 90.4 |



INTRODUCTION

Contents

INTRODUCTION

| | |
|--|----|
| Foreword - Important notice regarding equipment servicing | 3 |
| Safety rules | 4 |
| Personal safety | 5 |
| Safety rules - Roll Over Protective Structure (ROPS) | 6 |
| Basic instructions - Prepare machine for service/Return machine to use | 7 |
| Basic instructions - Chain Wear Tables - Roller Chains | 10 |
| Torque - Minimum tightening torques for normal assembly | 12 |
| Torque - Standard torque data for hydraulics | 17 |
| Basic instructions - Shop and assembly | 19 |
| Basic instructions - Important notice regarding equipment servicing | 21 |
| Basic instructions - Before welding on the machine | 22 |
| Hydraulic contamination | 24 |
| General specification - Recommended operating temperature range | 25 |
| General specification Organic Acid Technology (OAT) coolant | 26 |
| General specification - Biodiesel fuels | 28 |
| General specification - Diesel fuel | 31 |
| Capacities | 32 |
| Product identification - Fuse and relay locations | 33 |
| Product identification | 37 |
| Product identification – machine orientation | 40 |

Foreword - Important notice regarding equipment servicing

All repair and maintenance work listed in this manual must be carried out only by qualified dealership personnel, strictly complying with the instructions given, and using, whenever possible, the special tools.

Anyone who performs repair and maintenance operations without complying with the procedures provided herein shall be responsible for any subsequent damages.

The manufacturer and all the organizations of its distribution chain, including - without limitation - national, regional, or local dealers, reject any responsibility for damages caused by parts and/or components not approved by the manufacturer, including those used for the servicing or repair of the product manufactured or marketed by the manufacturer. In any case, no warranty is given or attributed on the product manufactured or marketed by the manufacturer in case of damages caused by parts and/or components not approved by the manufacturer.

The manufacturer reserves the right to make improvements in design and changes in specifications at any time without notice and without incurring any obligation to install them on units previously sold. Specifications, descriptions, and illustrative material herein are as accurate as known at time of publication but are subject to change without notice.

In case of questions, refer to your CASE CONSTRUCTION Sales and Service Networks.

Safety rules


Personal safety





This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

Throughout this manual you will find the signal words DANGER, WARNING, and CAUTION followed by special instructions. These precautions are intended for the personal safety of you and those working with you.

Read and understand all the safety messages in this manual before you operate or service the machine.

 DANGER indicates a hazardous situation that, if not avoided, will result in death or serious injury.

 WARNING indicates a hazardous situation that, if not avoided, could result in death or serious injury.

 CAUTION indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

FAILURE TO FOLLOW DANGER, WARNING, AND CAUTION MESSAGES COULD RESULT IN DEATH OR SERIOUS INJURY.

Machine safety

NOTICE: Notice indicates a situation that, if not avoided, could result in machine or property damage.

Throughout this manual you will find the signal word Notice followed by special instructions to prevent machine or property damage. The word Notice is used to address practices not related to personal safety.

Information

NOTE: Note indicates additional information that clarifies steps, procedures, or other information in this manual.

Throughout this manual you will find the word Note followed by additional information about a step, procedure, or other information in the manual. The word Note is not intended to address personal safety or property damage.

Personal safety

⚠ WARNING

Risk of harm during maintenance of the machine!

Before you start servicing the machine, attach a DO NOT OPERATE warning tag to the machine in a visible area.

Failure to comply could result in death or serious injury.

W1242A

Attach a DO NOT OPERATE (TAG) to the machine in an area that is clearly visible whenever the machine is not operating properly and/or requires service.

Complete the tag information for the "REASON" the tag is attached by describing the malfunction or service required. Validate the reason for attaching the tag by signing your name in the designated area on the tag.

The tag should only be removed by the person who signed and attached the tag, after validating the repairs or services have been completed.

Safety rules - Roll Over Protective Structure (ROPS)



▲ DANGER

Crushing hazard!

DO NOT operate the machine with the Roll-Over Protective Structure (ROPS) removed. Remove the ROPS only for service or replacement.

Failure to comply will result in death or serious injury.

D0032A

Your machine is equipped with a ROPS (cab or canopy) protective structure.

A ROPS label is fastened to the protective structure and shows the ROPS PIN, the gross weight, approval, regulation, and model numbers of the machine.

The protective structure is a special safety component of your machine.

DO NOT attach any device to the protective structure for pulling purposes. DO NOT drill holes into the protective structure.

After an accident, fire, tip over, or roll over, the following MUST be performed by a qualified technician before returning the machine to field or job side operation:

- The protective structure MUST be replaced.
- The mounting or suspension for the protective structure, operator's seat and suspension, seat belt and mounting components, and wiring within the protective structure MUST be carefully inspected for damage.
- All damaged parts MUST be replaced.

DO NOT WELD, DRILL HOLES, ATTEMPT TO STRAIGHTEN, OR REPAIR THE PROTECTIVE STRUCTURE. MODIFICATION IN ANY WAY CAN REDUCE THE STRUCTURAL INTEGRITY OF THE STRUCTURE WHICH COULD CAUSE DEATH OR SERIOUS INJURY IN THE EVENT OF FIRE, TIP OVER, ROLL OVER, COLLISION, OR ACCIDENT.

Seat belts are part of the protective system and must be worn at all times. The operator must be held to the seat inside the frame in order for the protective system to work.

Basic instructions - Prepare machine for service/Return machine to use

Read and understand all service procedures before beginning any repairs on the machine.

Prepare machine for service

1. Park the machine on a firm level surface.
2. Level the forks and lower the mast to the ground.
3. Make sure the park brake switch is in the park position.
4. Turn the engine OFF and chock all the wheels.


⚠ WARNING

Escaping fluid!

Hydraulic fluid or diesel fuel leaking under pressure can penetrate the skin and cause infection or other injury. To prevent personal injury: Relieve all pressure before disconnecting fluid lines or performing work on the hydraulic system. Before applying pressure, make sure all connections are tight and all components are in good condition. Never use your hand to check for suspected leaks under pressure. Use a piece of cardboard or wood for this purpose. If injured by leaking fluid, see your doctor immediately.


Failure to comply could result in death or serious injury.

W0178A

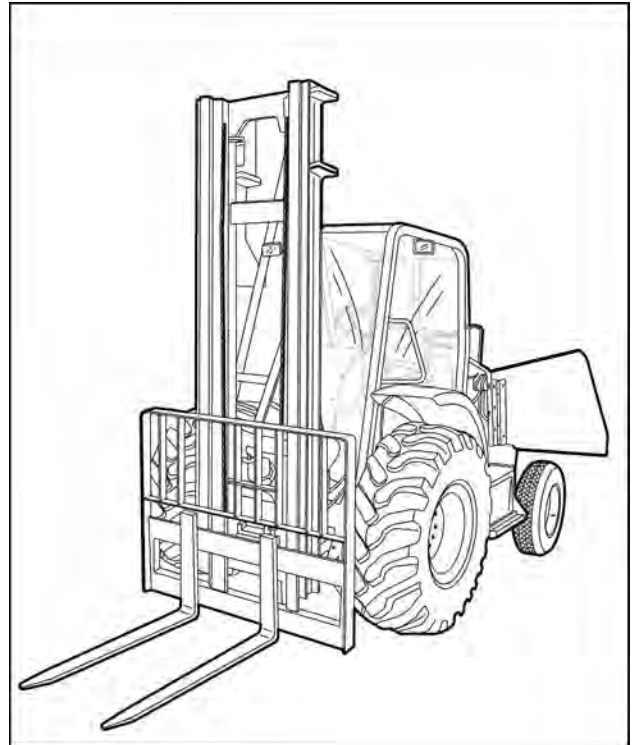

RAPH12FRK0958BA 1

5. With the key in the ON position, engine NOT running, operate all hydraulic functions, including the service brakes, until all hydraulic and hydraulic accumulator pressure is discharged. Turn the key to the OFF position.
6. Open the left engine access door (1) and turn the battery disconnect switch (2) to the OFF position, if equipped.

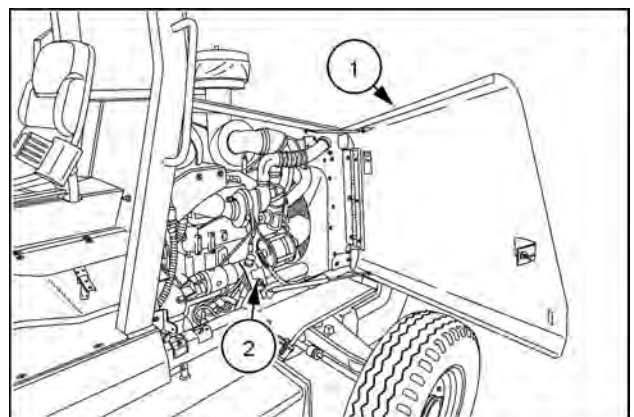

RAPH12FRK0021BA 2

⚠ WARNING

Battery acid causes burns. Batteries contain sulfuric acid.

Avoid contact with skin, eyes or clothing. Antidote (external): Flush with water. Antidote (eyes): flush with water for 15 minutes and seek medical attention immediately. Antidote (internal): Drink large quantities of water or milk. Do not induce vomiting. Seek medical attention immediately.

Failure to comply could result in death or serious injury.

W0111A

⚠ WARNING

Battery gas can explode!

To prevent an explosion: 1. Always disconnect the negative (-) battery cable first. 2. Always connect the negative (-) battery cable last. 3. Do not short circuit the battery posts with metal objects. 4. Do not weld, grind, or smoke near a battery.


Failure to comply could result in death or serious injury.

W0011A

NOTE: Dual battery configuration shown. Disconnect both battery negative cables (2) first.

Disconnect the battery or batteries

7. Disconnect the battery negative (2) cable from the battery or batteries.
8. Disconnect the battery positive (1) cables from the battery or batteries.

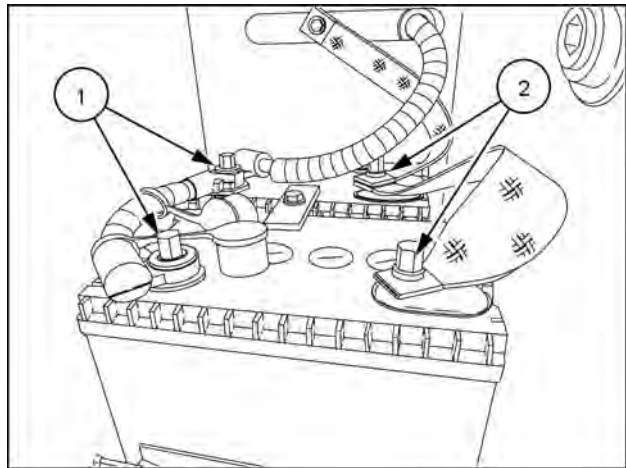

RAPH12FRK0044BA 3

Return machine to use

⚠ WARNING

Battery gas can explode!


To prevent an explosion: **1. Always disconnect the negative (-) battery cable first. 2. Always connect the negative (-) battery cable last. 3. Do not short circuit the battery posts with metal objects. 4. Do not weld, grind, or smoke near a battery.**

Failure to comply could result in death or serious injury.


W0011A

NOTE: Dual battery configuration shown. Connect both battery positive cables (1) first.

1. Connect the battery positive (1) cable to the battery or batteries.
2. Connect the battery negative (2) cable to the battery or batteries.
3. If equipped, turn the battery disconnect switch (2) to the ON position and close the left engine access door (1).
4. Start the machine and allow it to reach normal operating temperature.
5. Verify that all the functions operate correctly.

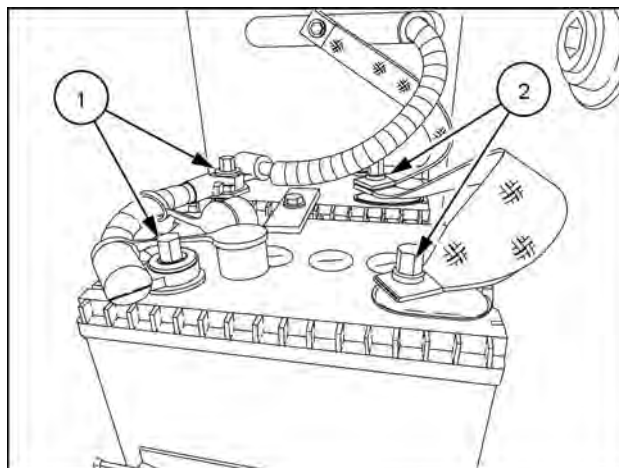

RAPH12FRK0044BA 4

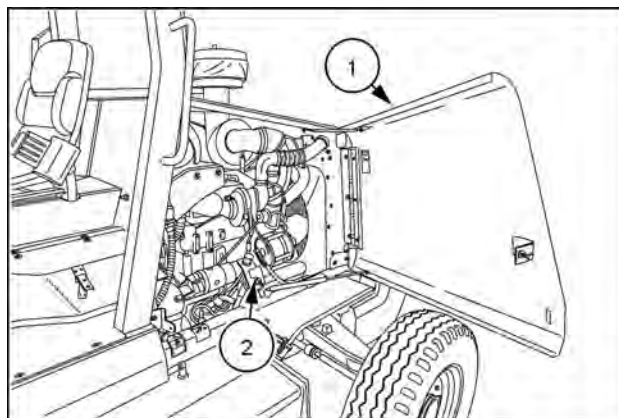

RAPH12FRK0021BA 5


Basic instructions - Chain Wear Tables - Roller Chains

Chain wear

The individual joints in a roller chain articulate as they enter and leave the sprockets. This articulation results in wear on the pins and bushings. Material that is worn away from these surfaces will cause the chain to gradually elongate. Chains do not stretch. Material is worn from pin and bushing.

Critical dimensions of the chain are as follows:

- (1) 2X pitch
- (2) Wear plus 2X pitch
- (3) Elongation due to pin and bushing wear

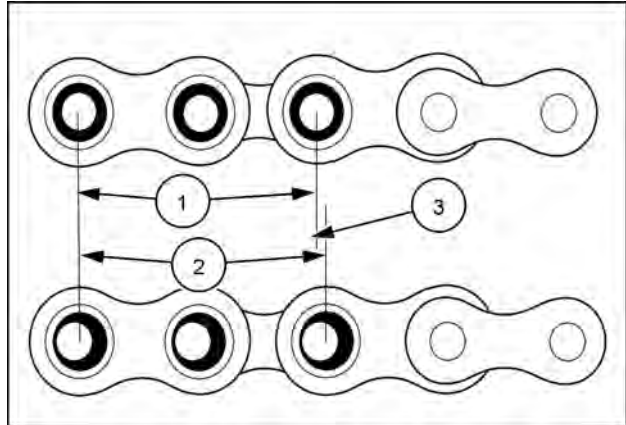


96091478 1

Elongation is normal and may be minimized by proper lubrication and drive maintenance. The rate of wear is dependent upon: the relationship between the load and the amount of bearing area between pin and bushing, the material and surface condition of the bearing surfaces, the adequacy of lubrication, and the frequency and degree of articulation between pins and bushings. The latter is determined by the quantity of sprockets in the drive, their speeds, the number of teeth and the length of the chain in pitches.

An accurate wear measurement (1) can be made by using the above illustration. Measure as closely as possible from the center of one pin to the center of another. The more pitches (pins) contained within the measurement increase the accuracy. If the measured value exceeds the nominal by more than the allowable percentage the chain should be replaced. The maximum allowable wear elongation is approximately 3% for most industrial applications, based upon sprocket design. The allowable chain wear in percent can be calculated using the relationship: $200/(N)$, where (N) is the number of teeth in the large sprocket. This relationship is often useful since the normal maximum allowable chain wear elongation of 3% is valid only up to 67 teeth in the large sprocket. In drives having fixed center distances, chains running in parallel or where smoother operation is required, wear should be limited to approximately 1.5%.

For example, if 12 pitches (12 pins) of a #80 chain were measured and the result was **313.944 mm (12.360 in)** or greater (using 3% as the maximum allowable wear), the chain should be replaced. Anything less than **313.944 mm (12.360 in)** would still be acceptable by most industrial standards.

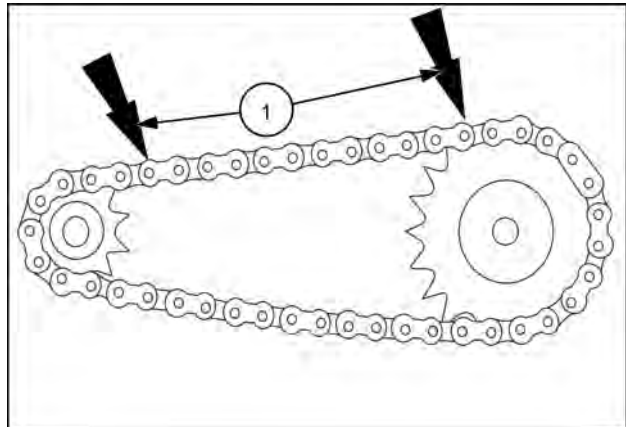

96091469 2

WEAR LIMITS ON ROLLER CHAIN

| Strand Length in Pitches | No. 40 Chain (08A) | | No. 50 Chain (10A) | | No. 60 Chain (12A) | | No. 80 Chain (16A) | |
|--------------------------|----------------------|------------------------|------------------------|------------------------|------------------------|------------------------|-----------------------|------------------------|
| | New | Replace | New | Replace | New | Replace | New | Replace |
| 40P | 508 mm (20.0 in) | 523 mm (20.591 in) | 635 mm (25.0 in) | 654 mm (25.748 in) | 762 mm (30.0 in) | 787 mm (31.0 in) | 1016 mm (40.0 in) | 1047 mm (41.220 in) |
| 50P | 635 mm (25.0 in) | 654 mm (25.748 in) | 793 mm (31.220 in) | 817 mm (32.165 in) | 952 mm (37.480 in) | 981 mm (38.622 in) | 1270 mm (50.0 in) | 1308 mm (51.496 in) |
| 60P | 762 mm (30.0 in) | 784 mm (30.866 in) | 952 mm (37.480 in) | 981 mm (38.622 in) | 1143 mm (45.0 in) | 1177 mm (46.339 in) | 1524 mm (60.0 in) | 1568 mm (61.732 in) |
| 70P | 889 mm (35.0 in) | 914 mm (36.0 in) | 1111 mm (43.740 in) | 1144 mm (45.039 in) | 1333 mm (52.480 in) | 1371 mm (54.0 in) | 1778 mm (70.0 in) | 1828 mm (72.0 in) |
| 80P | 1016 mm (40.0 in) | 1047 mm (41.220 in) | 1270 mm (50.0 in) | 1308 mm (51.496 in) | 1524 mm (60.0 in) | 1568 mm (61.732 in) | 2032 mm (80.0 in) | 2095 mm (82.480 in) |
| 90P | 1143 mm (45.0 in) | 1177 mm (46.339 in) | 1428 mm (56.220 in) | 1473 mm (58.0 in) | 1714 mm (67.480 in) | 1765 mm (69.488 in) | 2286 mm (90.0 in) | 2355 mm (92.717 in) |
| 100P | 1270 mm (50.0 in) | 1308 mm (51.496 in) | 1578 mm (62.126 in) | 1635 mm (64.370 in) | 1905 mm (75.0 in) | 1962 mm (77.244 in) | 2540 mm (100.0 in) | 2616 mm (103.0 in) |

STANDARD ROLLER CHAIN SIZES - NEW CHAINS

| Chain No. | 150 Chain No. | Pitch | Width | Roller Diameter |
|------------|---------------|--------------------|--------------------|--------------------|
| 40 | 08A | 12.7 mm (0.5 in) | 7.9 mm (0.311 in) | 7.9 mm (0.311 in) |
| 50 | 10A | 15.8 mm (0.622 in) | 9.5 mm (0.374 in) | 10.1 mm (0.398 in) |
| 60 | 12A | 19 mm (0.748 in) | 12.7 mm (0.500 in) | 11.9 mm (0.469 in) |
| 80 | 16A | 25.4 mm (1.000 in) | 15.8 mm (0.622 in) | 15.8 mm (0.622 in) |
| 100 | 20A | 31.7 mm (1.248 in) | 19 mm (0.748 in) | 19 mm (0.748 in) |
| 120 | 24A | 38.1 mm (1.500 in) | 25.4 mm (1.000 in) | 22.2 mm (0.874 in) |
| 140 | 28A | 44.4 mm (1.748 in) | 25.4 mm (1.000 in) | 25.4 mm (1.000 in) |
| 160 | 32A | 50.8 mm (2.000 in) | 31.7 mm (1.248 in) | 28.5 mm (1.122 in) |
| 180 | * | 57.1 mm (2.248 in) | 35.7 mm (1.406 in) | 35.7 mm (1.406 in) |
| 200 | 40A | 63.4 mm (2.496 in) | 38.1 mm (1.500 in) | 39.6 mm (1.559 in) |

* No. 150 Number does not exist.

Torque - Minimum tightening torques for normal assembly

METRIC NON-FLANGED HARDWARE

| NOM. SIZE | CLASS 8.8 BOLT and CLASS 8 NUT | | CLASS 10.9 BOLT and CLASS 10 NUT | | LOCKNUT CL.8 W/CL8.8 BOLT | LOCKNUT CL.10 W/CL10.9 BOLT |
|-----------|--------------------------------|---------------------|----------------------------------|----------------------|---------------------------|-----------------------------|
| | UNPLATED | PLATED W/ZnCr | UNPLATED | PLATED W/ZnCr | | |
| M4 | 2.2 N·m (19 lb in) | 2.9 N·m (26 lb in) | 3.2 N·m (28 lb in) | 4.2 N·m (37 lb in) | 2 N·m (18 lb in) | 2.9 N·m (26 lb in) |
| M5 | 4.5 N·m (40 lb in) | 5.9 N·m (52 lb in) | 6.4 N·m (57 lb in) | 8.5 N·m (75 lb in) | 4 N·m (36 lb in) | 5.8 N·m (51 lb in) |
| M6 | 7.5 N·m (66 lb in) | 10 N·m (89 lb in) | 11 N·m (96 lb in) | 15 N·m (128 lb in) | 6.8 N·m (60 lb in) | 10 N·m (89 lb in) |
| M8 | 18 N·m (163 lb in) | 25 N·m (217 lb in) | 26 N·m (234 lb in) | 35 N·m (311 lb in) | 17 N·m (151 lb in) | 24 N·m (212 lb in) |
| M10 | 37 N·m (27 lb ft) | 49 N·m (36 lb ft) | 52 N·m (38 lb ft) | 70 N·m (51 lb ft) | 33 N·m (25 lb ft) | 48 N·m (35 lb ft) |
| M12 | 64 N·m (47 lb ft) | 85 N·m (63 lb ft) | 91 N·m (67 lb ft) | 121 N·m (90 lb ft) | 58 N·m (43 lb ft) | 83 N·m (61 lb ft) |
| M16 | 158 N·m (116 lb ft) | 210 N·m (155 lb ft) | 225 N·m (166 lb ft) | 301 N·m (222 lb ft) | 143 N·m (106 lb ft) | 205 N·m (151 lb ft) |
| M20 | 319 N·m (235 lb ft) | 425 N·m (313 lb ft) | 440 N·m (325 lb ft) | 587 N·m (433 lb ft) | 290 N·m (214 lb ft) | 400 N·m (295 lb ft) |
| M24 | 551 N·m (410 lb ft) | 735 N·m (500 lb ft) | 762 N·m (560 lb ft) | 1016 N·m (750 lb ft) | 501 N·m (370 lb ft) | 693 N·m (510 lb ft) |


NOTE: M4 through M8 hardware torque specifications are shown in pound-inches. M10 through M24 hardware torque specifications are shown in pound-feet.

METRIC FLANGED HARDWARE

| NOM. SIZE | CLASS 8.8 BOLT and CLASS 8 NUT | | CLASS 10.9 BOLT and CLASS 10 NUT | | LOCKNUT CL.8 W/CL8.8 BOLT | LOCKNUT CL.10 W/CL10.9 BOLT |
|-----------|--------------------------------|---------------------|----------------------------------|----------------------|---------------------------|-----------------------------|
| | UNPLATED | PLATED W/ZnCr | UNPLATED | PLATED W/ZnCr | | |
| M4 | 2.4 N·m (21 lb in) | 3.2 N·m (28 lb in) | 3.5 N·m (31 lb in) | 4.6 N·m (41 lb in) | 2.2 N·m (19 lb in) | 3.1 N·m (27 lb in) |
| M5 | 4.9 N·m (43 lb in) | 6.5 N·m (58 lb in) | 7.0 N·m (62 lb in) | 9.4 N·m (83 lb in) | 4.4 N·m (39 lb in) | 6.4 N·m (57 lb in) |
| M6 | 8.3 N·m (73 lb in) | 11 N·m (96 lb in) | 12 N·m (105 lb in) | 16 N·m (141 lb in) | 7.5 N·m (66 lb in) | 11 N·m (96 lb in) |
| M8 | 20 N·m (179 lb in) | 27 N·m (240 lb in) | 29 N·m (257 lb in) | 39 N·m (343 lb in) | 18 N·m (163 lb in) | 27 N·m (240 lb in) |
| M10 | 40 N·m (30 lb ft) | 54 N·m (40 lb ft) | 57 N·m (42 lb ft) | 77 N·m (56 lb ft) | 37 N·m (27 lb ft) | 53 N·m (39 lb ft) |
| M12 | 70 N·m (52 lb ft) | 93 N·m (69 lb ft) | 100 N·m (74 lb ft) | 134 N·m (98 lb ft) | 63 N·m (47 lb ft) | 91 N·m (67 lb ft) |
| M16 | 174 N·m (128 lb ft) | 231 N·m (171 lb ft) | 248 N·m (183 lb ft) | 331 N·m (244 lb ft) | 158 N·m (116 lb ft) | 226 N·m (167 lb ft) |
| M20 | 350 N·m (259 lb ft) | 467 N·m (345 lb ft) | 484 N·m (357 lb ft) | 645 N·m (476 lb ft) | 318 N·m (235 lb ft) | 440 N·m (325 lb ft) |
| M24 | 607 N·m (447 lb ft) | 809 N·m (597 lb ft) | 838 N·m (618 lb ft) | 1118 N·m (824 lb ft) | 552 N·m (407 lb ft) | |

IDENTIFICATION


Metric Hex head and carriage bolts, classes 5.6 and up

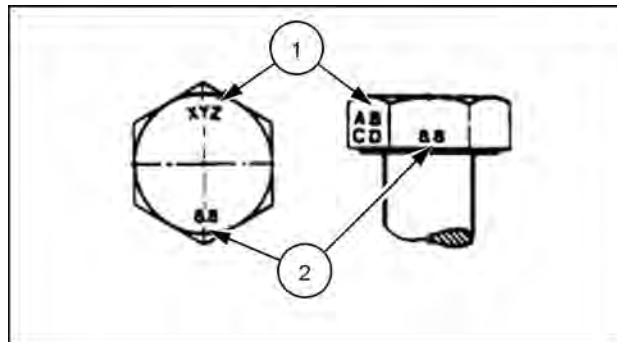

20083680 1

1. Manufacturer's Identification
2. Property Class

Metric Hex nuts and locknuts, classes 05 and up

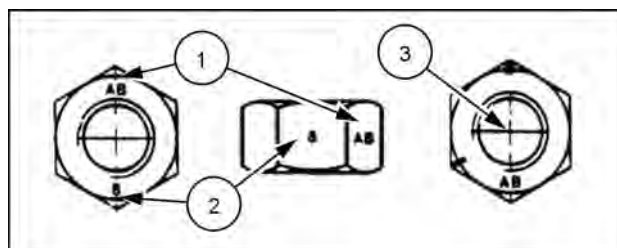

20083681 2

1. Manufacturer's Identification
2. Property Class
3. Clock Marking of Property Class and Manufacturer's Identification (Optional), i.e. marks **60 °** apart indicate Class 10 properties, and marks **120 °** apart indicate Class 8.

INCH NON-FLANGED HARDWARE

| NOMINAL SIZE | SAE GRADE 5 BOLT and NUT | | SAE GRADE 8 BOLT and NUT | | LOCKNUT GrB W/ Gr5 BOLT | LOCKNUT GrC W/ Gr8 BOLT |
|--------------|----------------------------|---------------------|----------------------------|----------------------|-------------------------|-------------------------|
| | UN-PLATED or PLATED SILVER | PLATED W/ZnCr GOLD | UN-PLATED or PLATED SILVER | PLATED W/ZnCr GOLD | | |
| 1/4 | 8 N·m (71 lb in) | 11 N·m (97 lb in) | 12 N·m (106 lb in) | 16 N·m (142 lb in) | 8.5 N·m (75 lb in) | 12.2 N·m (109 lb in) |
| 5/16 | 17 N·m (150 lb in) | 23 N·m (204 lb in) | 24 N·m (212 lb in) | 32 N·m (283 lb in) | 17.5 N·m (155 lb in) | 25 N·m (220 lb in) |
| 3/8 | 30 N·m (22 lb ft) | 40 N·m (30 lb ft) | 43 N·m (31 lb ft) | 57 N·m (42 lb ft) | 31 N·m (23 lb ft) | 44 N·m (33 lb ft) |
| 7/16 | 48 N·m (36 lb ft) | 65 N·m (48 lb ft) | 68 N·m (50 lb ft) | 91 N·m (67 lb ft) | 50 N·m (37 lb ft) | 71 N·m (53 lb ft) |
| 1/2 | 74 N·m (54 lb ft) | 98 N·m (73 lb ft) | 104 N·m (77 lb ft) | 139 N·m (103 lb ft) | 76 N·m (56 lb ft) | 108 N·m (80 lb ft) |
| 9/16 | 107 N·m (79 lb ft) | 142 N·m (105 lb ft) | 150 N·m (111 lb ft) | 201 N·m (148 lb ft) | 111 N·m (82 lb ft) | 156 N·m (115 lb ft) |
| 5/8 | 147 N·m (108 lb ft) | 196 N·m (145 lb ft) | 208 N·m (153 lb ft) | 277 N·m (204 lb ft) | 153 N·m (113 lb ft) | 215 N·m (159 lb ft) |
| 3/4 | 261 N·m (193 lb ft) | 348 N·m (257 lb ft) | 369 N·m (272 lb ft) | 491 N·m (362 lb ft) | 271 N·m (200 lb ft) | 383 N·m (282 lb ft) |
| 7/8 | 420 N·m (310 lb ft) | 561 N·m (413 lb ft) | 594 N·m (438 lb ft) | 791 N·m (584 lb ft) | 437 N·m (323 lb ft) | 617 N·m (455 lb ft) |
| 1 | 630 N·m (465 lb ft) | 841 N·m (620 lb ft) | 890 N·m (656 lb ft) | 1187 N·m (875 lb ft) | 654 N·m (483 lb ft) | 924 N·m (681 lb ft) |

NOTE: For Imperial Units, *1/4 in* and *5/16 in* hardware torque specifications are shown in pound-inches. *3/8 in* through *1 in* hardware torque specifications are shown in pound-feet.